



INSTALLATION INSTRUCTIONS

ELECTRIC HEAT PACKAGES

MODELS:	EHWH02-A04	EHWA24-A04
	EHWH02-A08	EHWA02-A05
	EHWH24-B06	EHWA02-A08
	EHWH24A-C09	EHWA02-A10
	EHWH30-A05	EHWA24-B06
	EHWH36-A05	EHWA03-A05
	EHWH30-A10	EHWA03-A08
	EHWH36-A10	EHWA03-A10
	EHWH36-A15	EHWA03-A15
	EHWH03-B06	EHWA03-B06
	EHWH03-B09	EHWA03-B09
	EHWH36-B15	EHWA03-B15
	EHWH03A-C15	EHWA03A-C15
	EHWC03A-C06	
	EHWC03A-C09	

**For 1-1/2, 2, 2-1/2, 3 Ton WA and WH Series
Wall Mounted Air Conditioners
and Heat Pumps**

BARD MANUFACTURING COMPANY
Bryan, Ohio 43506

Since 1914...Moving, ahead just as planned.

Manual:	2100-253 Rev.
Supersedes:	Rev.
File:	Volume III, Tab 18
Date:	January 1995

Contents

DESCRIPTION	3
IMPORTANT	5
SHIPPING DAMAGE	5
UNPACKING THE ELECTRIC HEAT PACKAGE	5
WIRING MAIN POWER	5
INSTALLATION	7

Copyright January 1995
Bard Manufacturing Company
Bryan, Ohio 43506

DESCRIPTION

The EHWA, EHWH and EHWC series electric heater packages are field installable heater packages suitable for use with Bard wall mount hi boy air conditioners and heat pumps. The packages consist of the electric heat strip, the heater control base which includes the heat contactors, and circuit breaker or pull disconnects, installation instructions and wiring diagrams. See TABLE 1 for nominal electrical data and BTU output. Before installation, check unit serial plate to insure the heater package model that you intend to install is listed as a heater package that is suitable for use with the Bard wall mount hi boy unit. See FIGURE 6.

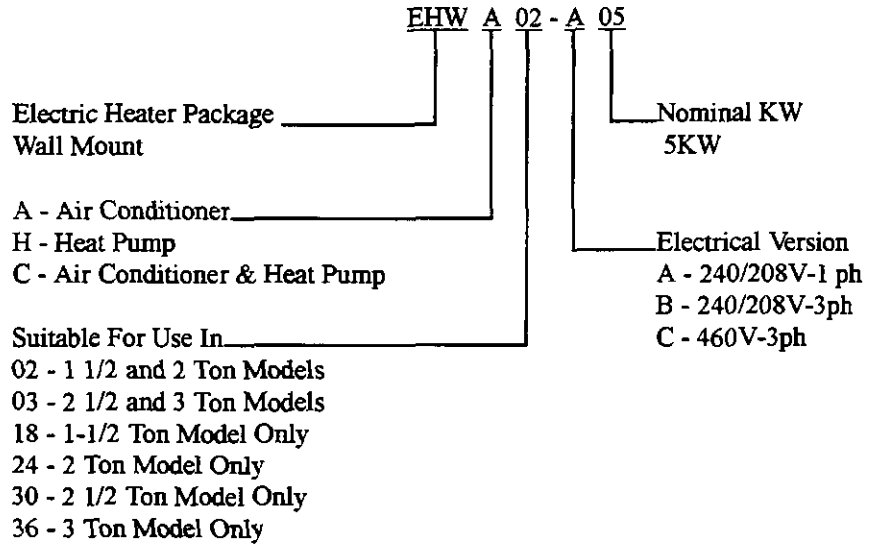


TABLE 1

Heater Package Model	Volts	Phase	Nominal KW	Nominal BTU
EHWA24-A04	240/208	1	4/3	13,650/10,240
EHWA02-A05	240/208	1	5/3.75	17,065/12,800
EHWA02-A08	240/208	1	8/6	27,300/20,475
EHWA02-A10	240/208	1	10/7.5	34,130/25,600
EHWA24-B06	240/208	3	6/4.5	20,475/15,350
EHWH02-A04	240/208	1	4/3	13,650/10,240
EHWH02-A08	240/208	1	8/6	27,300/20,475
EHWH24-B06	240/208	3	6/4.5	20,475/15,350
EHWH24A-C09	480	3	9	30,715
EHWA03-A05	240/208	1	5/3.75	17,065/12,800
EHWA03-A08	240/208	1	8/6	27,300/20,475
EHWA03-A10	240/208	1	10/7.5	34,130/25,600
EHWA03-A15	240/208	1	15/11.25	51,195/38,400
EHWA03-B06	240/208	3	6/4.5	20,475/15,350
EHWA03-B09	240/208	3	9/6.75	30,715/23,035
EHWA03-B15	240/208	3	15/11.25	51,195/38,400
EHWA03A-C15	480	3	15	51,195
EHWH30-A05	240/208	1	5/3.75	17,065/12,800
EHWH30-A10	240/208	1	10/7.5	34,130/25,600
EHWH36-A05	240/208	1	5/3.75	17,065/12,800
EHWH36-A10	240/208	1	10/7.5	34,130/25,600
EHWH36-A15	240/208	1	15/11.25	51,195/38,400
EHWH03-B06	240/208	3	6/4.5	20,475/15,350
EHWH03-B09	240/208	3	9/6.75	30,715/23,035
EHWH36-B15	240/208	3	15/11.25	51,195/38,400
EHWC03A-C06	480	3	6	20,475
EHWC03A-C09	480	3	9	30,715
EHWH03A-C15	480	3	15	51,195

SINGLE CIRCUIT JUMPER BAR

CIRCUIT B

CIRCUIT A

REMOVE SCREW AND TAKE OFF COVER

LOOSEN 4 SCREWS AND REMOVE JUMPER BAR

4

IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

UNPACKING THE ELECTRIC HEAT PACKAGE

Remove the heat package from the shipping carton. The heat package must consist of the following:

1. Basic heater.
2. Electric heat control base and wiring.
3. Installation instructions.
4. Wiring diagram (2), one to be applied to unit.
5. Adhesive label to remark serial plate to indicate new model number. This is attached to the front of these instructions.

WIRING MAIN POWER

1. On all installations, size unit power supply wiring for the minimum circuit ampacity requirement for the unit and heater package combination listed on the unit serial plate.

For existing installations, addition or upgrading of a heater package may require that larger supply wires be run to the unit. Resize all power supply wires for the minimum circuit ampacity rating listed on the unit serial plate that is applicable for your combination of unit and heater package.

WARNING

Install properly sized power supply leads for the unit/heater combination minimum circuit ampacity as listed on the unit serial plate. Hazard of fire. Failure to install properly sized conductors could result in fire.


2. All heater packages covered by this manual are factory wired for a single supply circuit. The following heater packages are field convertible to a dual supply circuit if required or desired.

EHWA03-A15
EHWH30-A10
EHWH36-A10
EHWH36-A15

3. To convert the above heater packages to dual circuit configuration before installation, loosen 4 screws holding jumper bar in place. Remove jumper bar. Circuit A + B are now identified on the heater package. See FIGURE 1.

Wire should be sized to the minimum circuit ampacity as specified on the serial plates of units that accept these heater packages for circuits A + B.

FIGURE 2

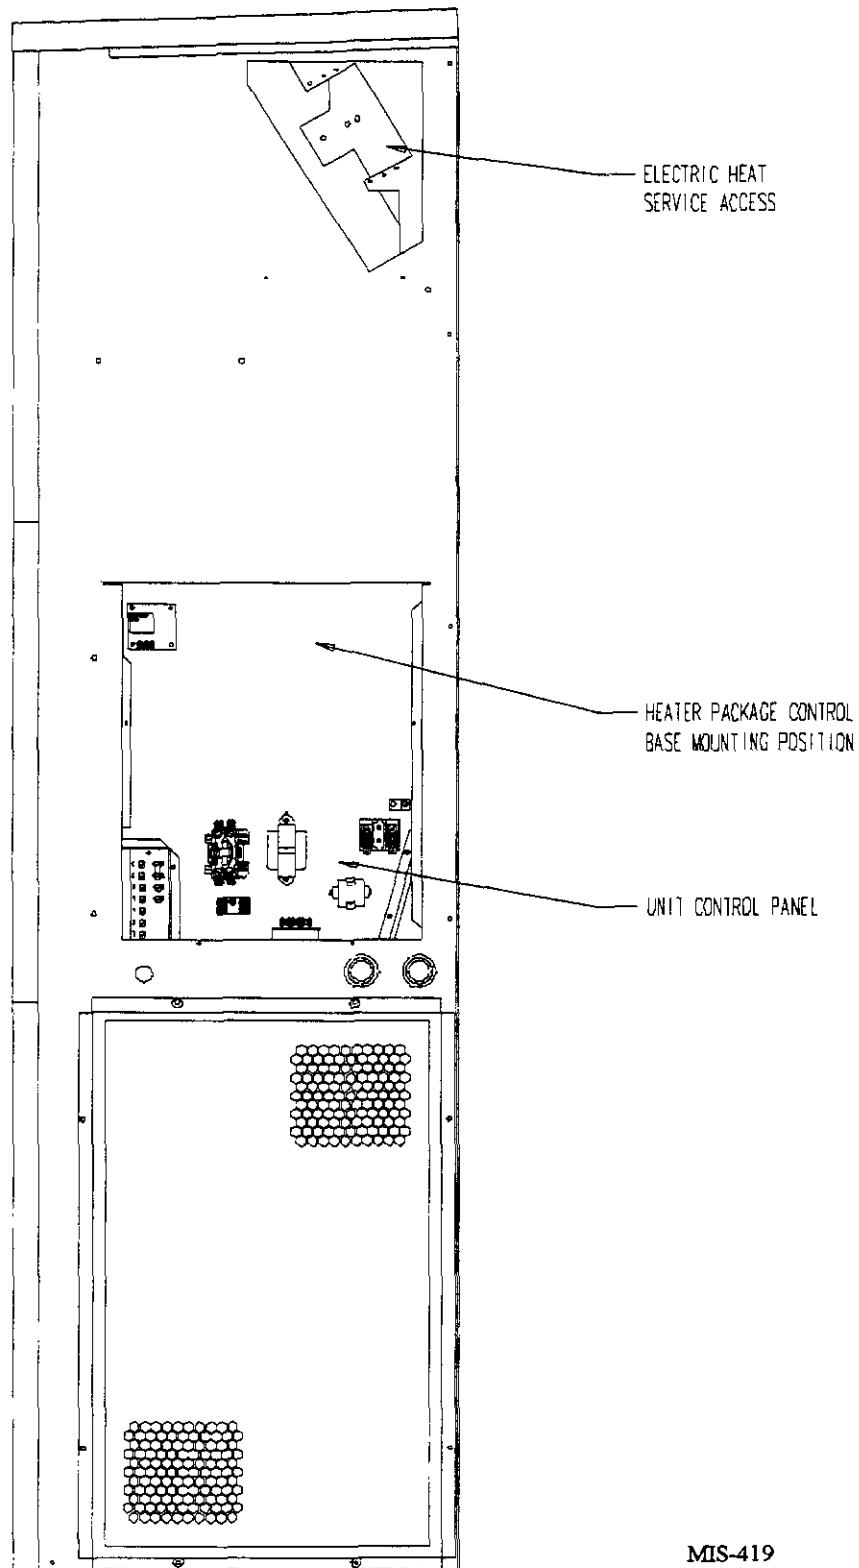

MIS-419

INSTALLATION

1. Disconnect all power to unit before installation.

WARNING

Disconnect all power to unit before installing heater package. Hazard of electrical shock. Failure to disconnect power could result in injury or death.

2. Before installation, check unit serial plate to insure that the heater package model that you intend to install is listed as a heater package suitable for use with the unit.

Under no circumstances shall a heater package be installed in a unit if the model number of the heater package does not appear on the unit serial plate.

WARNING

Install only heater packages listed on unit serial plate. Hazard of fire or electrical shock. Failure to install listed heater package could result in fire, injury or death

3. Remove electric heater access panel and control panel cover, both inner and outer. See FIGURE 2.
4. All heaters are installed with the thermal cutoffs positioned to the top of the unit. Install heat strip(s) through heater access opening. Position heat strip support rod in heater support hole 1, 2, or 3 as indicated in TABLE 1 and FIGURE 3. Secure in place with 2 sheet metal screws in mounting holes as indicated in TABLE 1 and FIGURE 3.

On heater packages with 2 heat strips, install 9KW heater first in position closest to the outlet air frame. See FIGURES 4E.
5. Install heater control base into top of control panel as shown in FIGURE 5. Secure with 4 sheet metal screws provided.
6. Plug male 6 pin connector into mating connector mounted in control panel. See FIGURE 5.
7. Connect red compressor supply lead to L1 of terminal block. Connect black compressor supply lead to L2 of terminal block. If 3 phase, connect yellow supply lead to L3 of terminal block. See FIGURE 5 and wiring diagram.
8. Route wires from heater control base up through raceway in top right corner of control panel to the heaters. See FIGURE 5.
9. Wire heater package per wiring diagram supplied with this heater package. All wires are stamped with wire numbers that correspond with terminal numbers on the wiring diagram and stamped numbers on the heat strip. Limit switch wires are terminated with insulated quick connect terminals. See FIGURE 4.
10. Attach adhesive wiring diagram directly above unit wiring diagram on inner control panel cover.
11. Recheck all wiring. Break out appropriate circuit breaker tabs on inner control panel cover to allow trip lever to protrude. Replace control panel and heater access panels
12. Resupply power to the unit and check for proper operation.
13. Remark serial plate with self-adhesive label attached to the front of this manual. See FIGURE 6.

TABLE 2

	Heater Package Model Number	Figure 4 Heater Terminal Identification Drawing	Figure 3 Rod Support and Screw Mounting Position
1	EHWA02-A05	4A	1
2	EHWA02-A08	4B	1
3	EHWA02-A10	4B	1
4	EHWA03-A05	4A	1
5	EHWA03-A08	4B	1
6	EHWA03-A10	4B	1
7	EHWA03-A15	4C	2
8	EHWA03-B06	4D	1
9	EHWA03-B09	4D	1
10	EHWA03-B15	4C	2
11	EHWA03A-C15	4E	1 + 3
12	EHWA24-B06	4D	1
13	EHWC03A-C06	4D	1
14	EHWC03A-C09	4D	1
15	EHWH02-A04	4A	1
16	EHWH02-A08	4B	1
17	EHWH03-B06	4D	1
18	EHWH03-B09	4D	1
19	EHWH03A-C15	4E	1 + 3
20	EHWH24-B06	4D	1
21	EHWH24A-C06	4D	1
22	EHWH30-A05	4A	1
23	EHWH30-A10	4B	1
24	EHWH36-A05	4A	1
25	EHWH36-A10	4B	1
26	EHWH36-A15	4C	2
27	EHWH36-B15	4E	1 + 3
28	EHWA24-A04	4A	1



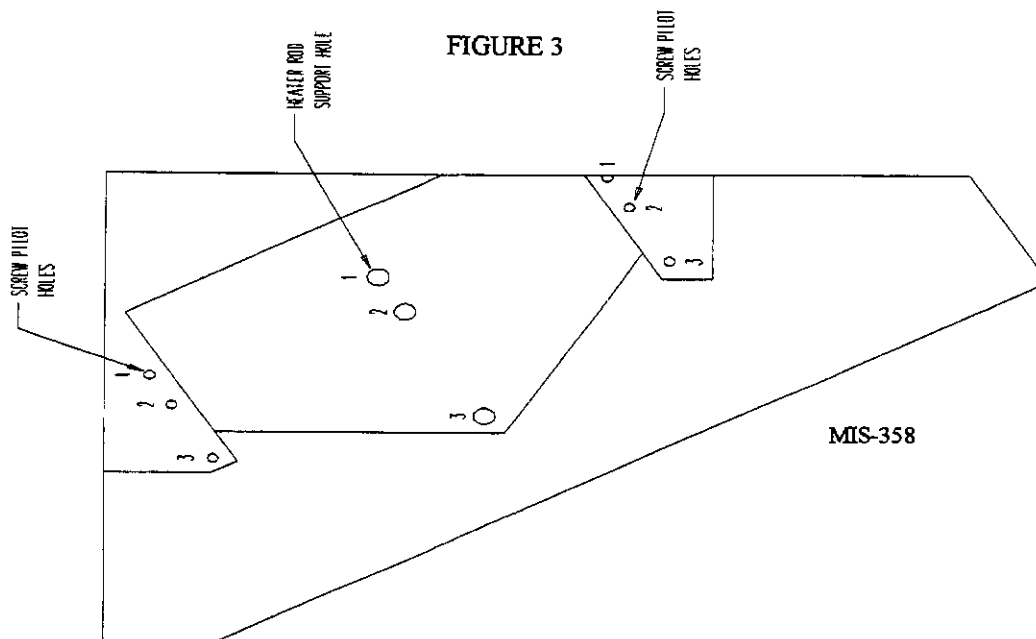


FIGURE 4A

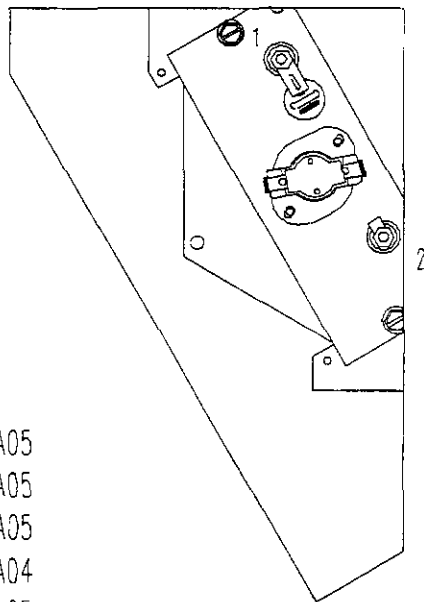


EHWH36-A05
 EHW30-A05
 EHW03-A05
 EHW02-A04
 EHW02-A05

FIGURE 4B

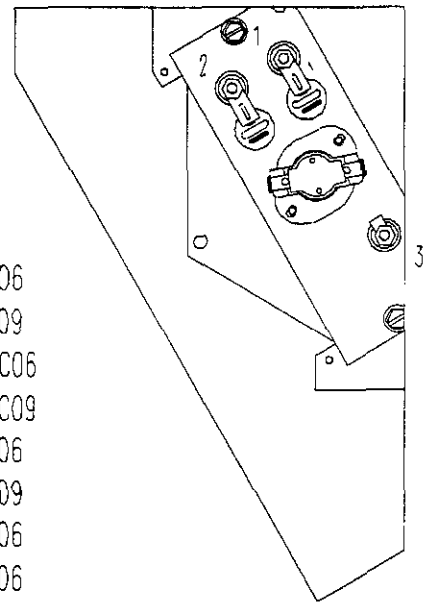


EHW03-B06
 EHW03-B09
 EHW03A-C06
 EHW03A-C09
 EHW03-B06
 EHW03-B09
 EHW24-B06
 EHW24-B06
 EHW24A-C06

FIGURE 4C

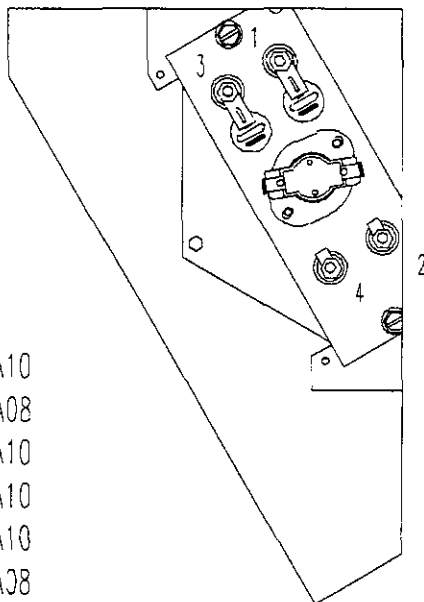

EHW03-A10
 EHW03-A08
 EHW30-A10
 EHW36-A10
 EHW02-A10
 EHW02-A08
 EHW02-A08

FIGURE 4D

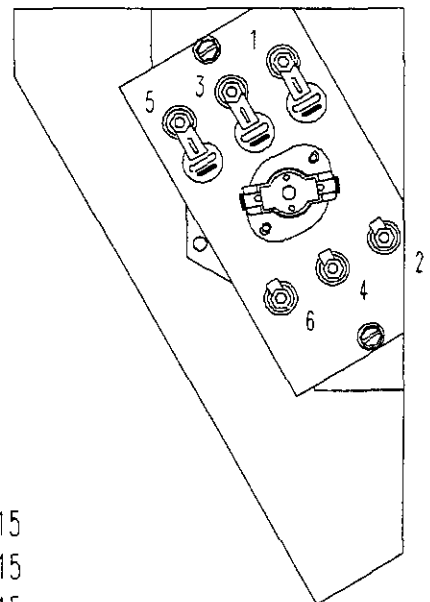

EHW36-A15
 EHW36-B15
 EHW03-A15

NOTE: THERMAL CUTOFFS TO BE AT
 TOP OF AIR FRAME WHEN INSTALLING.

FIGURE 4E

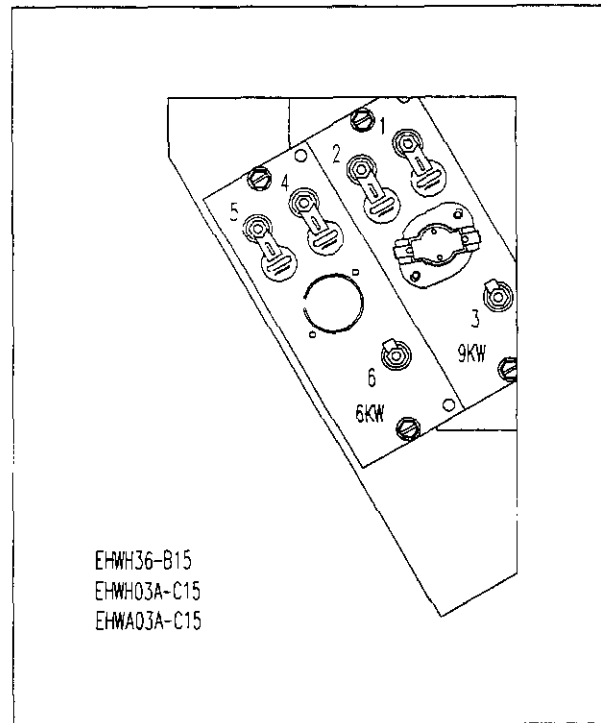


FIGURE 5

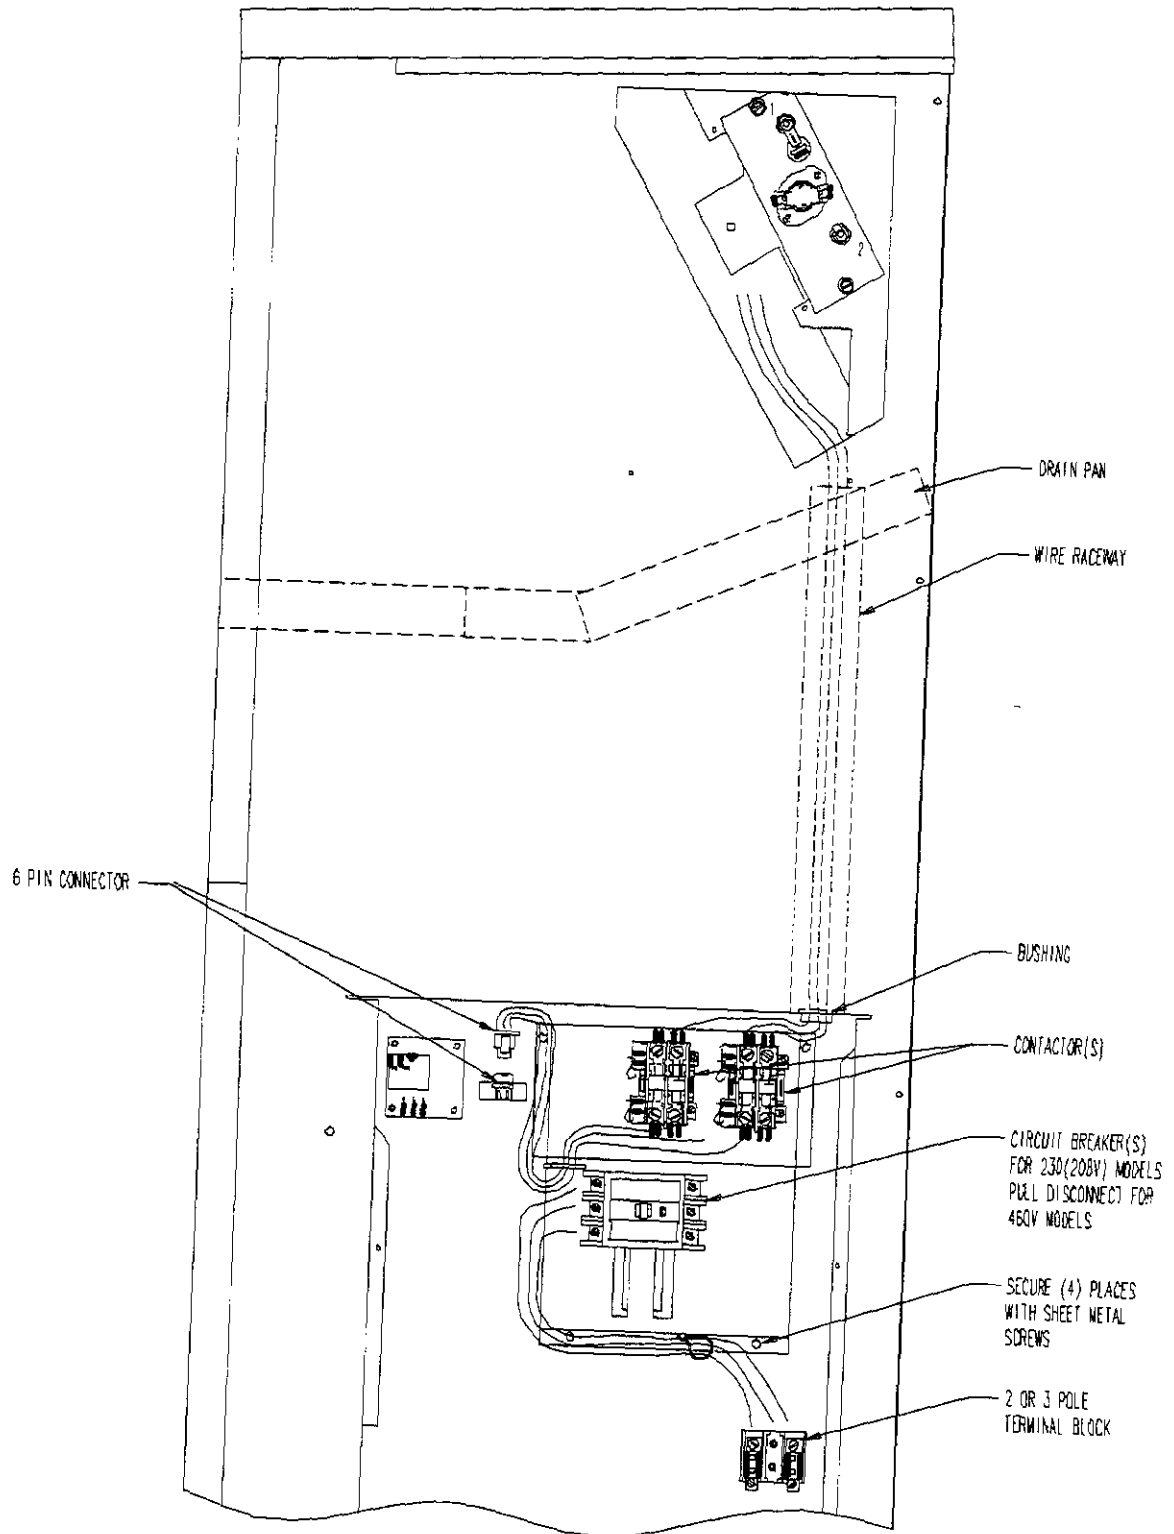


FIGURE 6

INSTALL ONLY HEATER PACKAGES LISTED HERE.

BARD MANUFACTURING COMPANY, 1914 RANDOLPH DRIVE

(X)	()	()	()	()	()	()	()	()	()
()	(X)	()	()	()	()	()	()	()	()
()	()	()	(X)	()	()	()	()	()	()
()	()	()	()	()	()	()	()	()	()
()	()	()	()	()	()	()	()	()	()
()	()	()	()	()	()	()	()	()	()
()	()	()	()	()	()	()	()	()	()
()	()	()	()	()	()	()	()	()	()
()	()	()	()	()	()	()	()	()	()
()	()	()	()	()	()	()	()	()	()

ASSURE THAT SERIAL PLATE
IS CLEAN AND DRY.
REMOVE APPROPRIATE LABEL STRIP
FOR KW REQUIRED AND REMARK
SERIAL PLATE AS SHOWN FOR
THE HEATER PACKAGE THAT
IS INSTALLED

(1)
APPROVED
HEATER
PACKAGE

MODEL

WA361-A0012345	NONE	230/208	60
WA361-A0512345	EHWA03-A05	230/208	60
WA361-A0812345	EHWA03-A08	230/208	60
WA361-A1012345	EHWA03-A10	230/208	60
WA361-A1512345	EHWA03-A15	230/208	60

BRANCH CIRCUIT SELECT CURRENT 17 OPERATION

SERIAL NUMBER 125H920711193-01 UL FILE NO.


SUITABLE FOR OUTDOOR USE

ELECTRICAL			
	VAC	HZ	PH
COMPRESSOR	230/208	60	1
OUTDOOR MOTOR	230/208	60	1
INDOOR MOTOR	230/208	60	1
HEATER PACKAGE			
EHWA03-A05	240/208	60	1
EHWA03-A08	240/208	60	1
EHWA03-A10	240/208	60	1
EHWA03-A15	240/208	60	1
KW			
		5/3.75	
		8/6	
		10/7.5	
		15/11.25	


--- FACTORY

FACTORY CHARGED R22: 68 OZ. DESI

--- CLEAR

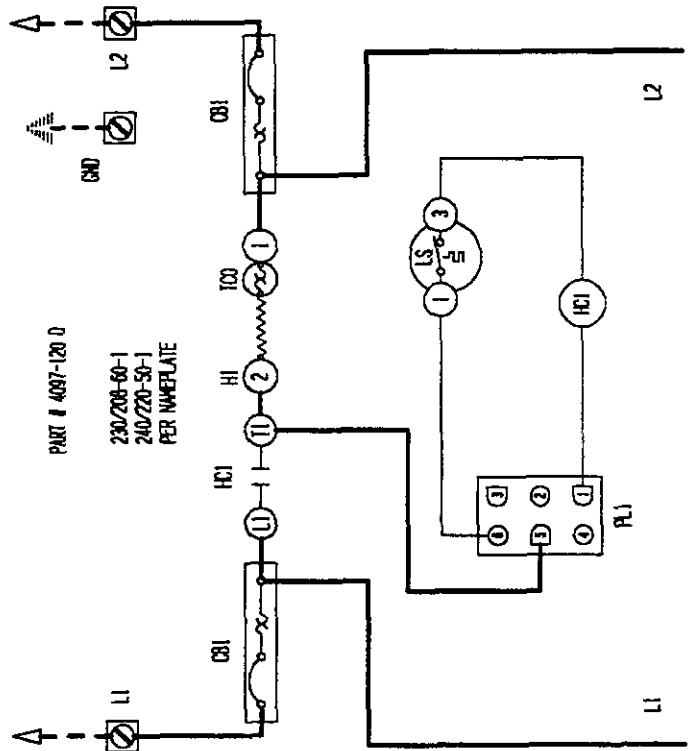


PART # 4097-120 0
230/208-60-1
240/220-50-1
PER NAMEPLATE

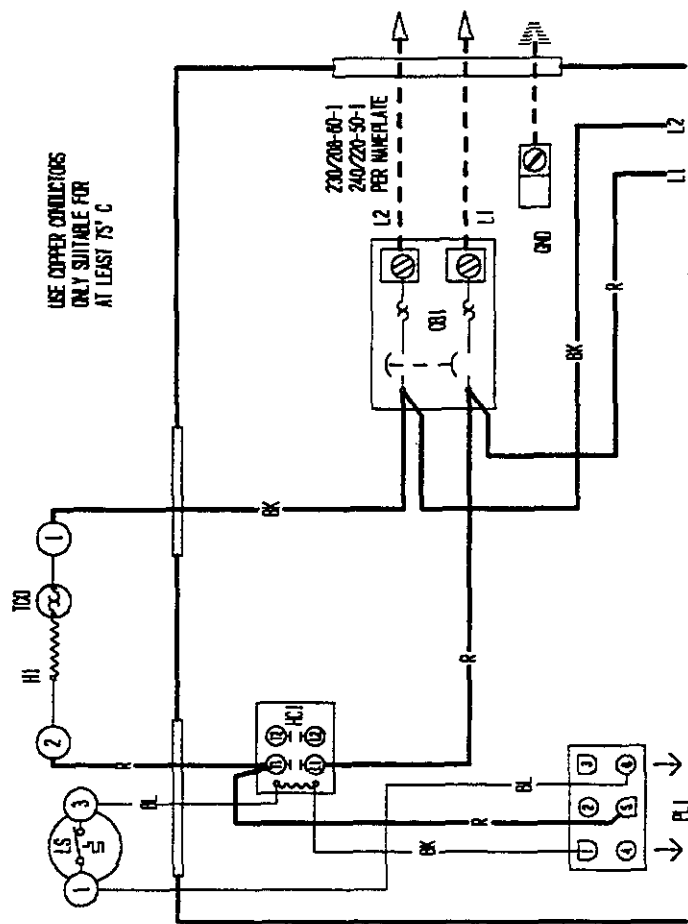

USE COPPER CONDUCTORS
ONLY SUITABLE FOR
AT LEAST 75 °C



230/208-60-1
240/220-50-1
PER NAMEPLATE

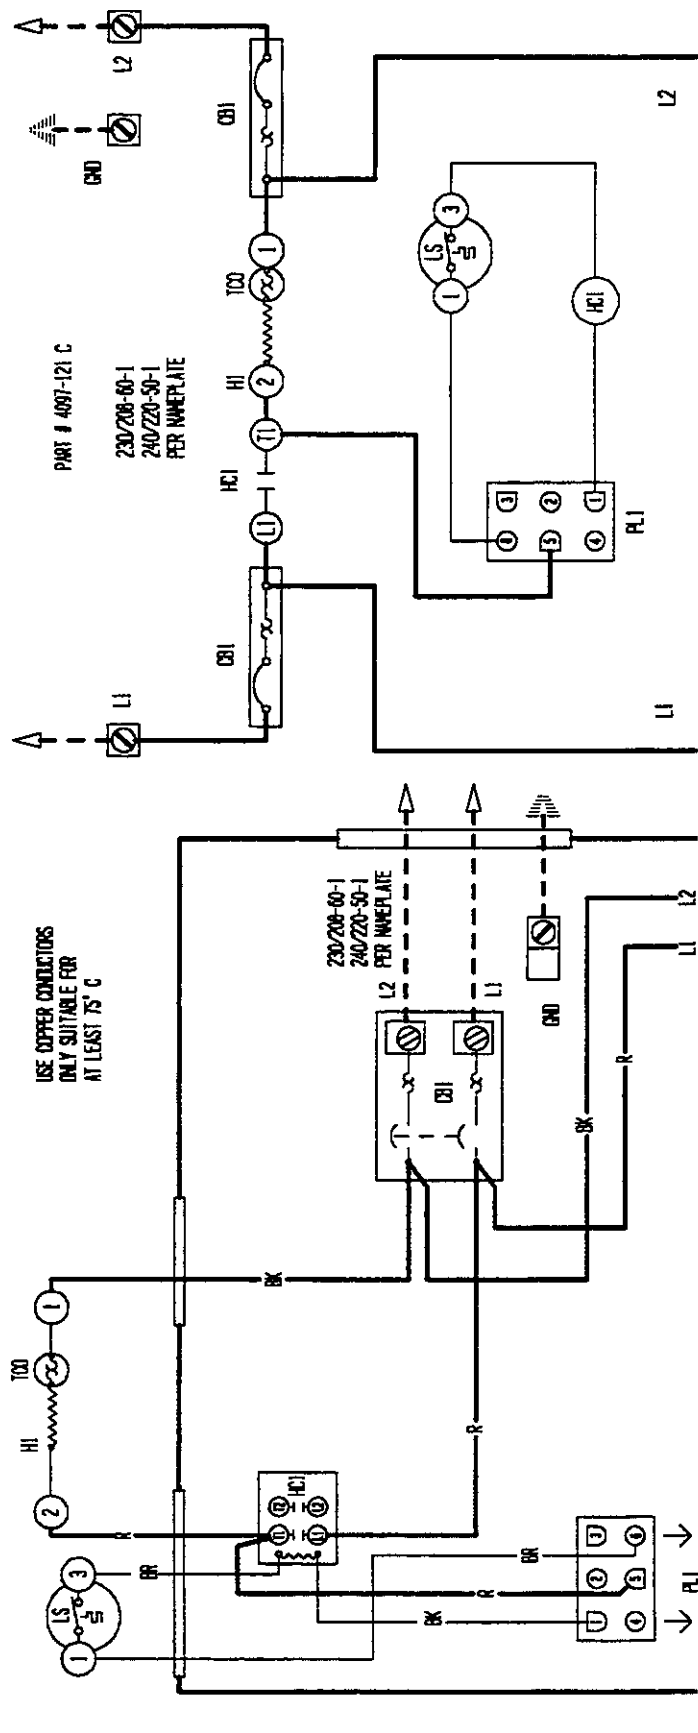


PART # 4097-121 C
230/208-60-1
240/220-50-1
PER INWELATE

USE COPPER CONDUCTORS
ONLY SUITABLE FOR
AT LEAST 75° C

230/208-60-1
240/220-50-1
PER INWELATE

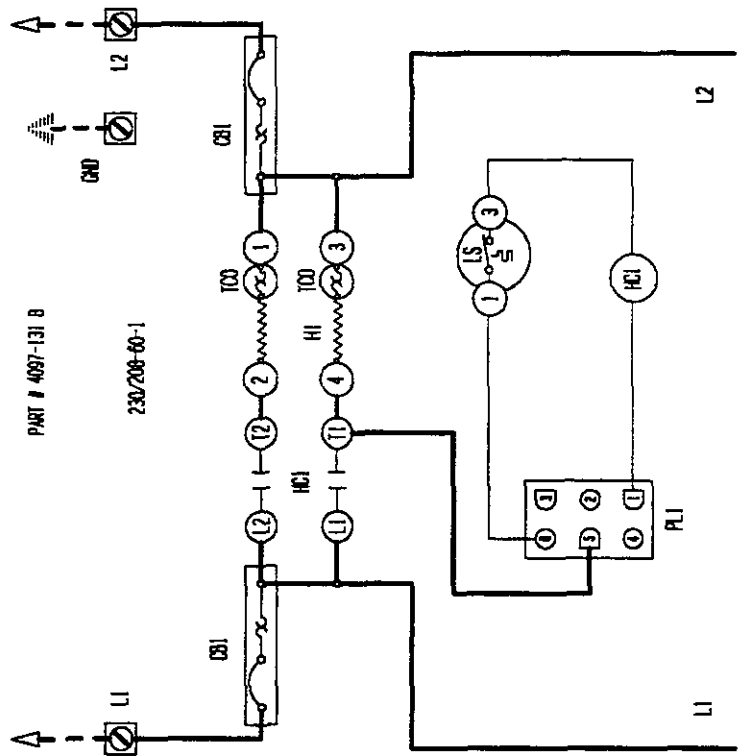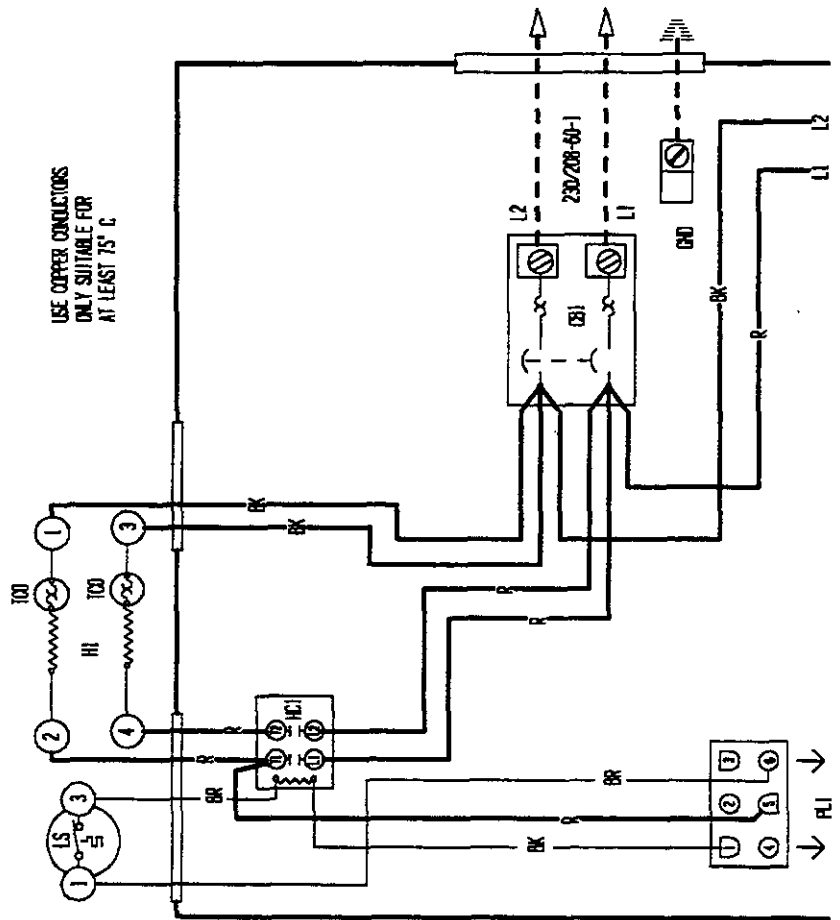

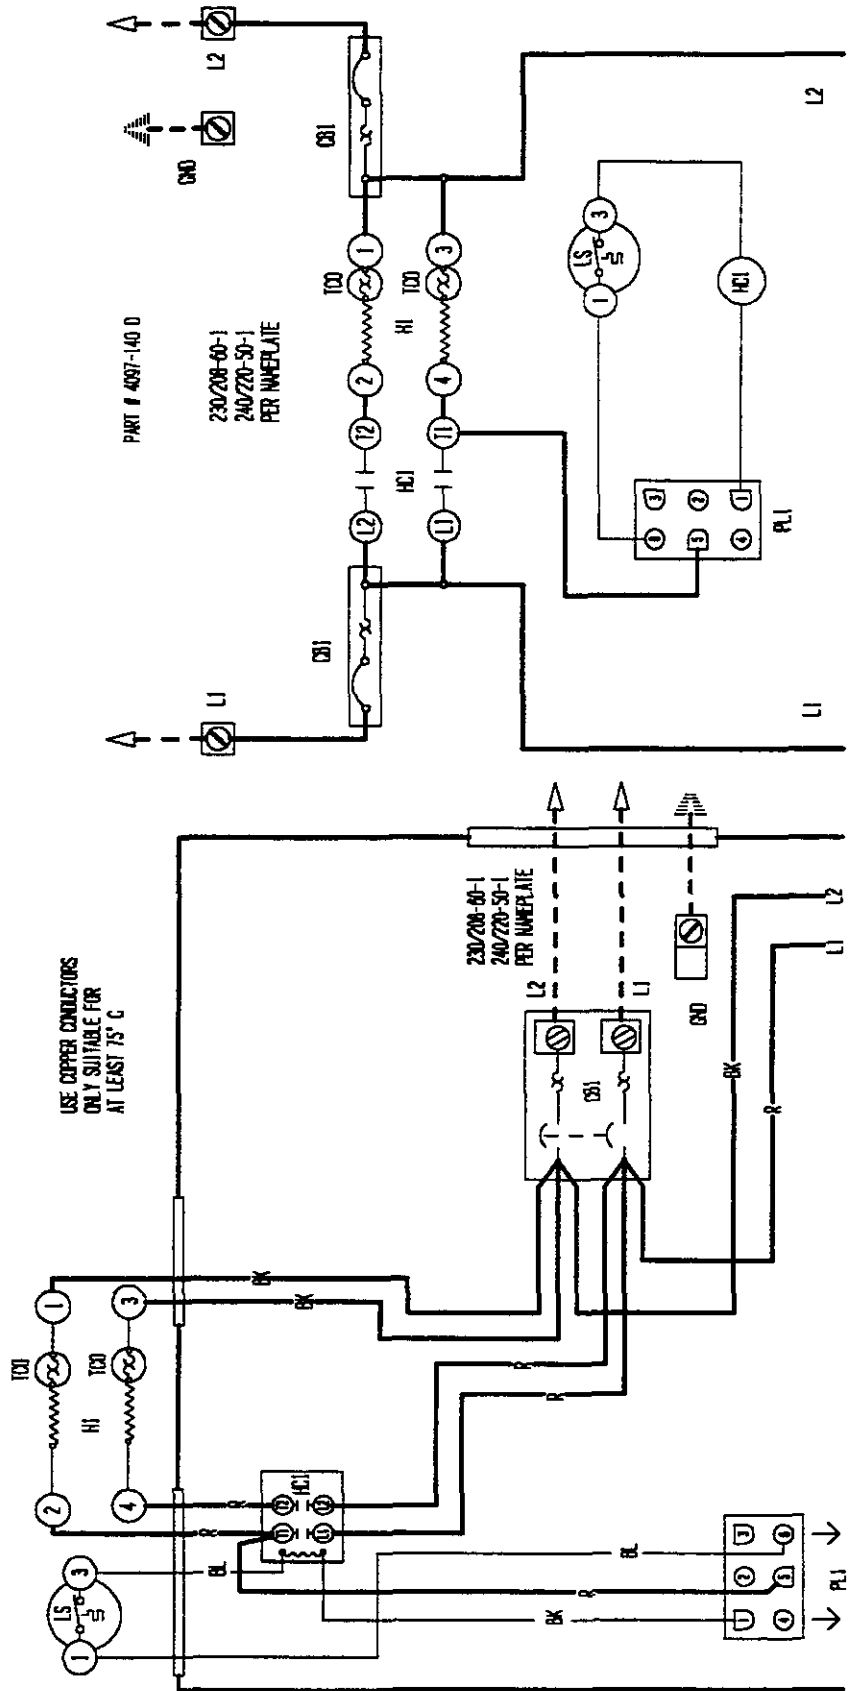


USE COPPER CONDUCTORS
ONLY SUITABLE FOR
AT LEAST 75° C

PART # 4097-140 D


230/208-60-1
240/720-50-1
PER NAMEPLATE

230/208-60-1
240/720-50-1
PER NAMEPLATE

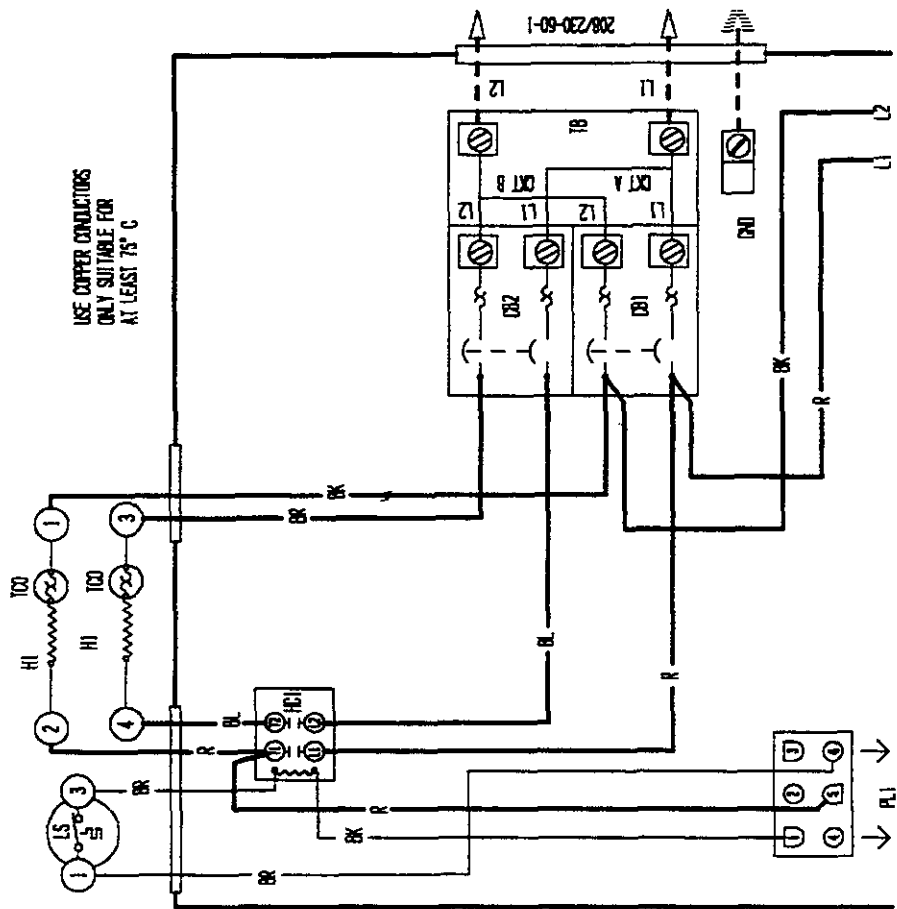

PART # 4097-141 B

230/208-60-1

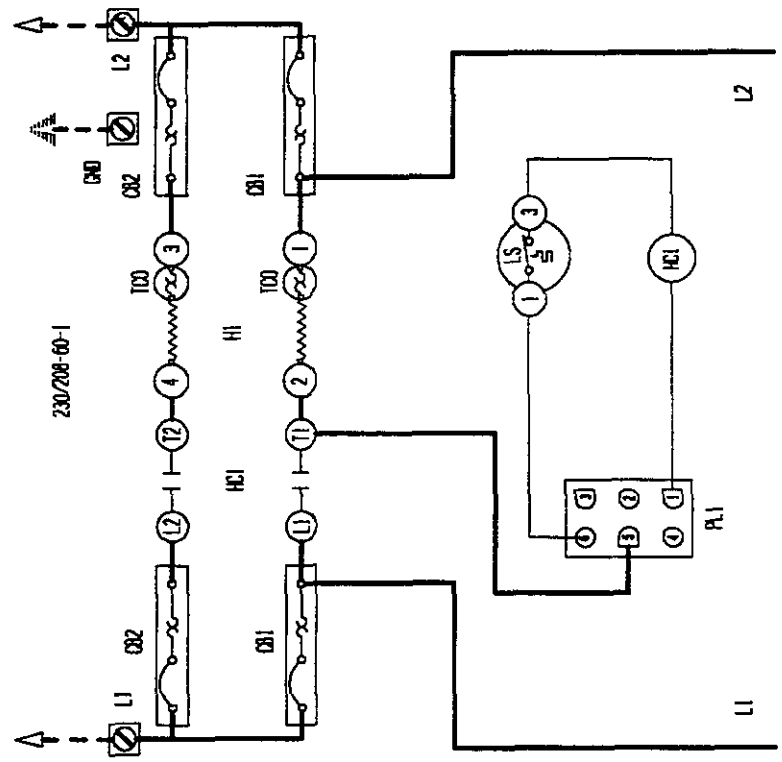

USE COPPER CONDUCTORS
ONLY SUITABLE FOR
AT LEAST 75° C

PART # 4097-150 C

230/208-60-1

