

---

**INSTALLATION  
INSTRUCTIONS**

**WG - SERIES  
COMBINATION GAS/ELECTRIC  
WALL-MOUNT  
with DEHUMIDIFICATION**

**MODELS:**

WG242DA WG242DB WG243DC WG302DA WG302DB WG303DC WG362DA  
WG362DB WG363DC WG423DA WG423DB WG424DC WG482DA WG482DB  
WG483DC WG602DA WG602DB WG603DC

---

 **WARNING**

READ ALL INSTRUCTIONS CAREFULLY BEFORE BEGINNING THE INSTALLATION.

THE INSTALLATION MUST COMPLY WITH THESE INSTRUCTIONS AND THE REQUIREMENTS OF ALL GOVERNING CODES AND ORDINANCES FOR THE INSTALLATION LOCATION.

IT IS THE RESPONSIBILITY OF INSTALLER TO KNOW AND UNDERSTAND ALL OF THESE REQUIREMENTS.

FAILURE TO DO SO COULD CREATE A HAZARD RESULTING IN PROPERTY DAMAGE, BODILY INJURY, OR DEATH.

**GAS-FIRED**



Bard Manufacturing Company, Inc.  
Bryan, Ohio 43506  
*Since 1914...Moving ahead just as planned.*

Manual No.: 2100-376M  
Supersedes: 2100-376L  
File: Volume III, Tab 20  
Date: 06-11-08

# CONTENTS

---

	<b>Page</b>		<b>Page</b>
Getting Other Information and Publications .....	4	20. Checking Gas Input Rate .....	29 & 30
WG Series Model Nomenclature .....	5	21. Standard Orifice Sizing & High Altitude Derate .....	31
Ventilation Options .....	5	22. Conversion of Gas Input BTUH From High to Low Rating .....	34
Air Conditioning Module Options .....	6	23. Measuring Air Temperature Rise .....	34
1. Important .....	6	24. Filters .....	35
2. Application .....	6	25. Compressor Control Module .....	35 & 36
3. Duct Work .....	6 & 10	26. Lighting & Shutdown Instructions .....	37
4. High Altitude Applications .....	10	27. Service Agency Procedures .....	38
5. Transportation Damage .....	10	28. Maintaining Unit in Good Working Order ..	38 & 39
6. Installation .....	10	29. Replacement Parts .....	39
7. Wall Mounting .....	11	30. Sequence of Operation – Heating .....	40
8. Mounting the Unit .....	11	31. Sequence of Operation – Cooling .....	40
9. Clearances .....	17	32. Indoor Blower Operation .....	42
10. Vent Terminal and Combustion Inlet Hood .....	18	33. WG Dehumidification Unit Relay Logic .....	50
11. Optional Vertical Venting .....	18	34. Pressure Service Ports .....	51
12. Vent Resizing Instructions .....	19	35. Dehumidification Circuit .....	52
13. Fresh Air Intake .....	19	36. Refrigerant Charge .....	53
14. Condensate Drain .....	19	37. Fan Blade Setting Dimensions .....	54
15. Wiring – Main Power .....	20	38. Low NOx Burner Assembly "N" Suffix Models Only – U.S. Installations Only .....	54
16. Wiring – Low Voltage Wiring .....	21	Application Data .....	55 – 57
17. Thermostats .....	22	Index – Wiring Diagrams .....	58
18. Gas Supply & Piping .....	28	Wiring Diagrams .....	59 – 84
19. Manifold Pressure Adjustment .....	29		

# CONTENTS

<b>FIGURES</b>		<b>Page</b>	<b>TABLES</b>		<b>Page</b>
Figure 1	Unit Dimensions .....	9	Table 1	Specifications – WG24-36 Models .....	7
Figure 2	Mounting Instructions – WG24-36 .....	12	Table 1A	Specifications – WG42-60 Models .....	8
Figure 2A	Mounting Instructions – WG42-60 .....	13	Table 2	Minimum Installation Clearances .....	17
Figure 3	Combustible Clearance – WG24-36 ....	14	Table 3	Thermostat Wire Size .....	22
Figure 3A	Combustible Clearance – WG42-60 ....	14	Table 4	Wall Thermostat .....	22
Figure 4	Wall Mounting Instructions .....	15	Table 4A	Humidistat .....	22
Figure 5	Wall Mounting Instructions .....	15	Table 5	Length of Standard Pipe Threads .....	28
Figure 6	Common Wall Mounting Installations ...	16	Table 6	Gas Pipe Sizes – Natural Gas .....	28
Figure 7	Location of Vent Terminal in Shipping ..	17	Table 7	Natural Gas Derate Capacities For All Models .....	31
Figure 8	Vent Terminal & Combustion Air Intake .....	18	Table 8	Natural Gas Orifice Tables – WG24-36 ..	32
Figure 9	Fresh Air Damper .....	19	Table 8A	Natural Gas Orifice Tables – WG42-60 ..	33
Figure 10	Installation of Flexible Conduit .....	21	Table 9	Motor Speed Taps .....	42
Figure 11A	Low Voltage Wiring - No Vent .....	23	Table 10	WG24 Indoor Blower Performance .....	43
Figure 11B	Low Voltage Wiring - WGMFAD, WGCRVS, WGERV .....	24	Table 11	WG30 Indoor Blower Performance .....	44
Figure 11C	Low Voltage Wiring - WGCRVP .....	25	Table 12	WG36 Indoor Blower Performance .....	45
Figure 11D	Low Voltage Wiring - WGEIFM .....	26	Table 13	WG42 Indoor Blower Performance .....	46
Figure 12	Gas Pipe Connection .....	27	Table 14	WG48 Indoor Blower Performance .....	47
Figure 13	Proper Piping Practice .....	28	Table 15	WG60 Indoor Blower Performance .....	48
Figure 14	Access Internal Filter through Upper Service Door .....	35	Table 16	Integrated Furnace & Blower Control Operation .....	49
Figure 15	Lighting & Shutdown Instruction Label .	37	Table 17	Cooling Pressure Table .....	51
Figure 16	Top View of Gas Control .....	38	Table 18	Refrigerant Charge .....	53
Figure 17	Sequence of Operation – Electronic Blower Control .....	41	Table 19	Fan Blade Dimension .....	54
Figure 18	Furnace Control Board & Blower Control .....	42	Table 20	WG24*DA Application Data .....	55
Figure 19	Circuit Diagrams .....	52	Table 21	WG30*DA Application Data .....	55
Figure 20	Fan Blade .....	54	Table 22	WG36*DA Application Data .....	56
Figure 21	Low NOx Insert .....	54	Table 23	WG42*DA Application Data .....	56
			Table 24	WG48*DA Application Data .....	57
			Table 25	WG60*DA Application Data .....	57

# Getting Other Information and Publications

---

These publications can help you install the furnace. You can usually find these at your local library or purchase them directly from the publisher. Be sure to consult current edition of each standard.

National Fuel Gas Code ..... ANSI Z223.1 / NFPA 54

National Electrical Code ..... ANSI / NFPA 70

Standard for the Installation ..... ANSI / NFPA 90A  
of Air Conditioning and Ventilating Systems

Standard for Warm Air ..... ANSI / NFPA 90B  
Heating and Air Conditioning Systems

Standard for Chimneys, ..... NFPA 211  
Fireplaces, Vents, and Solid Fuel Burning Appliances

Load Calculation for ..... ACCA Manual J  
Residential Winter and Summer Air Conditioning

Duct Design for Residential ..... ACCA Manual D  
Winter and Summer Air Conditioning and Equipment  
Selection

Canadian Electrical Code ..... CSA C22.1

Canadian Installation Code.....CAN/CGA B149

## FOR MORE INFORMATION, CONTACT THESE PUBLISHERS:

**ACCA**     **Air Conditioning Contractors of America**  
1712 New Hampshire Avenue, NW  
Washington, DC 20009  
Telephone: (202) 483-9370

**ANSI**     **American National Standards Institute**  
11 West Street, 13th Floor  
New York, NY 10036  
Telephone: (212) 642-4900  
Fax: (212) 302-1286

**ASHRAE**   **American Society of Heating Refrigerating,  
and Air Conditioning Engineers, Inc.**  
1791 Tullie Circle, NE.  
Atlanta, GA 30329-2305  
Telephone: (404) 636-8400  
Fax: (404) 321-5478

**NFPA**     **National Fire Protection Association**  
Batterymarch Park  
P.O. Box 9101  
Quincy, MA 02269-9901  
Telephone: (800) 344-3555  
Fax: (617) 984-7057


**CSA**     **Canadian Standards Association**  
178 Rexdale Boulevard  
Rexdale, Ontario  
Canada. M9W 1R3  
Telephone: (416) 447-4044

COPYRIGHT SEPTEMBER 2003  
BARD MANUFACTURING COMPANY, INC.  
BRYAN, OHIO 43506 USA

Manufactured under the following U.S. patent numbers:  
5,485,878; 5,002,116; 4,924,934; 4,875,520; 4,4825,936

# WALL MOUNT GAS/ELECTRIC GENERAL

## MODEL NUMBER NOMENCLATURE

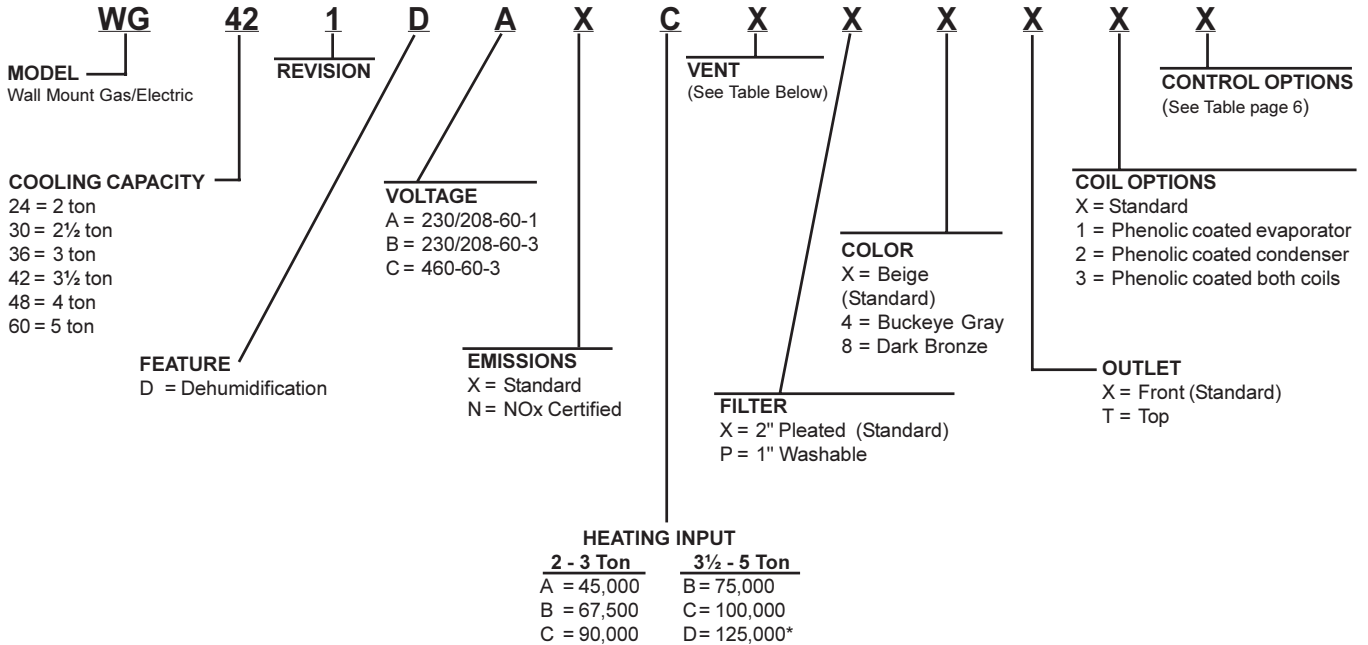

\*125,000 BTU input model is not NOx certified.

## VENTILATION OPTIONS

Models		WG24, WG30, WG36	WG42, WG48, WG60
Description	Factory Installed Code No.	Field Installed Part No.	Field Installed Part No.
Barometric Fresh Air Damper	X	WGBFAD-3	WGBFAD-5
Blank-Off Plate	B	WGBOP-3	WGBOP-5
Motorized Fresh Air Damper	M	WGMFAD-3	WGMFAD-5
Commercial Ventilator - Spring Return	V	WGCRVS-3	WGCRVS-5
Commercial Ventilator - Power Return	P	WGCRVP-3	WGCRVP-5
Economizer - Fully Modulating ①	E	WGEIFM-3	WGEIFM-5
Energy Recovery Ventilator - 230 Volt	R	WGERV-A3	WGERV-A5
Energy Recovery Ventilator - 460 Volt	R	WGERV-C3	WGERV-C5

① Low ambient control is required with economizer for low temperature compressor operation.

## AIR CONDITIONING MODULE OPTIONS

① CCM	② HPC	③ LPC	④ LAC	Factory Installed Code	Field Installed Part
STD	STD	•		G	CMA-16
STD	STD	•	•	H	CMA-18
STD	STD		•	I	CMA-6

STD = Standard equipment.

- ① CCM Compressor control module has adjustable 30 second to 5 minute delay-on-break timer. On initial power up, or any time the power is interrupted, the delay-on-make will be 2 minutes plus 10% of the delay-on-break setting. There is no delay-on-make during routine operation of the unit. The module also provides the lockout feature (with 1 retry) for high and/or low pressure controls, and a 2 minute timed bypass for low pressure control.
- ② HPC High pressure control is auto reset. Always used with compressor control module (CCM) which is included. See note ①.
- ③ LPC Low pressure control is auto reset. Always used with compressor control module (CCM) which is included. See note ①.
- ④ LAC Low ambient control permits cooling operation down to 0°F.



## CAUTION

During the initial firing of the burners there will probably be some amount of smoke issued to the circulating air stream as the result of residual oil burning off of the heat exchanger tubes. This oil is required during the forming process of the stainless steel heat exchanger tubes to facilitate the bending. OSHA or the National Toxicology Program does not list the oil as a carcinogen. In vapor form this may be irritating to the eyes or could cause headaches. This is a one time occurrence, and ventilation of the space may be required depending upon the space being conditioned.

### 1. IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians. All duct work or portions thereof not in the conditioned space should be properly insulated in order to both conserve energy and prevent condensation or moisture damage.

### 2. APPLICATION

This is a fan-assisted forced air gas furnace with electric air conditioning for outdoor installation. A fan-assisted furnace is equipped with an integral mechanical means to draw products of combustion through the combustion chamber and heat exchanger. The furnace installation must conform with local building codes and ordinances or, in their absence, with the National Fuel Gas Code ANSI Z223.1 or CAN/CGA-B149.1, latest edition, and the National Electrical Code ANSI/NFPA-7 or CSA C22.1, latest edition. It is the personal responsibility and obligation of the purchaser to contact a qualified installer to assure that installation is adequate and is in conformance with governing codes and ordinances.

### 3. DUCT WORK

The unit is designed for use with or without duct work. See Warning on Page 10. Flanges are provided for attaching the supply and return ducts. These instructions explain the recommended method to install the air cooled self-contained electric air conditioning and gas heating unit and the electrical wiring connections and gas piping to the unit. The refrigerant system is completely assembled and charged. All internal wiring is complete.

These instructions and any instructions packaged with any separate equipment required to make up the entire heating/cooling system should be carefully read before beginning the installation. Note particularly “Starting Procedure” and any tags and/or labels attached to the equipment.

All duct work, supply and return, must be properly sized for the design airflow requirement of the equipment. Air Conditioning Contractors of America (ACCA) is an excellent guide to proper sizing.

Refer to Tables later in this Manual for maximum static pressure available for duct design.

**TABLE 1  
SPECIFICATIONS  
WG24, WG30 AND WG36 MODELS**

Model	WG242-A	WG242-B	WG243-C	WG302-A	WG302-B	WG303-C	WG362-A	WG362-B	WG363-C
<i>Electrical Rating – 60HZ</i>	230/208-60-1 197-253	230/208-60-3 187-253	460-60-3 414-506	230/208-60-1 197-253	230/208-60-3 187-253	460-60-3 414-506	230/208-60-1 197-253	230/20-60-3 187-253	460-60-3 414-506
<i>Operating Voltage Range</i>	18	13	7	23	17	9	26	18	9
<i>Minimum Circuit Ampacity</i>	10	12	14	10	12	14	8	10	14
<i>* Field Wire Size</i>	10	12	14	10	12	14	10	10	14
<i>Ground Wire Size</i>	25	20	15	40	25	15	40	25	15
<i>** Delay Fuse – Max.</i>									
<i>Compressor</i>									
<i>Compressor Type</i>	Recp.	Recp.	Recp.	Scroll	Scroll	Scroll	Recp.	Recp.	Recp.
<i>Volts</i>	230/208	230/208	460	230/208	230/208	460	230/208	230/208	460
<i>Rated Load Amps</i>	9.5/10.5	6.2/6.6	3.3	12.5/13.5	9.0/9.5	5	14/16	9.5/10	5
<i>Branch Circuit Selection Current</i>	10.5	6.7	3.5	14.1	9.5	5	16	10	5
<i>Lock Rotor Amps</i>	56/56	51/15	25	73/73	63/63	31/31	78/78	72/72	45/45
<i>Fan Motor and Compressor</i>									
<i>Fan Motor – HP/RPM/SPD</i>	1/5 / 1050 /1	1/5 / 1050/1	1/5 / 1050/1	1/5 / 1050/1	1/5 / 1050/1	1/5 / 1050/1	1/5 / 1050/1	1/5 / 1050/1	1/5 / 1050/1
<i>Fan Motor – Amps</i>	1.5	1.5	0.8	1.5	1.5	0.8	1.5	1.5	0.8
<i>Fan – DIA/CFM</i>	20" – 1900	20" – 1900	20" – 1900	20" – 1900	20" – 1900	20" – 1900	20" – 1900	20" – 1900	20" – 1900
<i>Motor and Evaporator</i>									
<i>Blower Motor – HP/RPM/SPD</i>	1/4 / 950 / 3	1/4 / 950 / 3	1/4 / 950 / 3	1/3 / 1075/3	1/3 / 1075/3	1/3 / 1075/3	1/3 / 1075/3	1/3 / 1075/3	1/3 / 1075/3
<i>Blower Motor – Amps</i>	1.8	1.8	0.8	2.2	2.2	1.1	2.2	2.2	1.1
<i>CFM Cooling &amp; E.S.P.</i>	800 – .25	800 – .25	800 – .25	1000 – .35	1000 – .35	1000 – .35	1100 – .25	1100 – .25	1100 – .25
<i>Filter Sizes (Inches)</i>	20 x 25 2	20 x 25 2	20 x 25 2	20 x 25 2	20 x 25 2	20 x 25 2	20 x 25 2	20 x 25 2	20 x 25 2
<i>Charge (R-22 oz.)</i>	77	77	77	97	97	97	86	86	86

\* 75 degree C Copper wire size

\*\* Maximum time delay fuse or HACR Type circuit breaker

**TABLE 1A**  
**SPECIFICATIONS**  
**WG42, WG48 AND WG60 MODELS**

Model	WG423-A	WG423-B	WG424-C	WG482-A	WG482-B	WG483-C	WG602-A	WG602-B	WG603-C
Electrical Rating – 60HZ	230/208-60-1	230/208-60-3	460-60-3	230/208-60-1	230/208-60-3	460-60-3	230/208-60-1	230/20-60-3	460-60-3
Operating Voltage Range	197 - 253	187 - 253	414 - 506	197 - 253	187 - 253	414 - 506	197 - 253	187 - 253	414 - 506
Minimum Circuit Ampacity	34	26	13	35	24	12	45	32	15
* Field Wire Size /	8	8	14	8	8	14	8	8	12
Ground Wire Size	10	10	14	10	10	14	10	10	12
** Delay Fuse – Max.	50	35	15	50	35	15	60	45	20
<i>Compressor</i>									
Compressor Type	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll	Scroll
Volts	230/208	230/208	230/208	460	230/208	230/208	230/208	230/208	460
Rated Load Amps	21/19.5	13.5/14.5	8	21/21.5	12.5/13	6.2	27/30	17/19.5	9
Branch Circuit Selection Current	21	15	7.6	22	13	6.4	30	19.5	9
Lock Rotor Amps	127/127	88/88	44	131/131	91/81	46	169/169	137/137	62
<i>Fan Motor and Compressor</i>									
Fan Motor – HP/RPM/SPD	1/3-850-2	1/3-850-2	1/3-850-1	1/3-850-2	1/3-850-2	1/3-850-1	1/3-850-2	1/3-850-2	1/3-850-1
Fan Motor – Amps	2.5	2.5	1.3	2.5	2.5	1.3	2.5	2.5	1.3
Fan – DIA/CFM	24"-2700	24"-2700	24"-2700	24"-2700	24"-2700	24"-2700	24"-2700	24"-2700	24"-2700
<i>Motor and Evaporator</i>									
Blower Motor – HP/RPM/SPD	1/2-1050-3	1/2-1050-3	1/2-1050-3	1/2-1050-3	1/2-1050-3	1/2-1050-3	1/2-1050-3	1/2-1050-3	1/2-1050-3
Blower Motor – Amps	3.4	3.4	1.5	3.4	3.4	1.5	3.4	3.4	1.5
CFM Cooling & E.S.P.	1300 - .35	1300 - .35	1300 - .35	1550 - .38	1550 - .38	1550 - .38	1650 - .30	1650 - .30	1650 - .30
Filter Sizes (Inches)	20 x 30 x 2	20 x 30 x 2	20 x 30 x 2	20 x 30 x 2	20 x 30 x 2	20 x 30 x 2	20 x 30 x 2	20 x 30 x 2	20 x 30 x 2
Charge (R-22 oz)	101	101	101	116	116	116	143	143	143

\* 75 degree C Copper wire size

\*\* Maximum time delay fuse or HACR Type circuit breaker





## WARNING

In all cases, there must be a metal duct connection made to the supply air flange, and a one inch clearance to combustibles must be maintained to this duct connection.

For free blow applications, a metal sleeve must be used in the wall opening itself, again maintaining a one inch clearance to combustibles.

Failure to use the sheet metal can cause fire resulting in property damage, injury, or death.

See Figure 3 and clearance information in Section 9 and Table 2 for additional information.

Design the duct work according to methods given by the Air Conditioning Contractors of America (ACCA). When duct runs through unheated spaces, it should be insulated with a minimum of one-inch of insulation. Use insulation with a vapor barrier on the outside of the insulation. Flexible joints should be used to connect the duct work to the equipment in order to keep the noise transmission to a minimum.

A one-inch clearance to combustible material for the first three feet of duct attached to the outlet air frame is required. See Wall Mounting Instructions and Figures 2, 2A, 3 and 3A for further details.

Ducts through the walls must be insulated and all joints taped or sealed to prevent air or moisture entering the wall cavity.

Some installations may not require any return air duct. A metallic return air grille is required with installations not requiring a return air duct. The spacing between louvers on the grille shall not be larger than 5/8 inch.

Any grille that meets with the 5/8 inch louver criteria may be used. It is recommended that Bard Return Air Grille or Return Filter Grille be installed when no return duct is used. Contact distributor or factory for ordering information. If using a return air filter grille, filters must be of sufficient size to allow a maximum velocity of 400 fpm.

*NOTE: If no return air duct is used, applicable installation codes may limit this cabinet to installation only in a single story structure.*

## 4. HIGH ALTITUDE APPLICATIONS

Ratings of gas utilization equipment are based on sea level operation and need not be changed for operation at elevations up to 6,000 feet. For operation at elevations above 6,000 feet and in the absence of specific recommendations from the local authority having jurisdiction, equipment ratings shall be reduced as specified in Section 21.

## 5. TRANSPORTATION DAMAGE

All units are packed securely in shipping container. All units should be carefully inspected upon arrival for damage. In the event of damage, the consignee should:

1. Note on delivery receipt of any damage to container.
2. Notify carrier promptly, and request an inspection.
3. In case of concealed damage, the carrier must be notified as soon as possible within 15 days after delivery.
4. Claims for any damage, apparent or concealed, should be filed with the carrier, using the following supporting documents:
  - A. Original Bill of Lading, certified copy, or indemnity bond.
  - B. Original paid freight bill of indemnity in lieu thereof.
  - C. Original invoice or certified copy thereof showing trade and other discounts or deductions.
  - D. Copy of the inspection report issued by carrier's representative at the time damage is reported to carrier.

## 6. INSTALLATION

Size of unit for proposed installation should be based on heat loss/heat gain calculations made according to methods of Air Conditioning Contractors of America (ACCA). The air duct should be installed in accordance with the Standards of the National Fire Protection Association for the Installation of Air Conditioning and Ventilating Systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

## 7. WALL MOUNTING INFORMATION

1. Two holes for the supply and return air openings must be cut through the wall as detailed in Figure 4.
2. On wood-frame walls, the wall construction must be strong and rigid enough to carry the weight of the unit without transmitting any unit vibration.
3. Concrete block walls must be thoroughly inspected to insure that they are capable of carrying the weight of the installed unit.

## 8. MOUNTING THE UNIT

1. These units are secured by wall mounting brackets which secure the unit to the outside wall surface at both sides. A bottom mounting bracket is provided for ease of installation but is not required.

### CAUTION

If the bottom bracket is used, be certain the bracket is secured to the outside wall surface in a way sufficient to support the entire weight of the unit during installation until side mounting brackets are secured.

2. The WG42, WG48 and WG60 models are suitable for 0 inch clearance on the installation mounting wall and to the top. For all models the supply air duct flange and the first 3 feet of supply air duct require a minimum of 1-inch clearance to combustible material. The WG24, WG30 and WG36 models are suitable for 0 inch clearance on the installation mounting wall, but require 1-inch clearance to the top if combustible material overhang projects above the unit. See Figure 3 and 3A. If a combustible wall, use a minimum of Figure 1 “A” dimension plus 2 inches and “B” dimension plus 2 inches. See Figures 4 and 5 for details.

### WARNING


Failure to provide the one inch clearance between the supply duct and a combustible surface for the first three feet of duct can result in fire causing damage, injury or death.

3. Locate and mark lag bolt locations and bottom mounting bracket location.
4. Mount bottom mounting bracket.
5. Hook top rain flashing under back bend of top. Top rain flashing is shipped secured to the right side of the back.
6. Position unit in opening and secure with 5/16 lag bolts; use 7/8 inch diameter flat washers on the lag bolts. Use lag bolts long enough to support the unit’s weight when mounted to the structure. This length may be dependant on the type of construction.
7. Secure rain flashing to wall and caulk across entire length of top. See Figure 3.
8. On side-by-side installations, maintain a minimum of 20 inches clearance on right side to allow access to control panel and burner compartment, and to allow proper airflow to the outdoor coil. Additional clearance may be required to meet local or national codes.






**FIGURE 3  
COMBUSTIBLE CLEARANCE  
FOR WG24, WG30 AND WG36 MODELS**

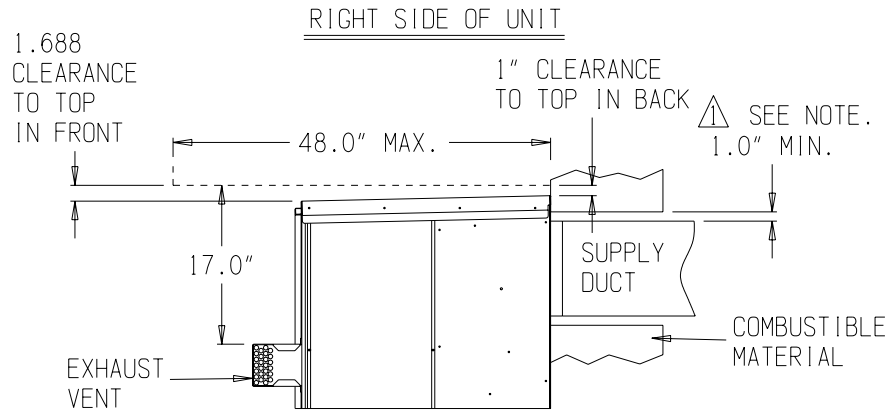

⚠ SIDE SECTION VIEW OF SUPPLY AIR DUCT FOR WALL MOUNTED UNIT SHOWING 1.0" CLEARANCE TO ALL COMBUSTIBLE SURFACES.

MIS-1682

**FIGURE 3A  
COMBUSTIBLE CLEARANCE  
FOR WG42, WG48 AND WG60 MODELS**

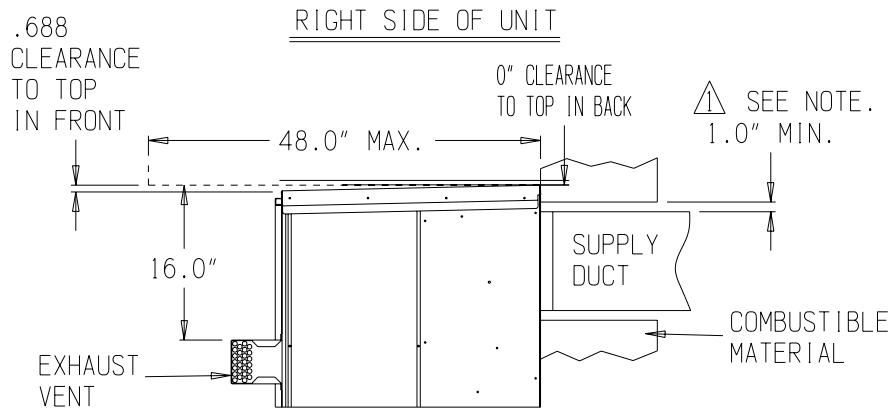

⚠ SIDE SECTION VIEW OF SUPPLY AIR DUCT FOR WALL MOUNTED UNIT SHOWING 1.0" CLEARANCE TO ALL COMBUSTIBLE SURFACES.

MIS-1714


## ⚠ WARNING

A **minimum** of one (1) inch clearance must be maintained between the supply air duct and combustible materials. This is required for the first three (3) feet of ducting.

It is important to insure that the one (1) inch minimum spacing is maintained at all points.


Failure to do this could result in overheating the combustible material and may result in a fire causing damage, injury or death.

**FIGURE 4  
WALL MOUNTING INSTRUCTIONS**

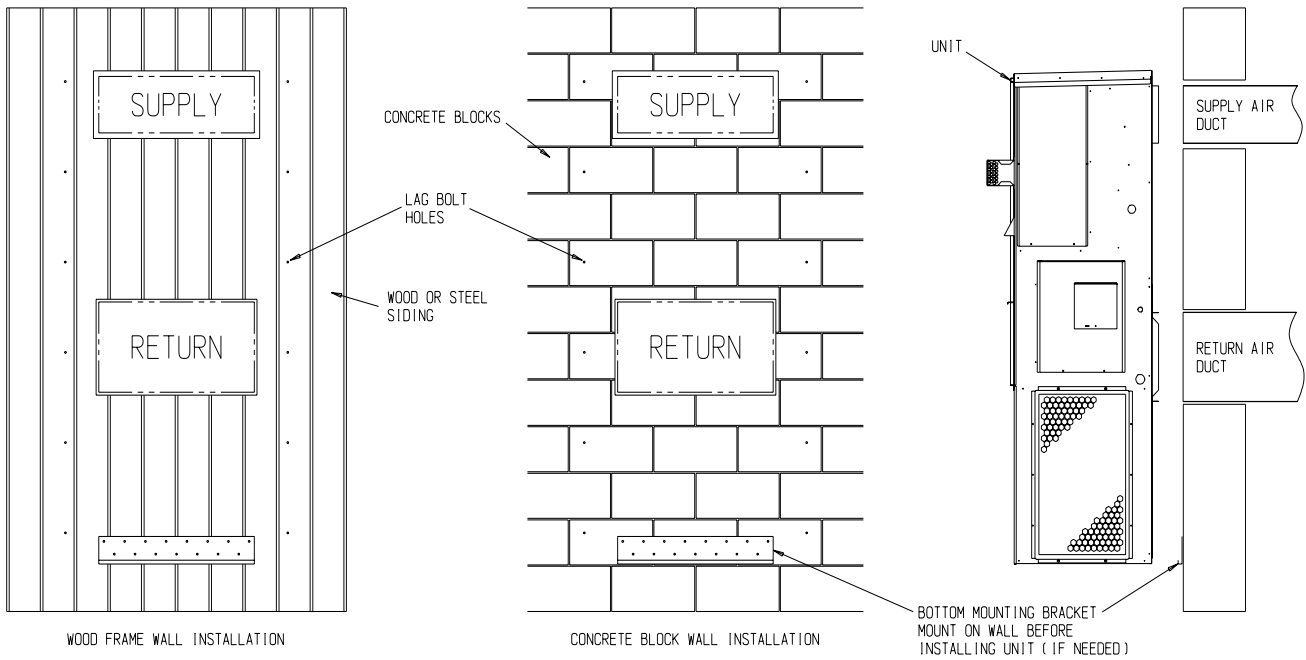


MIS-1475

**FIGURE 5  
WALL MOUNTING INSTRUCTIONS**

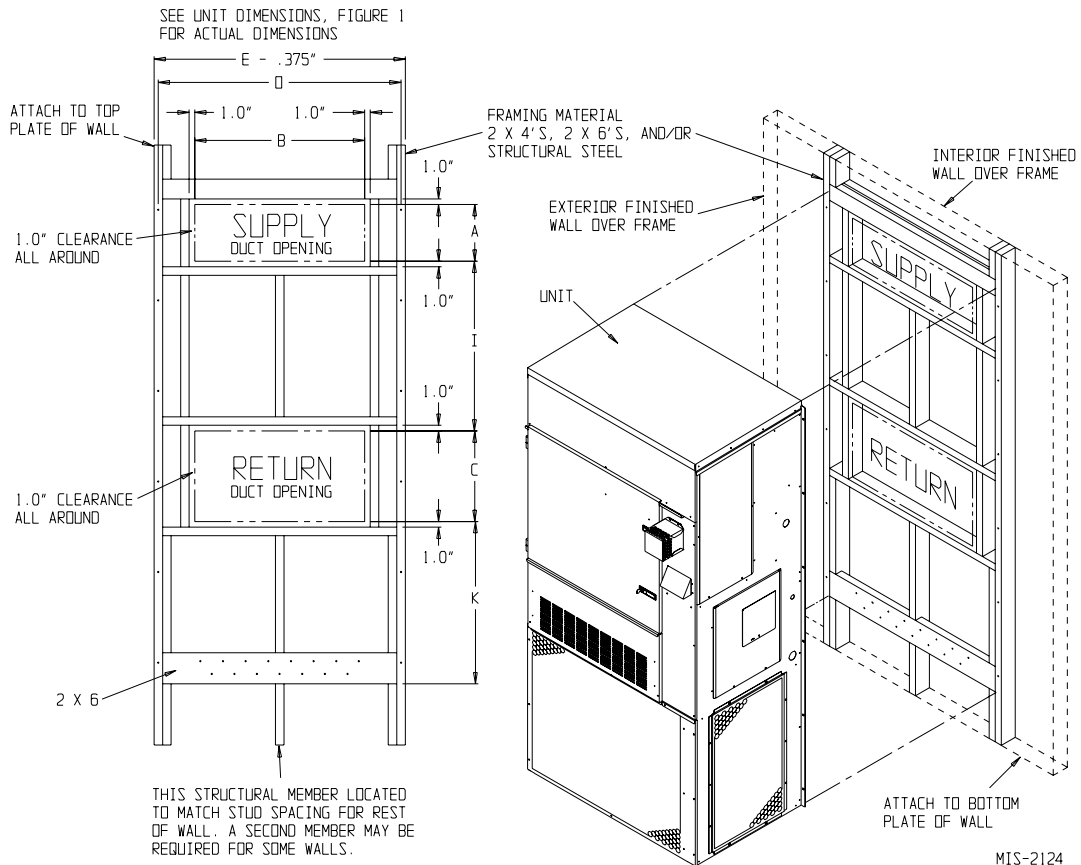

MIS-2124

**FIGURE 6  
COMMON WALL MOUNTING INSTALLATIONS**

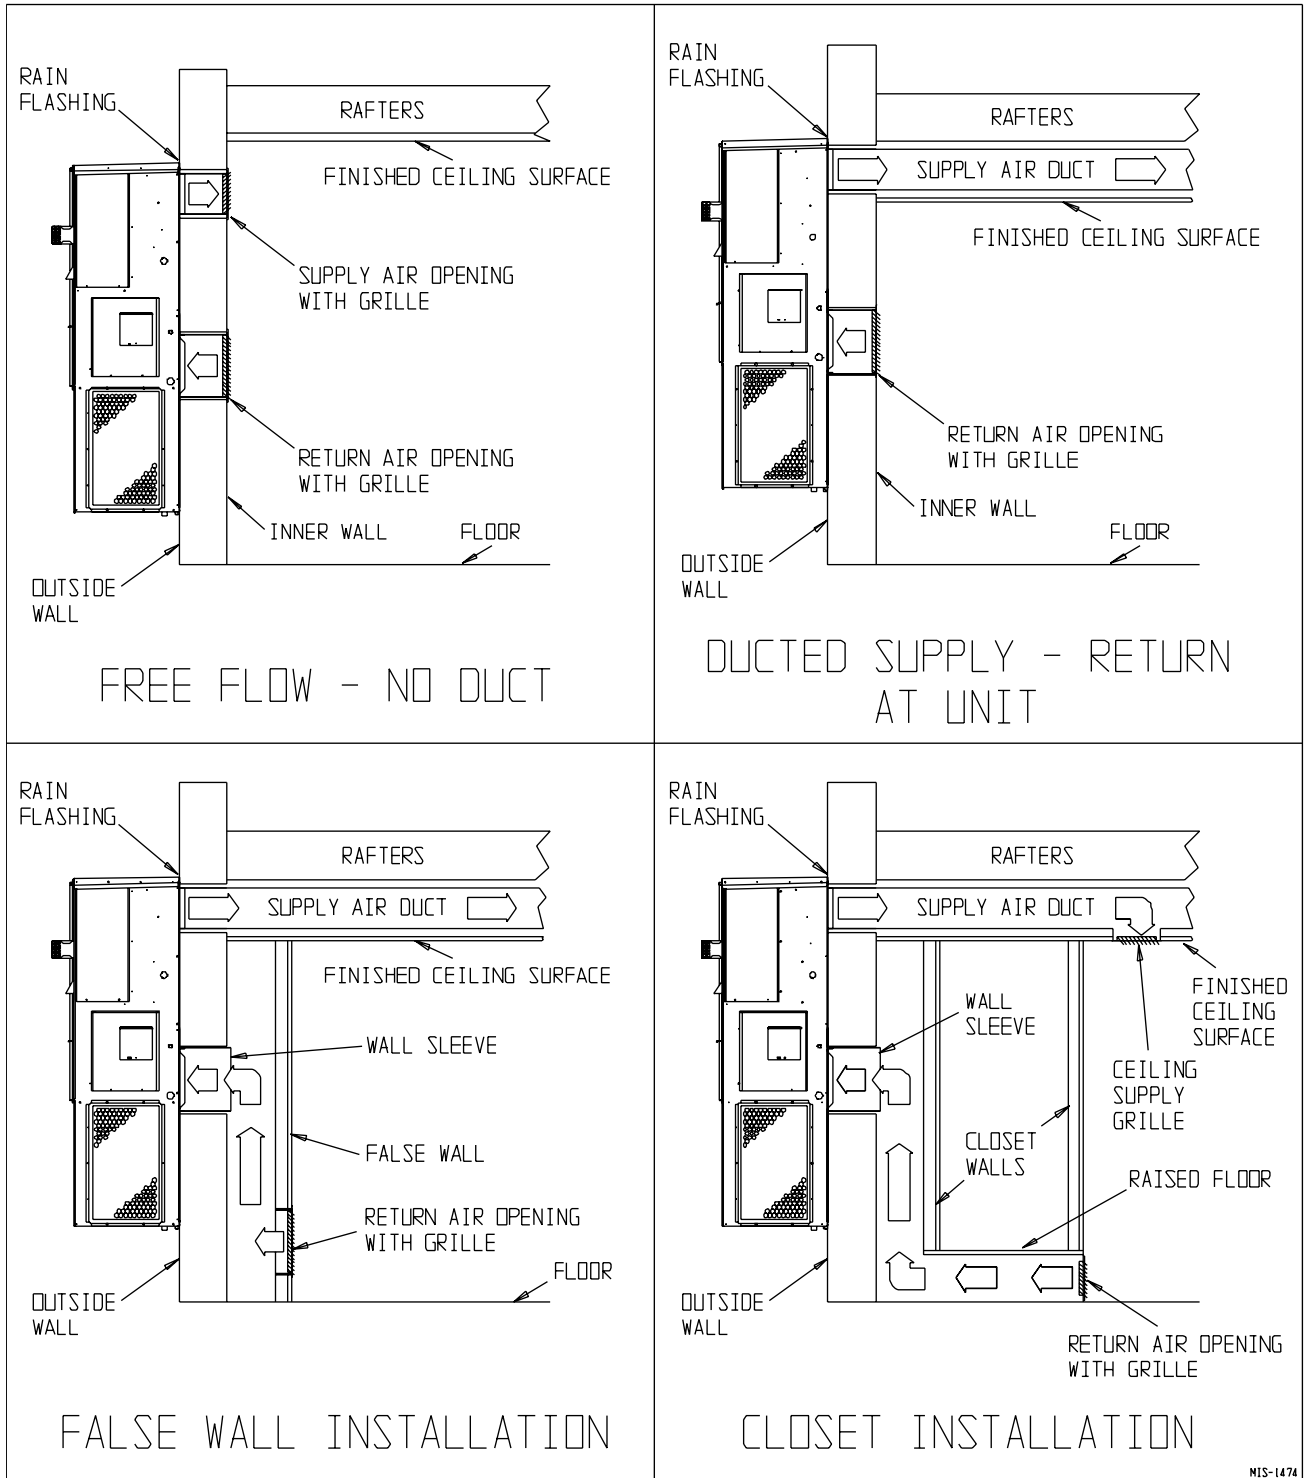

NIS-1474

## 9. CLEARANCES

Minimum clearances, as specified in Table 2, must be maintained from adjacent structures to provide adequate fire protection, adequate combustion air, and room for service personnel.

While minimum clearances are acceptable for safety reasons, they may not allow adequate air circulation around the unit for proper operation in the cooling mode. Whenever possible, it is desirable to allow additional clearance, especially around the condenser inlet and discharge openings. **DO NOT** install the unit in a location that will permit discharged air from the condenser to recirculate to the condenser inlet.


**TABLE 2  
MINIMUM INSTALLATION CLEARANCES**

Outlet Duct (from combustible materials)	1 inch first 3 feet
Vent Terminal (from combustible materials)	* 17 inches
Condenser Outlet	20 inches
Top	See Figure 3
Burner Service	20 inches
Combustible Base (Wood or Class A, B or C roof covering material)	0 inches
* See Figures 3 and 3A	

## **WARNING**

Clearances from combustible materials must be maintained as specified. Failure to maintain clearances could cause fire resulting in property damage, injury, or death.

**FIGURE 7  
LOCATION OF VENT TERMINAL IN SHIPPING**

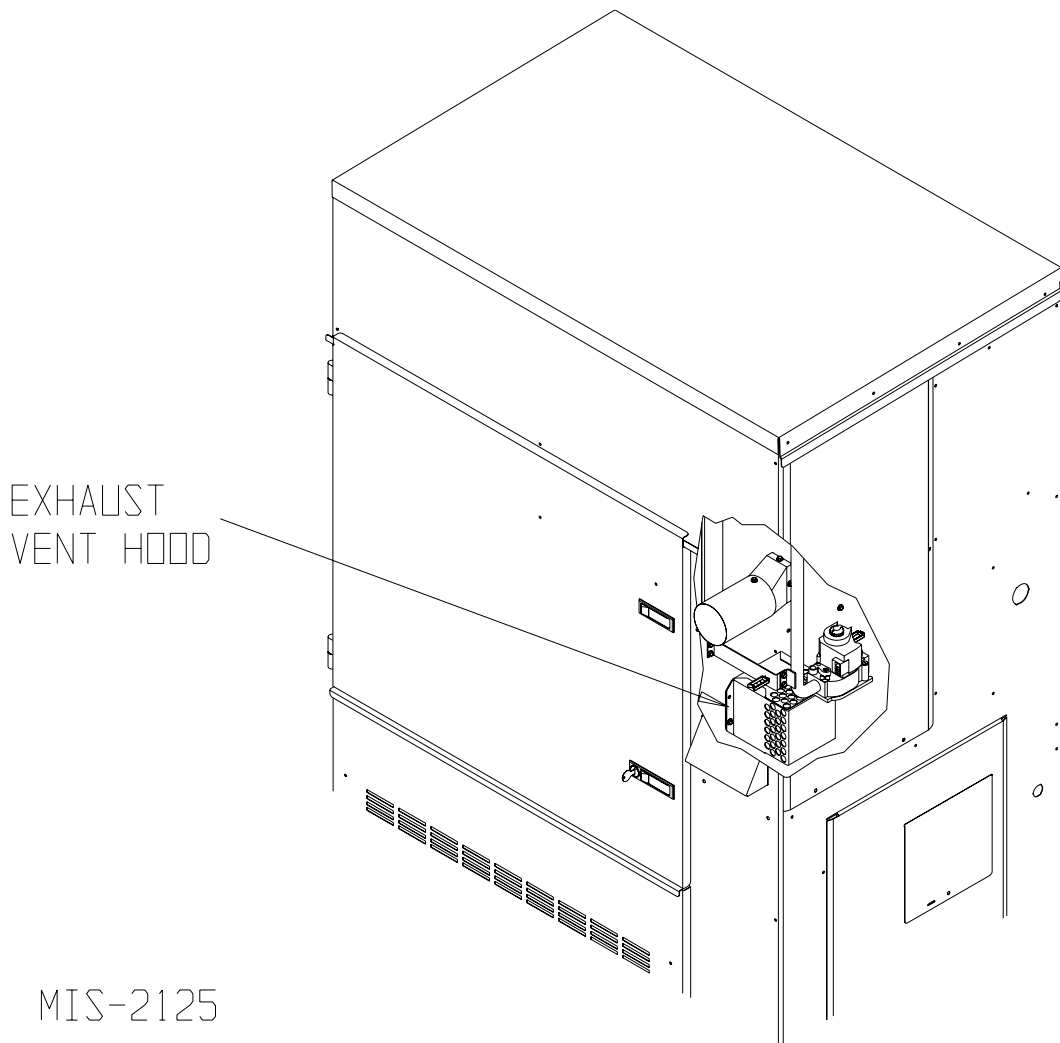

MIS-2125

## 10. VENT TERMINAL AND COMBUSTION AIR INLET HOOD

The vent terminal is shipped in the burner compartment. See Figure 7. Remove the two shipping screws and separate the two-piece assembly. Install the vent terminal by using the four screws provided. **Make sure gasket is in place.** See Figure 8. The combustion air intake hood is factory installed.

## 11. OPTIONAL VERTICAL VENTING

With the optional vertical venting kit (VVK-5) this unit may be vented vertically through a roof or overhang. The kit includes a stainless steel transition drain tee, silicone sealant, and drain tubing.

If unit is installed with vertical vent kit, annually inspect the vent system and drain. Replace any portion of the vent system that shows signs of deterioration. Make sure drain is open and free of obstruction.




# CAUTION

Vent terminal must be installed as shown in Figure 8 for proper operation of the heating system.

**NOTE: The inner vent hood gasket is designed to stretch over and seal around the combustion air blower outlet. This is a very critical seal to prevent water and flue products from entering the unit. Care must be taken to ensure this gasket is in place and sealing properly.**

**FIGURE 8  
VENT TERMINAL AND COMBUSTION AIR INTAKE**

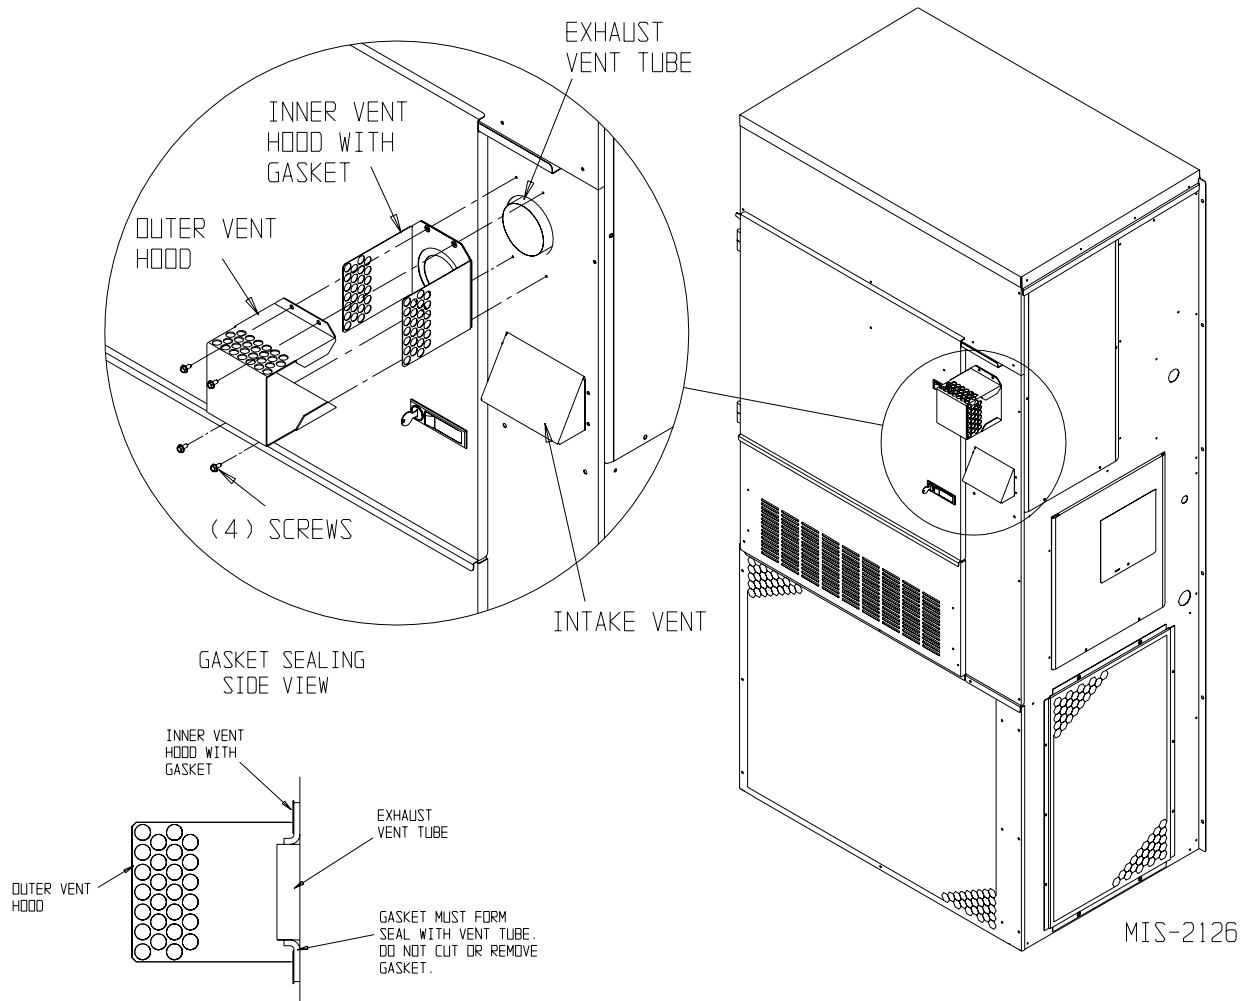

MIS-2057

## 12. VENT RESIZING INSTRUCTIONS

When an existing furnace is removed from a venting system servicing other appliances, the venting system is likely to be too large to properly vent the remaining attached appliances.

The following steps shall be followed with each of the appliances remaining connected to the common venting system, placed in operation one at a time while the other appliances remaining connected to the common venting system are not in operation.

1. Seal any unused openings in the venting system.
2. Inspect the venting system for proper size and horizontal pitch, as required in the National Fuel Gas code, ANSI Z223.1 or the CAN/CGA B149 Installation Codes and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
3. In so far as is practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building. Turn on clothes dryers and any appliances not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
4. Follow the lighting instructions. Place the appliance being inspected in operation. Adjust thermostat so appliance shall operate continuously.
5. Test for draft hood equipped appliance spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
6. After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-burning appliances to their previous conditions of use.
7. If improper venting is observed during any of the above tests, the venting system must be corrected.

## 13. FRESH AIR INTAKE

All units are built with fresh air inlet slots punched in the service panel.

If the unit is equipped with a fresh air damper assembly, the assembly is shipped already attached to the unit. The damper blade is locked in the closed position. To allow the damper to operate, the maximum and minimum blade position stops must be installed. See Figure 9.

All capacity, efficiency and cost of operation information as required for Department of Energy "Energyguide" Fact Sheets is based upon the fresh air blank-off plate in place and is recommended for maximum energy efficiency.


The blank-off plate is available upon request from the factory and is installed in place of the fresh air damper shipped with each unit.

One of several other ventilation options may be installed. Refer to model number and/or supplemental installation instructions.

## 14. CONDENSATE DRAIN

A plastic drain hose extends from the drain pan at the top of the unit down to the unit base. There are openings in the unit base for the drain hose to pass through. In the event the drain hose is connected to a drain system of some type, it must be an open or vented type system to assure proper drainage.

**FIGURE 9  
FRESH AIR DAMPER**

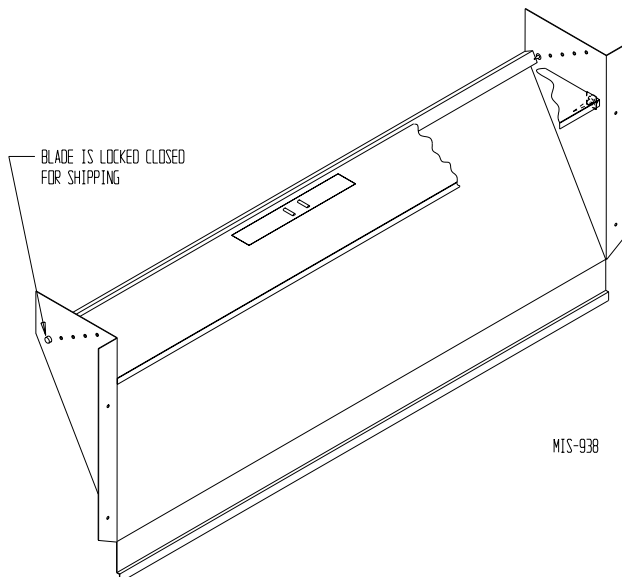

## 15. WIRING – MAIN POWER

### **WARNING**

For your personal safety, turn off electric power at service entrance panel before making any electrical connections. Failure to do so could result in electric shock or fire.

Refer to unit rating plate for wire sizing information and maximum fuse or “HACR” type circuit breaker size. Each outdoor unit is marked with a “Minimum Circuit Ampacity”. This means that the field wiring used must be sized to carry that amount of current. All models are suitable only for connection with copper wire. Each unit and/or wiring diagram will be marked - “Use Copper Conductors Only”. These instructions **must be** adhered to. Refer to the National Electrical Code (NEC) for complete current carrying capacity data on the various insulation grades of wiring material. All wiring must conform to NEC and all local codes.

The electrical data lists fuse and wire sizes (75° C copper) for all models.

The unit rating plate lists a “Maximum Time Delay Relay Fuse” or “HACR” type circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor motor.

The disconnect access door on this unit may be locked to prevent unauthorized access to the disconnect. To convert for the locking capability bend the tab located in the bottom left hand corner of the disconnect opening under the disconnect access panel straight out. This tab will now line up with the slot in the door. When shut, a padlock may be placed through the hole in the tab preventing entry.

See “Start Up” section for important information on three phase scroll compressor start ups.

### **WARNING**

Failure to provide an electrical power supply shut off means could result in electric shock or fire.

## ELECTRICAL GROUNDING

When installed, the furnace must be electrically grounded in accordance with local codes or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or Canadian Electrical Code, CSA22.1, latest edition. Use a copper wire from green ground wire on the furnace to a grounded connection in the service panel or a properly driven and electrically grounded ground rod. See Table 1 for proper ground wire size.

### **WARNING**

Failure to provide a proper electrical ground could result in electric shock or fire.

## FIELD INSTALLED EQUIPMENT

Wiring to be done in the field between the furnace and devices not attached to the furnace, or between separate devices which are field installed and located, shall conform with the temperature limitation for Type T wire {63 degrees F rise (36 degrees C)} when installed in accordance with the manufacturer’s instructions.


## INSTALLATION OF FLEXIBLE CONDUIT THROUGH RETURN AIR OPENING

*NOTE: To allow proper clearance between the control panel and any vent options, 90° conduit fittings must be used on the back of the control panel.*

## INSTALLING CONDUIT (See Figure 10.)

1. Remove conduit access panel if required to gain access to area behind control panel.
2. Remove low voltage and high voltage knockouts located in rear of control panel.
3. Run low voltage conduit through 7/8 bushing located in conduit entrance plate and secure to low voltage opening in rear of control panel.
4. Run high voltage conduit through 1-3/4 bushing located in conduit entrance plate and secure to high voltage opening in rear of control panel.
5. Replace conduit access panel if required to complete installation.
6. Seal around conduit in conduit entrance plate.

**FIGURE 10  
INSTALLATION OF FLEXIBLE CONDUIT**

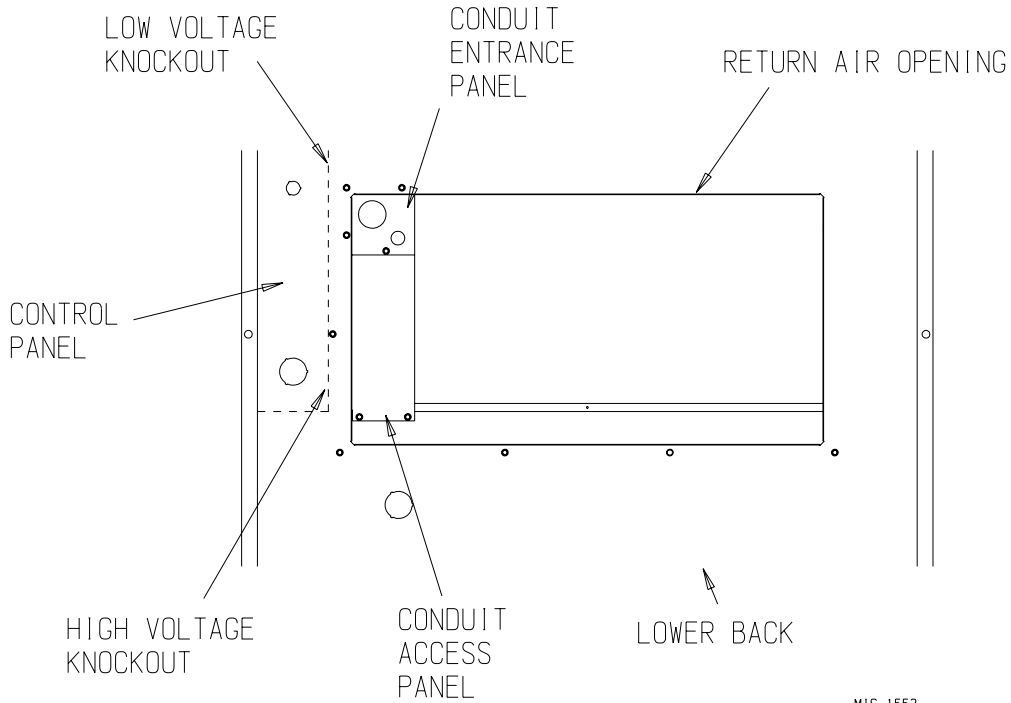

MIS 1553

## 16. WIRING – LOW VOLTAGE WIRING

### Low Voltage Connection

These units use a 24-volt AC low voltage circuit. The “R” terminal is the *hot* terminal and the “C” terminal is *grounded*.

“G” terminal is the *fan input*.

“Y” terminal is the *compressor input*.

“R” terminal is 24 VAC *hot*.

“C” terminal is 24 VAC *grounded*.

“E” terminal is the *ventilation input*. This terminal energizes any factory or field installed vent option.

“F” terminal is the *dehumidification input*. This energizes compressor, blower and 3-way dehumidification valve.

### 230/208 VOLT UNITS

All models are equipped with dual primary voltage transformers. All equipment leaves the factory wired on 240V tap. For 208V operation, reconnect from 240V to 208V tap. The acceptable operating voltage range for the 240V and 208V taps are:

TAP	RANGE
240	253 – 206
208	220 – 187

*NOTE: The voltage should be measured at the field power connection point in the unit and while the unit is operating at full load (maximum amperage operating condition).*

### 460 VOLT UNITS

All models are equipped with single primary voltage transformers and no rewiring is required.

### Direct Digital Controls (DDC)

For total and proper control using DDC, a total of 5 controlled outputs are required (4 if no ventilation is installed).

#### LOW VOLTAGE CONNECTIONS FOR DDC CONTROL

Fan Only	Energize G
Cooling Mode	Energize G, Y
Heating Mode	Energize W1
Ventilation	Energize G, E
Dehumidification	Energize F

## 17. THERMOSTATS

**TABLE 3  
THERMOSTAT WIRE SIZE**

Transformer VA	FLA	Wire Gauge	Maximum Distance In Feet
55	2.3	20 gauge	45
		18 gauge	60
		16 gauge	100
		14 gauge	160
		12 gauge	250

**TABLE 4A  
WALL THERMOSTAT**


Thermostat	Predominant Features
8403-057 (TH3110D1040)	1 stage Cool; 1 stage Heat heat-off-cool Fan: on-auto Electronic Non-Programmable
8403-058 (TH5220D1151)	2 stage Cool; 2 stage Heat Electronic Non-Programmable Auto or Manual changeover
*8403-060 (1120-445)	3 stage Cool; 3 stage Heat Programmable/Non-Programmable Electronic HP or Conventional Auto or Manual changeover

**TABLE 4B  
HUMIDISTAT**

Thermostat	Predominant Features
*8403-060 (1120-445)	Programmable Thermostat (above) with Integral Humidistat
8403-038 (H600A 1014)	Humidistat SPDT
8403-047 (H200 10-21-10)	Dehumidistat - Electronic (range 10% to 90% with adjustable stops, 3.6% differential)


*\* Integrated thermostat and humidistat in one.*

**FIGURE 11A**  
**LOW VOLTAGE WIRING - NO VENT**

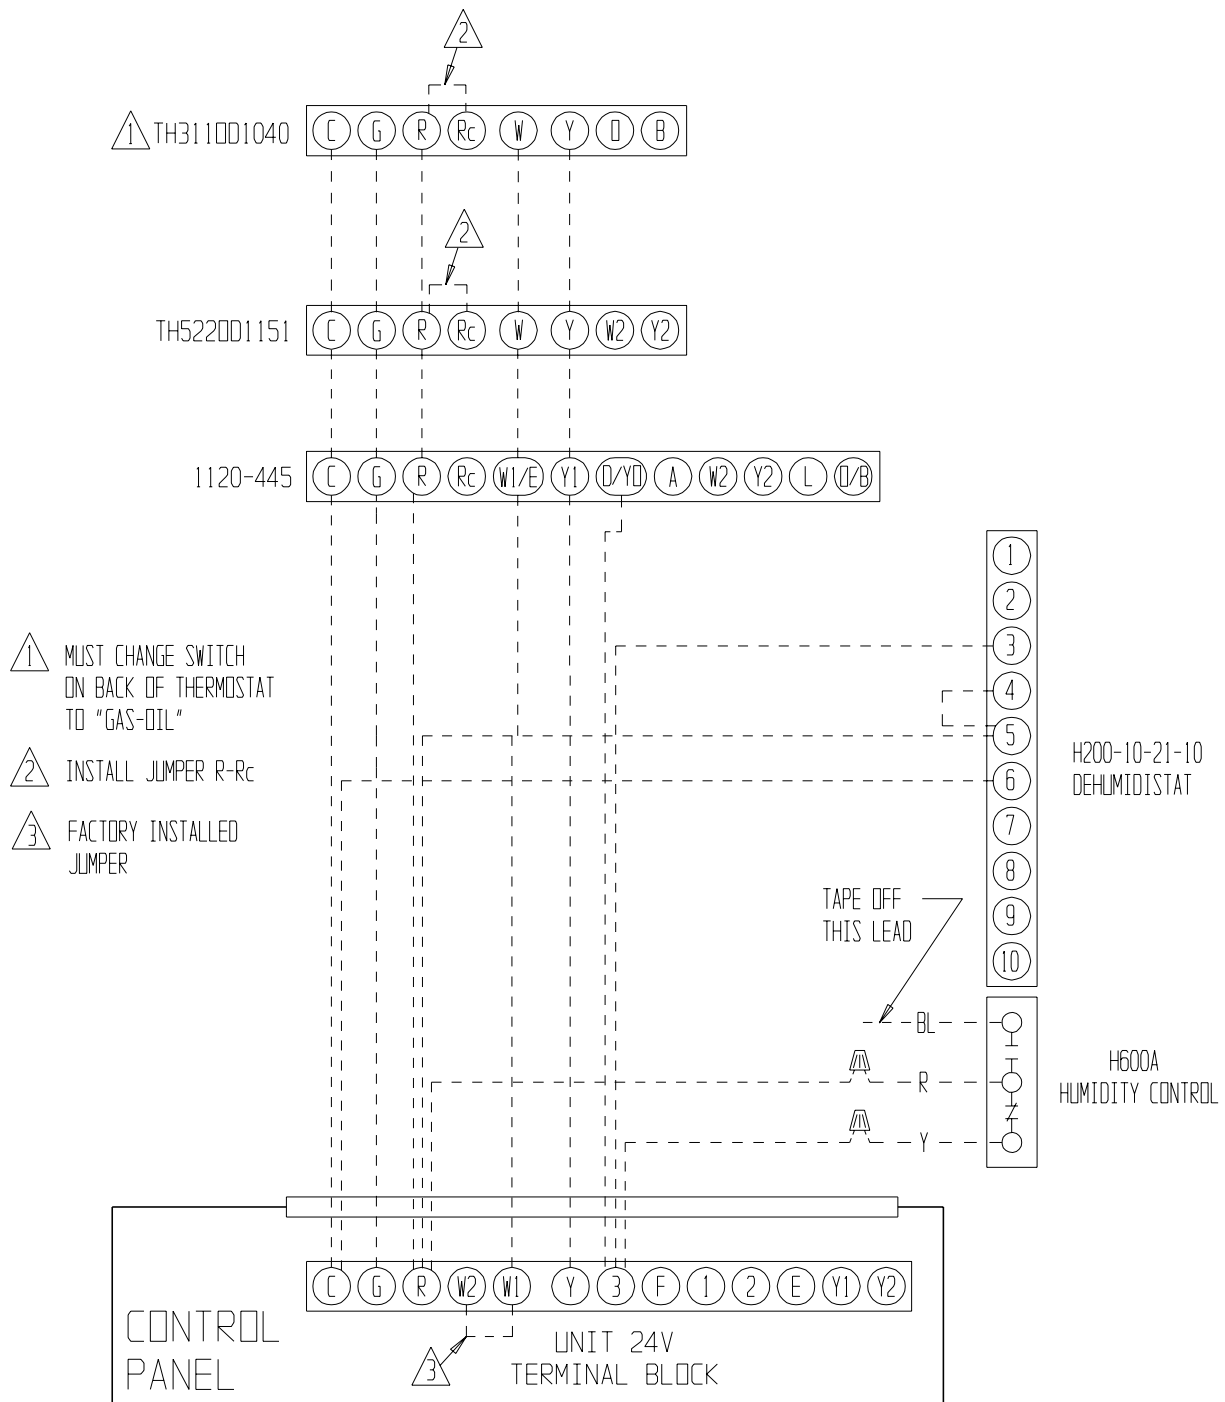


MIS-2221 A

**FIGURE 11B**  
**LOW VOLTAGE WIRING - WGMFAD, WGCRVS, WGERV**

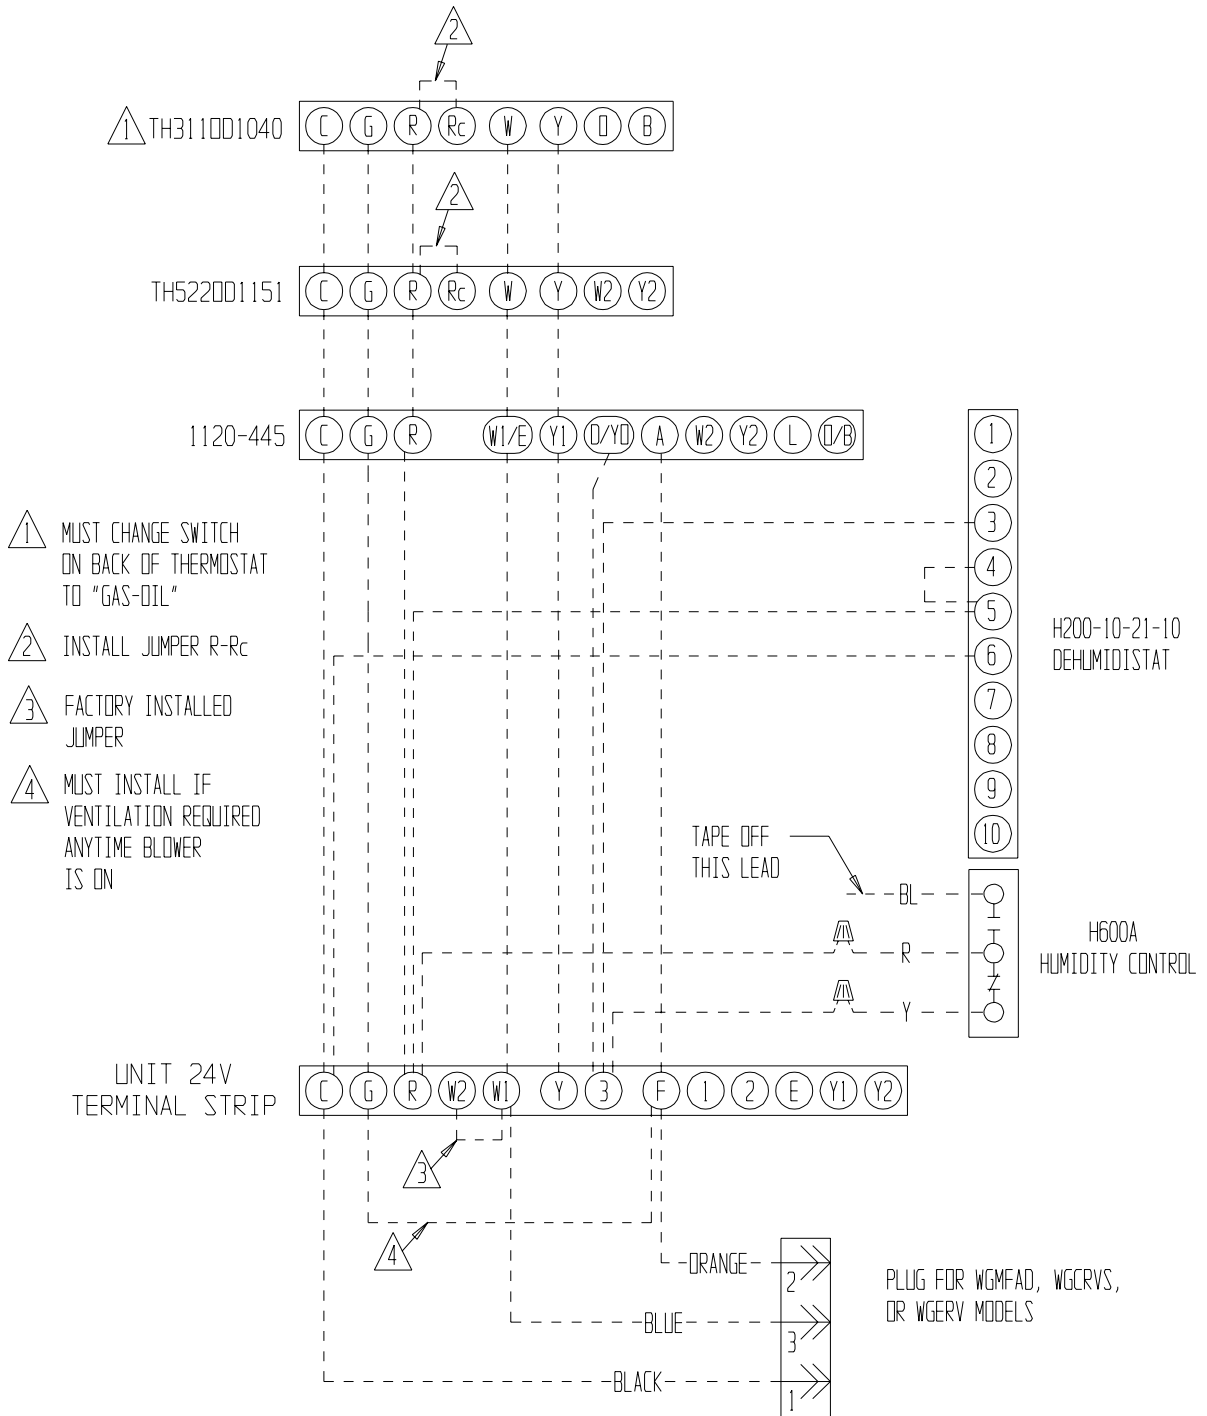


MIS-2492

**FIGURE 11C**  
**LOW VOLTAGE WIRING - WGCRVP**

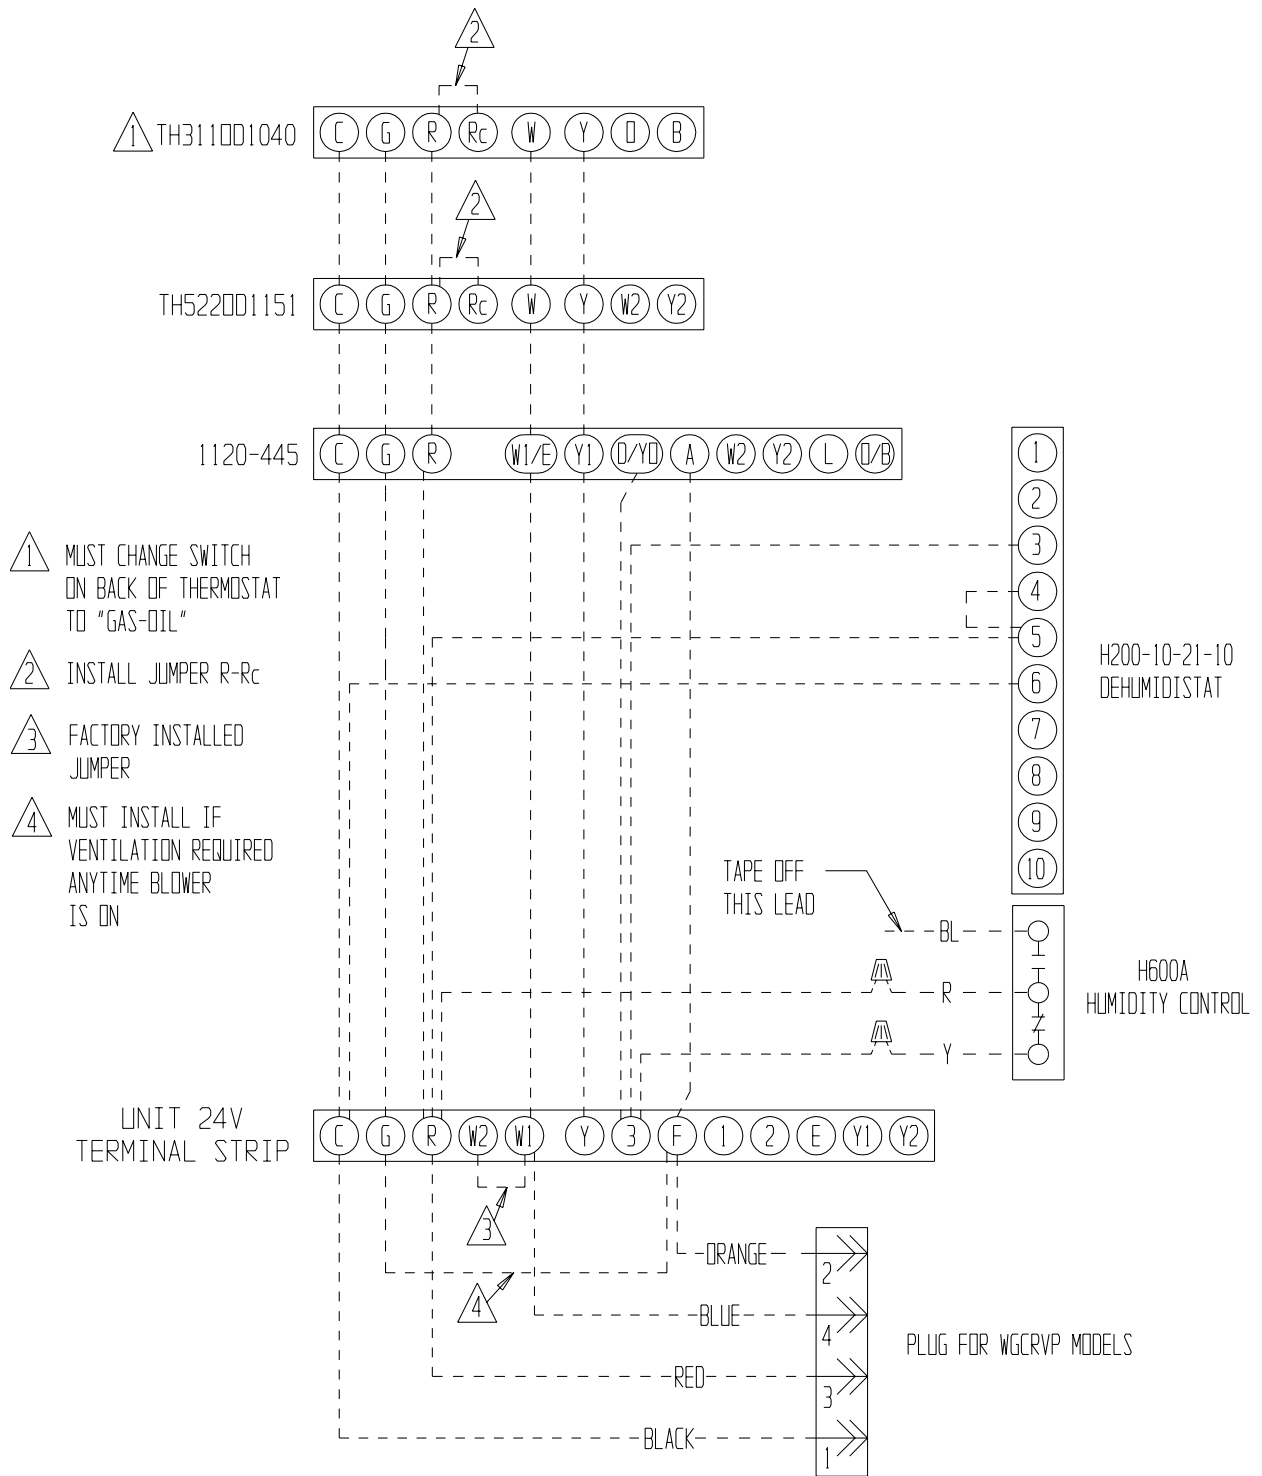



MIS-2493

**FIGURE 11D**  
**LOW VOLTAGE WIRING - WGEIFM**

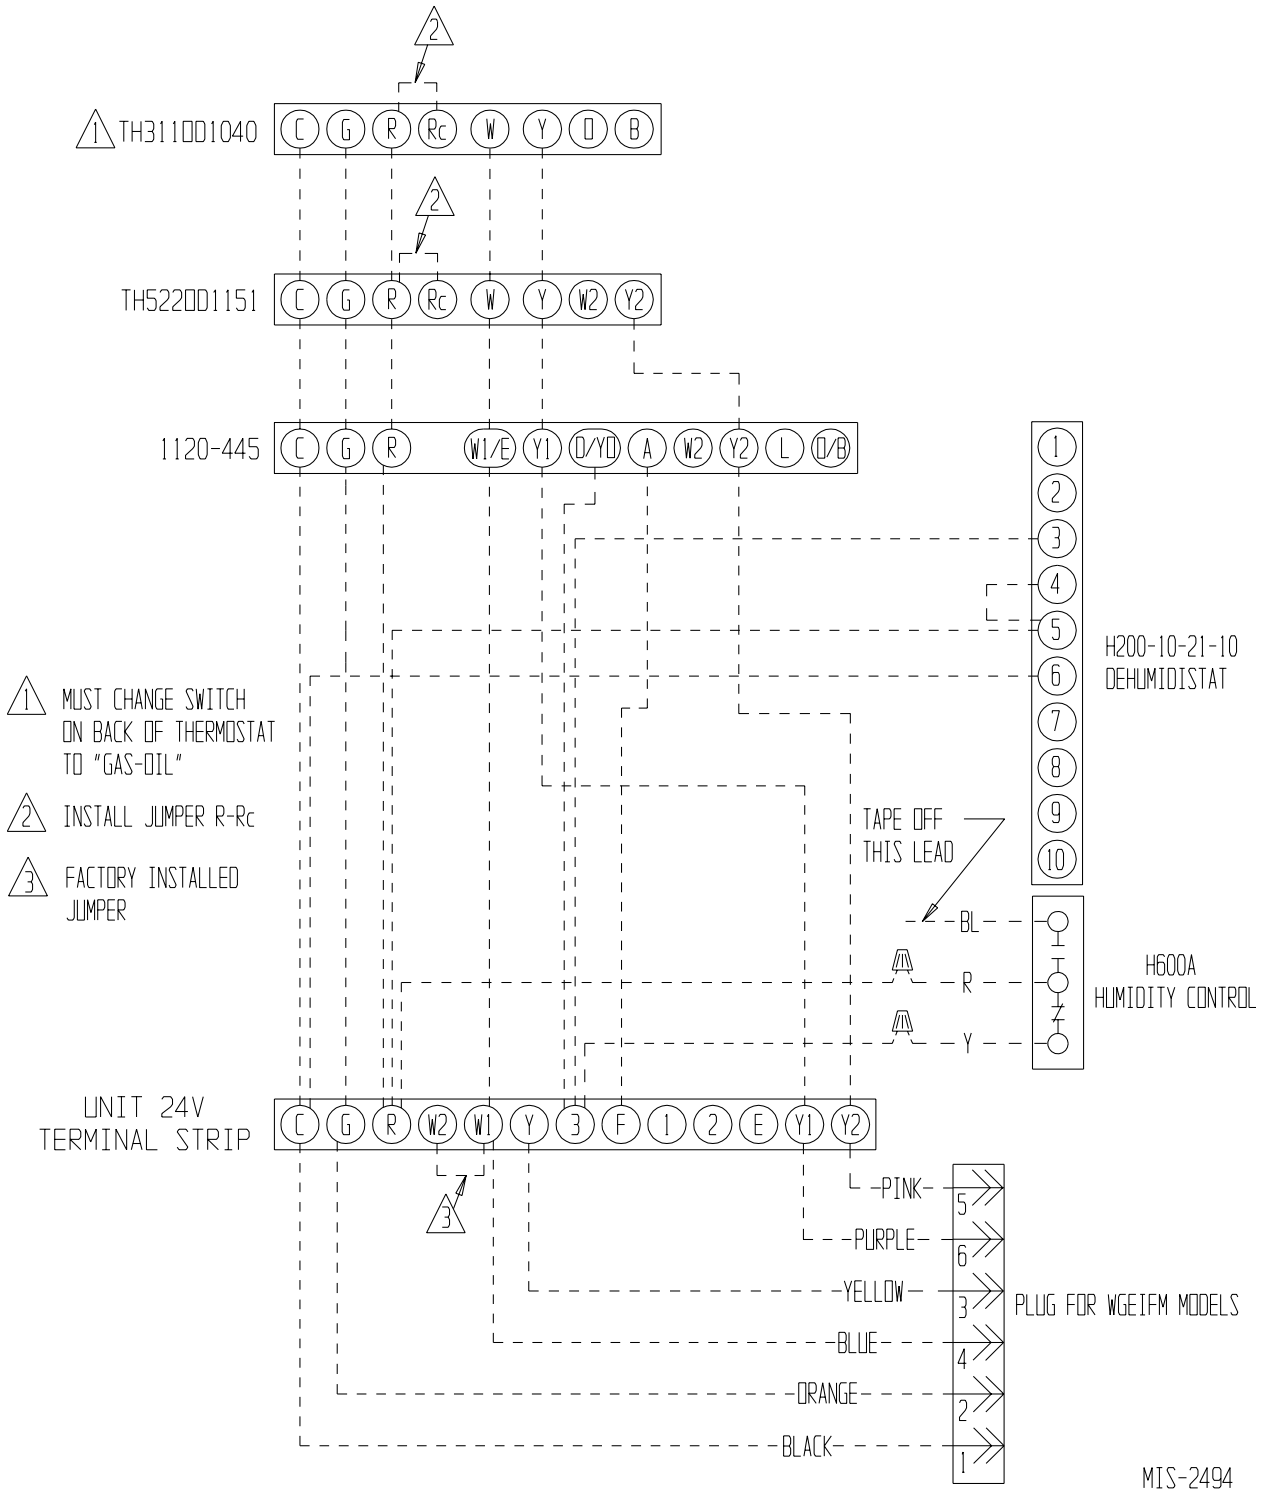

**FIGURE 12  
GAS PIPE CONNECTION**

UNIT	"A" LENGTH
WG24-36	8"
WG42-60	10"

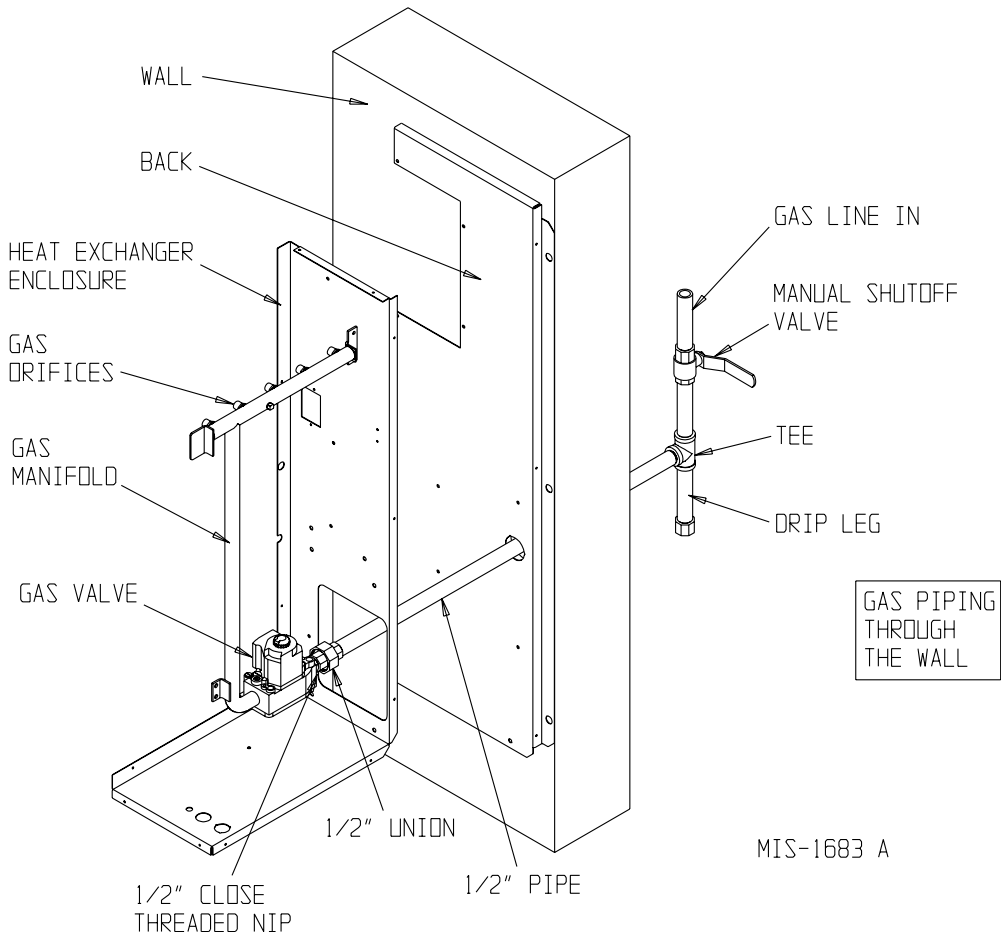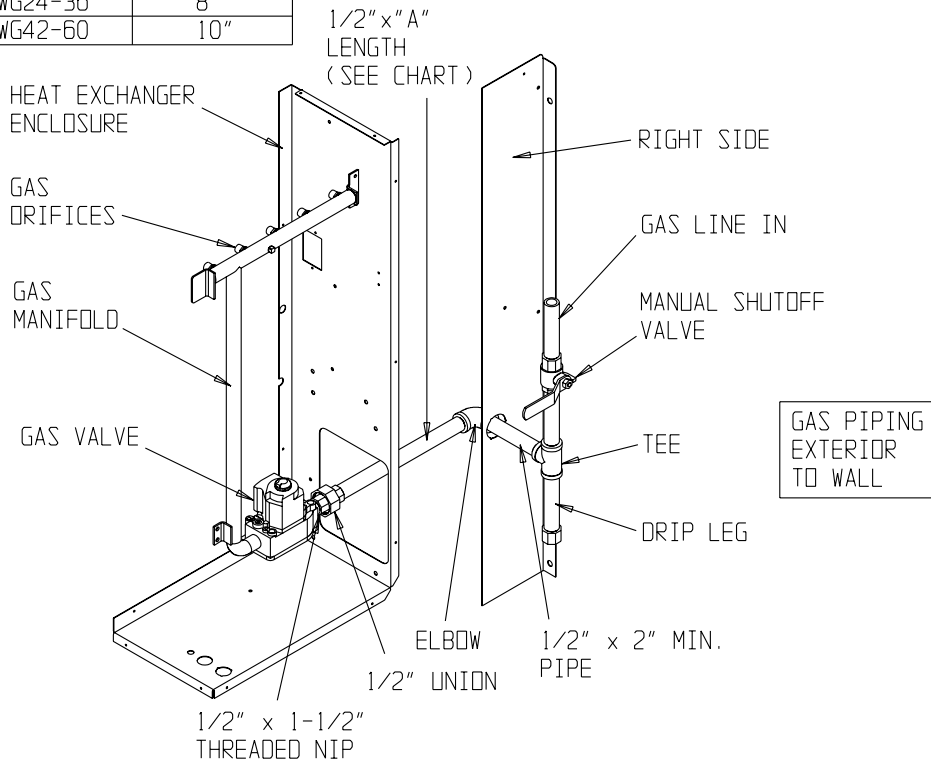

MIS-1683 A

## 18. GAS SUPPLY AND PIPING


### GENERAL RECOMMENDATIONS

1. Be sure the gas line complies with the local codes and ordinances, or in their absence with the National Fuel Gas Code, ANSI Z223.1, or Natural Gas Installation Code, CAN/CGA B149.1, or Propane Installation Code B149.2, latest edition.
2. A sediment trap or drip leg must be installed in the supply line to the furnace.
3. A ground joint union shall be installed in the gas line adjacent to and upstream from the gas valve and downstream from the manual shut off valve.
4. An 1/8" NPT plugged tapping accessible for test gauge connection shall be installed immediately upstream of the gas supply connection to the furnace for the purpose of determining the supply gas pressure. This can be omitted if local codes permit use of plugged tapping in gas valve inlet.
5. Install listed manual shut off valve in the supply gas line external to and immediately upstream of the furnace. See Figure 12.
6. Use steel or wrought iron pipe and fittings.
7. *DO NOT* thread pipe too far. Valve distortion or malfunction may result from excess pipe within the control. Use pipe joint compound resistant to the action of liquefied petroleum gases on male threads only. *DO NOT* use Teflon tape. See Table 5 and Figure 13.

**TABLE 5  
LENGTH OF STANDARD  
PIPE THREADS (INCHES)**

Pipe Size	Effective Length of Thread	Overall Length of Thread
3/8	1/2	9/16
3/4	1/2 - - 9/16	13/16
1	9/16	1

**FIGURE 13  
PROPER PIPING PRACTICE**

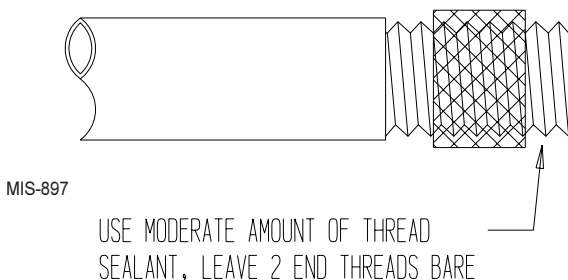

8. Refer to Table 6 for Gas Pipe Sizes for natural gas. If more than one appliance is supplied from a single line size, capacity must equal or exceed the combined input to all appliances, and the branch lines feeding the individual appliances properly sized for each input.

**THIS PRODUCT MUST BE GAS PIPED BY  
A LICENSED PLUMBER OR GAS FITTER  
IN THE COMMONWEALTH OF  
MASSACHUSETTS.**

**TABLE 6  
GAS PIPE SIZES - NATURAL GAS**

Length of Pipe - Feet	Pipe Capacity - BTU per Hour Input Pipe Size			
	1/2"	3/4"	1"	1-1/4"
10	132,000	278,000	520,000	1,050,000
20	92,000	190,000	350,000	730,000
30	73,000	152,000	285,000	590,000
40	63,000	130,000	245,000	500,000
50	56,000	115,000	215,000	440,000
60	50,000	105,000	195,000	400,000
70	46,000	96,000	180,000	370,000
80	43,000	90,000	170,000	350,000
100	38,000	79,000	150,000	305,000

### CHECKING THE GAS PIPING

Before turning gas under pressure into piping, all openings from which gas can escape should be closed. Immediately after turning on gas, the system should be checked for leaks. This can be done by watching the 1/2 cubic foot test dial and allowing 4 minutes to show any movement, and by soaping each pipe connection and watching for bubbles. If a leak is found, make the necessary repairs immediately and repeat the above test. The furnace must be isolated from the gas supply piping system by closing the manual shut off valve on the combination gas control valve during pressure testing of the gas supply piping system at pressures up to 1/2 PSIG. The furnace and its individual shut off valve must be disconnected from supply piping and supply piping capped during any pressure testing of supply piping system at test pressures in excess of 1/2 PSIG.

Defective pipes or fittings should be replaced and not repaired. Never use a flame or fire in any form to locate gas leaks; use a soap solution.

After the piping and meter have been checked completely, purge the system of air. *DO NOT* bleed air inside the furnace. **Be sure to check and relight all the gas pilots on other appliances that may have been extinguished because of interrupted gas supply.**

## PROPANE (LP) GAS CONVERSION

This unit may be converted in the field for use with Propane (LP) gas. Propane gas conversion kit number WGCK-1 is designed for conversions of units installed from 0 – 6,000 feet elevations. Propane gas conversion kit number WGCK-2 is designed for conversions of units installed from 6,001 – 10,000 feet elevations. These kits may be purchased from your local distributor.

## WARNING

When converting from propane (LP) gas to natural gas, the gas orifice spuds and gas valve spring must be replaced and the gas valve regulator pressure must be adjusted correctly. Failure to do so can result in fire, injury or death. Refer to Tables 8 and 8A for proper orifice sizing.

Natural gas spring kit, Part number 5603-007, can be purchased through your local distributor.

## 19. MANIFOLD PRESSURE ADJUSTMENT

You will need a 0 to 15 inch water manometer with 0.1 inch resolution and a 1/8" NPT manual shut off valve to measure actual manifold pressure.

## WARNING

Correct manifold pressure is necessary for proper ignition and burner operation. Failure to accurately adjust pressure could cause heat exchanger failure.

1. Turn off gas at equipment shut off valve in gas supply line just ahead of furnace.
2. Remove plug from outlet pressure tap in gas control or gas manifold.
3. Install 1/8" NPT manual shut off valve in hole vacated by plug. Make sure shut off valve is in off position.
4. Attach manometer to 1/8" NPT manual shut off valve just installed.

5. Slowly open equipment shut off valve in gas supply line just ahead of furnace. Start furnace following "Operating Instructions" on front door.
6. Slowly open 1/8" NPT manual shut off valve leading to manometer.
7. Read manifold pressure on manometer.
8. Adjust manifold pressure by turning gas control regulator adjusting screw clockwise to increase pressure or turning counterclockwise to decrease pressure. Manifold pressure must be within allowable range as follows:
  - Natural gas manifold pressure must be between 3.2 and 3.8 inches W.C. Rated pressure is 3.5 inches.
  - Propane gas (LP) manifold pressure must be between 9.7 and 10.3 inches W.C. Rated pressure is 10 inches.

*NOTE: For natural gas, if gas flow rate can't be properly set within these pressure ranges then you must change main burner orifices to obtain proper gas flow rate.*

9. Shut off furnace. Turn off gas at equipment shut off valve in gas supply line just ahead of furnace. Install outlet pressure tap plug in gas control. Turn on gas.
10. Check regulator adjustment cover screw and gas control plug for gas leaks. Use a commercial soap solution made for leak detection.

## 20. CHECKING GAS INPUT RATE

It is the installer's responsibility to see that the BTU input rate of the furnace is properly adjusted. Under-firing could cause inadequate heat, excessive condensation or ignition problems. Overfiring could cause sooting, flame impingement or overheating of heat exchanger.

## WARNING

Failure to adjust furnace to the proper firing rate could cause heat exchanger failure.

Depending on your local gas heating value and elevation, you may need to adjust manifold pressure or change orifices to get proper gas input rate. Check with your local gas supplier to determine heating value (BTU/cu. ft.) of natural gas in your area.

*NOTE: If furnace is being installed at an altitude of more than 6,000 feet above sea level, you must derate the furnace. See Section 21 "Standard Orifice Sizing and High Altitude Derate".*

## NATURAL GAS INPUT RATE

Natural gas heating value (BTU/cu. ft.) can vary significantly. Before starting natural gas input check, obtain gas heating value at your location from local supplier. You will need a stopwatch to measure actual gas input.

1. Gas supply pressure must be between 5 and 7 inches W.C. for natural gas.
2. Turn off all other gas appliances. You may leave pilots on.
3. Start furnace following “Operating Instructions” on front door.
4. Let furnace warm up for 6 minutes.
5. Locate gas meter. Determine which dial has the least cubic feet of gas and how many cubic feet per revolution it represents. This is usually one-half, one or two cubic feet per revolution.
6. With stopwatch, measure time it takes to consume two cubic feet of gas.
  - If dial is one-half cubic foot per revolution, measure time for four revolutions.
  - If dial is one cubic foot per revolution, measure time for two revolutions.
  - If dial is two cubic feet per revolution, measure time for one revolution.
7. Divide this time by two. This gives average time for one cubic foot of gas to flow through meter.  
Example: If it took 58 seconds for two cubic feet to flow, it would take 29 seconds for one cubic foot to flow.
8. Calculate gas input using this formula:

$$\text{Gas input} = \frac{\text{Gas Heating Value (BTU/cu. ft.)} \times 3,600 \text{ sec/hr}}{\text{Time (Seconds for one cubic foot of gas)}} = \text{BTU/hour}$$

Example:

Assume it took 29 seconds for one cubic foot of gas to flow and heating value of 1,000 BTU/cu. ft.

$$\text{Gas input} = \frac{1,000 \times 3,600}{29} = 124,138 \text{ BTU}$$

If you left no other pilots on, this is the furnace gas input.

9. If you left water heater, dryer or range pilots on, allow for them in calculating correct furnace gas input. A quick way is to allow 1,000 BTU per hour for a water heater, 500 BTU per hour for dryer and 500 BTU per hour for each range burner pilot.

Example:

If you left gas water heater, dryer, two range burner pilots and one oven pilot on, allow:

Water heater pilot	1,000 BTU per hour
Dryer pilot	500 BTU per hour
2 range burner pilots	1,000 BTU per hour
1 range oven pilot	500 BTU per hour
	<hr/>
	3,000 BTU per hour

Subtracting 3,000 BTU per hour from 124,138 BTU per hour measured above equals 121,138 BTU per hour. This would be the correct furnace gas input after allowing for pilots left on.

10. Manifold pressure may be adjusted within the range of 3.2 inches W.C. to 3.8 inches W.C. to get rated input  $\pm$  2 percent. See Section 19, “Manifold Pressure Adjustment”. If you cannot get rated input with manifold pressure within the allowable range, you must change orifices.

## PROPANE (LP) GAS INPUT RATE

### **WARNING**

Propane (LP) gas installations do not have gas meters to double check input rate. Measure manifold pressure adjustment with an accurate manometer. Failure to accurately adjust pressure could cause heat exchanger failure, asphyxiation, fire or explosion, resulting in damage, injury or death.

1. Make sure you have proper main burner orifices.
2. Gas supply pressure must be between 11 and 13 inches W.C. for propane (LP) gas.
3. Start furnace following “Operating Instructions” on front door.
4. Let furnace warm up for 6 minutes.
5. Adjust manifold pressure to 10.0 W.C.  $\pm$  0.3 inches W.C. See Section 19, “Manifold Pressure Adjustment”.

### **WARNING**

Do not set Propane (LP) manifold pressure at 11.0 inches W.C. It could cause heat exchanger failure.

## 21. STANDARD ORIFICE SIZING AND HIGH ALTITUDE DERATE

This furnace is shipped with fixed gas orifices for use with Natural Gas and sized for 1000 BTU/cubic foot gas. Make sure actual gas input does not exceed rating plate input. You may need to change orifices to get correct gas input. Whether you do or not depends on input, and your gas heat value at standard conditions and elevation. Consult your local gas supplier for gas heat value and any special derating requirements. See Section 20 for more information.

At higher altitudes, the density of the air is reduced. Therefore, for proper combustion, the quantity of gas burned in the furnace must also be reduced. This is called derating. This unit must be derated when installed at altitudes greater than 6,000 feet above sea level. A high altitude pressure switch must also be installed for operation above 6,000 feet. High altitude pressure switch kit number 8620-189 is designed for this application.

It is the installer's responsibility to see that the furnace input rate is adjusted properly. Derating must be achieved by reducing the size of the main burner orifices. Derating the furnace by adjusting the manifold pressure lower than the range specified in the Section 19, "Manifold Pressure Adjustment" is considered to be an improper procedure.

Above 6,000 feet elevation orifice changes are required, and capacity reductions are a function of altitude impact and orifice change. Pressure switch change is required above 6,000 feet elevation. For Natural Gas see the Altitude Table 7 below and the Orifice Tables 8 and 8A on following pages.

**TABLE 7  
NATURAL GAS DERATE CAPACITIES  
FOR ALL MODELS**

WG Rated Input	Sea Level	1,000	2,000	3,000	4,000	5,000	6,000	7,000	8,000	9,000	10,000
<b>41,000</b>	40,500	39,204	37,908	36,612	35,640	34,992	34,182	33,696	33,048	32,643	32,076
<b>45,000</b>	45,000	43,560	42,120	40,680	39,600	38,880	37,980	37,440	36,720	36,270	35,640
<b>61,000</b>	60,750	58,806	56,862	54,918	53,460	52,488	51,273	50,544	49,572	48,965	48,114
<b>68,000</b>	67,500	65,340	63,180	61,020	59,400	58,320	56,970	56,160	55,080	54,405	53,460
<b>75,000</b>	75,000	72,600	70,200	67,800	66,000	64,800	63,300	62,400	61,200	60,450	59,400
<b>81,000</b>	81,000	78,408	75,816	73,224	71,280	69,984	68,364	67,392	66,096	65,286	64,152
<b>90,000</b>	90,000	87,120	84,240	81,360	79,200	77,760	75,960	74,880	73,440	72,540	71,280
<b>100,000</b>	100,000	96,800	93,600	90,400	88,000	86,400	84,400	83,200	81,600	80,600	79,200
<b>113,000</b>	112,500	108,900	105,300	101,700	99,000	97,200	94,950	93,600	91,800	90,675	89,100
<b>125,000</b>	125,000	121,000	117,000	113,000	110,000	108,000	105,500	104,000	102,000	100,750	99,000

**TABLE 8  
NATURAL GAS ORIFICE TABLES  
FOR MODELS WG24, WG30 AND WG36**

Factory Standard Input	Gas Heat* Value BTU/Cu. Ft.	Up to 6,000 Feet No Changes Except for BTU Content	6,001 to 8,000 Feet Requires Pressure Switch Change and Orifice Change Based on BTU Content	8,001 to 10,000 Feet Requires Pressure Switch Change and Orifice Change Based on BTU Content
<b>22500 BTU Per Burner</b>	700-749	2.75	2.70	2.60
	750-799	2.70	2.60	2.50
	800-849	2.60	2.50	2.45
	850-899	2.50	2.45	2.35
	900-949	2.45	2.35	<b>(2.30)</b>
	950-999	2.35	<b>(2.30)</b>	2.25
	1000-1049**	<b>(2.30)</b>	2.25	<b>[2.20]</b>
	1050-1100	2.25	<b>[2.20]</b>	2.15
	Pressure Switch	Standard (.55)	<b>Order 8620-189 High Altitude Pressure Switch Kit (.42)</b>	
<b>(2.30) is the standard factory installed orifice size</b>			<b>[2.20] orifices are shipped with the unit for field installed optional 10% derate</b>	
Optional 10% Field Converted Derate	Gas Heat* Value BTU/Cu. Ft.	Up to 6,000 Feet No Changes Except for BTU Content	6,001 to 8,000 Feet Requires Pressure Switch Change and Orifice Change Based on BTU Content	8,001 to 10,000 Feet Requires Pressure Switch Change and Orifice Change Based on BTU Content
<b>20250 BTU Per Burner</b>	700-749	2.60	2.50	2.45
	750-799	2.50	2.45	2.40
	800-849	2.45	2.40	<b>(2.30)</b>
	850-899	2.40	<b>(2.30)</b>	2.25
	900-949	<b>(2.30)</b>	2.25	<b>[2.20]</b>
	950-999	2.25	<b>[2.20]</b>	2.15
	1000-1049**	<b>[2.20]</b>	2.15	2.10
	1050-1100	2.15	2.15	2.10
	Pressure Switch	Standard (.55)	<b>Order 8620-189 High Altitude Pressure Switch Kit (.42)</b>	
<b>[2.20] orifices are shipped with the unit for field installed optional 10% input rate.</b>			<b>(2.30) is the factory installed orifice size for full rated input</b>	

\* At standard conditions: 30.00 inches Mercury, 60F, saturated, .60 specific gravity.

\*\* All Natural Gas factory orifice sizing and standard input ratings based on nominal 1025 BTU/cu ft gas and sea level conditions

All other orifice sizes shown are available as individual items. See Orifice charts below for part numbers and number required.

Bard Part No.	Orifice Size (mm)	Orifice Diameter
9010-092	2.10	0.0826
9010-088	2.15	0.0846
9010-087	2.20	0.0866
9010-086	2.25	0.0885
9010-082	2.30	0.0905
9010-085	2.35	0.0925
9010-079	2.40	0.0945
9010-084	2.45	0.0964
9010-093	2.50	0.0984
9010-094	2.60	0.1024
9010-095	2.70	0.1063
9010-096	2.75	0.1082
9010-097	2.80	1.1102
9010-098	2.90	0.1142

No. of Orifices Required Based on Unit Input Rating
41,000 (2)
45,000 (2)
61,000 (3)
68,000 (3)
75,000 (3)
81,000 (4)
90,000 (4)
100,000 (4)
113,000 (5)
125,000 (5)

**TABLE 8A  
NATURAL GAS ORIFICE TABLES  
FOR MODELS WG42, WG48 AND WG60**

Factory Standard Input	Gas Heat* Value BTU/Cu. Ft.	Up to 6,000 Feet No Changes Except for BTU Content	6,001 to 8,000 Feet	8,001 to 10,000 Feet
			Requires Pressure Switch Change and Orifice Change Based on BTU Content	Requires Pressure Switch Change and Orifice Change Based on BTU Content
25000 BTU Per Burner	700-749	2.90	2.80	2.70
	750-799	2.80	2.70	2.60
	800-849	2.70	2.60	2.50
	850-899	2.60	2.50	2.45
	900-949	2.50	2.45	<b>(2.40)</b>
	950-999	2.45	<b>(2.40)</b>	2.35
	1000-1049**	<b>(2.40)</b>	2.35	<b>[2.30]</b>
	1050-1100	<b>[2.30]</b>	2.25	2.20
	Pressure Switch	Standard (.55)	<b>Order 8620-189 High Altitude Pressure Switch Kit (.42)</b>	
<b>(2.40) is the standard factory installed orifice size</b>			<b>[2.30] orifices are shipped with the unit for field installed optional 10% derate</b>	
Optional 10% Field Converted Derate	Gas Heat* Value BTU/Cu. Ft.	Up to 6,000 Feet No Changes Except for BTU Content	6,001 to 8,000 Feet	8,001 to 10,000 Feet
22500 BTU Per Burner	700-749	2.75	2.70	2.60
	750-799	2.70	2.60	2.50
	800-849	2.60	2.50	
	850-899	2.50	2.45	<b>(2.40)</b>
	900-949	<b>(2.40)</b>	2.35	<b>[2.30]</b>
	950-999	2.35	<b>[2.30]</b>	2.25
	1000-1049**	<b>[2.30]</b>	2.25	2.20
	1050-1100	2.25	2.25	2.20
	Pressure Switch	Standard (.55)	<b>Order 8620-189 High Altitude Pressure Switch Kit (.42)</b>	
<b>[2.30] orifices are shipped with the unit for field installed optional 10% input rate.</b>			<b>(2.40) is the factory installed orifice size for full rated input</b>	

\* At standard conditions: 30.00 inches Mercury, 60F, saturated, .60 specific gravity.

\*\* All Natural Gas factory orifice sizing and standard input ratings based on nominal 1025 BTU/cu ft gas and sea level conditions

All other orifice sizes shown are available as individual items. See Orifice charts on Page 29 for part numbers and number required.

## 22. CONVERSION OF GAS INPUT BTUH FROM HIGH TO LOW RATING

All the derated WG series units are produced with maximum BTUH input orifices installed. To field convert input, a change to main burner orifices is required.

*NOTE: No change to air orifices is necessary. A set of low input orifices is shipped with every unit. They will be found packaged in a bag behind the burner door. Refer to the unit rating plate to confirm the proper orifice size. Proper installation of the orifices is detailed as follows:*

- A. Shut off electrical supply to the unit.
- B. Shut off gas supply to the unit.
- C. Remove burner access panel.
- D. Disconnect gas valve from gas supply piping.
- E. Disconnect the two wires from the gas valve.
- F. Remove the manifold assembly so that orifices are now accessible and remove orifices.
- G. Apply a modest amount of pipe compound to the new orifices and screw them into the manifold.
- H. To assemble burner reverse steps A through G.

 <b>WARNING</b>
Failure to follow these instructions could create a hazard resulting in property damage, bodily injury, or death.

## 23. MEASURING AIR TEMPERATURE RISE

Air temperature rise (supply air temperature minus return air temperature) must be within allowable air temperature rise range specified on furnace rating plate and in Table 1.

You will need 2 thermometers with 1 degree resolution capable of reading up to 200 degrees F. Check thermometers to make sure they agree, or compensate accordingly.


Follow this procedure:

1. Open supply air registers and return air grilles. Make sure the registers and grilles are free of obstruction from rugs, carpets, drapes or furniture.

2. Set balancing dampers in supply duct system.
3. Check duct work for obstructions or leaks.
4. Make sure filters are clean and in place.
5. Place one thermometer in supply air plenum approximately 2 feet from furnace. Locate thermometer tip in center of plenum to ensure proper temperature measurement.
6. Place second thermometer in return air duct approximately 2 feet from furnace. Locate thermometer tip in center of duct to ensure proper temperature measurement.
7. Set room thermostat on highest temperature setting. Operate furnace 10 minutes. Record supply air and return air temperatures.
8. Calculate air temperature rise by subtracting return air temperature from supply air temperature.
  - If air temperature rise is above the temperature rise range on rating plate, furnace is overfired or has insufficient airflow. Check gas input following the instructions in Section, "Checking Gas Input Rate". If air temperature rise is still above temperature rise range specified, more heating airflow is needed. Check duct work and grilles to make sure all are properly sized.
  - If air temperature rise is below the temperature rise range on rating plate, furnace is underfired or has too much airflow. Check gas input following the instructions in Section, "Checking Gas Input Rate". If air temperature rise is still below temperature rise range specified, less heating airflow is needed. Adjust dampers or grilles as needed.
  - After making adjustments, you must check air temperature rise to verify that resulting air temperature rise is within allowable range. If air temperature rise is still outside the temperature rise range specified on rating plate, check duct system design with a qualified heating engineer. It may be necessary to re-size the duct work. Recheck air temperature rise after revising duct systems.
9. Set room thermostat to desired setting.
10. Remove thermometers and seal duct work holes.

*NOTE: Failure to seal holes could result in reduced system performance.*

**FIGURE 14  
ACCESS INTERNAL FILTER  
THROUGH UPPER SERVICE DOOR**

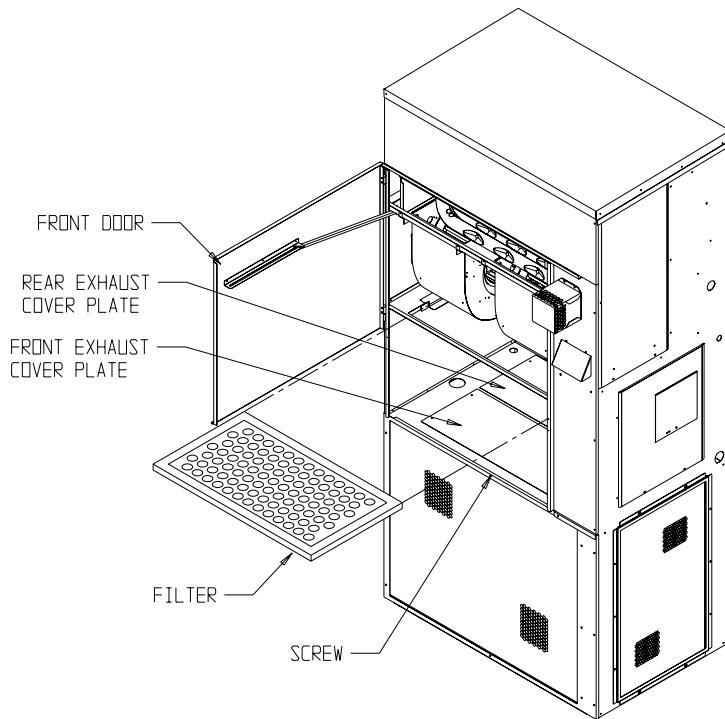

MIS-2127

## 24. FILTERS

A 2" thick throwaway filter is supplied with each unit. This filter is installed by opening the main service door. (See Figure 14.)

Replacement filters are available through your dealer.

## 25. COMPRESSOR CONTROL MODULE

The compressor control is an anti-short cycle/lockout timer with high and low pressure switch monitoring and alarm output.

### ADJUSTABLE DELAY-ON-MAKE AND BREAK TIMER

On a call for compressor operation the *delay-on-make* period begins which will be 10% of the *delay-on-break* setting. When the delay-on-make is complete and the high pressure switch (and low pressure switch if employed) is closed, the compressor contactor is energized. Upon shutdown the delay-on-break timer starts and prevents restart until the delay-on-break and delay-on-make periods have expired.

### HIGH PRESSURE SWITCH AND LOCKOUT SEQUENCE (Standard Feature)

If the high pressure switch opens, the compressor contactor will de-energize immediately. The lockout timer will go into a *soft lockout* and stay in soft lockout until the high pressure switch closes **and** the delay-on-make time has expired. If the high pressure switch opens again in this same operating cycle the unit will go into *manual lockout* condition and the alarm circuit will energize. Recycling the wall thermostat resets the manual lockout.

### LOW PRESSURE SWITCH, BYPASS, AND LOCKOUT SEQUENCE

*NOTE: The low pressure switch is an optional control and the bypass and lockout sequence are part of the standard compressor control module.*

If the low pressure switch opens for more than 120 seconds, the compressor contactor will de-energize and go into a soft lockout. Regardless the state of the low pressure switch, the contactor will reenergize after the delay-on-make time delay has expired. If the low pressure switch remains open or opens again for longer than 120 seconds the unit will go into manual lockout condition and the alarm circuit will energize. Recycling the wall thermostat resets the manual lockout.

## ALARM OUTPUT

Alarm terminal is output connection for applications where alarm signal is desired. This terminal is powered whenever compressor is locked out due to HPC or LPC sequences as described.

*NOTE: Both high and low pressure switch controls are inherently automatic reset devices. The high pressure switch and low pressure switch cut out and cut in settings are fixed by specific air conditioner or heat pump unit model. The lockout features, both soft and manual, are a function of the Compressor Control Module.*

## ADJUSTMENTS

### ADJUSTABLE DELAY-ON-MAKE AND DELAY-ON-BREAK TIMER

The potentiometer is used to select Delay-on-Break time from 30 seconds to 5 minutes. Delay-on-Make (DOM) timing on power-up and after power interruptions is equal to 2 minutes plus 10% of Delay-on-Break (DOB) setting:

0.5 minute (30 seconds)	DOB = 123 second	DOM
1.0 minute (60 seconds)	DOB = 126 second	DOM
2.0 minute (120 seconds)	DOB = 132 second	DOM
3.0 minute (160 seconds)	DOB = 138 second	DOM
4.0 minute (240 seconds)	DOB = 144 second	DOM
5.0 minute (300 seconds)	DOB = 150 second	DOM

## PHASE MONITOR

All units with three phase scroll compressors are equipped with a three phase line monitor to prevent compressor damage due to phase reversal.

The phase monitor in this unit is equipped with two LEDs. If the “&” signal is present at the phase monitor and phases are correct, the green LED will light.

If phases are reversed, the red fault LED will be lit and compressor operation is inhibited.

If a fault condition occurs, reverse two of the supply leads to the unit. Do not reverse any of the unit factory wires as damage may occur.

## 26. LIGHTING AND SHUTDOWN INSTRUCTIONS

FIGURE 15  
INSTRUCTION LABEL

### FOR YOUR SAFETY READ BEFORE OPERATING

**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do NOT try to light the burner by hand.
- B. BEFORE OPERATING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

#### WHAT TO DO IF YOU SMELL GAS


- \*Do not try to light any appliance.
- \*Do not touch any electric switch; do not use any phone in your building.
- \*Immediately call your supplier from a neighbor's phone. Follow the gas supplier's instructions.

\*If you cannot reach your gas supplier; call the fire department.

- C. Use only your hand to push in or move the gas control lever. Never use tools. If the lever will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

### OPERATING INSTRUCTIONS

1. STOP! Read the safety information above on this label.
2. Set the thermostat to lowest setting.
3. Turn off all electric power to the appliance.
4. This appliance is equipped with an ignition device which automatically lights the burner. Do NOT try to light the burner by hand.

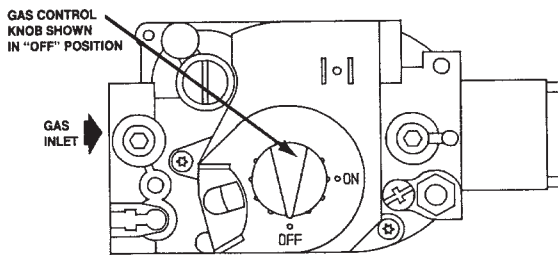

5. Remove control access panel.
6. Push in gas control knob slightly and turn clockwise to "OFF".  
NOTE: Knob cannot be turned to "OFF" unless knob is pushed in slightly. Do not force.
7. Wait five (5) minutes to clear out any gas. Then smell for gas, including near the floor. If you smell gas, STOP! Follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
8. Turn gas control knob counterclockwise to "ON".
9. Replace control access panel.
10. Turn on all electric power to the appliance.
11. Set thermostat to desired setting.
12. If the appliance will not operate, follow the instructions "To Turn Off Gas To Appliance" and call your service technician or gas supplier.

### TO TURN OFF GAS TO APPLIANCE

1. Set the thermostat to lowest setting.
2. Turn off all electric power to the appliance if service is to be performed.
3. Remove control access panel.
4. Push in gas control lever slightly and move to "OFF". Do not force.
5. Replace control access panel.

7961-509

## 27. SERVICE AGENCY PROCEDURES

### CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

### WARNING

Follow these procedures before inspecting furnace.


- Turn room thermostat to its lowest or off setting.
- Turn off manual gas shut off valve.
- Wait at least 5 minutes for furnace to cool if it was recently operating.
- Turn off furnace electrical power; failure to do so could result in injury or death.

#### MAIN BURNER

Observe the main burners in operation. The flame should be mostly “blue” with possibly a little orange (not yellow) at the tips of the flame. The flames should be in the center of the heat exchanger tubes and not impinging on the heat exchanger surfaces themselves.

Observe the fire until the blower starts (there is a normal delay period until the heat exchanger warms up). There should be no change in the size or shape of the flame. If there is any wavering or blowing of the flame on blower start-up, it is an indication of a possible leak in the heat exchanger.

**FIGURE 16**  
**TOP VIEW OF GAS CONTROL**

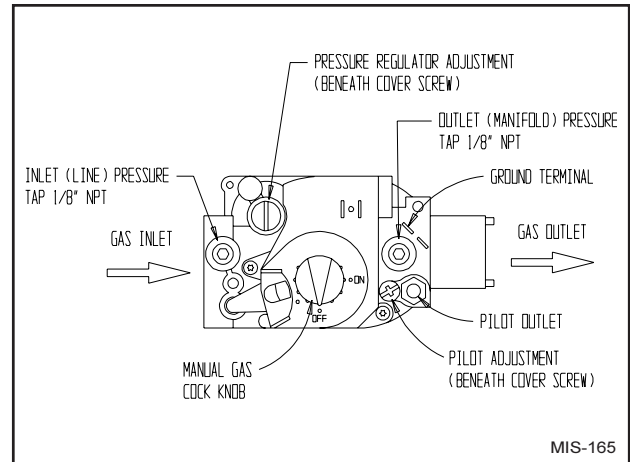

#### BURNERS / HEAT EXCHANGER / FLUE GAS PASSAGE WAYS

The burners, heat exchanger and interior flue gas passages may be inspected using a light on small mirror or an extension handle. Remove the screws securing the inducer and collector box. Now inspect the upper tubes of the heat exchanger.

Check the exterior of the heat exchanger and the interior flue gas passages for any evidence of deterioration due to corrosion, cracking or other causes. If signs of sooting exist, remove the burners and clean the heat exchanger, as required.

## 28. MAINTAINING UNIT IN GOOD WORKING ORDER

The unit should be inspected annually by a qualified service agency.

### WARNING

Use replacement parts listed in the Replacement Parts list only. The use of incorrect parts could cause improper unit operation, resulting in damage, injury or death.

## **WARNING**

Disconnect electrical power before servicing unit. Failure to do so could result in electrical shock or death.

### ANNUAL MAINTENANCE

Routine inspection and maintenance procedures are the responsibility of the user and are outlined below.

1. Before inspecting unit:
  - a. Turn room thermostat to lowest or off setting.
  - b. Turn off equipment gas shut off valve.
  - c. Wait for unit to cool if it was recently operating.
  - d. Turn off electrical power to unit.
2. Inspect the following:
  - a. Vent terminal and combustion air intake terminal. Make sure both are free from obstructions.
  - b. Vertical Vent Applications – Inspect venting system. Make sure system has no holes, is physically sound and free from obstructions.
  - c. Make sure the supply and return air flange sleeves or duct work are securely fastened to unit and physically sound.
  - d. Supply and return grilles must be open and free from obstructions.
  - e. Inspect to make sure the unit is securely fastened to the wall. Seal any possible leaks between unit and wall with appropriate exterior sealing material.
  - f. Inspect burners, heat exchanger, induced draft blower, and induced draft blower collector box. There must be no obvious signs of deterioration.
  - g. Inspect all electrical connections and wiring.
  - h. Check all gas piping for leaks with soap solution used to detect leaks.
  - i. Inspect, clean, and repair as needed the entire blower assembly, air filters, draft inducer, cooling coils, and vent options (if installed).

### ROUTINE MAINTENANCE

1. Air Filters – Check the condition at least monthly when the unit is in use, and replace as necessary.
2. Lubrication Requirements – The indoor circulating air blower motor and outdoor circulating air fan motor are permanently lubricated and require no re-oiling. The combustion air blower motor requires no re-oiling.

## **WARNING**

Turn off electrical power supply to prevent injury from moving parts or electric shock.

### ROUTINE INSPECTION

1. Inspect the physical support of the unit annually to make sure it is securely fastened to the building. Also look for any obvious signs of deterioration.
2. Inspect the main burners at the beginning of each heating season and clean as necessary.
3. Inspect the vent terminal and combustion air intake hood for any obvious deterioration, to make sure it is free and clear of any obstructions.

## 29. REPLACEMENT PARTS

## **WARNING**

Use replacement parts listed in Replacement Parts list. Failure to do so could cause improper furnace operation, resulting in property damage, personal injury, or death.

Replacement parts for the gas/electric units are available through local distributors.

A replacement parts list manual is supplied with each unit. When ordering parts or making inquiries pertaining to any of the units covered by these instructions, it is very important to always supply the **complete** model number and serial number of the unit. This is necessary to assure that the correct parts (or an approved alternate part) are issued to the service agency.

### 30. SEQUENCE OF OPERATION – HEATING

On a call for heat from the thermostat, the induced draft blower is energized. Once sufficient draft is established, the pressure switch contacts close and the ignition system is energized. The direct spark ignitor will be energized allowing gas to flow. At the same time the main valve is energized, a 30-second blower delay timer is activated.

After this delay, the heating speed blower relay energizes. The blower will begin operating and remain in operation until the set delay time after the call for heat has been satisfied. (See Tables 10-15 for selectable blower off time delays.) This timing sequence guarantees blower on, blower off operation.

This unit is equipped with a flame rollout switch which is wired in series with the control circuit. This is a manual reset switch and is used for the purpose of preventing possible fire hazard in the event of a system malfunction. If this switch has opened the control circuit, there could be a possible system malfunction. Some of the conditions that might cause a rollout to occur are blockage or sooting of primary heat exchanger, overfiring of furnace due to improper main burner orifices or incorrect manifold pressure, insufficient combustion air, or installation deficiencies with respect to return air duct design or sizing.

Once the problem has been resolved, reset the switch by pressing down on the reset button on top of the switch. See Figure 17 for additional information.

### 31. SEQUENCE OF OPERATION – COOLING

On a call for cooling from the room thermostat, the high speed blower relay will be energized as well as the compressor contactor. Following termination of the cooling cycle, the blower motor will continue to run for one minute.

See Figure 17 for additional information.

The unit may be equipped with a low ambient control for lower outdoor temperature operation in the cooling mode. If equipped with this optional control the condenser fan will not operate immediately upon compressor start up, and will cycle on and off until the condensing pressure remains above 280 PSIG.

**DEHUMIDIFICATION** – Dehumidification is controlled through a humidistat and is independent of the thermostat. On a call for dehumidification mode of operation the compressor and three way valve of the unit are energized through circuit R-F to provide dehumidification. Dehumidification will continue until the humidistat is satisfied.

If there is a cooling call issued through circuit R-Y, it will cancel dehumidification sequence (de-energize the reheat valve) until the cooling call is satisfied. If the dehumidification call is still present when cooling call is satisfied, the compressor will continue to operate and the reheat valve is reenergized.

Any time there is a call for heating mode of operation through circuit R-W1 the dehumidification mode will cancel and the system will return to heating operation. Dehumidification is delay 45-60 seconds on start up after any heating cycle is complete.

Any time the indoor coil temperature falls below 32 degrees the compressor will be de-energized until the coil temperature rises above 57 degrees.


If the room temperature falls below 65 degrees the dehumidification mode will discontinue until the room temperature rises above 72 degrees.

(Refer to Section 33 on Page 47 for specific electronic sequence descriptions.)

**FIGURE 17**  
**SEQUENCE OF OPERATION**  
**ELECTRONIC BLOWER CONTROL**

ACTION	SYSTEM RESPONSE
Thermostat calls for heat. (W terminal is energized.)	<ul style="list-style-type: none"> <li>• Combustion air blower is energized.</li> <li>• Air proving switch makes. Air flow is established.</li> <li>• Ignition system is energized.</li> <li>• Gas valve opens and main burner lights.</li> <li>• Heat fan on delay timing begins. When timing is complete, the circulating fan is energized at heat speed.</li> </ul>
Thermostat ends call for heat.	<ul style="list-style-type: none"> <li>• Ignition system is de-energized and gas valve closes.</li> <li>• Combustion air blower is de-energized after postpurge timing.</li> <li>• Heat fan off delay timing begins. When timing is complete, the circulating fan is de-energized.</li> </ul>
Thermostat begins call for cool. (G and Y terminals re-energized.)	<ul style="list-style-type: none"> <li>• Cooling contactor is energized.</li> <li>• Circulating fan is energized on cool speed after cool fan on delay timing.</li> </ul>
Thermostat begins call for fan. (G terminal is de-energized.)	<ul style="list-style-type: none"> <li>• Circulating fan is de-energized</li> </ul>
Limit (flame rollout) opens.	<ul style="list-style-type: none"> <li>• Thermostat and ignition system are de-energized and gas valve closes.</li> <li>• Combustion air blower and circulating fan heat speed are energized.</li> </ul>
Limit (auto reset) or flame rollout (manual reset) circuit closed.	<ul style="list-style-type: none"> <li>• Combustion air blower remains energized for postpurge timing.</li> <li>• The circulation fan remains energized for the selected delay off timing.</li> <li>• Normal operation resumes.</li> </ul>

**FIGURE 18  
FURNACE CONTROL BOARD AND BLOWER CONTROL**

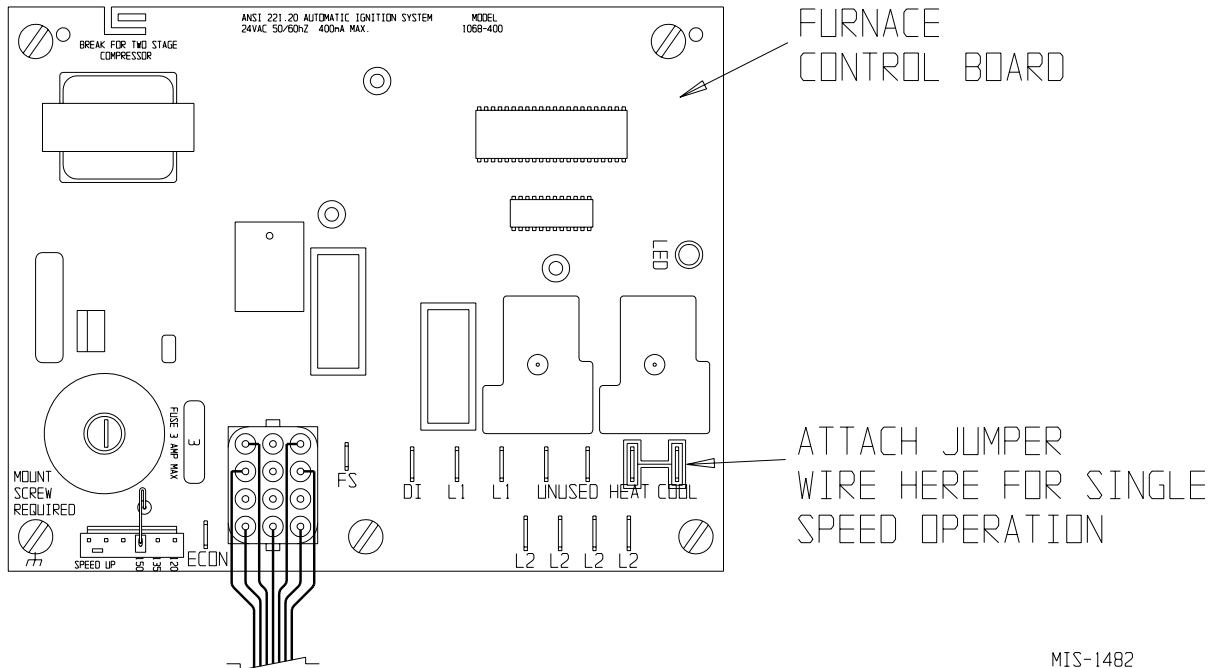

MIS-1482

## 32. INDOOR BLOWER OPERATION

All models have multiple speed direct drive blower motors. If supply and return ducts are connected to the unit, the ducts must be of adequate size. Refer to the appropriate blower tables. See Tables 10, 11, 12, 13, 14 and 15 for maximum static pressures acceptable. Note the minimum CFM for cooling operation.

If voltage and duct design permit, (see blower tables) single speed operation can be achieved as follows:

### BLOWER MOTOR SPEED CHANGE

1. Disconnect power supply to unit.
2. Place desired blower motor speed lead wire to "COOL" terminal of integrated furnace control board.
3. Place desired blower motor speed lead wire to "HEAT" terminal of integrated furnace control board.
4. Place unused blower motor speed lead wire to "UNUSED" terminal of integrated furnace control board.
5. Energize the system in cooling and heating modes to check for proper blower operation.

If it is desirable to have both HEAT/COOL blower motor speed at the same speed, install a jumper wire between "HEAT" and "COOL" terminals of the integrated furnace control board, and place both unused motor speed lead wires on the two "UNUSED" terminals on the integrated furnace control board. (See Figure 18.)

**TABLE 9  
230 VOLT MOTOR SPEED TAPS**

Speeds	3-Speed Blower Motor
Low	Red
Medium	Blue
High	Black

**460 VOLT MOTOR SPEED TAPS**

Speeds	3-Speed Blower Motor
Low	Red
Medium	Blue
High	Black
Isolation *	Orange
Isolation *	Purple

**\* NOTE:** On 460 Volt motors, there are two motor isolation leads. The orange must connect with the black high speed blower motor lead wire for medium and low speed blower operation. The purple wire must connect with the blue medium speed blower motor lead wire for low speed blower operation. This is all automatically accomplished with blower relays HSBR, MSBR and LSBR, and speed changes are all made by changes at the integrated furnace control board.

**TABLE 10  
WG24 INDOOR BLOWER PERFORMANCE @ 230 AND 460 VOLTS**

Recommended WG24 cooling airflow range at rated 800 CFM @ 0.15 ESP (WC) is 680 - 920 CFM  
Factory set on Low Speed for cooling and High for heating.

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			90,000 BTU Input			81,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	890	1350	1120	---	---	1120	940
0.1	---	---	820	1260	1160	---	---	1160	870
0.2	---	950	770	1200	1010	---	1200	1010	---
0.3	---	880	700	1120	---	---	1120	940	---
0.4	---	790	---	1030	---	---	1030	860	---
0.5	910	710	---	---	---	---	950	---	---
0.6	800	---	---	---	---	---	840	---	---

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			68,000 BTU Input			61,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	890	1350	1120	940	---	1120	940
0.1	---	---	820	1260	1160	870	---	1160	870
0.2	---	950	770	1200	1010	---	---	1010	810
0.3	---	880	700	1120	910	---	1120	940	---
0.4	---	790	---	1030	---	---	1030	860	---
0.5	910	710	---	950	---	---	950	780	---
0.6	800	---	---	---	---	---	840	---	---

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			45,000 BTU Input			41,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	890	---	1120	940	---	1120	940
0.1	---	---	820	1260	1160	870	---	1160	870
0.2	---	950	770	1200	1010	810	1200	1010	810
0.3	---	880	700	1120	940	---	1120	940	750
0.4	---	790	---	1030	860	---	1030	860	680
0.5	910	710	---	950	780	---	950	780	---
0.6	800	---	---	840	---	---	840	---	---

**Voltage adjustment** – Reduce airflow by 100 CFM for 208 Volt

**Dehumidification coil adjustment** – Reduce airflow by 35 CFM for dehumidification coil installed

**Top outlet adjustment** – Increase airflow by 50 CFM for top outlet models

**SG-3, RG-3, non-ducted application adjustment** – Reduce airflow by 100 CFM for SG-3 and RG-3 installations

**TABLE 11  
WG30 INDOOR BLOWER PERFORMANCE @ 230 AND 460 VOLTS**

Recommended WG30 cooling airflow range at rated 1000 CFM @ 0.35 ESP (WC) is 820 - 1150 CFM  
Factory set on Medium Speed for cooling and for heating.

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			90,000 BTU Input			81,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	1060	1560	1350	1120	1560	1350	1120
0.1	---	---	1000	1470	1260	1060	1470	1260	1060
0.2	---	1160	950	1370	1200	1010	1370	1200	1010
0.3	---	1080	880	1290	1120	940	1290	1120	940
0.4	1150	990	---	1190	1030	860	1190	1030	860
0.5	1050	910	---	1090	950	780	1090	950	780
0.6	940	---	---	980	840	660	980	840	660

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			68,000 BTU Input			61,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	1060	1560	1350	1120	1560	1350	1120
0.1	---	---	1000	1470	1260	1060	1470	1260	1060
0.2	---	1160	950	1370	1200	1010	1370	1200	1010
0.3	---	1080	880	1290	1120	940	1290	1120	940
0.4	1150	990	---	1190	1030	860	1190	1030	860
0.5	1050	910	---	1090	950	780	1090	950	780
0.6	940	---	---	980	840	660	980	840	660

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			45,000 BTU Input			41,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	1060	1560	1350	1120	1560	1350	1120
0.1	---	---	1000	1470	1260	1060	1470	1260	1060
0.2	---	1160	950	1370	1200	1010	1370	1200	1010
0.3	---	1080	880	1290	1120	940	1290	1120	940
0.4	1150	990	---	1190	1030	860	1190	1030	860
0.5	1050	910	---	1090	950	780	1090	950	780
0.6	940	---	---	980	840	660	980	840	660

**Voltage adjustment** – Reduce airflow by 100 CFM for 208 Volt

**Dehumidification coil adjustment** – Reduce airflow by 35 CFM for dehumidification coil installed

**Top outlet adjustment** – Increase airflow by 50 CFM for top outlet models

**SG-3, RG-3, non-ducted application adjustment** – Reduce airflow by 100 CFM for SG-3 and RG-3 installations

**TABLE 12  
WG36 INDOOR BLOWER PERFORMANCE @ 230 AND 460 VOLTS**

Recommended WG36 cooling airflow range at rated 1100 CFM @ 0.250 ESP (WC) is 935 - 1265 CFM  
Factory set on Medium Speed for cooling and for heating.

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			90,000 BTU Input			81,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	1060	---	1350	1120	---	1350	1120
0.1	---	1220	1000	---	1260	1060	---	1260	1060
0.2	---	1160	950	1370	1200	1010	---	1200	1010
0.3	1250	1080	---	1290	1120	940	---	1120	940
0.4	1150	990	---	1190	1030	---	1190	1030	860
0.5	1050	---	---	1090	950	---	1090	950	---
0.6	940	---	---	980	---	---	980	840	---

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			68,000 BTU Input			61,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	1060	---	1350	1120	---	---	1120
0.1	---	1220	1000	---	1260	1060	---	---	1060
0.2	---	1160	950	---	1200	1010	---	---	1010
0.3	1250	1080	---	---	1120	940	---	1120	940
0.4	1150	990	---	1190	1030	860	---	1030	860
0.5	1050	---	---	1090	950	780	1090	950	780
0.6	940	---	---	980	840	---	980	840	660

ESP Inches H <sub>2</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			45,000 BTU Input			41,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
0.0	---	---	1060	---	1350	1120	---	---	1120
0.1	---	1220	1000	---	1260	1060	---	---	1060
0.2	---	1160	950	---	1200	1010	---	1200	1010
0.3	1250	1080	---	1290	1120	940	---	1120	940
0.4	1150	990	---	1190	1030	860	---	1030	860
0.5	1050	---	---	1090	950	780	1090	950	780
0.6	940	---	---	980	840	660	980	840	660

**Voltage adjustment** – Reduce airflow by 100 CFM for 208 Volt

**Dehumidification coil adjustment** – Reduce airflow by 35 CFM for dehumidification coil installed

**Top outlet adjustment** – Increase airflow by 50 CFM for top outlet models

**SG-3, RG-3, non-ducted application adjustment** – Reduce airflow by 100 CFM for SG-3 and RG-3 installations

**TABLE 13  
WG42 INDOOR BLOWER PERFORMANCE @ 230 AND 460 VOLTS**

Recommended WG42 cooling airflow range at rated 1300 CFM @ .35 ESP (WC) is 1500 - 1030 CFM  
Factory set on Medium Speed for heating and cooling

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			125,000 BTU Input			113,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	1540	1140	---	1640	1230	---	1640	1230
.10	---	1480	1090	---	1580	1180	---	1580	1180
.20	---	1410	1030	1880	1510	---	---	1510	1090
.30	---	1360	---	1760	1460	---	---	1460	---
.40	---	1250	---	1670	1340	---	1670	1340	---
.50	1460	1150	---	1560	1240	---	1560	1240	---
.60	1340	1040	---	1430	1130	---	1430	1130	---

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			100,000 BTU			90,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	---	1190	---	1690	1280	---	1690	1280
.10	---	1530	1140	---	1630	1230	---	1630	1230
.20	---	1460	1070	---	1560	1160	---	1560	1160
.30	---	1410	1050	1810	1510	1140	---	1510	1140
.40	---	1300	---	1720	1390	---	1720	1390	1020
.50	1510	1200	---	1610	1290	---	1610	1290	970
.60	1390	1090	---	1480	1180	---	1480	1180	---

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			75,000 BTU Input			68,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	---	1240	---	1740	1330	---	1740	1330
.10	---	---	1190	---	1680	1280	---	1680	1280
.20	---	1510	1120	---	1610	1210	---	1610	1210
.30	---	1460	1100	1860	1560	1190	---	1560	1190
.40	---	1340	---	1770	1440	1070	---	1440	1070
.50	---	1260	---	1660	1340	970	1660	1340	970
.60	1440	1140	---	1530	1230	---	1530	1230	---

**Voltage adjustment** – Reduce airflow by 130 CFM for 208 Volt

**Top outlet adjustment** – Increase airflow by 65 CFM for top outlet models

**SG-5, RG-5, non-ducted application adjustment** – Reduce airflow by 170 CFM for SG-5 and RG-5 installations

**TABLE 14  
WG48 INDOOR BLOWER PERFORMANCE @ 230 AND 460 VOLTS**

Recommended WG48 cooling airflow range at rated 1550 CFM @ .38 ESP (WC) is 1750 - 1280 CFM  
Factory set on High Speed for cooling and Medium Speed for heating.

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			125,000 BTU Input			113,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	1540	---	---	1640	1230	---	1640	1230
.10	---	1480	---	---	1580	1180	---	1580	1180
.20	1780	1410	---	1880	1510	---	---	1510	1110
.30	1670	1360	---	1760	1460	---	---	1460	1090
.40	1570	1250	---	1670	1340	---	1670	1340	---
.50	1460	---	---	1560	1240	---	1560	1240	---
.60	1340	---	---	1430	---	---	1430	1130	---

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			100,000 BTU			90,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	1590	---	---	1690	1280	---	1690	1280
.10	---	1530	---	---	1630	1230	---	1630	1230
.20	---	1460	---	---	1560	1160	---	1560	1160
.30	1700	1410	---	1810	1510	1140	---	1510	1140
.40	1620	1300	---	1720	1390	---	1720	1390	1020
.50	1510	---	---	1610	1290	---	1610	1290	970
.60	1390	---	---	1480	1180	---	1480	1180	---

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			75,000 BTU Input			68,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	---	1640	---	1740	1330	---	1740	1330
.10	---	1580	---	---	1680	1280	---	1680	1280
.20	---	1510	---	---	1610	1210	---	1610	1210
.30	1750	1460	---	1860	1560	1190	---	1560	1190
.40	1670	1340	---	1770	1440	1070	---	1440	1070
.50	1560	1260	---	1660	1340	970	1660	1340	970
.60	1440	---	---	1530	1230	---	1530	1230	---

**Voltage adjustment** – Reduce airflow by 130 CFM for 208 Volt

**Top outlet adjustment** – Increase airflow by 65 CFM for top outlet models

**SG-5, RG-5, non-ducted application adjustment** – Reduce airflow by 170 CFM for SG-5 and RG-5 installations

**TABLE 15  
WG60 INDOOR BLOWER PERFORMANCE @ 230 AND 460 VOLTS**

Recommended WG60 cooling airflow range at rated 1650 CFM @ .30 ESP (WC) is 1910 - 1340 CFM  
Factory set on High Speed for cooling and Medium Speed for heating.

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			125,000 BTU Input			113,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	1930	1540	---	---	1640	1230	---	1640	1230
.10	1850	1480	---	---	1580	1180	---	1580	1180
.20	1780	1410	---	1880	1510	---	---	1510	1110
.30	1670	1360	---	1760	1460	---	---	1460	1090
.40	1570	---	---	1670	1340	---	1670	1340	---
.50	1460	---	---	1560	1240	---	1560	1240	---
.60	1340	---	---	1430	---	---	1430	1130	---

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			100,000 BTU			90,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	1590	---	---	1690	1280	---	1690	1280
.10	1900	1530	---	---	1630	1230	---	1630	1230
.20	1830	1460	---	---	1560	1160	---	1560	1160
.30	1700	1410	---	1810	1510	1140	---	1510	1140
.40	1620	---	---	1720	1390	---	1720	1390	1020
.50	1510	---	---	1610	1290	---	1610	1290	970
.60	1390	---	---	1480	1180	---	1480	1180	---

ESP Inches H <sub>s</sub> O	COOLING MODE			MANUAL FAN and HEATING MODE					
	Wet Coil			75,000 BTU Input			68,000 BTU Input		
	High	Medium	Low	High	Medium	Low	High	Medium	Low
.00	---	1640	---	---	1740	1330	---	1740	1330
.10	1950	1580	---	---	1680	1280	---	1680	1280
.20	1880	1510	---	---	1610	1210	---	1610	1210
.30	1750	1460	---	1860	1560	1190	---	1560	1190
.40	1670	1340	---	1770	1440	1070	---	1440	1070
.50	1560	---	---	1660	1340	970	1660	1340	970
.60	1440	---	---	1530	1230	---	1530	1230	---

**Voltage adjustment** – Reduce airflow by 130 CFM for 208 Volt

**Top outlet adjustment** – Increase airflow by 65 CFM for top outlet models

**SG-5, RG-5, non-ducted application adjustment** – Reduce airflow by 170 CFM for SG-5 and RG-5 installations

**TABLE 16**  
**INTEGRATED FURNACE AND BLOWER CONTROL OPERATION**

**IGNITION SEQUENCE CONTROL**

Ignition Source	24 VAC DSI
Flame Sensing	Remote
Timings	
- Prepurge	15 seconds
- Postpurge	30 seconds (0 if cycle terminated before valve "on")
- Inter-trial purge	15 seconds
- Pressure switch proving period	60 seconds
- Trials for ignition	3 per ignition sequence
- Trial for ignition	7 seconds total time to prove flame
- Ignition sequence lockout	60 minutes (after 3 trials for ignition), auto reset - can be reset during the 60 minute lockout period by opening thermostat circuit for 3 seconds or more
- Heat blower on - delay	30 seconds (timing starts when ignitor cycles off)
- Heat blower off - delay	90, 120, 150 seconds selectable; factory set at 120
- Cool blower on - delay	7 seconds
- Cool blower off - delay	60 seconds
- Manual fan operations	Operates on selected heating speed and cycles off during ignition or burner start up sequence.
- High limit control operation	Automatic reset, ignition sequence restart. See Note 1.
- Flame rollout switch operation	Manual reset, ignition sequence initiated after switch is manually reset. See Note 1.

*NOTE 1: After the fourth limit trip on a given call for heat there will be a 1 hour delay before the ignition sequence will restart. After either high limit switch or flame rollout switch actuation the inducer will operate for the 30 second post purge and the comfort air blower will operate for the selected off delay. If on Manual Fan operation, the comfort air blower will continue to operate.*

**SAFETY UNITS**

High limit / Rollout	SPST in 24 Volt
Pressure switch	SPST, safe start check

**COMFORT FAN CONTROL**

**Heating Speed Fan**

Normal operation	
- ON delay	30 seconds fixed. Timing starts when igniter de-energized
- OFF delay	3 selectable timings -120 seconds standard can be changed to 90 or 150 seconds.
Limit Operation	ON when limit OPEN OFF after OFF delay when limit CLOSES
Flame Sense	ON if flame is sensed <b>and</b> there is no call for heat.

**Cooling Speed Fan**

- ON delay	7 seconds
- OFF delay	60 seconds

**Manual Fan**

ON continuously on HEATING speed. When call for cool, the fan switches to COOLING speed. Then when thermostat satisfied, the fan switches back to HEATING speed after COOLING OFF delay.

**DIAGNOSTIC INDICATOR**

A red LED is provided to indicate system faults as follows:

- Steady ON - Control okay in standby, call for heat, cool or fan modes
  - Steady OFF - Internal control fault or no power. Also check 3A fuse on control.
  - 1 flash - Lockout due to failed ignition or flame dropouts
  - 2 flashes - Pressure switch open with inducer on
  - 3 flashes - Pressure switch is closed with inducer off
  - 4 flashes - Limit switch is open
  - 5 flashes - Flame detected with gas valve closed
  - 6 flashes - Compressor output delayed from short cycle/staging timer
- The flash rate is 0.25 seconds on, 0.25 seconds off with 2.0 seconds pause between flash codes.  
The flash rate is 0.25 seconds on, 0.25 seconds off with 2.0 seconds pause between flash codes.

### 33. WG DEHUMIDIFICATION UNIT RELAY LOGIC

The WG Wall Mount Gas Fired Units equipped with the Dehumidification Circuit employ several components to control the Heating, Cooling and Dehumidification process (excluding blower control). These components include the following:

CR1	Control Relay #1	Part # 8201-071
CR2	Control Relay #2	Part # 8201-062
CR3	Control Relay #3	Part # 8201-062
TDR1	Time Delay Relay #1	Part # 8201-089
TDR2	Time Delay Relay #2	Part # 8201-045
RAT	Return Air Thermostat	Part # 8408-037

#### **CR1**

This relay completes the “Y” or compressor signal to the CCM (Compressor Control Module) during either a call for Cooling or a call for Dehumidification.

#### **CR2**

Part of the Bard Manufacturing Company, Inc. control strategy on Dehumidification units is that Cooling always takes precedence over Dehumidification. This relay opens the circuit to the Dehumidification Solenoid Valve on a call for Cooling, effectively overriding the Dehumidification function in favor of the Cooling call.

#### **CR3**

This relay terminates the signal to the Dehumidification Solenoid and also the “Y” signal to the CCM during a call for Heat.

#### **TDR1**

This time delay relay is a 10 second Delay On Break device. On shift between Cooling and Dehumidification, this relay assures the Compressor signal does not drop to the CCM. This will keep the CCM from going into time delay as the unit shifts from Dehumidification mode to Cooling mode and back.

#### **TDR2**

This time delay relay is a Delay On Break device. After a call for heating is terminated, this relay assures sufficient time for the evaporator coil and heat exchanger to cool off before allowing the compressor circuit to be completed. This protects the system in the event of a rapid mode change from Heating to Cooling.

#### **RAT**

The Return Air Thermostat is a safety device that guards against a Low Ambient condition during Dehumidification mode that may result in coil freeze-up or damage to the system. In the event the Return Air temperature drops below the RAT setting, the RAT will terminate the Dehumidification call. The RAT will re-establish the call for Dehumidification when the Return Air temperature rises sufficiently for the RAT to reset.

### 34. PRESSURE SERVICE PORTS

High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Table 17 outlines expected pressures at various indoor and outdoor temperatures.

**TABLE 17  
COOLING PRESSURE TABLE**

Model	Return Air Temperature	Pressure	75	80	85	90	95	100	105	110	115
WG24	75 deg. DB 62 deg. WB	Low Side High Side	72 201	74 216	76 231	77 246	79 263	81 280	82 297	83 315	85 335
	80 deg. DB 67 deg. WB	Low Side High Side	76 207	79 221	81 237	83 253	85 270	87 287	88 306	90 324	91 344
	85 deg. DB 72 deg. WB	Low Side High Side	82 214	85 229	87 245	89 262	91 280	93 298	95 316	97 336	98 356
WG30	75 deg. DB 62 deg. WB	Low Side High Side	76 218	77 231	78 245	79 261	81 278	82 295	84 314	85 334	87 356
	80 deg. DB 67 deg. WB	Low Side High Side	81 223	82 237	83 251	85 267	87 285	88 303	90 322	91 343	93 365
	85 deg. DB 72 deg. WB	Low Side High Side	87 232	88 246	90 261	91 277	93 295	94 313	96 333	98 355	100 378
WG36	75 deg. DB 62 deg. WB	Low Side High Side	72 222	74 238	75 255	76 272	78 290	79 308	81 326	82 346	83 366
	80 deg. DB 67 deg. WB	Low Side High Side	77 228	79 245	81 262	82 279	84 298	85 316	87 335	88 355	89 375
	85 deg. DB 72 deg. WB	Low Side High Side	83 237	85 254	86 271	88 289	90 308	91 327	93 346	95 367	96 388
WG42	75 deg. DB 62 deg. WB	Low Side High Side	66 206	69 221	71 236	73 251	75 267	76 282	78 300	79 315	81 332
	80 deg. DB 67 deg. WB	Low Side High Side	72 211	74 226	76 242	78 257	80 274	81 290	84 307	85 323	87 341
	85 deg. DB 72 deg. WB	Low Side High Side	78 219	80 234	82 250	84 266	86 283	87 299	89 316	91 334	93 352
WG48	75 deg. DB 62 deg. WB	Low Side High Side	69 199	70 214	72 229	73 244	74 261	75 278	76 294	77 312	79 331
	80 deg. DB 67 deg. WB	Low Side High Side	74 205	75 220	76 235	78 251	79 268	80 285	82 302	83 321	85 340
	85 deg. DB 72 deg. WB	Low Side High Side	80 210	81 226	83 242	84 259	85 277	86 294	88 314	89 332	91 352
WG60	75 deg. DB 62 deg. WB	Low Side High Side	69 231	70 248	72 265	73 283	74 301	75 319	76 338	77 356	79 376
	80 deg. DB 67 deg. WB	Low Side High Side	74 237	75 254	76 272	77 290	79 309	80 327	81 346	82 366	84 386
	85 deg. DB 72 deg. WB	Low Side High Side	80 245	81 263	82 282	83 300	85 320	86 339	87 360	88 379	90 399

Low side pressure ± 2 PSIG  
High side pressure ± 5 PSIG


### 35. DEHUMIDIFICATION CIRCUIT

The dehumidification circuit incorporates an independent heat exchanger coil in the supply air stream. This coil reheats the supply air after it passes over the cooling coil without requiring the gas burner to be used for reheat purposes. This results in very high mechanical dehumidification capability from the air conditioner on demand without using gas reheat.

The dehumidification refrigerant reheat circuit is controlled by a three way valve directing the refrigerant gas to the normal condenser during periods when standard air conditioning is required. During periods of time of low ambient temperature (approximately 65° to 75° outdoor) and high indoor humidity, a humidistat senses the need for mechanical dehumidification. It then energizes both the compressor circuit and the three way valve, thus directing the hot refrigerant discharge gas into a


separate desuperheating condenser circuit, which reheats the conditioned air before it is delivered to the room. The refrigerant gas is then routed from the desuperheating condenser to the system condenser for further heat transfer. A small orifice inserted between the reheat coil return line and suction line will prevent liquid from accumulating in the reheat coil when it is inactive. This drain does not affect the normal operation of the system. A check valve is located in the reheat oil return line. It has a soft spring to hold the ball on the seat. This will make the method of checking the ball freedom with a magnet difficult. Refer to Figure 19 for the location of the check valve and drain back capillary. When the humidistat is satisfied, the system automatically switches back to normal air conditioning mode and either continues to operate or turns off based on the signal from the wall thermostat. The result is separate humidity control at minimum operating cost.

**FIGURE 19  
CIRCUIT DIAGRAMS**

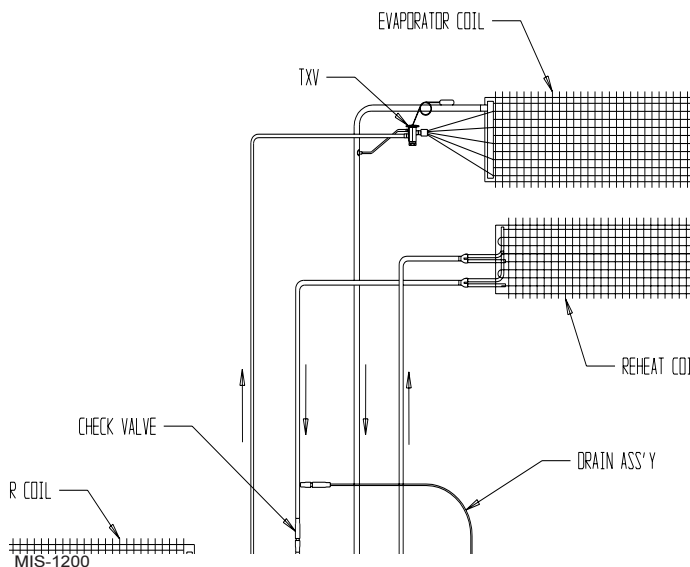

**DEHUMIDIFICATION MODE  
CIRCUIT DIAGRAM**

**AIR CONDITIONING MODE  
CIRCUIT DIAGRAM**

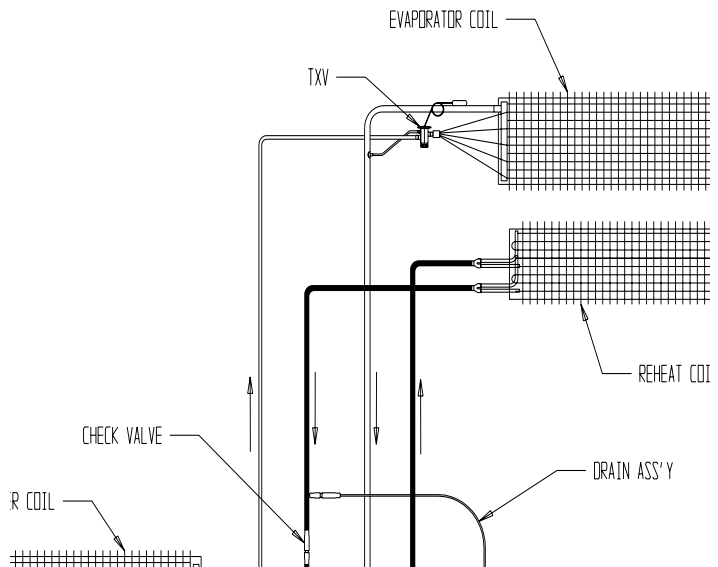

### 36. REFRIGERANT CHARGE

The correct system R-22 charge is shown on the unit rating plate.

You can reference Table 18 to validate proper system operation ( $\pm 2$  psig suction,  $\pm 5$  psig discharge). However, it is recommended that if incorrect charge is suspected, the system refrigerant be reclaimed, evacuated and charged to the nameplate charge quantity and type.

The nameplate charge quantity is optimized for thermal performance and efficiency of this self-contained package system.

The system operating pressures in Table 18 are based upon rated airflow across the evaporator during cooling cycle.

Total system charge for these models can be found in Table 1.


**TABLE 18  
REFRIGERANT CHARGE**

Model	Return Air Temperature	Pressure	75	80	85	90	95	100	105	110	115
WG242	75 deg. DB	Low Side	72	74	76	77	79	81	82	83	85
	62 deg. WB	High Side	201	216	231	246	263	280	297	315	335
	80 deg. DB	Low Side	76	79	81	83	85	87	88	90	91
	67 deg. WB	High Side	207	221	237	253	270	287	306	324	344
	85 deg. DB	Low Side	82	85	87	89	91	93	95	97	98
	72 deg. WB	High Side	214	229	245	262	280	298	316	336	356
WG302	75 deg. DB	Low Side	76	77	78	79	81	82	84	85	87
	62 deg. WB	High Side	218	231	245	261	278	295	314	334	356
	80 deg. DB	Low Side	81	82	83	85	87	88	90	91	93
	67 deg. WB	High Side	223	237	251	267	285	303	322	343	365
	85 deg. DB	Low Side	87	88	90	91	93	94	96	98	100
	72 deg. WB	High Side	232	246	261	277	295	313	333	355	378
WG362	75 deg. DB	Low Side	72	74	75	76	78	79	81	82	83
	62 deg. WB	High Side	222	238	255	272	290	308	326	346	366
	80 deg. DB	Low Side	77	79	81	82	84	85	87	88	89
	67 deg. WB	High Side	228	245	262	279	298	316	335	355	375
	85 deg. DB	Low Side	83	85	86	88	90	91	93	95	96
	72 deg. WB	High Side	237	254	271	289	308	327	346	367	388
WG423	75 deg. DB	Low Side	66	69	71	73	75	76	78	79	81
	62 deg. WB	High Side	206	221	236	251	267	282	300	315	332
	80 deg. DB	Low Side	72	74	76	78	80	81	84	85	87
	67 deg. WB	High Side	211	226	242	251	274	290	307	323	341
	85 deg. DB	Low Side	78	80	82	84	86	87	89	91	93
	72 deg. WB	High Side	219	234	250	266	283	299	316	334	352
WG482	75 deg. DB	Low Side	69	70	72	73	74	75	76	77	79
	62 deg. WB	High Side	199	214	229	244	261	278	294	312	331
	80 deg. DB	Low Side	74	75	76	78	79	80	82	83	85
	67 deg. WB	High Side	205	220	235	251	268	285	302	321	340
	85 deg. DB	Low Side	80	81	83	84	85	86	88	89	91
	72 deg. WB	High Side	210	226	242	259	277	294	314	332	352
WG602	75 deg. DB	Low Side	69	70	72	73	74	75	76	77	79
	62 deg. WB	High Side	231	248	265	283	301	319	338	356	376
	80 deg. DB	Low Side	74	75	76	77	79	80	81	82	84
	67 deg. WB	High Side	237	254	272	290	309	327	346	366	386
	85 deg. DB	Low Side	80	81	82	83	85	86	87	88	90
	72 deg. WB	High Side	245	263	282	300	320	339	360	379	399

### 37. FAN BLADE SETTING DIMENSIONS

Shown in Figure 20 is the correct fan blade setting dimension for proper air delivery across the outdoor coil.

**FIGURE 20  
FAN BLADE**

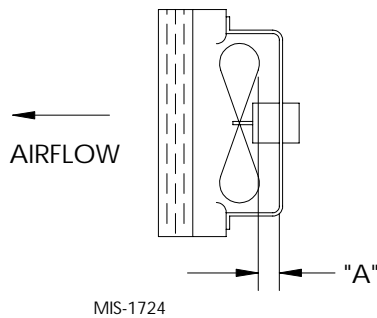

**TABLE 19  
FAN BLADE DIMENSION**

Model	Dimension A
WG24	1
WG30	1
WG36	1
WG42	1
WG48	1
WG60	1

### 38. LOW-NOX BURNER ASSEMBLY "N" SUFFIX MODELS ONLY – U.S. INSTALLATIONS ONLY


#### NATURAL GAS MODELS ONLY

Model numbers designated with an "N" are designed for low NOx emissions which comply with all California Air Quality Management District regulations for nitrogen oxide emission levels. Refer to Figure 21 for NOx insert information.

#### **\*\* IMPORTANT \*\***

For propane (LP) conversions the NOx reduction screen inserts shown below must be removed. This is accomplished by removing the burner box assembly and removing the NOx screens. Reassemble unit properly before firing. Failure to remove the NOx screens can result in improper operation and malfunction of the burner system.

**FIGURE 21  
LOW NOx INSERT**

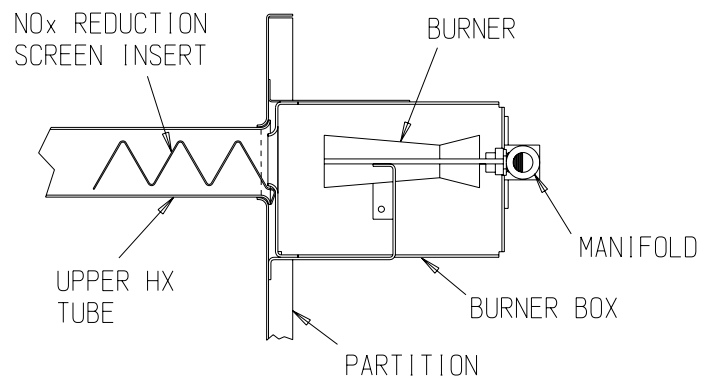

MIS-1481

**TABLE 20  
APPLICATION DATA FOR WG24\*DA**

Indoor Conditions		Outdoor Ambient	System Capacity				Pounds Water Lbs/Hr	Airflow CFM	Approx. Supply Air DB/WB	Mode
DB/WB	% RH	DB	Total BTU	Sensible BTU	Latent BTU	S/T %				
65/63	90	65	27,300	12,200	15,100	45	14.24	800	52/51.5	A/C
<b>65/63</b>	<b>90</b>	<b>65</b>	<b>11,600</b>	<b>(2,400)</b>	<b>14,000</b>	<b>0</b>	<b>13.3</b>	<b>800</b>	<b>67.6/58.3</b>	<b>Dehum</b>
75/62.5	50	75	25,800	19,800	6,000	77	5.64	800	53/51.3	A/C
<b>75/62.5</b>	<b>50</b>	<b>75</b>	<b>8,100</b>	<b>2,800</b>	<b>5,300</b>	<b>34</b>	<b>4.96</b>	<b>800</b>	<b>72.4/59.3</b>	<b>Dehum</b>
75/65.5	60	75	27,600	19,300	8,300	70	7.88	800	56/54.3	A/C
<b>75/65.5</b>	<b>60</b>	<b>75</b>	<b>10,500</b>	<b>1,300</b>	<b>9,200</b>	<b>12</b>	<b>8.64</b>	<b>800</b>	<b>74/61.6</b>	<b>Dehum</b>
75/68	70	75	28,600	17,100	11,500	60	10.84	800	58/57	A/C
<b>75/68</b>	<b>70</b>	<b>75</b>	<b>10,600</b>	<b>(600)</b>	<b>11,200</b>	<b>0</b>	<b>10.52</b>	<b>800</b>	<b>75.7/63.7</b>	<b>Dehum</b>
80/67	50	95	23,800	17,200	6,600	72	6.26	800	59.1/57.2	A/C
<b>80/67</b>	<b>50</b>	<b>95</b>	<b>2,900</b>	<b>(2,200)</b>	<b>5,100</b>	<b>0</b>	<b>4.84</b>	<b>800</b>	<b>82.5/66</b>	<b>Dehum</b>

Values shown in ( ) are BTUH of heating available at these conditions.

Latent BTU = Lbs/Hr water \* 1060

Sensible BTU = Total - Latent

**TABLE 21  
APPLICATION DATA FOR WG30\*DA**

Indoor Conditions		Outdoor Ambient	System Capacity				Pounds Water Lbs/Hr	Airflow CFM	Approx. Supply Air DB/WB	Mode
DB/WB	% RH	DB	Total BTU	Sensible BTU	Latent BTU	S/T %				
65/63	90	65	33,800	15,800	18,000	47	17.04	1,000	52/51	A/C
<b>65/63</b>	<b>90</b>	<b>65</b>	<b>14,900</b>	<b>(3,500)</b>	<b>18,400</b>	<b>0</b>	<b>17.32</b>	<b>1,000</b>	<b>68/58.5</b>	<b>Dehum</b>
75/62.5	50	75	31,800	24,200	7,600	76	7.16	1,000	52.9/51.7	A/C
<b>75/62.5</b>	<b>50</b>	<b>75</b>	<b>9,700</b>	<b>3,500</b>	<b>6,200</b>	<b>36</b>	<b>5.84</b>	<b>1,000</b>	<b>71.9/59.5</b>	<b>Dehum</b>
75/65.5	60	75	33,500	21,500	12,000	64	11.4	1,000	55/54.5	A/C
<b>75/65.5</b>	<b>60</b>	<b>75</b>	<b>11,900</b>	<b>2,400</b>	<b>9,500</b>	<b>20</b>	<b>8.96</b>	<b>1,000</b>	<b>74/62</b>	<b>Dehum</b>
75/68	70	75	35,600	19,100	16,500	54	15.6	1,000	57.7/57	A/C
<b>75/68</b>	<b>70</b>	<b>75</b>	<b>12,800</b>	<b>(1,100)</b>	<b>13,900</b>	<b>0</b>	<b>13.12</b>	<b>1,000</b>	<b>73/64</b>	<b>Dehum</b>
80/67	50	95	29,800	22,340	7,460	75	7.04	1,000	58.5/57.4	A/C
<b>80/67</b>	<b>50</b>	<b>95</b>	<b>4,350</b>	<b>(2,260)</b>	<b>6,610</b>	<b>0</b>	<b>6.24</b>	<b>1,000</b>	<b>82/66</b>	<b>Dehum</b>

Values shown in ( ) are BTUH of heating available at these conditions.

Latent BTU = Lbs/Hr water \* 1060

Sensible BTU = Total - Latent

**TABLE 22  
APPLICATION DATA FOR WG36\*DA**

Indoor Conditions		Outdoor Ambient	System Capacity				Pounds Water Lbs/Hr	Airflow CFM	Approx. Supply Air DB/WB	Mode
DB/WB	% RH	DB	Total BTU	Sensible BTU	Latent BTU	S/T %				
65/63	90	65	39,100	18,200	20,900	46	19.72	1,100	51/50.5	A/C
<b>65/63</b>	<b>90</b>	<b>65</b>	<b>16,480</b>	<b>(4,320)</b>	<b>20,800</b>	<b>0</b>	<b>19.64</b>	<b>1,100</b>	<b>68.7/58.5</b>	<b>Dehum</b>
75/62.5	50	75	36,400	27,630	8,770	76	8.28	1,100	52.7/51	A/C
<b>75/62.5</b>	<b>50</b>	<b>75</b>	<b>10,270</b>	<b>2,470</b>	<b>7,800</b>	<b>24</b>	<b>7.36</b>	<b>1,100</b>	<b>73/59.5</b>	<b>Dehum</b>
75/65.5	60	75	39,000	24,800	14,200	64	13.36	1,100	55/54	A/C
<b>75/65.5</b>	<b>60</b>	<b>75</b>	<b>11,900</b>	<b>0</b>	<b>11,900</b>	<b>0</b>	<b>11.24</b>	<b>1,100</b>	<b>75/62</b>	<b>Dehum</b>
75/68	70	75	40,780	21,220	19,560	52	18.345	1,100	57.4/56.6	A/C
<b>75/68</b>	<b>70</b>	<b>75</b>	<b>13,080</b>	<b>(2,310)</b>	<b>15,690</b>	<b>0</b>	<b>14.52</b>	<b>1,100</b>	<b>73.8/64</b>	<b>Dehum</b>
80/67	50	95	35,000	25,800	9,200	74	8.68	1,100	59/57	A/C
<b>80/67</b>	<b>50</b>	<b>95</b>	<b>5,425</b>	<b>(3,575)</b>	<b>9,000</b>	<b>0</b>	<b>8.46</b>	<b>1,100</b>	<b>83/66</b>	<b>Dehum</b>

Values shown in ( ) are BTUH of heating available at these conditions.  
 Latent BTU = Lbs/Hr water \* 1060  
 Sensible BTU = Total - Latent

**TABLE 23  
APPLICATION DATA FOR WG42\*DA**

Indoor Conditions		Outdoor Ambient	System Capacity				Pounds Water Lbs/Hr	Airflow CFM	Approx. Supply Air DB/WB	Mode
DB/WB	% RH	DB	Total BTU	Sensible BTU	Latent BTU	S/T %				
65/63	90	65	47,000	21,200	25,800	45	24.4	1300	50.8/50.2	A/C
<b>65/63</b>	<b>90</b>	<b>65</b>	<b>18,000</b>	<b>(6,400)</b>	<b>24,400</b>	<b>0</b>	<b>23</b>	<b>1,300</b>	<b>69.5/58.2</b>	<b>Dehum</b>
75/62.5	50	75	43,700	33,100	10,600	76	10.06	1,300	51.8/50.7	A/C
<b>75/62.5</b>	<b>50</b>	<b>75</b>	<b>12,500</b>	<b>4,000</b>	<b>8,500</b>	<b>32</b>	<b>8</b>	<b>1,300</b>	<b>72.3/59.1</b>	<b>Dehum</b>
75/65.5	60	75	47,200	29,200	18,000	62	17.04	1,300	54.6/53.6	A/C
<b>75/65.5</b>	<b>60</b>	<b>75</b>	<b>16,600</b>	<b>600</b>	<b>16,000</b>	<b>3.6</b>	<b>15.1</b>	<b>1,300</b>	<b>74.8/61.3</b>	<b>Dehum</b>
75/68	70	75	49,700	27,000	22,700	54	21.4	1,300	56.9/55.9	A/C
<b>75/68</b>	<b>70</b>	<b>75</b>	<b>19,550</b>	<b>(2,850)</b>	<b>22,400</b>	<b>0</b>	<b>21.1</b>	<b>1,300</b>	<b>77/63.5</b>	<b>Dehum</b>
80/67	50	95	42,000	31,600	10,400	75	9.9	1,300	58/57	A/C
<b>80/67</b>	<b>50</b>	<b>95</b>	<b>7,860</b>	<b>(2,640)</b>	<b>10,500</b>	<b>0</b>	<b>9.96</b>	<b>1,300</b>	<b>81.7/65.5</b>	<b>Dehum</b>

Values shown in ( ) are BTUH of heating available at these conditions.  
 Latent BTU = Lbs/Hr water \* 1060  
 Sensible BTU = Total - Latent

**TABLE 24  
APPLICATION DATA FOR WG48\*DA**

Indoor Conditions		Outdoor Ambient	System Capacity				Pounds Water Lbs/Hr	Airflow CFM	Approx. Supply Air DB/WB	Mode
DB/WB	% RH	DB	Total BTU	Sensible BTU	Latent BTU	S/T %				
65/63	90	65	51,400	22,900	28,500	44	26.9	1,550	52.5/51.7	A/C
<b>65/63</b>	<b>90</b>	<b>65</b>	<b>22,300</b>	<b>(4,500)</b>	<b>26,800</b>	<b>0</b>	<b>25.3</b>	<b>1,550</b>	<b>68.7/58.4</b>	<b>Dehum</b>
75/62.5	50	75	46,200	36,200	10,000	78	9.48	1,550	52.8/51.7	A/C
<b>75/62.5</b>	<b>50</b>	<b>75</b>	<b>15,700</b>	<b>7,200</b>	<b>8,500</b>	<b>45</b>	<b>8.1</b>	<b>1,550</b>	<b>71.3/59.2</b>	<b>Dehum</b>
75/65.5	60	75	51,400	34,000	17,400	66	16.4	1,550	55.7/54.7	A/C
<b>75/65.5</b>	<b>60</b>	<b>75</b>	<b>19,000</b>	<b>3,300</b>	<b>15,700</b>	<b>17</b>	<b>14.9</b>	<b>1,550</b>	<b>73.8/61.8</b>	<b>Dehum</b>
75/68	70	75	54,500	30,600	23,900	56	22.5	1,550	58/57	A/C
<b>75/68</b>	<b>70</b>	<b>75</b>	<b>19,000</b>	<b>(2,100)</b>	<b>21,100</b>	<b>0</b>	<b>19.9</b>	<b>1,550</b>	<b>76.1/64</b>	<b>Dehum</b>
80/67	50	95	47,000	36,200	10,800	77	10.2	1,550	59.2/57.6	A/C
<b>80/67</b>	<b>50</b>	<b>95</b>	<b>7,050</b>	<b>(1,000)</b>	<b>8,050</b>	<b>0</b>	<b>7.6</b>	<b>1,550</b>	<b>80.7/65.7</b>	<b>Dehum</b>

Values shown in ( ) are BTUH of heating available at these conditions.

Latent BTU = Lbs/Hr water \* 1060

Sensible BTU = Total - Latent

**TABLE 25  
APPLICATION DATA FOR WG60\*DA**

Indoor Conditions		Outdoor Ambient	System Capacity				Pounds Water Lbs/Hr	Airflow CFM	Approx. Supply Air DB/WB	Mode
DB/WB	% RH	DB	Total BTU	Sensible BTU	Latent BTU	S/T %				
65/63	90	65	64,000	28,600	35,400	45	33.4	1,650	50/49.4	A/C
<b>65/63</b>	<b>90</b>	<b>65</b>	<b>26,700</b>	<b>(8,300)</b>	<b>35,000</b>	<b>0</b>	<b>33.1</b>	<b>1,650</b>	<b>70.2/57.8</b>	<b>Dehum</b>
75/62.5	50	75	61,400	44,800	16,600	73	15.7	1,650	50.6/49.4	A/C
<b>75/62.5</b>	<b>50</b>	<b>75</b>	<b>20,800</b>	<b>4,900</b>	<b>15,900</b>	<b>23.5</b>	<b>15</b>	<b>1,650</b>	<b>72.6/58.5</b>	<b>Dehum</b>
75/65.5	60	75	65,200	39,900	25,300	61	23.9	1,650	53.5/52.4	A/C
<b>75/65.5</b>	<b>60</b>	<b>75</b>	<b>23,900</b>	<b>(500)</b>	<b>24,400</b>	<b>0</b>	<b>23</b>	<b>1,650</b>	<b>75/61.2</b>	<b>Dehum</b>
75/68	70	75	68,500	36,100	32,400	53	30.6	1650	56.9/54.9	A/C
<b>75/68</b>	<b>70</b>	<b>75</b>	<b>27,300</b>	<b>(4,000)</b>	<b>31,300</b>	<b>0</b>	<b>29.5</b>	<b>1,650</b>	<b>77.7/63.3</b>	<b>Dehum</b>
80/67	50	95	60,000	42,200	17,800	70	16.8	1,650	56.6/55.2	A/C
<b>80/67</b>	<b>50</b>	<b>95</b>	<b>11,300</b>	<b>(4,700)</b>	<b>16,000</b>	<b>0</b>	<b>15.1</b>	<b>1,650</b>	<b>81.5/64.6</b>	<b>Dehum</b>

Values shown in ( ) are BTUH of heating available at these conditions.


Latent BTU = Lbs/Hr water \* 1060

Sensible BTU = Total - Latent

# INDEX

## WIRING DIAGRAMS and LADDER DIAGRAMS

Unit Model No.	Basic Wiring Diagram	Manual Page No.	Basic Ladder Diagram	Manual Page No.
WG242DA	4085-136B	59	4085-137B	60
WG242DB	4085-236B	61	4085-237B	62
WG243DC	4085-351B	63	4085-352B	64
WG302DA	4085-133F	65	4085-125D	66
WG302DB	4085-233G	67	4085-225D	68
WG303DC	4085-353A	69	4085-354B	70
WG362DA	4085-139B	71	4085-137B	60
WG362DB	4085-239B	72	4085-237B	62
WG363DC	4085-355A	73	4085-360B	74
WG423DA	4085-128G	75	4085-129D	76
WG423DB	4085-228G	77	4085-229D	78
WG424DC	4085-356A	79	4085-357B	80
WG482DA	4085-124F	81	4085-125D	66
WG482DB	4085-222G	82	4085-225D	68
WG483DC	4085-358A	83	4085-359B	84
WG602DA	4085-124F	81	4085-125D	66
WG602DB	4085-222G	82	4085-225D	68
WG603DC	4085-358A	83	4085-359B	84

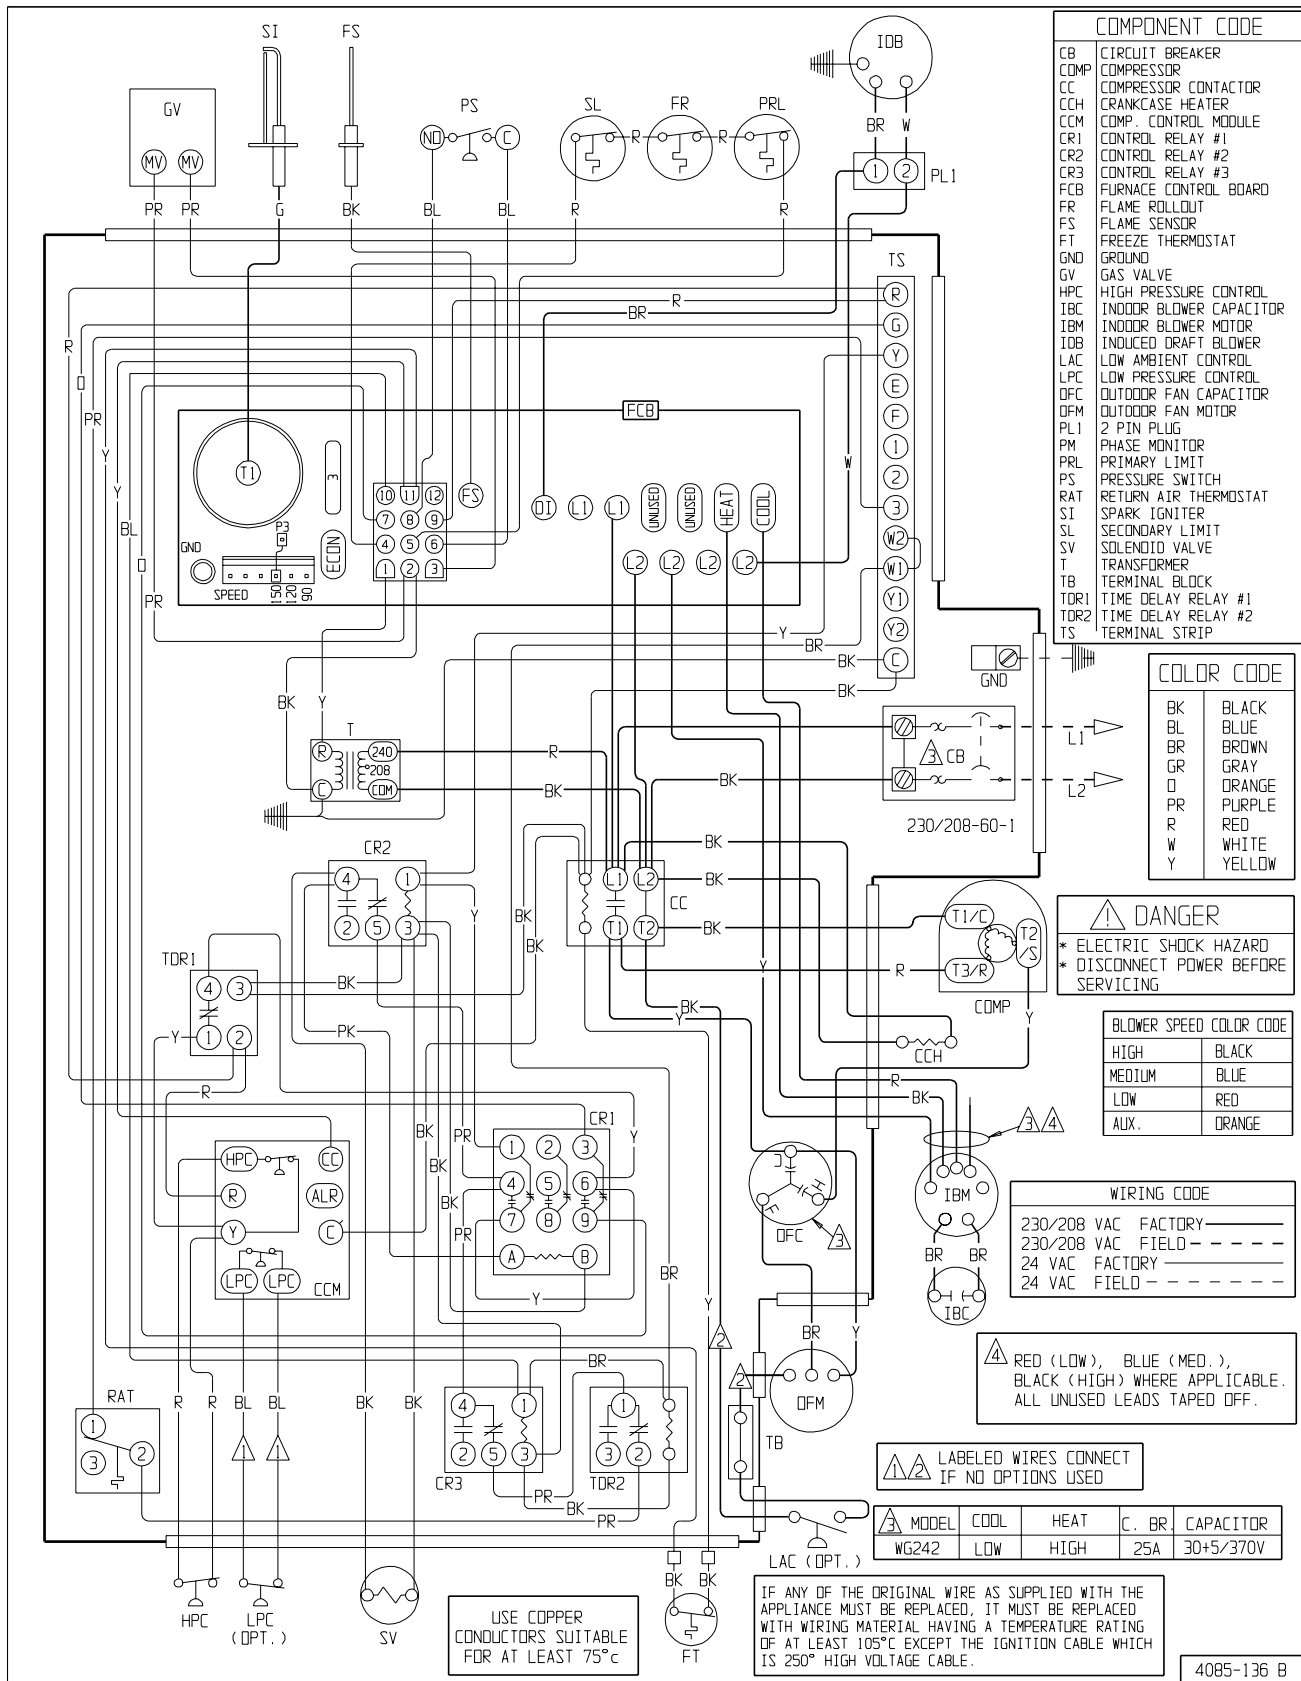

COMPONENT CODE	
CB	CIRCUIT BREAKER
COMP	COMPRESSOR
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CCM	COMP. CONTROL MODULE
CR1	CONTROL RELAY #1
CR2	CONTROL RELAY #2
CR3	CONTROL RELAY #3
FCB	FURNACE CONTROL BOARD
FR	FLAME ROLLOUT
FS	FLAME SENSOR
FT	FREEZE THERMOSTAT
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBC	INDOOR BLOWER CAPACITOR
IBM	INDOOR BLOWER MOTOR
IDB	INDUCED DRAFT BLOWER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
DFC	OUTDOOR FAN CAPACITOR
DFM	OUTDOOR FAN MOTOR
PL1	2 PIN PLUG
PM	PHASE MONITOR
PRL	PRIMARY LIMIT
PS	PRESSURE SWITCH
RAT	RETURN AIR THERMOSTAT
SI	SPARK IGNITER
SL	SECONDARY LIMIT
SV	SOLENOID VALVE
T	TRANSFORMER
TB	TERMINAL BLOCK
TDR1	TIME DELAY RELAY #1
TDR2	TIME DELAY RELAY #2
TS	TERMINAL STRIP

COLOR CODE	
BK	BLACK
BL	BLUE
BR	BROWN
GR	GRAY
O	ORANGE
PR	PURPLE
R	RED
W	WHITE
Y	YELLOW

**⚠ DANGER**  
 \* ELECTRIC SHOCK HAZARD  
 \* DISCONNECT POWER BEFORE SERVICING

BLOWER SPEED COLOR CODE	
HIGH	BLACK
MEDIUM	BLUE
LOW	RED
AUX.	ORANGE

WIRING CODE	
230/208 VAC	FACTORY _____
230/208 VAC	FIELD - - - - -
24 VAC	FACTORY _____
24 VAC	FIELD - - - - -

⚠ RED (LOW), BLUE (MED.), BLACK (HIGH) WHERE APPLICABLE. ALL UNUSED LEADS TAPED OFF.

⚠ Labeled wires connect if no options used


MODEL	COOL	HEAT	C. BR	CAPACITOR
WG242	LOW	HIGH	25A	30+5/370V

USE COPPER CONDUCTORS SUITABLE FOR AT LEAST 75°C


IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C EXCEPT THE IGNITION CABLE WHICH IS 250° HIGH VOLTAGE CABLE.

4085-136 B



**WG242DA 230/208-60-1**

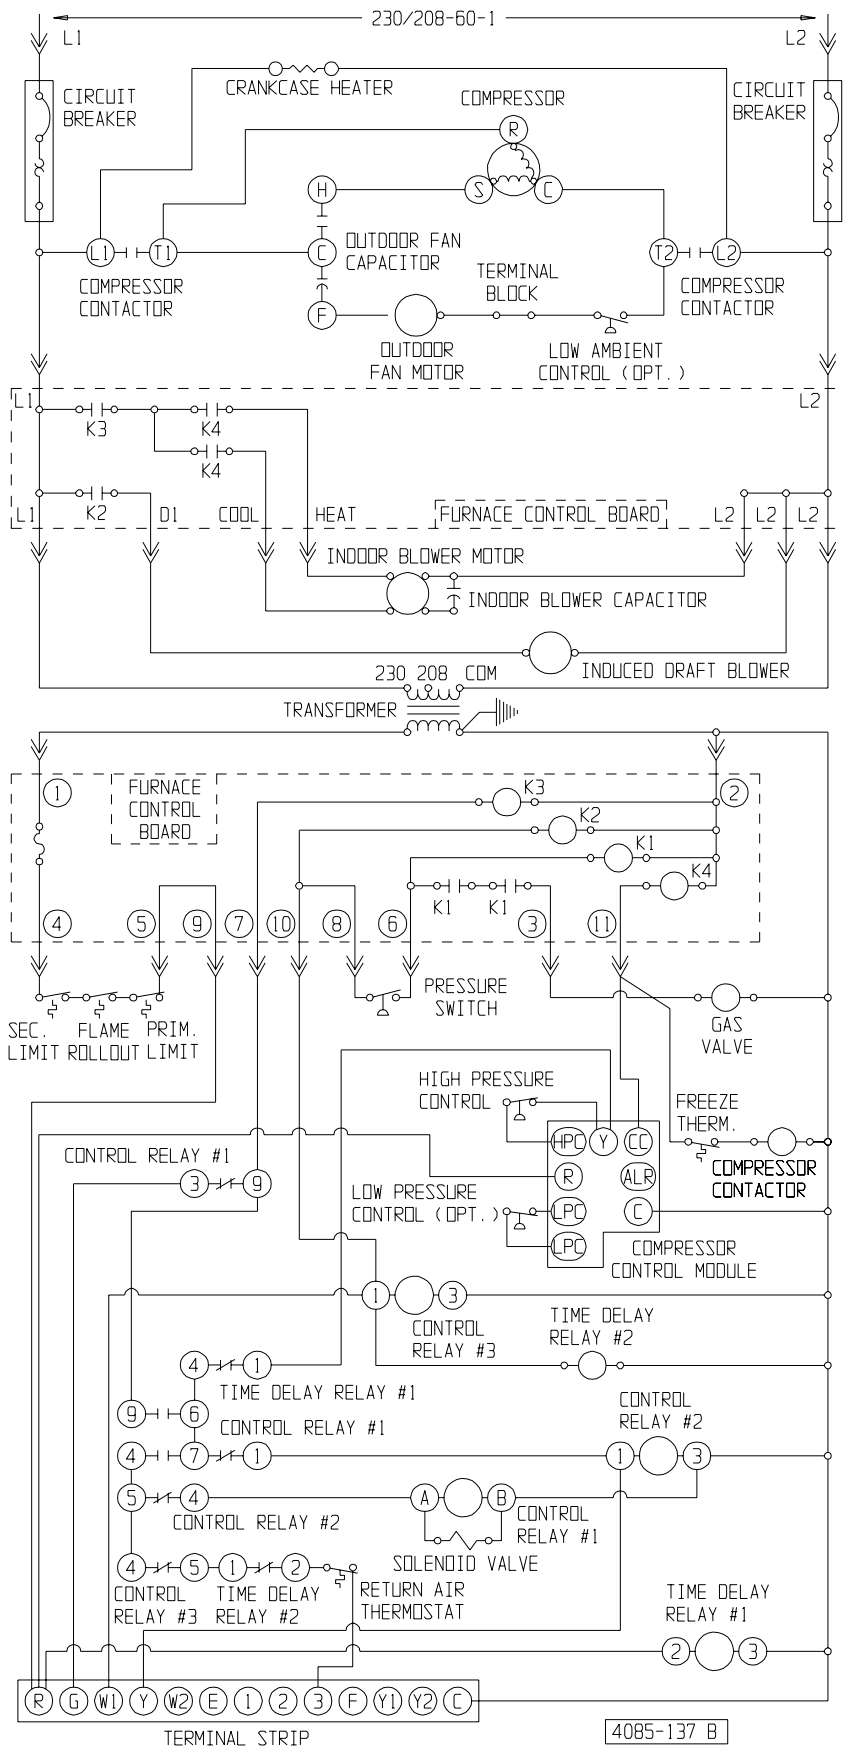


**WG242DA, WG362DA 230/208-60-1**

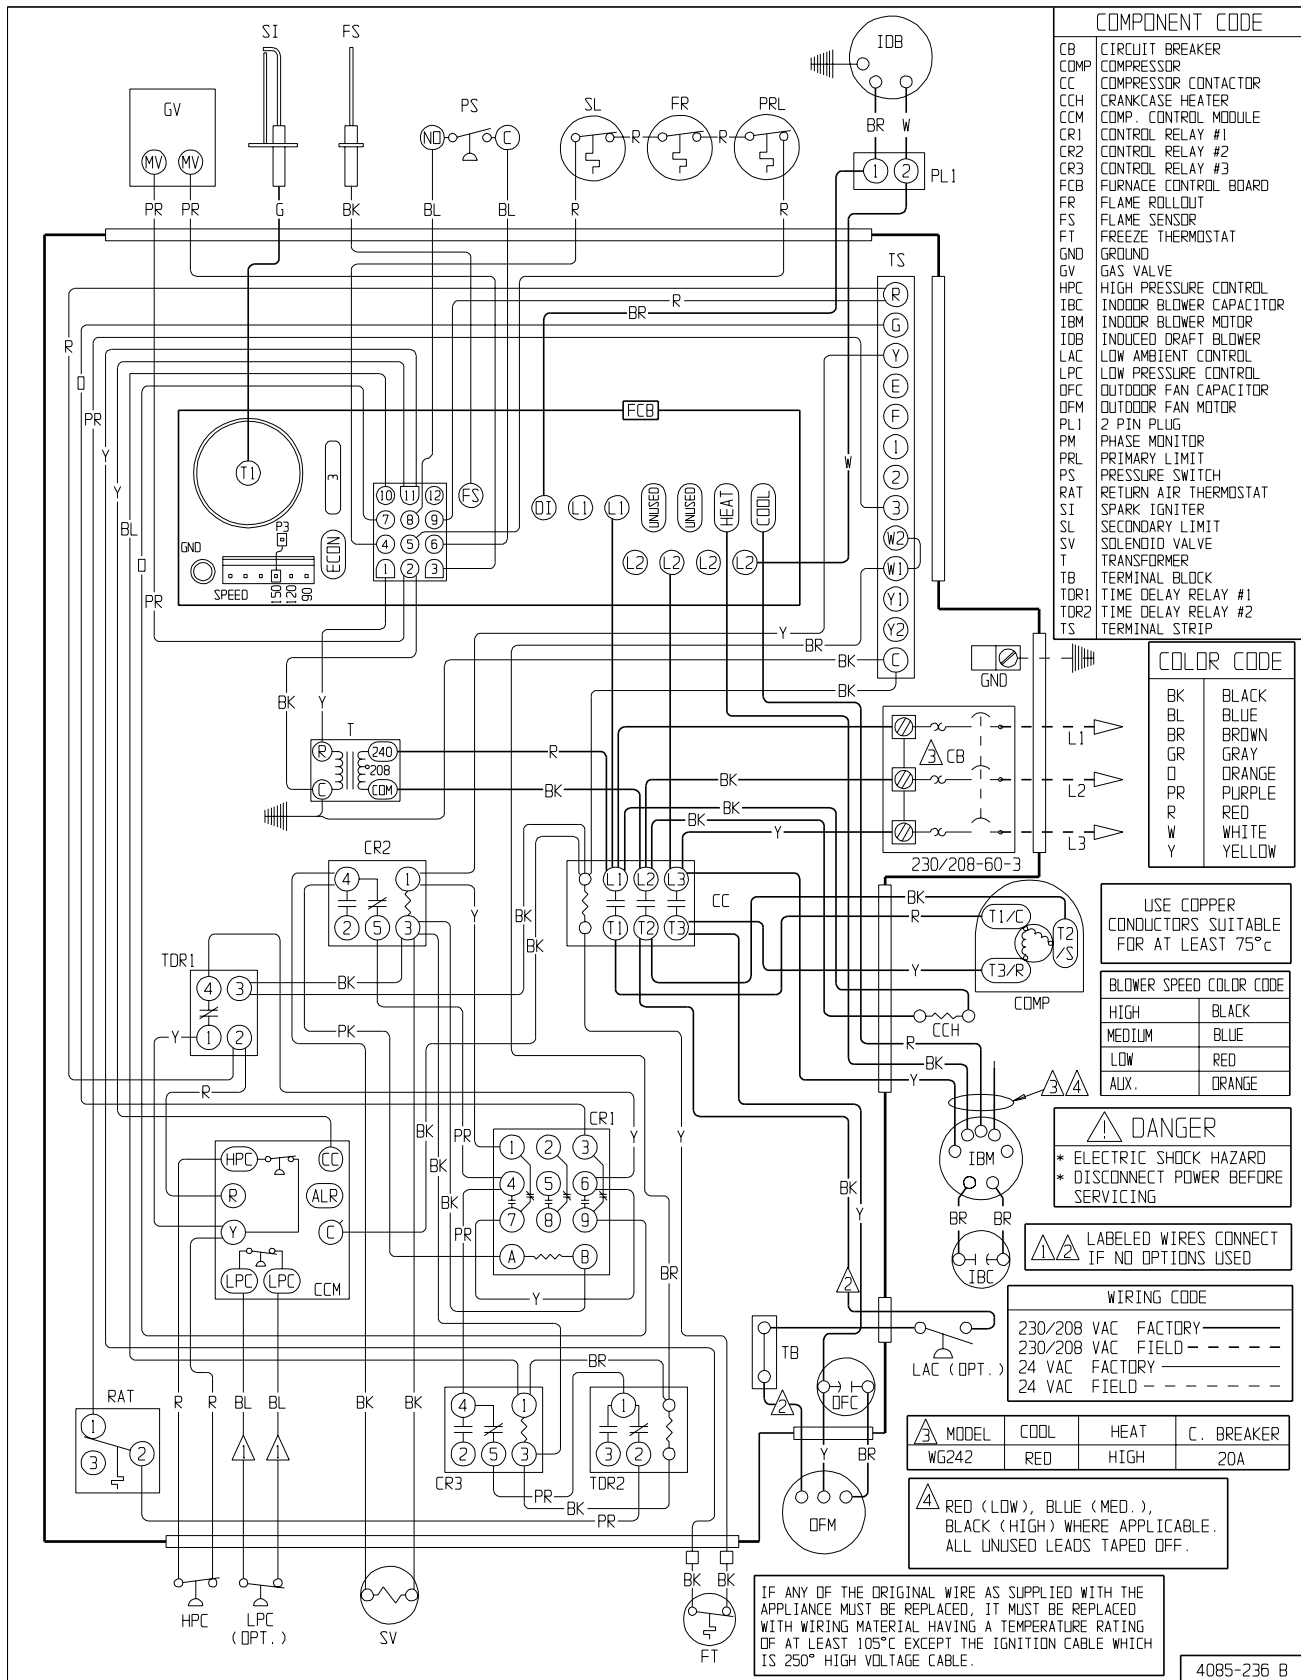


**WG242DB 230/208-60-3**

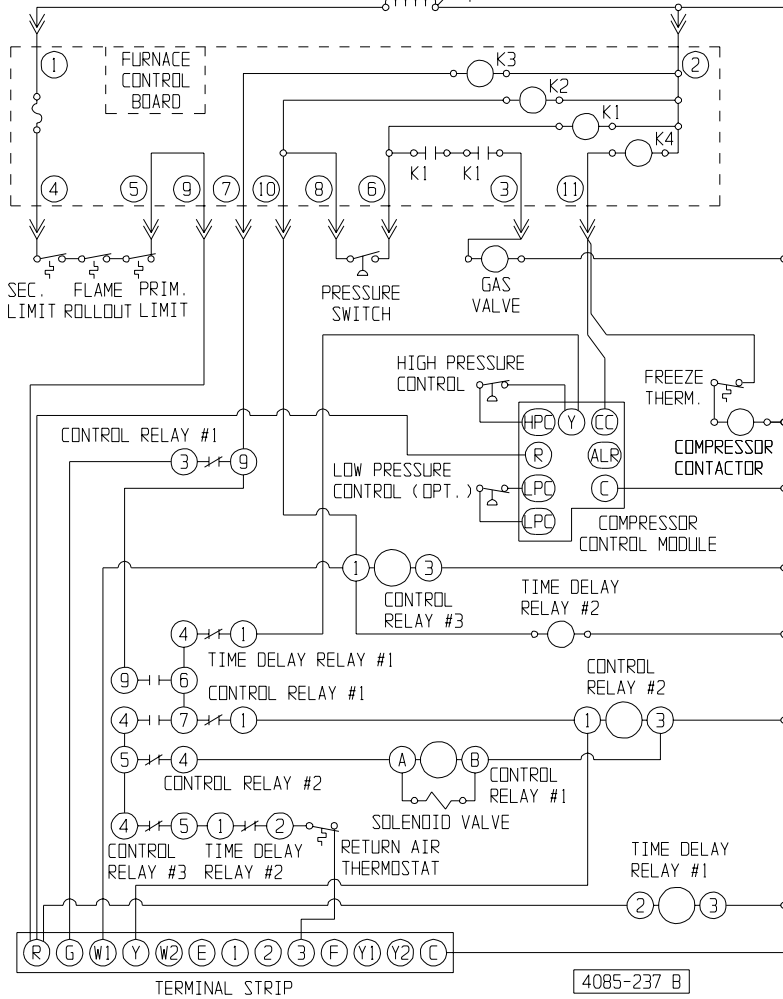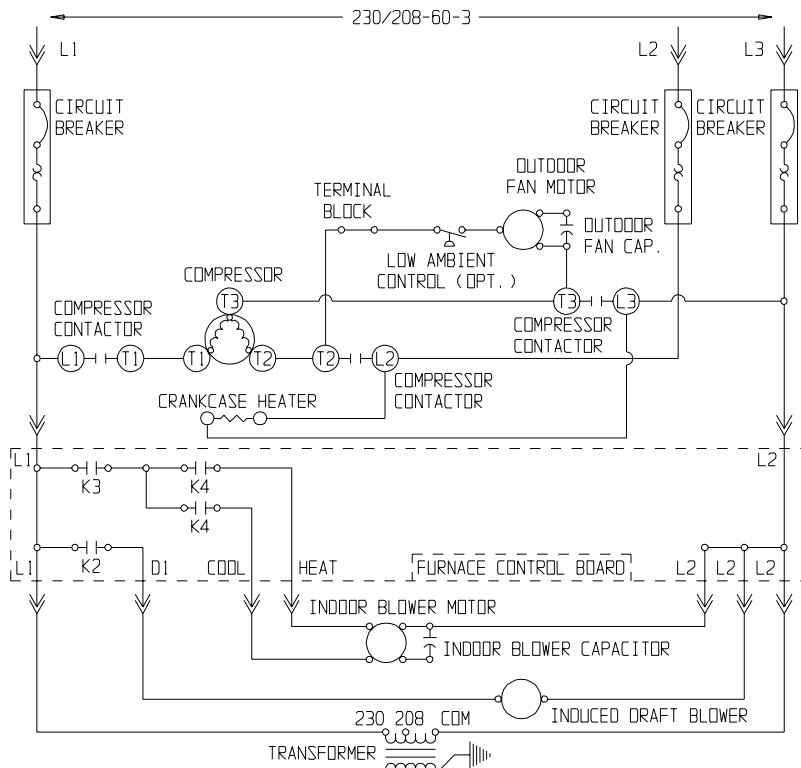


**WG242DB, WG362DB 230/208-60-3**

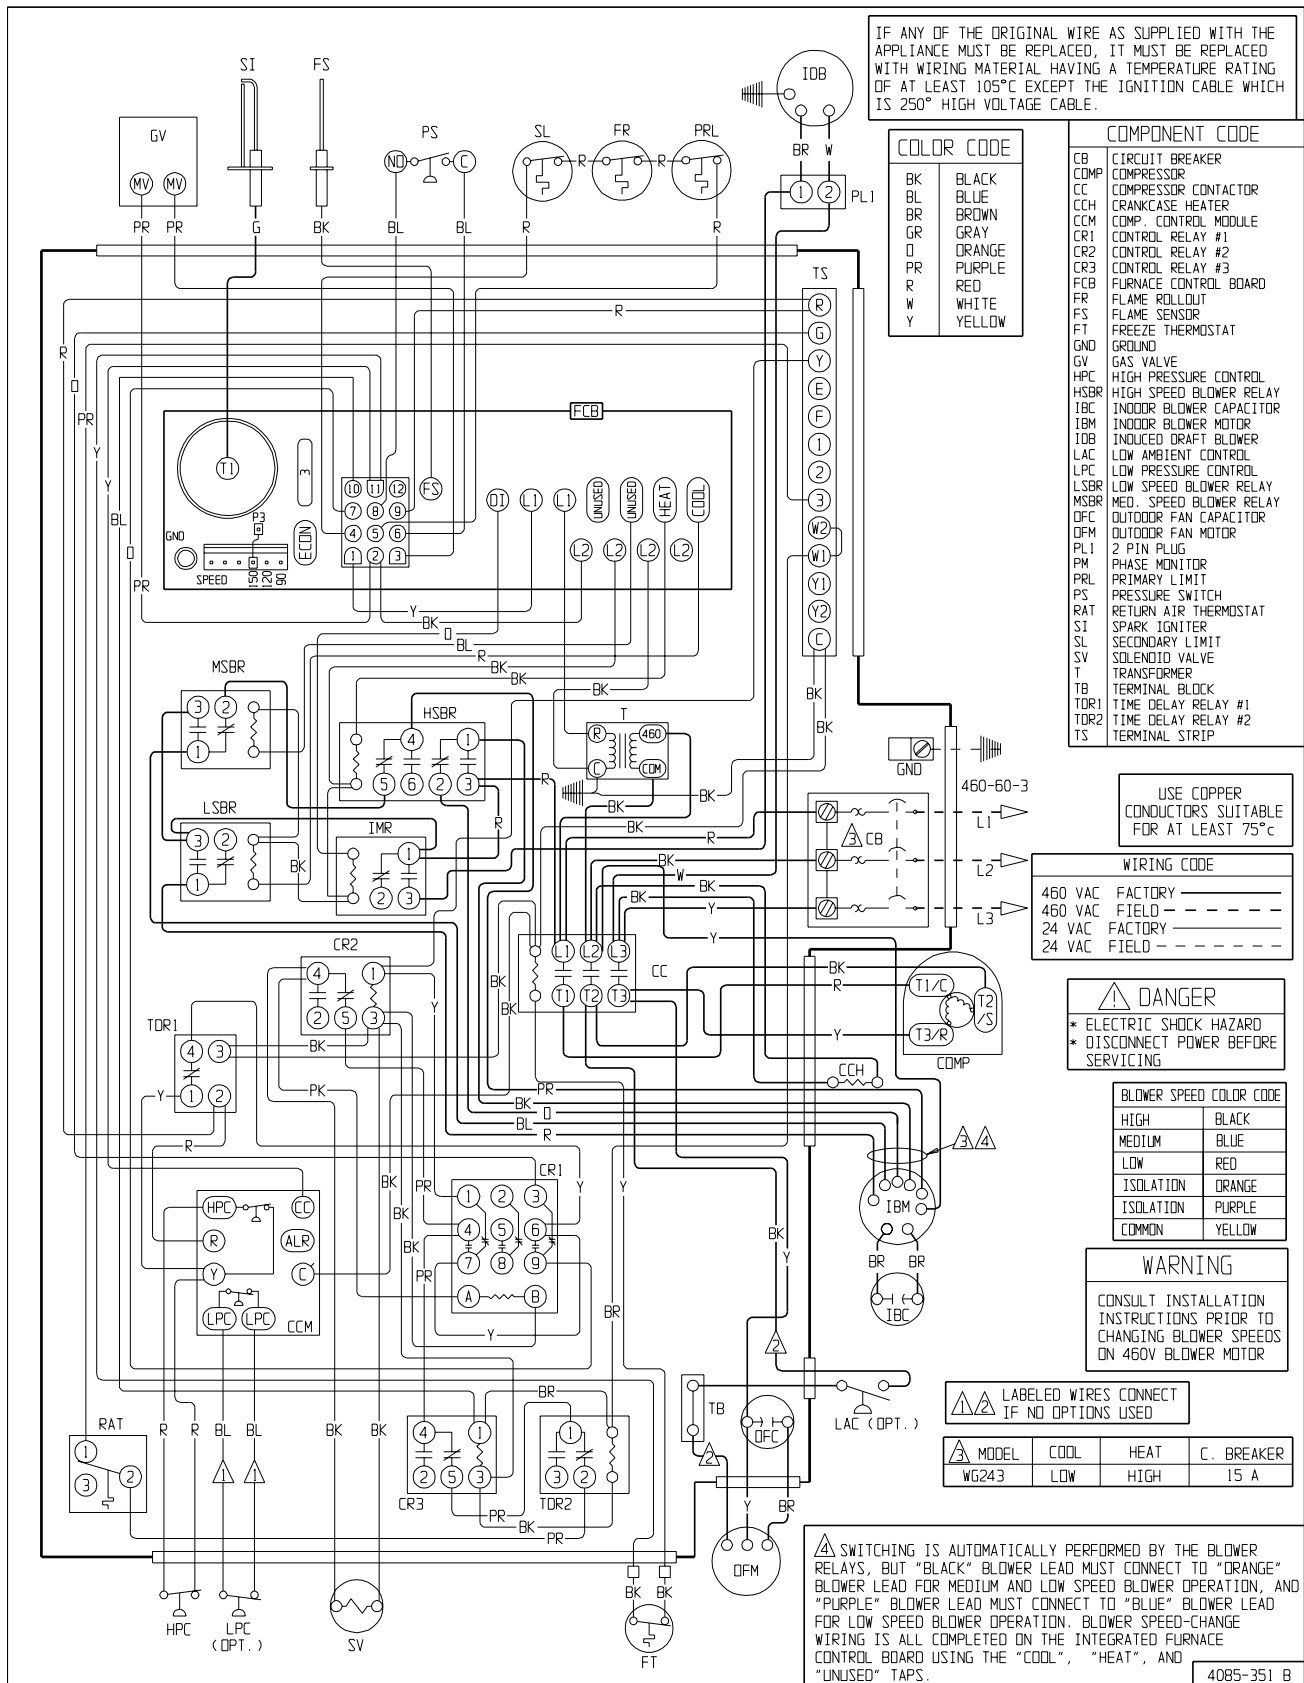


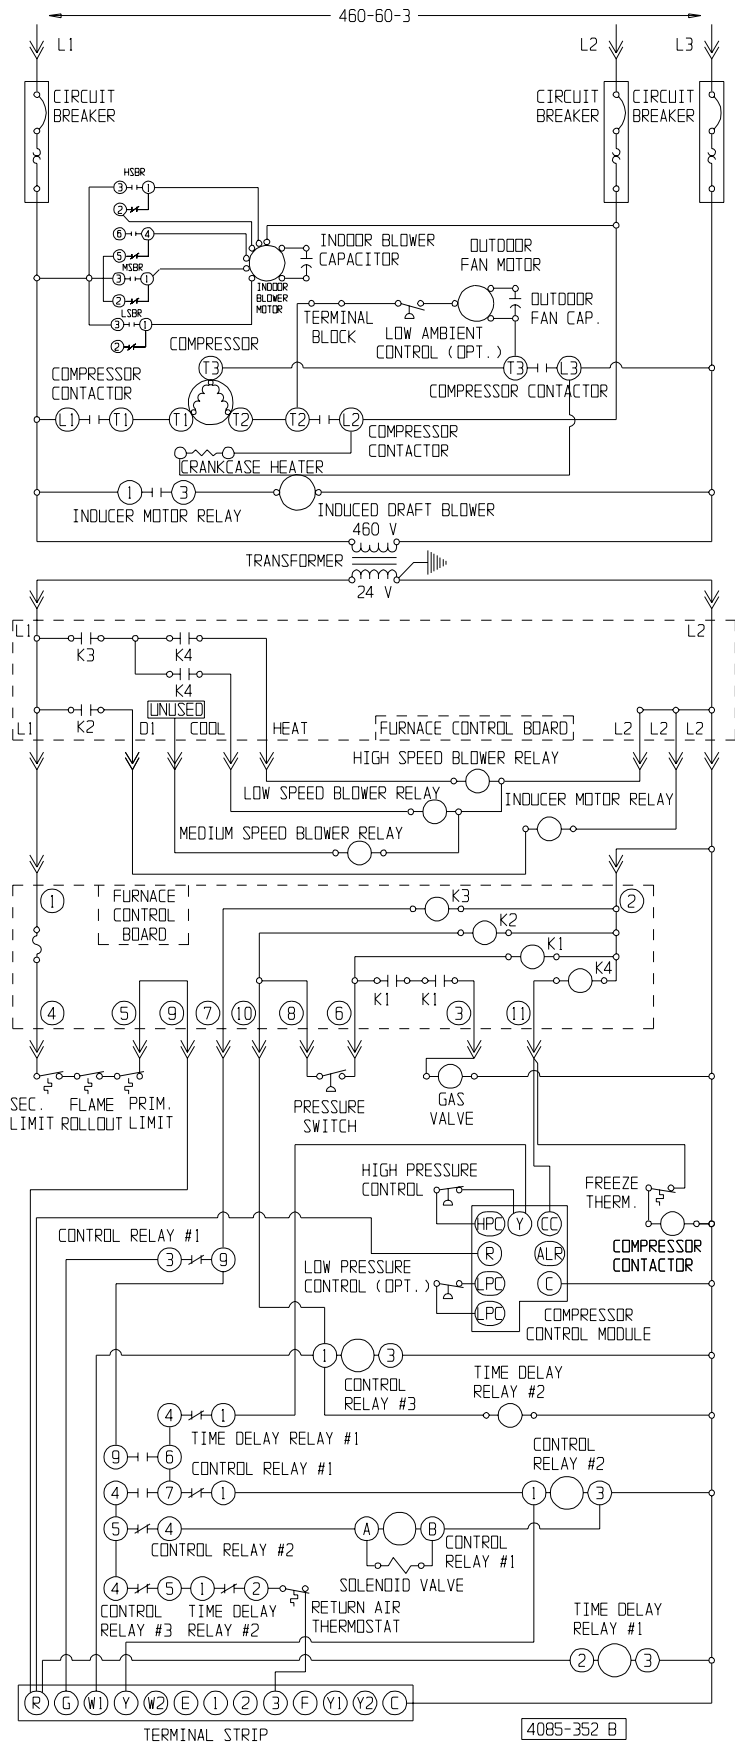


**WG243DC 460-60-3**

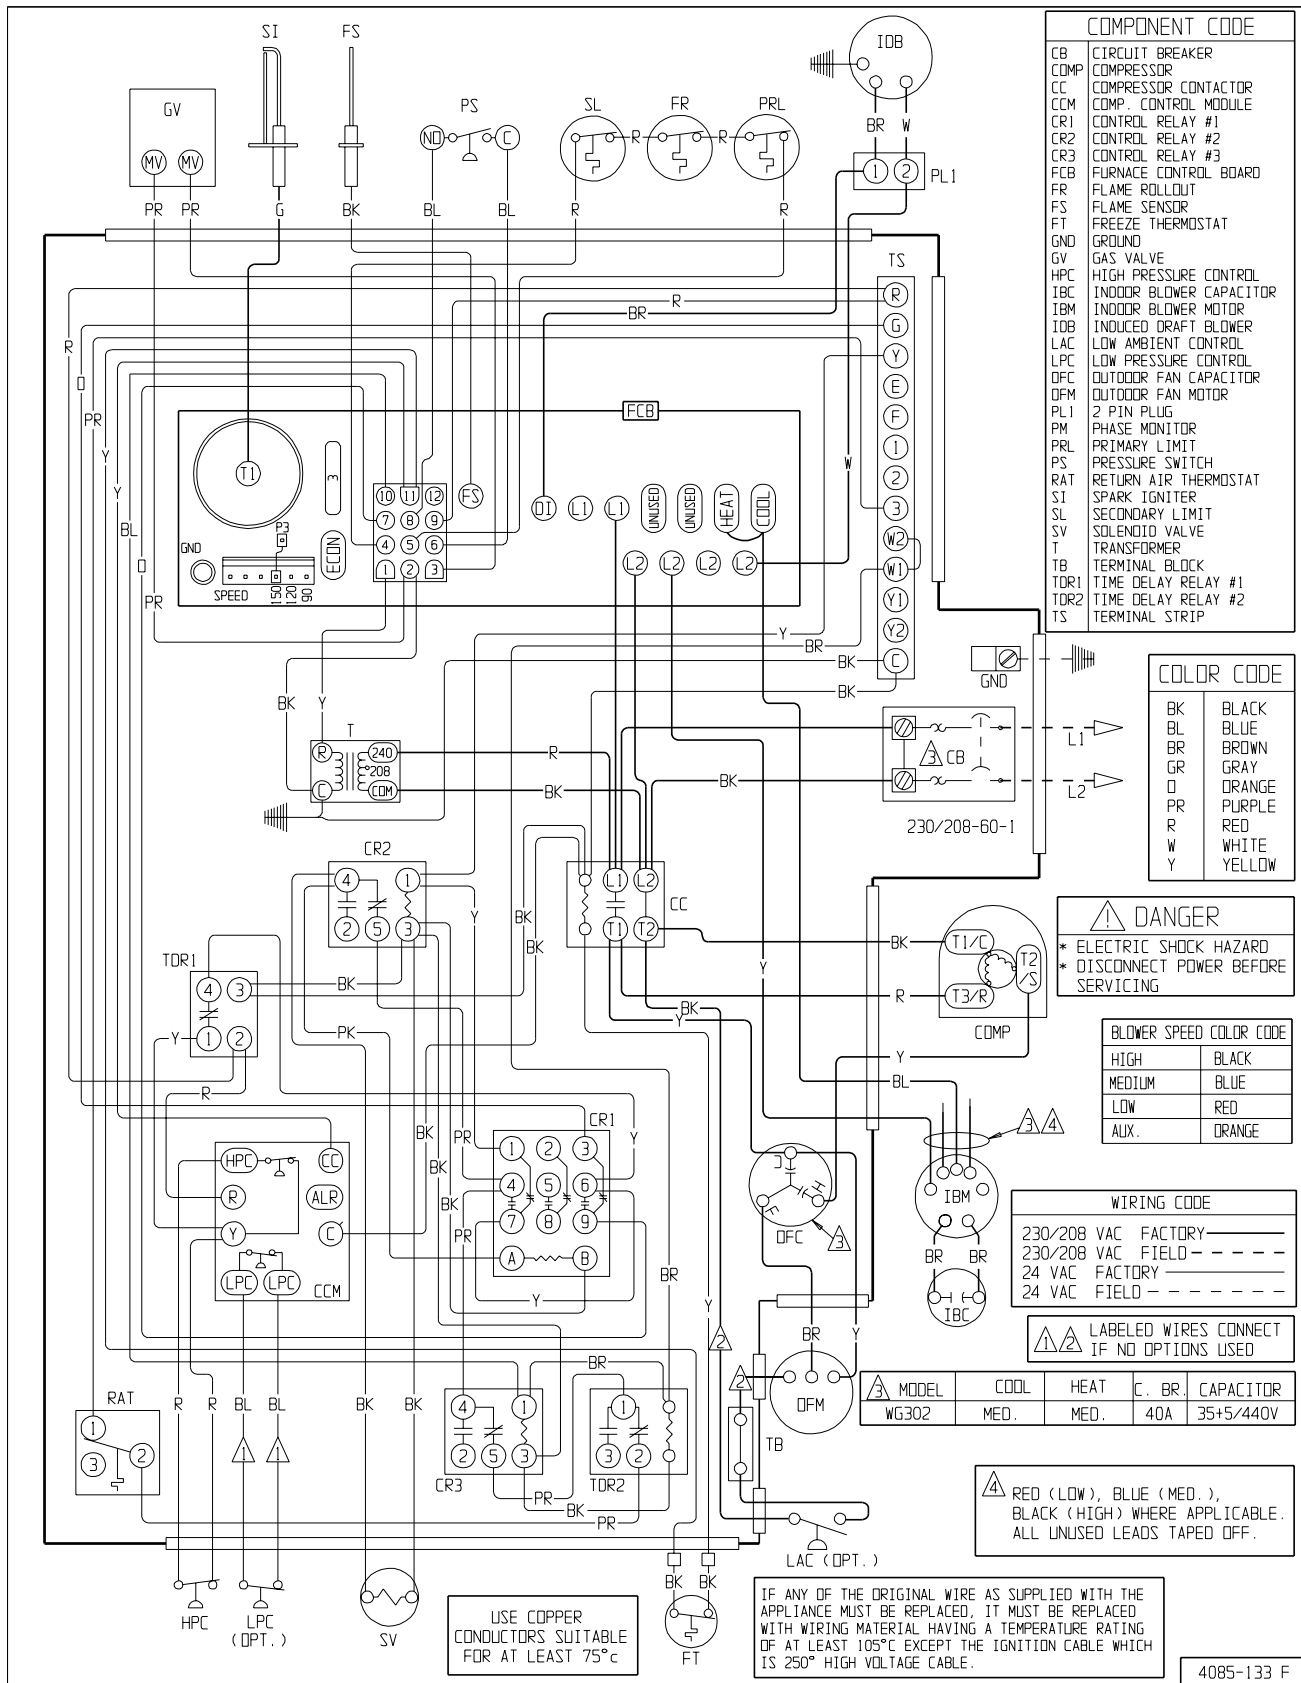

**WG302DA 230/208-60-1**

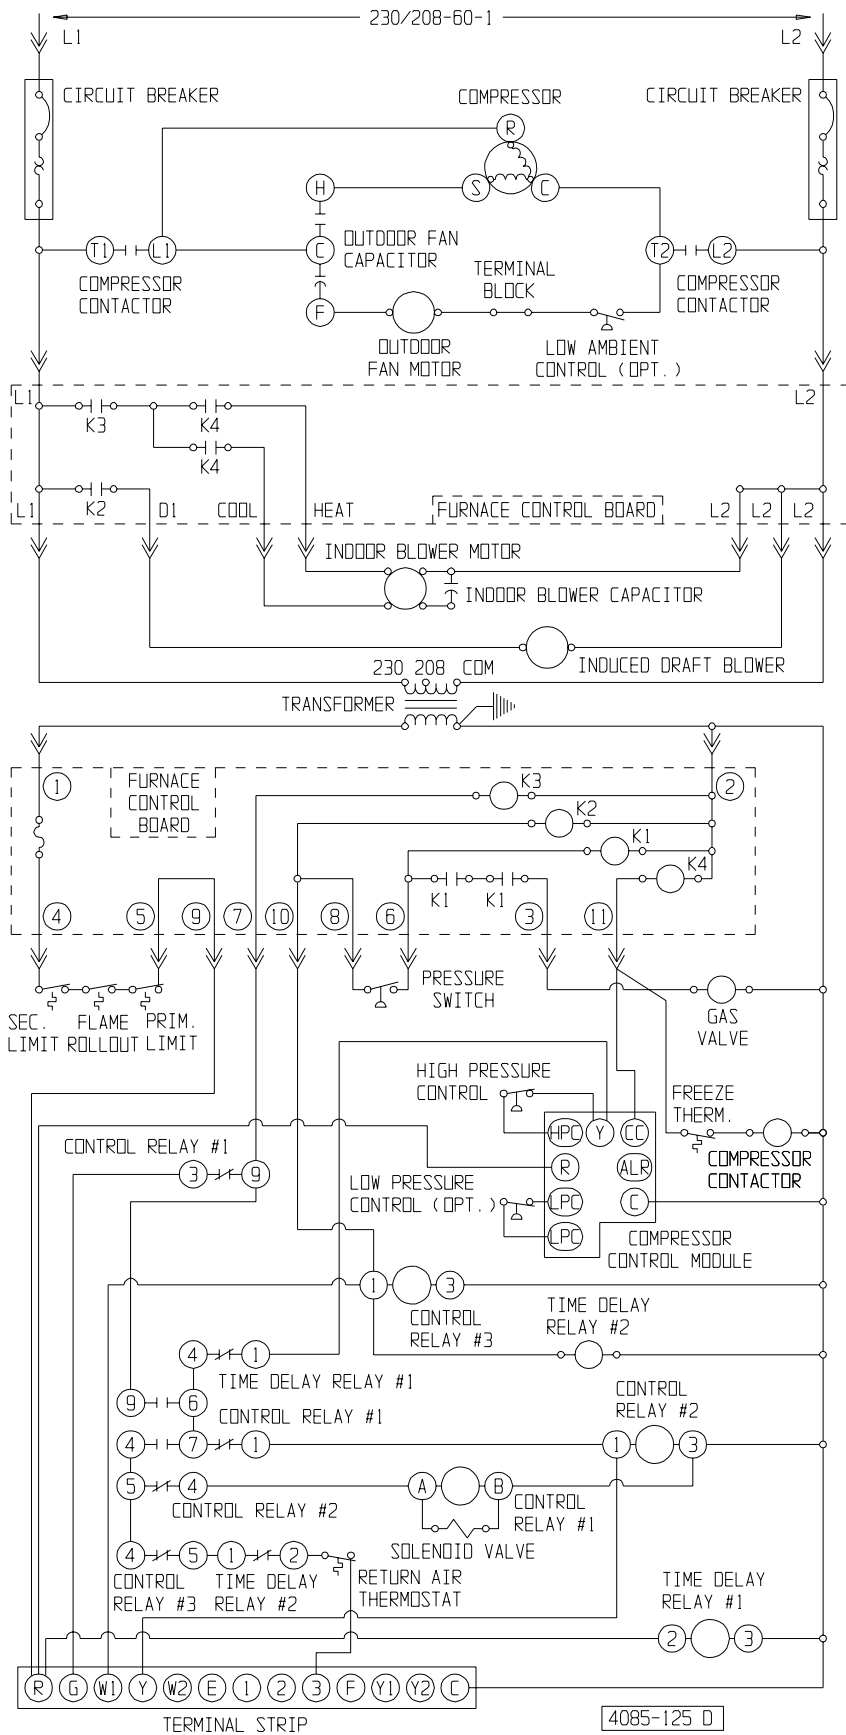

**WG302DA, WG482DA, WG602DA 230/208-60-1**

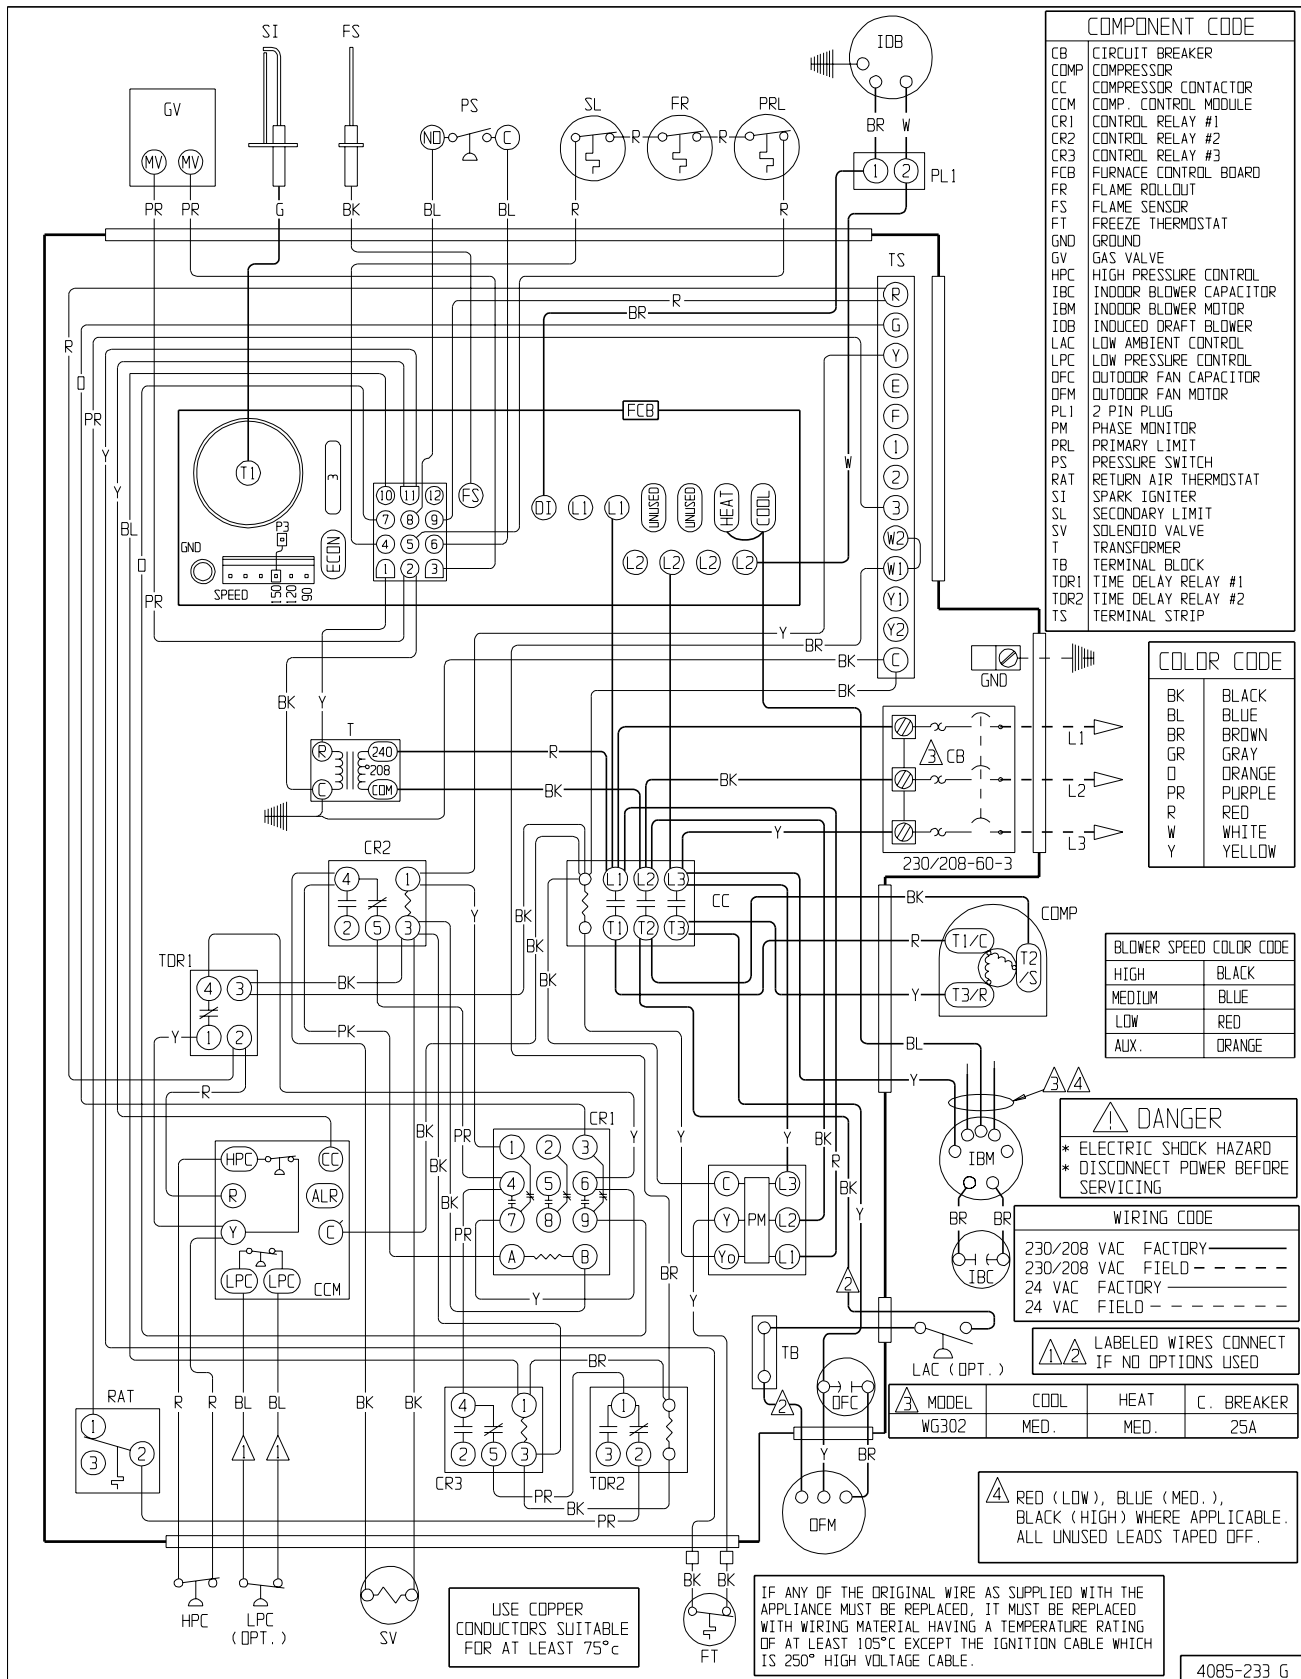

**COMPONENT CODE**

CB	CIRCUIT BREAKER
COMP	COMPRESSOR
CC	COMP. CONTROL CONTACTOR
CCM	COMP. CONTROL MODULE
CR1	CONTROL RELAY #1
CR2	CONTROL RELAY #2
CR3	CONTROL RELAY #3
FCB	FURNACE CONTROL BOARD
FR	FLAME ROLLOUT
FS	FLAME SENSOR
FT	FREEZE THERMOSTAT
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBC	INDOOR BLOWER CAPACITOR
IBM	INDOOR BLOWER MOTOR
IOB	INDUCED DRAFT BLOWER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
DFC	OUTDOOR FAN CAPACITOR
DFM	OUTDOOR FAN MOTOR
PL1	2 PIN PLUG
PM	PHASE MONITOR
PRL	PRIMARY LIMIT
PS	PRESSURE SWITCH
RAT	RETURN AIR THERMOSTAT
SI	SPARK IGNITER
SL	SECONDARY LIMIT
SV	SOLENOID VALVE
T	TRANSFORMER
TB	TERMINAL BLOCK
TDR1	TIME DELAY RELAY #1
TDR2	TIME DELAY RELAY #2
TS	TERMINAL STRIP

**COLOR CODE**

BK	BLACK
BL	BLUE
BR	BROWN
GR	GRAY
O	ORANGE
PR	PURPLE
R	RED
W	WHITE
Y	YELLOW

**BLOWER SPEED COLOR CODE**

HIGH	BLACK
MEDIUM	BLUE
LOW	RED
AUX.	ORANGE

**⚠ DANGER**  
 \* ELECTRIC SHOCK HAZARD  
 \* DISCONNECT POWER BEFORE SERVICING

**WIRING CODE**

230/208 VAC	FACTORY	————
230/208 VAC	FIELD	-----
24 VAC	FACTORY	————
24 VAC	FIELD	-----

**⚠ Labeled wires connect if no options used**


MODEL	COOL	HEAT	C. BREAKER
WG302	MED.	MED.	25A

**⚠ RED (LOW), BLUE (MED.), BLACK (HIGH) WHERE APPLICABLE. ALL UNUSED LEADS TAPED OFF.**


USE COPPER CONDUCTORS SUITABLE FOR AT LEAST 75°C

IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C EXCEPT THE IGNITION CABLE WHICH IS 250° HIGH VOLTAGE CABLE.

4085-233 G

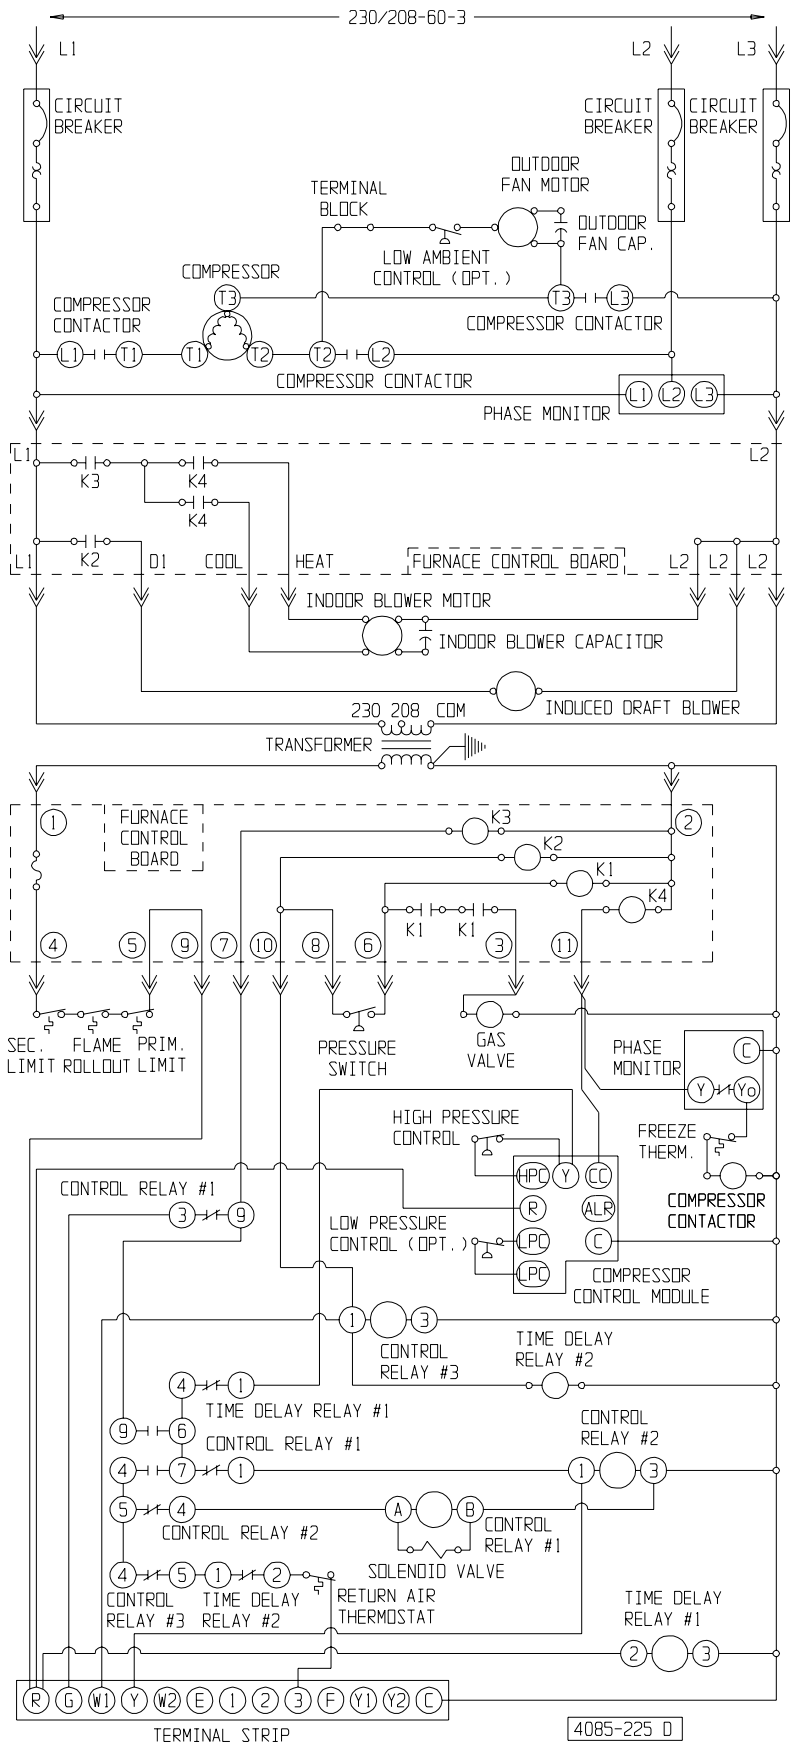

**WG302DB, WG482DB, WG602DB 230/208-60-3**

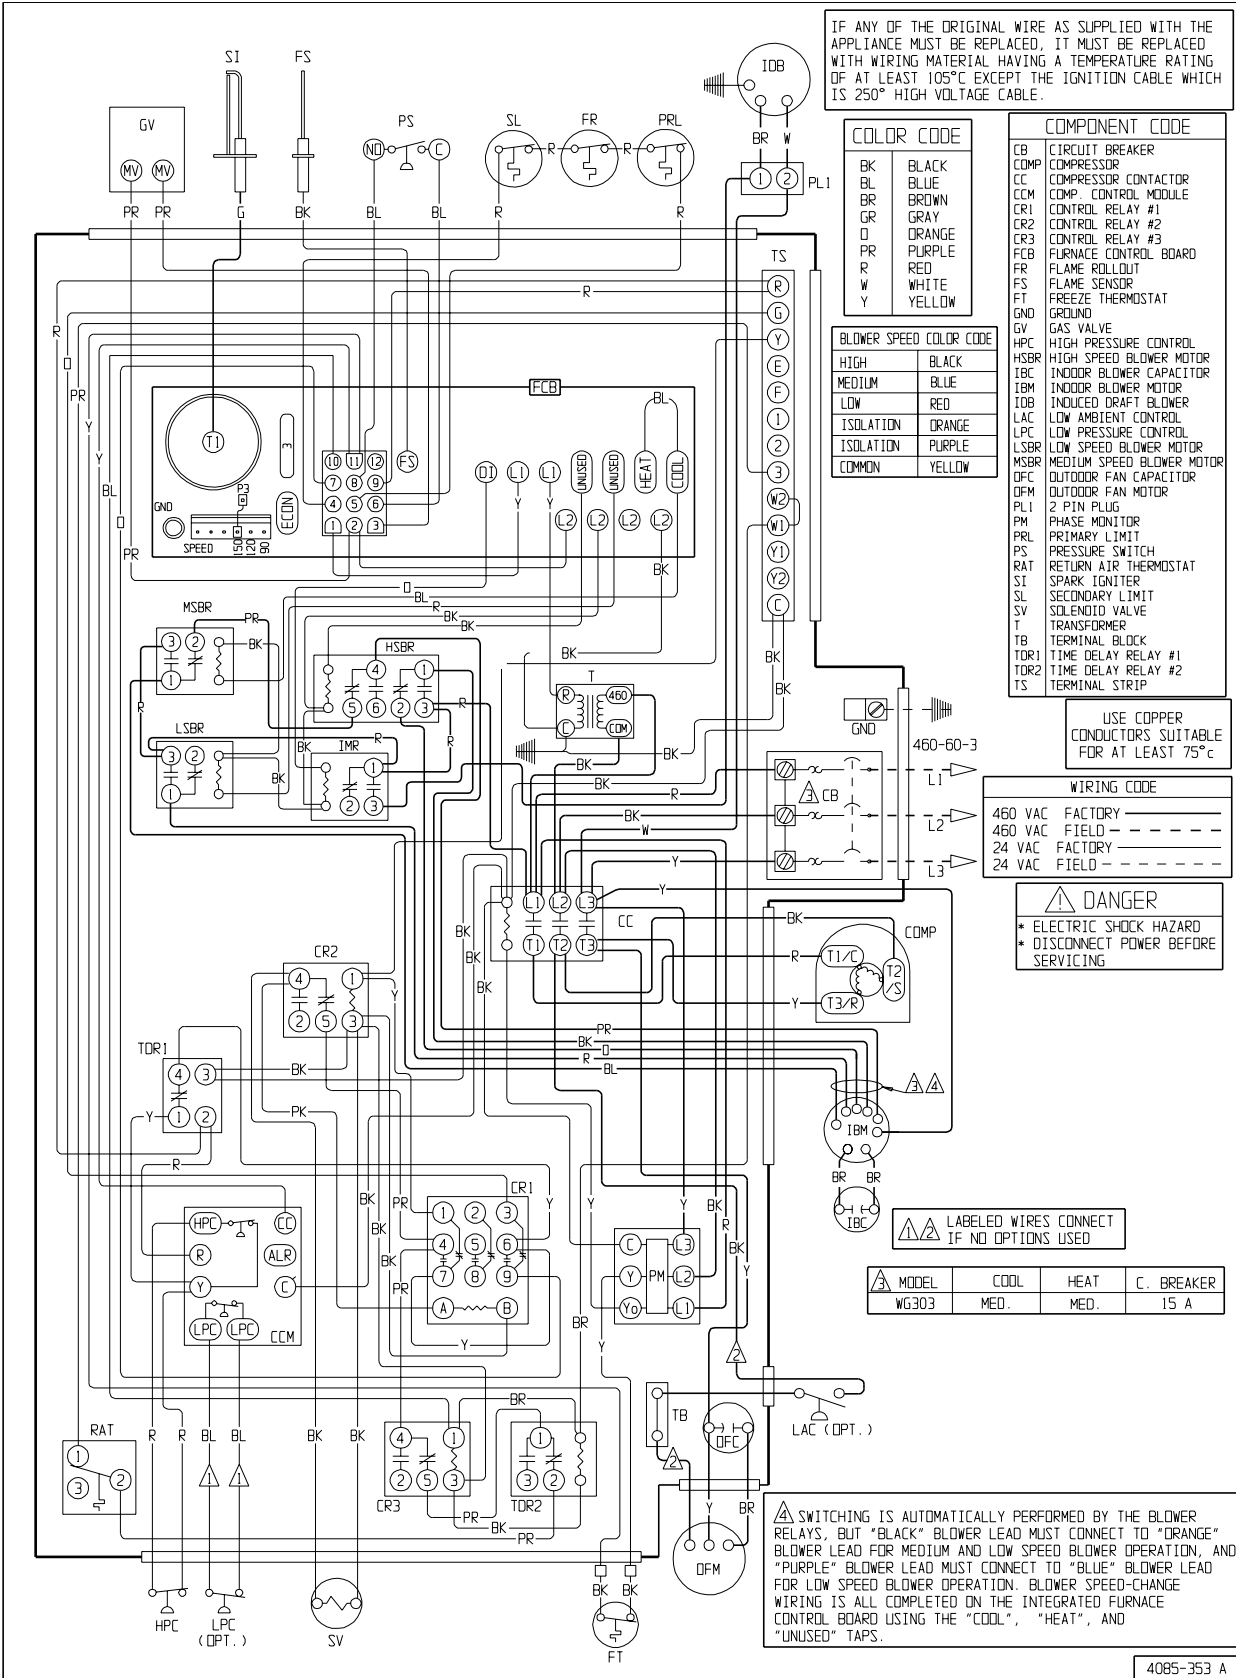

IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C EXCEPT THE IGNITION CABLE WHICH IS 250° HIGH VOLTAGE CABLE.

**COLOR CODE**

BK	BLACK
BL	BLUE
BR	BROWN
GR	GRAY
O	ORANGE
PR	PURPLE
R	RED
W	WHITE
Y	YELLOW

**COMPONENT CODE**

CB	CIRCUIT BREAKER
COMP	COMPRESSOR
CC	COMPRESSOR CONTACTOR
CCM	COMP. CONTROL MODULE
CR1	CONTROL RELAY #1
CR2	CONTROL RELAY #2
CR3	CONTROL RELAY #3
FCB	FURNACE CONTROL BOARD
FR	FLAME ROLLOUT
FS	FLAME SENSOR
FT	FREEZE THERMOSTAT
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
HSBR	HIGH SPEED BLOWER MOTOR
IBC	INDOOR BLOWER CAPACITOR
IBM	INDOOR BLOWER MOTOR
IDB	INDUCED DRAFT BLOWER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
LSBR	LOW SPEED BLOWER MOTOR
MSBR	MEDIUM SPEED BLOWER MOTOR
DFC	OUTDOOR FAN CAPACITOR
DFM	OUTDOOR FAN MOTOR
PFI	2 PIN PLUG
PM	PHASE MONITOR
PRL	PRIMARY LIMIT
PS	PRESSURE SWITCH
RAT	RETURN AIR THERMOSTAT
SI	SPARK IGNITER
SL	SECONDARY LIMIT
SV	SOLENOID VALVE
T	TRANSFORMER
TB	TERMINAL BLOCK
TDR1	TIME DELAY RELAY #1
TDR2	TIME DELAY RELAY #2
TS	TERMINAL STRIP

**BLOWER SPEED COLOR CODE**

HIGH	BLACK
MEDIUM	BLUE
LOW	RED
ISOLATION	ORANGE
ISOLATION	PURPLE
COMMON	YELLOW

USE COPPER CONDUCTORS SUITABLE FOR AT LEAST 75°C

**WIRING CODE**

460 VAC	FACTORY	_____
460 VAC	FIELD	- - - - -
24 VAC	FACTORY	_____
24 VAC	FIELD	- - - - -

**⚠ DANGER**


- \* ELECTRIC SHOCK HAZARD
- \* DISCONNECT POWER BEFORE SERVICING

⚠ LABELED WIRES CONNECT IF NO OPTIONS USED


MODEL	COOL	HEAT	C. BREAKER
WG303	MED.	MED.	15 A

⚠ SWITCHING IS AUTOMATICALLY PERFORMED BY THE BLOWER RELAYS, BUT "BLACK" BLOWER LEAD MUST CONNECT TO "ORANGE" BLOWER LEAD FOR MEDIUM AND LOW SPEED BLOWER OPERATION, AND "PURPLE" BLOWER LEAD MUST CONNECT TO "BLUE" BLOWER LEAD FOR LOW SPEED BLOWER OPERATION. BLOWER SPEED-CHANGE WIRING IS ALL COMPLETED ON THE INTEGRATED FURNACE CONTROL BOARD USING THE "COOL", "HEAT", AND "UNUSED" TAPS.

4085-353 A

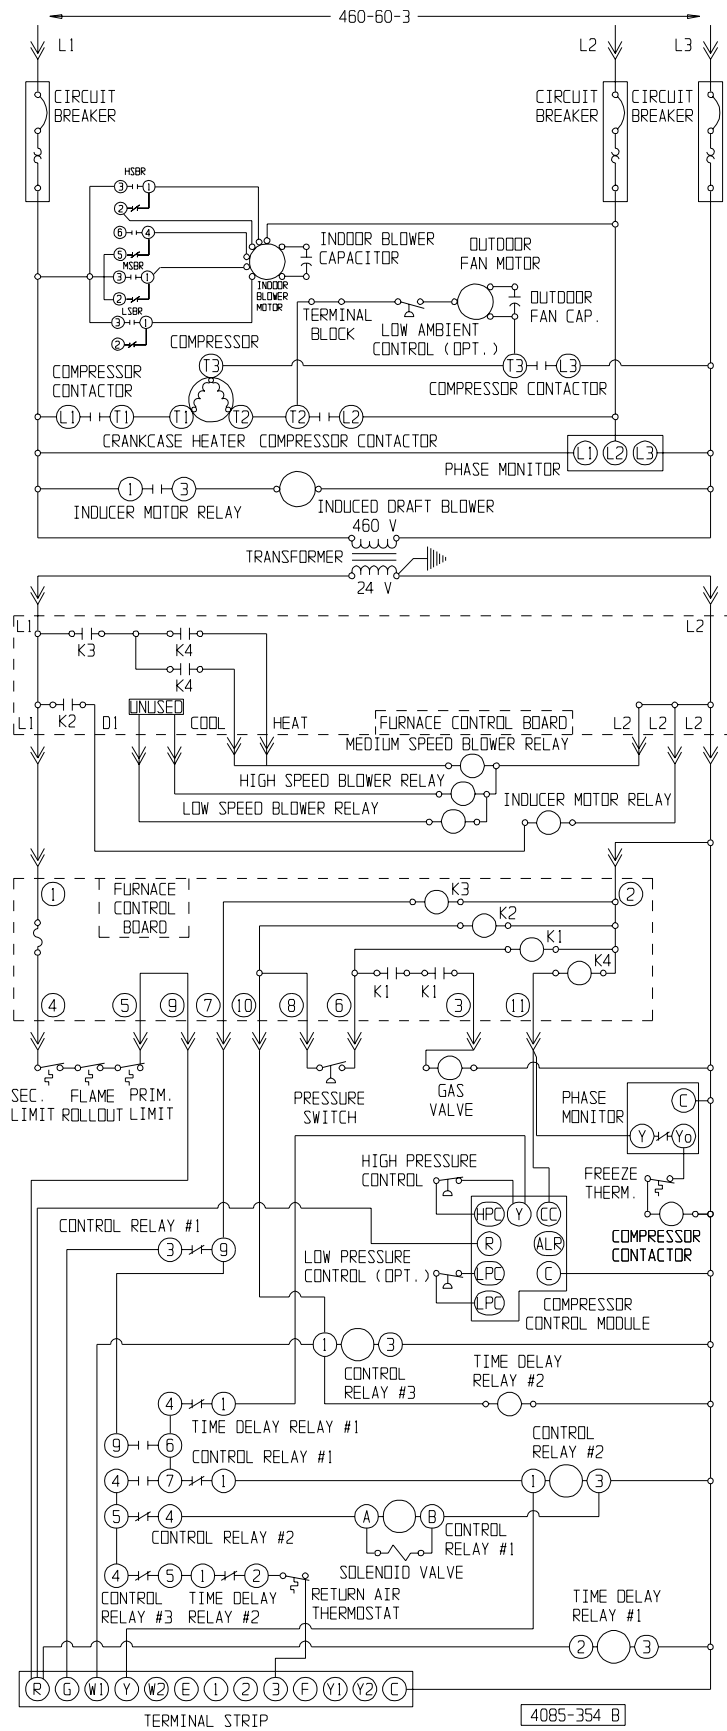

**WG303DC 460-60-3**

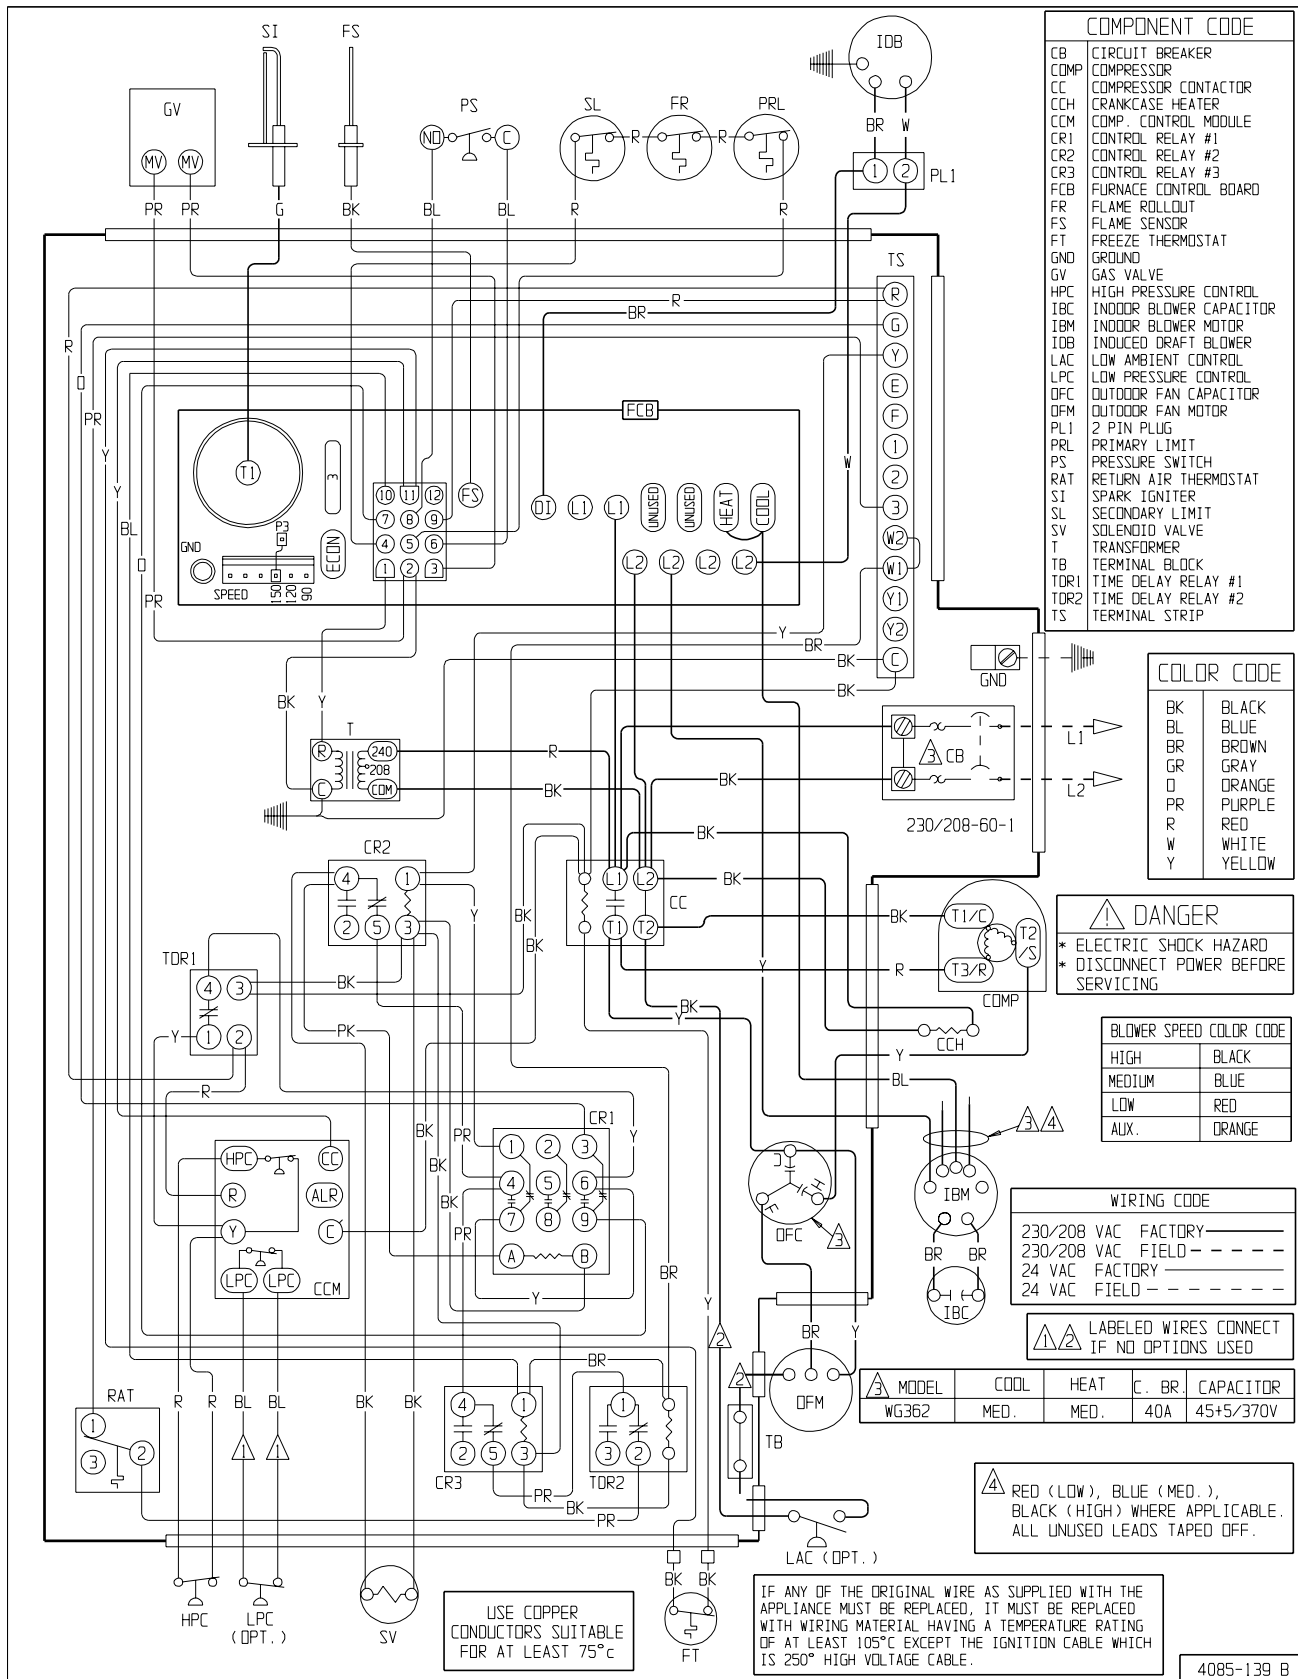

**COMPONENT CODE**

CB	CIRCUIT BREAKER
COMP	COMPRESSOR
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CCM	COMP. CONTROL MODULE
CR1	CONTROL RELAY #1
CR2	CONTROL RELAY #2
CR3	CONTROL RELAY #3
FCB	FURNACE CONTROL BOARD
FR	FLAME ROLLOUT
FS	FLAME SENSOR
FT	FREEZE THERMOSTAT
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBC	INDOOR BLOWER CAPACITOR
IBM	INDOOR BLOWER MOTOR
IDB	INDUCED DRAFT BLOWER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
DFC	OUTDOOR FAN CAPACITOR
DFM	OUTDOOR FAN MOTOR
PL1	2 PIN PLUG
PRL	PRIMARY LIMIT
PS	PRESSURE SWITCH
RAT	RETURN AIR THERMOSTAT
SI	SPARK IGNITER
SL	SECONDARY LIMIT
SV	SOLENOID VALVE
T	TRANSFORMER
TB	TERMINAL BLOCK
TDR1	TIME DELAY RELAY #1
TDR2	TIME DELAY RELAY #2
TS	TERMINAL STRIP

**COLOR CODE**

BK	BLACK
BL	BLUE
BR	BROWN
GR	GRAY
O	ORANGE
PR	PURPLE
R	RED
W	WHITE
Y	YELLOW

**⚠ DANGER**

- \* ELECTRIC SHOCK HAZARD
- \* DISCONNECT POWER BEFORE SERVICING

**BLOWER SPEED COLOR CODE**

HIGH	BLACK
MEDIUM	BLUE
LOW	RED
AUX.	ORANGE

**WIRING CODE**

230/208 VAC	FACTORY	_____
230/208 VAC	FIELD	-----
24 VAC	FACTORY	_____
24 VAC	FIELD	-----

⚠ Labeled wires connect if no options used


MODEL	COOL	HEAT	C. BR.	CAPACITOR
WG362	MED.	MED.	40A	45+5/370V

⚠ RED (LOW), BLUE (MED.), BLACK (HIGH) WHERE APPLICABLE. ALL UNUSED LEADS TAPED OFF.

USE COPPER CONDUCTORS SUITABLE FOR AT LEAST 75°C

IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C EXCEPT THE IGNITION CABLE WHICH IS 250° HIGH VOLTAGE CABLE.

4085-139 B

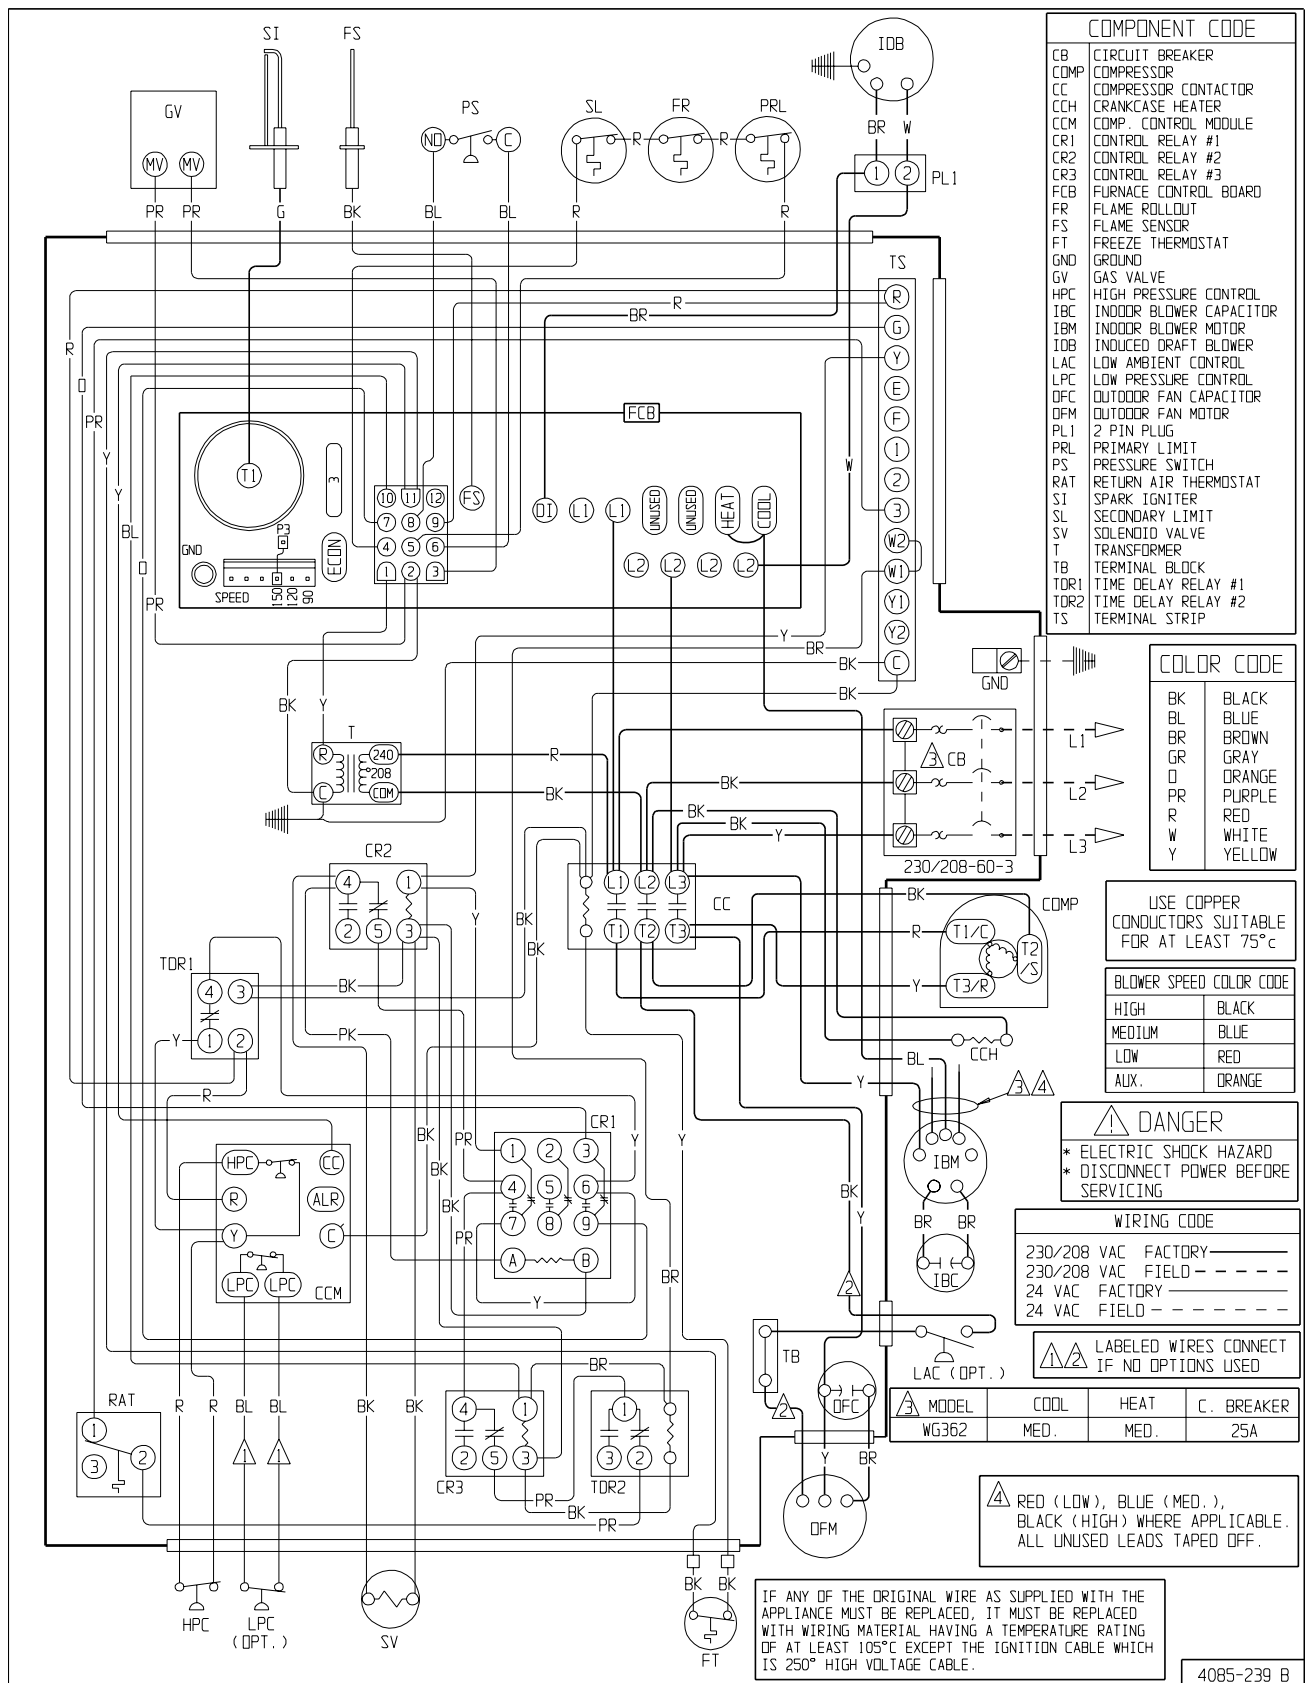

**COMPONENT CODE**

CB	CIRCUIT BREAKER
COMP	COMPRESSOR
CC	COMPRESSOR CONTACTOR
CCH	CRANKCASE HEATER
CCM	COMP. CONTROL MODULE
CR1	CONTROL RELAY #1
CR2	CONTROL RELAY #2
CR3	CONTROL RELAY #3
FCB	FURNACE CONTROL BOARD
FR	FLAME ROLLOUT
FS	FLAME SENSOR
FT	FREEZE THERMOSTAT
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBC	INDOOR BLOWER CAPACITOR
IBM	INDOOR BLOWER MOTOR
IDB	INDUCED DRAFT BLOWER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
DFC	OUTDOOR FAN CAPACITOR
DFM	OUTDOOR FAN MOTOR
PL1	2 PIN PLUG
PRL	PRIMARY LIMIT
PS	PRESSURE SWITCH
RAT	RETURN AIR THERMOSTAT
SI	SPARK IGNITER
SL	SECONDARY LIMIT
SV	SOLENOID VALVE
T	TRANSFORMER
TB	TERMINAL BLOCK
TDR1	TIME DELAY RELAY #1
TDR2	TIME DELAY RELAY #2
TS	TERMINAL STRIP

**COLOR CODE**

BK	BLACK
BL	BLUE
BR	BROWN
GR	GRAY
O	ORANGE
PR	PURPLE
R	RED
W	WHITE
Y	YELLOW

USE COPPER CONDUCTORS SUITABLE FOR AT LEAST 75°C

**BLOWER SPEED COLOR CODE**

HIGH	BLACK
MEDIUM	BLUE
LOW	RED
AUX.	ORANGE

**⚠ DANGER**  
 \* ELECTRIC SHOCK HAZARD  
 \* DISCONNECT POWER BEFORE SERVICING

**WIRING CODE**

230/208 VAC	FACTORY	—————
230/208 VAC	FIELD	-----
24 VAC	FACTORY	-----
24 VAC	FIELD	-----

**⚠ Labeled wires connect if no options used**


MODEL	COOL	HEAT	C. BREAKER
WG362	MED.	MED.	25A

**⚠ RED (LOW), BLUE (MED.), BLACK (HIGH) WHERE APPLICABLE. ALL UNUSED LEADS TAPED OFF.**


IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C EXCEPT THE IGNITION CABLE WHICH IS 250° HIGH VOLTAGE CABLE.

4085-239 B


**WG362DB 230/208-60-3**

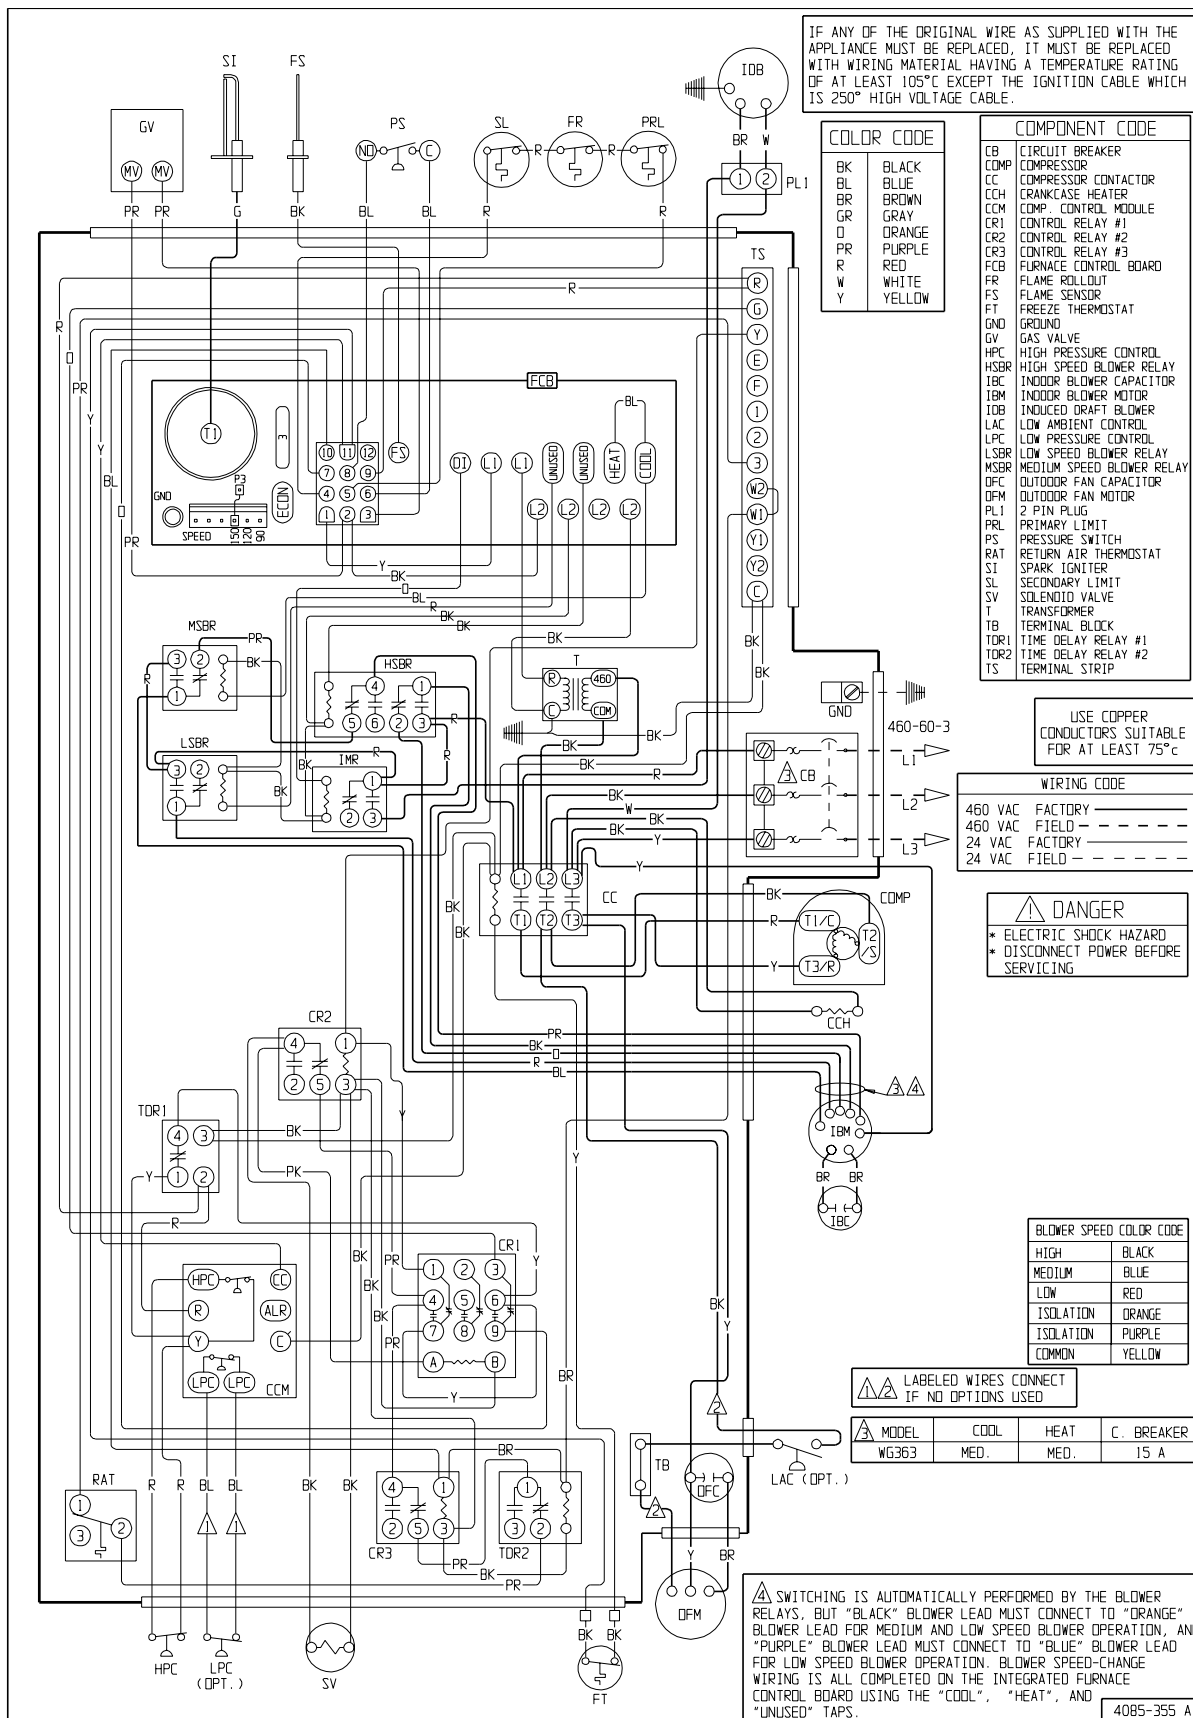

**WG363DC 460-60-3**

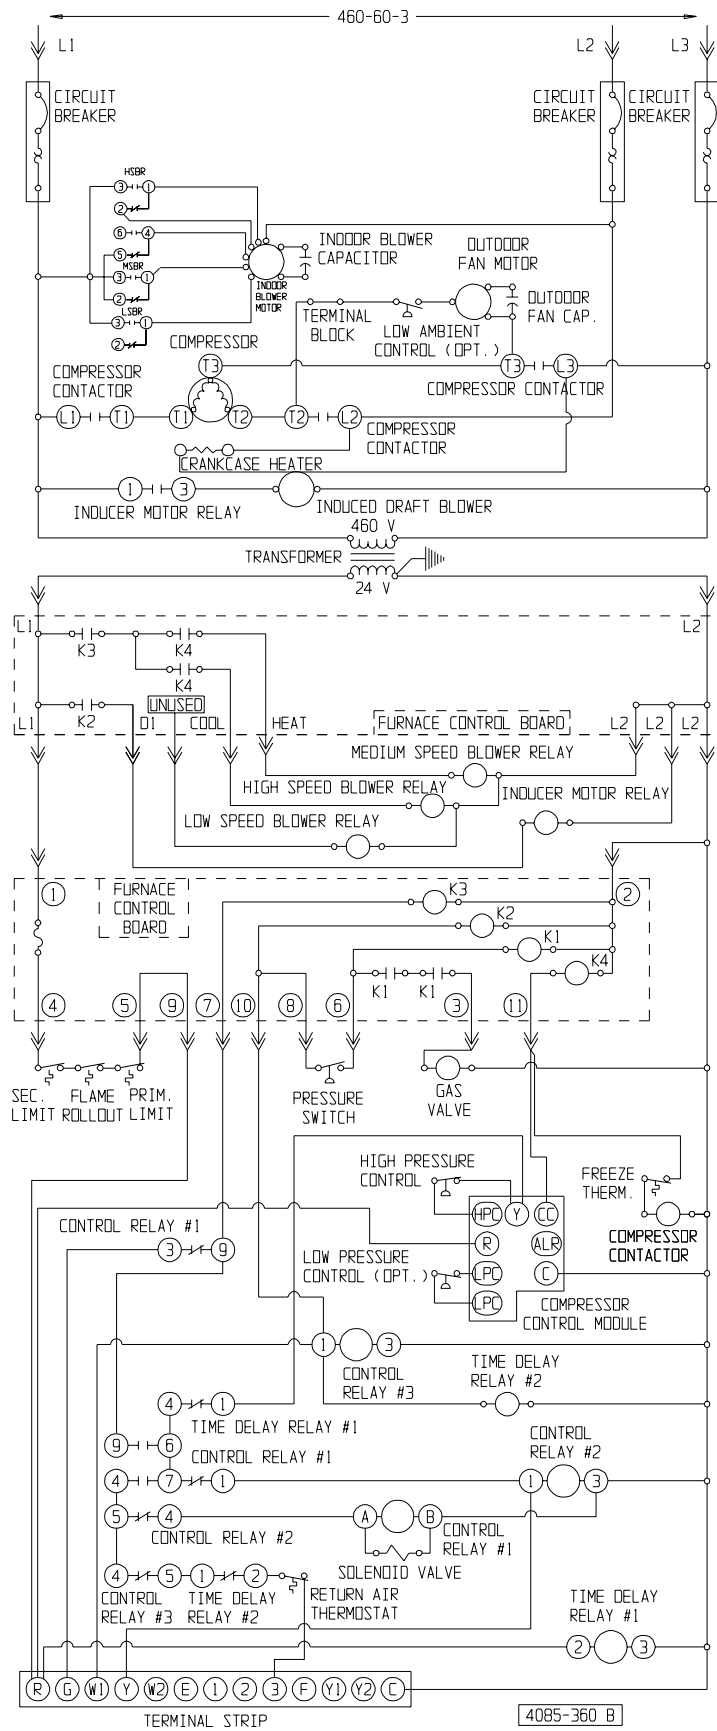

**WG363DC 460-60-3**

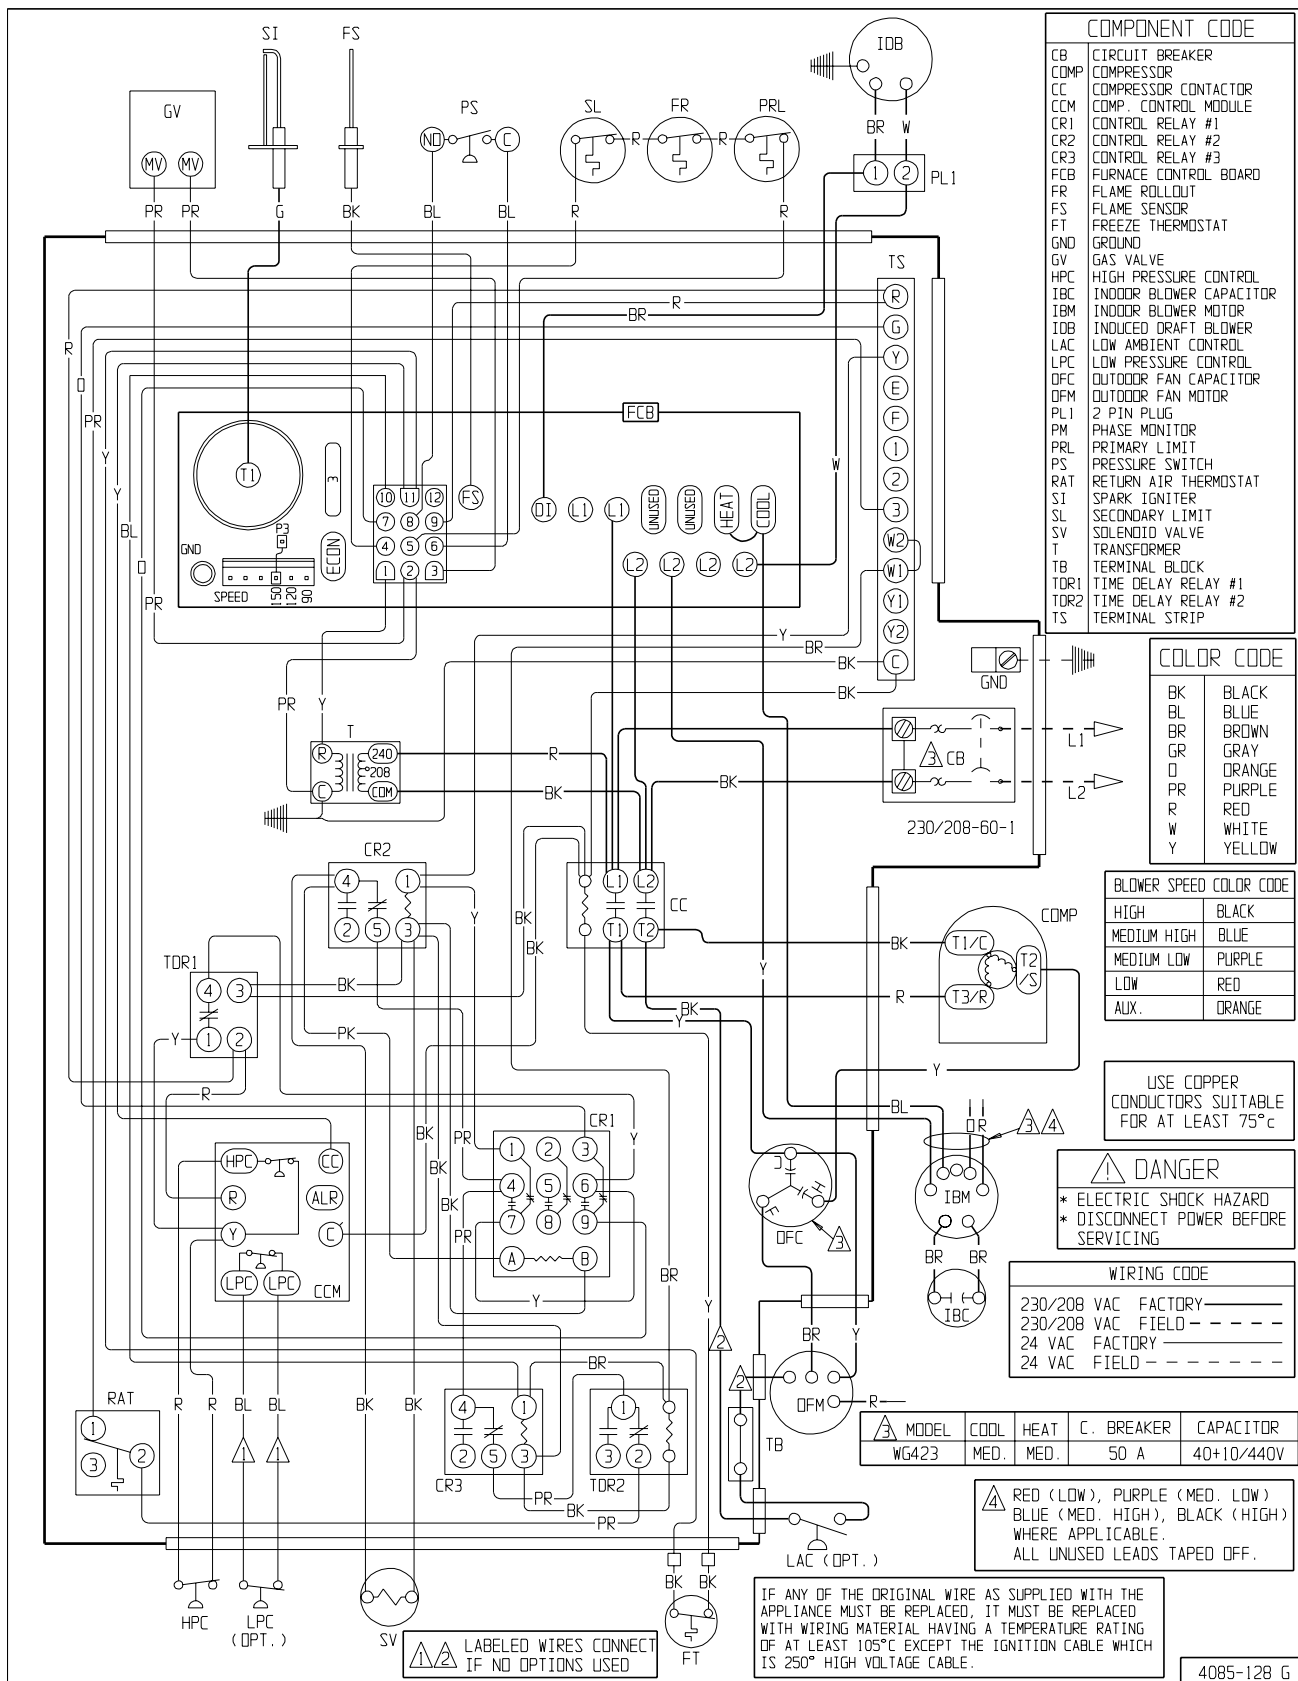

COMPONENT CODE	
CB	CIRCUIT BREAKER
COMP	COMPRESSOR
CC	COMP. CONTROL CONTACTOR
CCM	COMP. CONTROL MODULE
CR1	CONTROL RELAY #1
CR2	CONTROL RELAY #2
CR3	CONTROL RELAY #3
FCB	FURNACE CONTROL BOARD
FR	FLAME ROLLOUT
FS	FLAME SENSOR
FT	FREEZE THERMOSTAT
GND	GROUND
GV	GAS VALVE
HPC	HIGH PRESSURE CONTROL
IBC	INDOOR BLOWER CAPACITOR
IBM	INDOOR BLOWER MOTOR
IOB	INDUCED DRAFT BLOWER
LAC	LOW AMBIENT CONTROL
LPC	LOW PRESSURE CONTROL
DFC	OUTDOOR FAN CAPACITOR
DFM	OUTDOOR FAN MOTOR
PL1	2 PIN PLUG
PM	PHASE MONITOR
PRL	PRIMARY LIMIT
PS	PRESSURE SWITCH
RAT	RETURN AIR THERMOSTAT
SI	SPARK IGNITER
SL	SECONDARY LIMIT
SV	SOLENOID VALVE
T	TRANSFORMER
TB	TERMINAL BLOCK
TDR1	TIME DELAY RELAY #1
TDR2	TIME DELAY RELAY #2
TS	TERMINAL STRIP

COLOR CODE	
BK	BLACK
BL	BLUE
BR	BROWN
GR	GRAY
DR	DRANGE
PR	PURPLE
R	RED
W	WHITE
Y	YELLOW

BLOWER SPEED COLOR CODE	
HIGH	BLACK
MEDIUM HIGH	BLUE
MEDIUM LOW	PURPLE
LOW	RED
AUX.	ORANGE

USE COPPER CONDUCTORS SUITABLE FOR AT LEAST 75°C

**⚠ DANGER**  
 \* ELECTRIC SHOCK HAZARD  
 \* DISCONNECT POWER BEFORE SERVICING

WIRING CODE	
230/208 VAC	FACTORY
230/208 VAC	FIELD
24 VAC	FACTORY
24 VAC	FIELD

MODEL	COOL	HEAT	C. BREAKER	CAPACITOR
WG423	MED.	MED.	50 A	40+10/440V


**⚠** RED (LOW), PURPLE (MED. LOW)  
 BLUE (MED. HIGH), BLACK (HIGH)  
 WHERE APPLICABLE.  
 ALL UNUSED LEADS TAPED OFF.

IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C EXCEPT THE IGNITION CABLE WHICH IS 250° HIGH VOLTAGE CABLE.


**⚠** LABELED WIRES CONNECT IF NO OPTIONS USED

4085-128 G


**WG423DA 230/208-60-1**

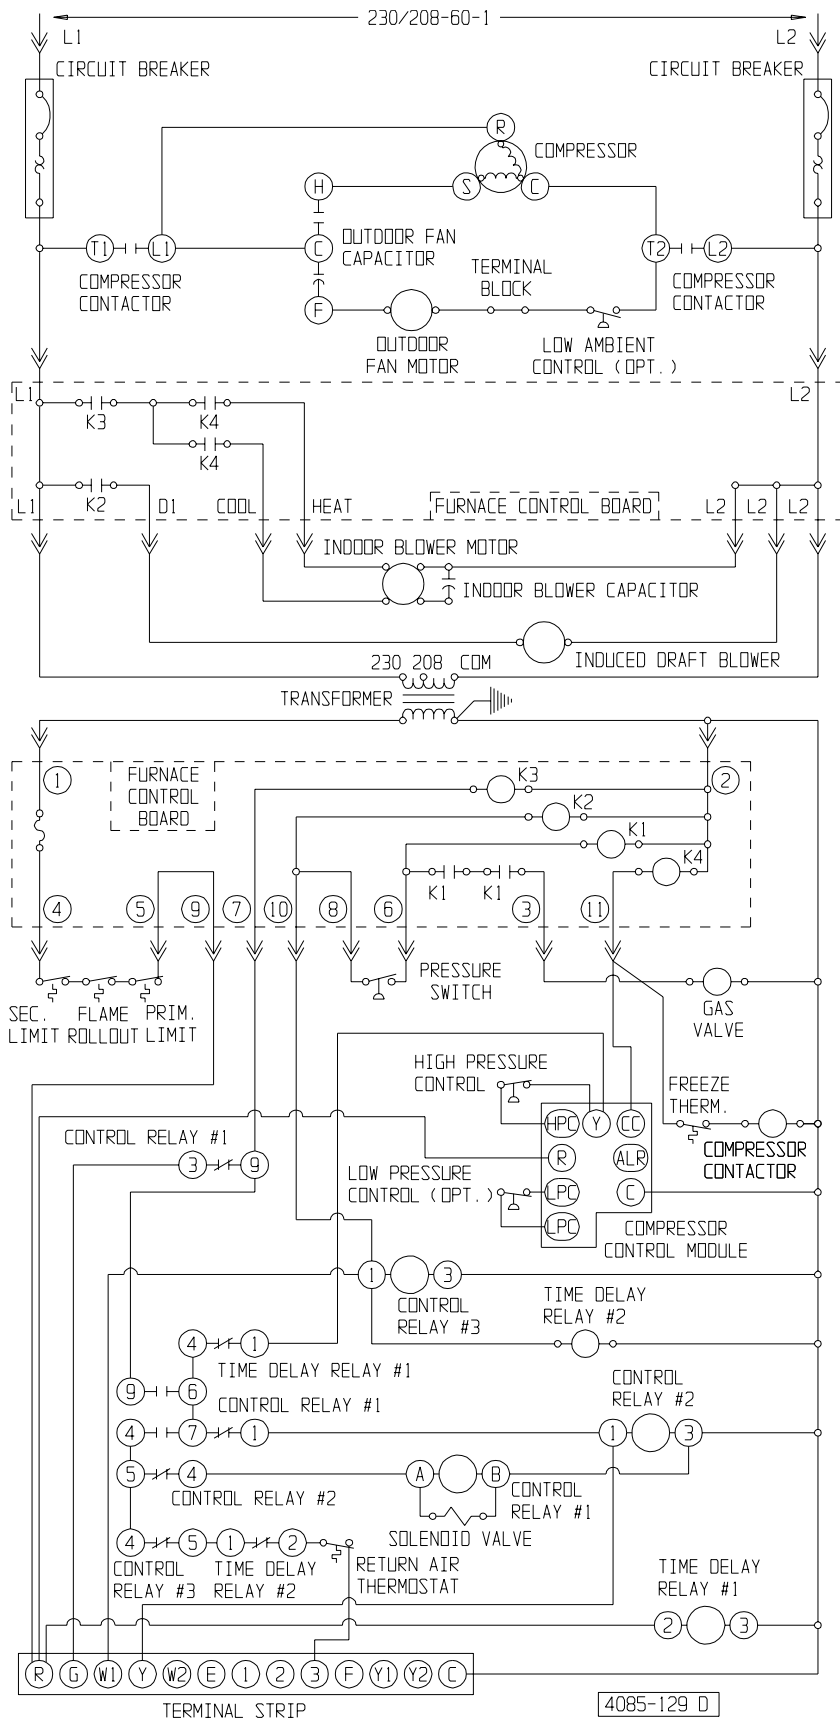


**WG423DA 230/208-60-1**

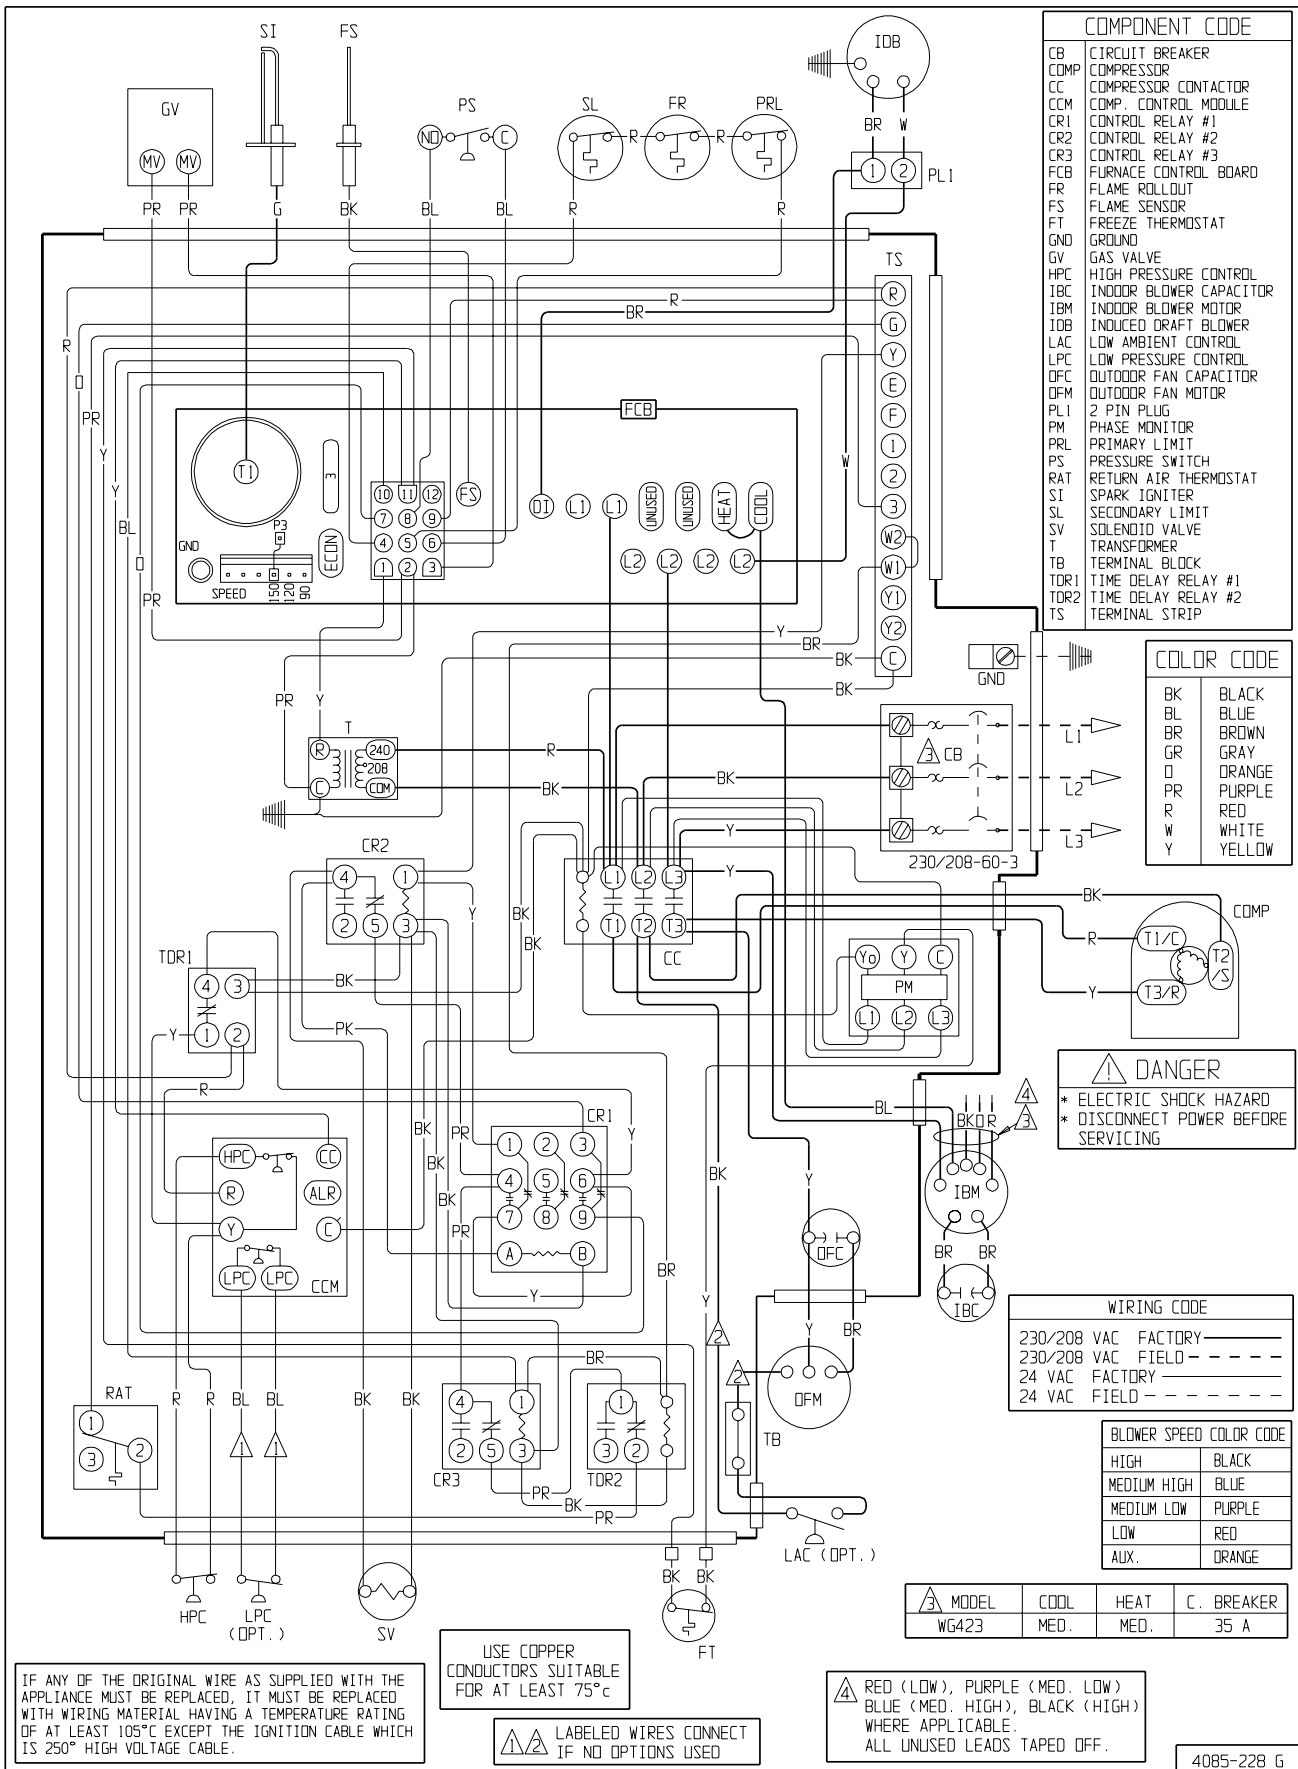


**WG423DB 230/208-60-3**

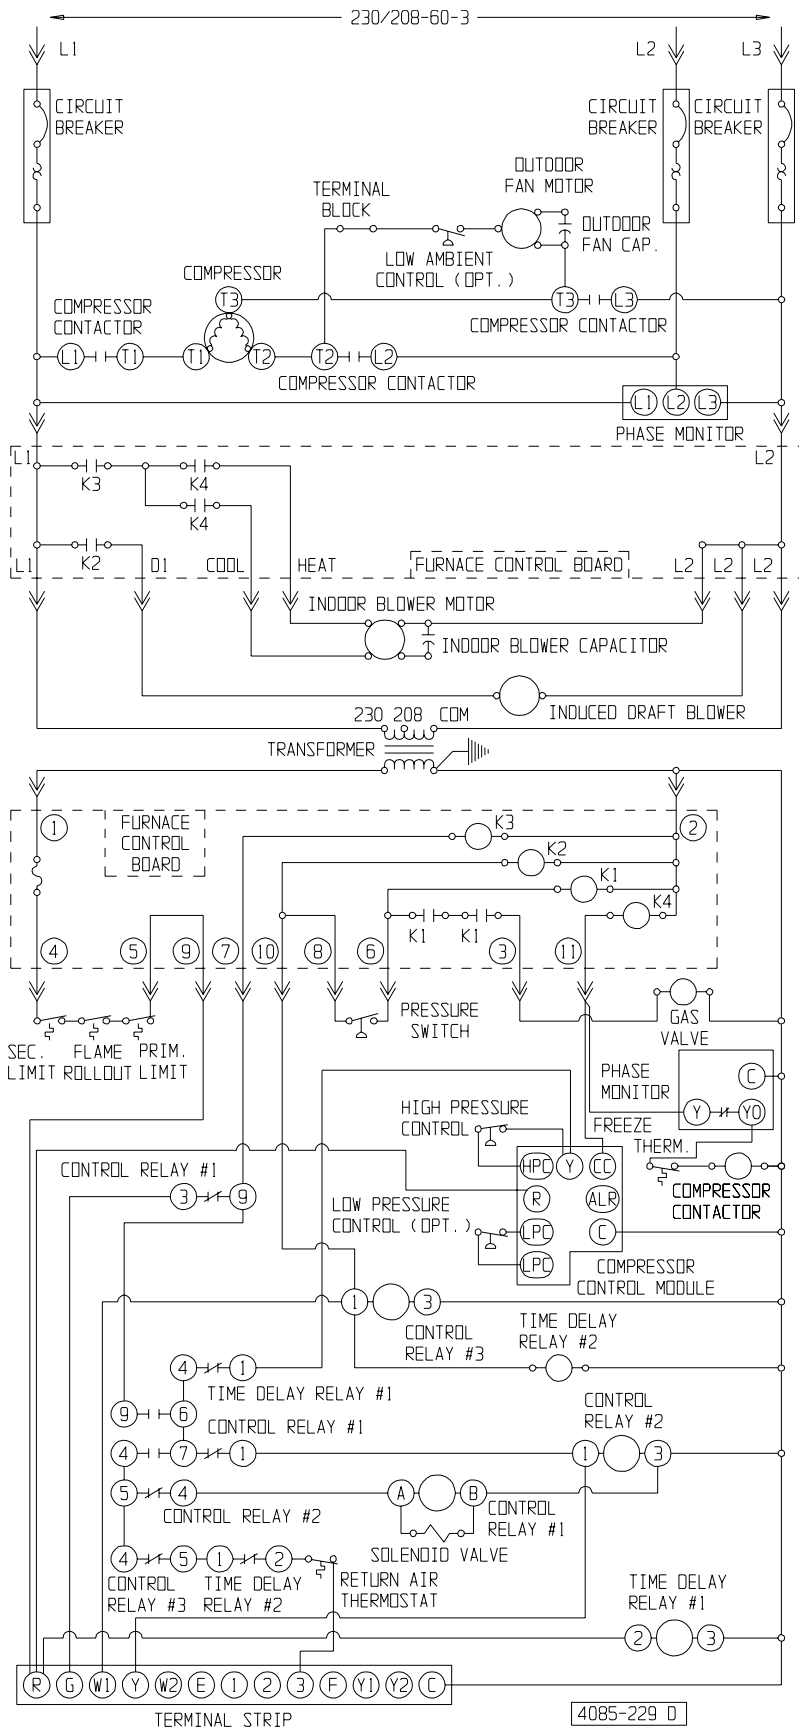


**WG423DB 230/208-60-3**

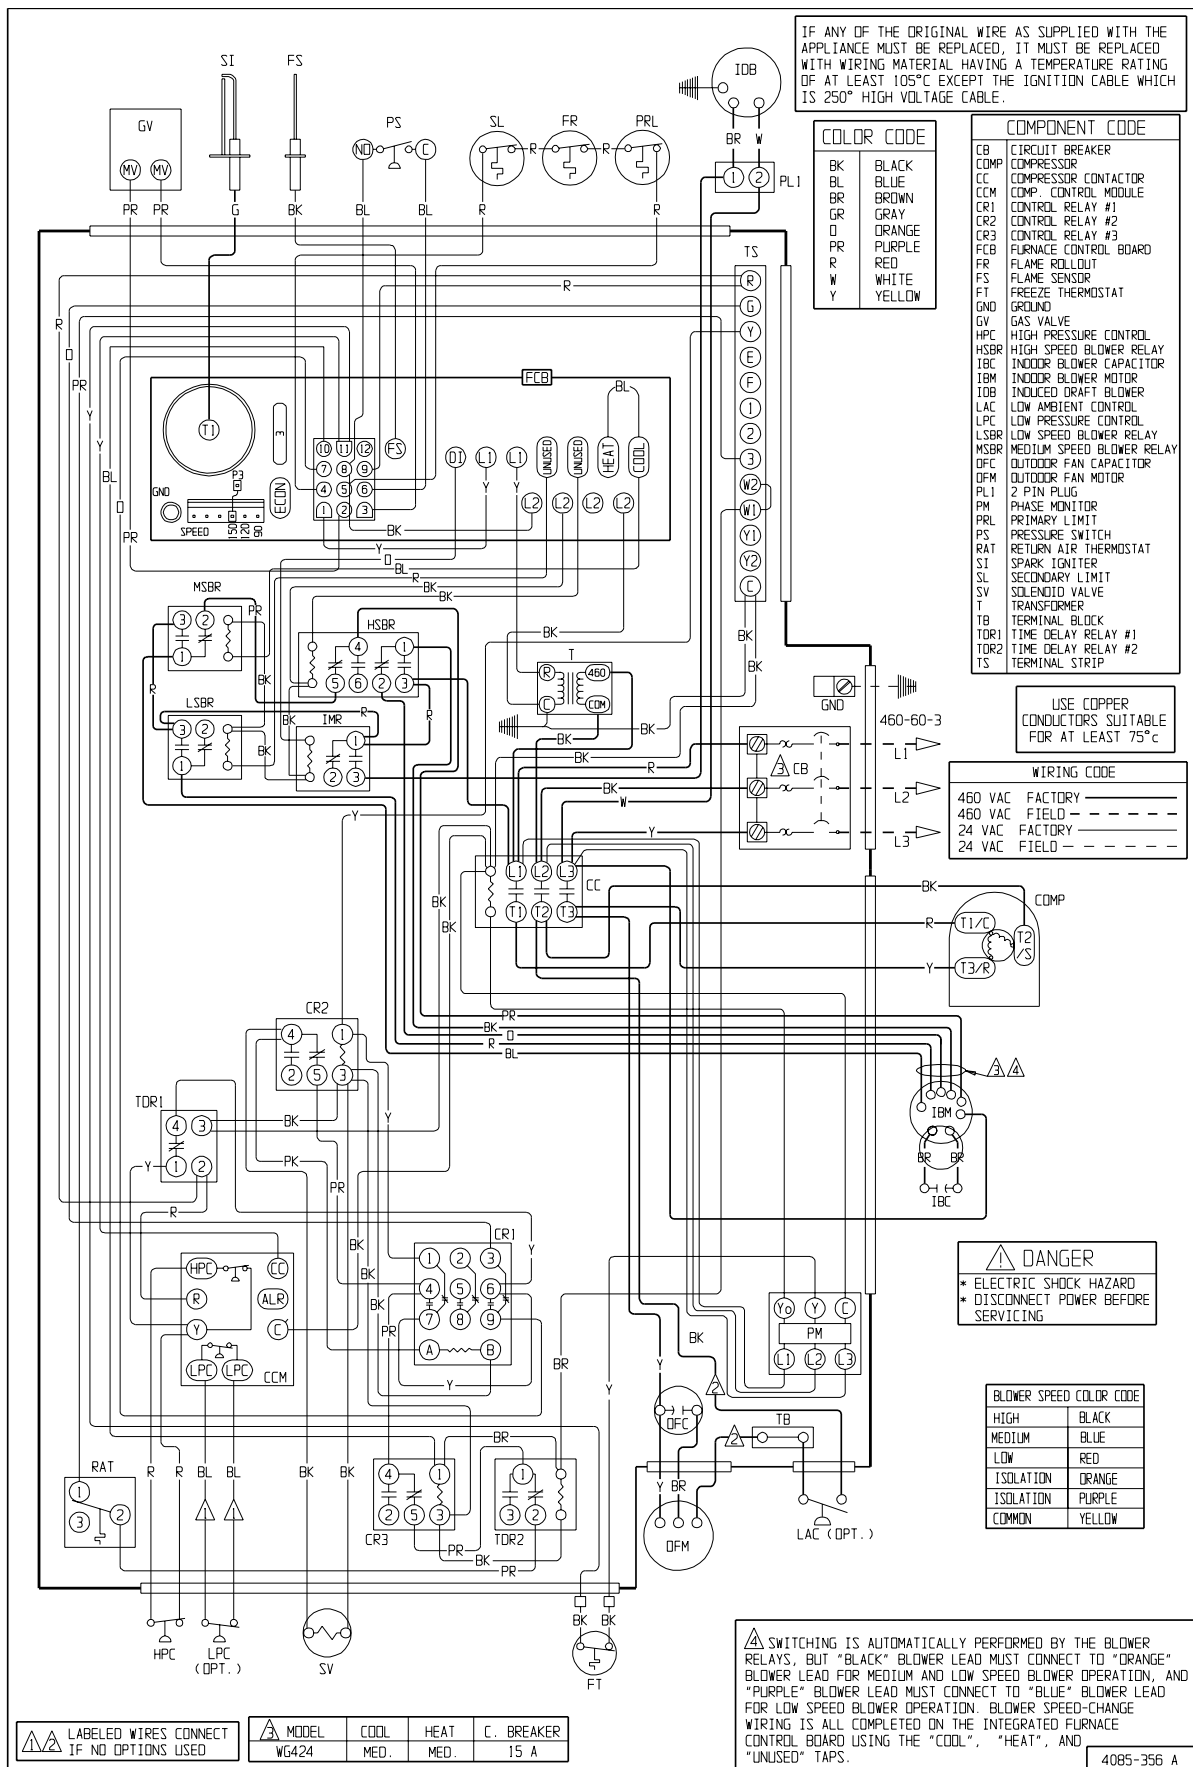


WG424DC 460-60-3

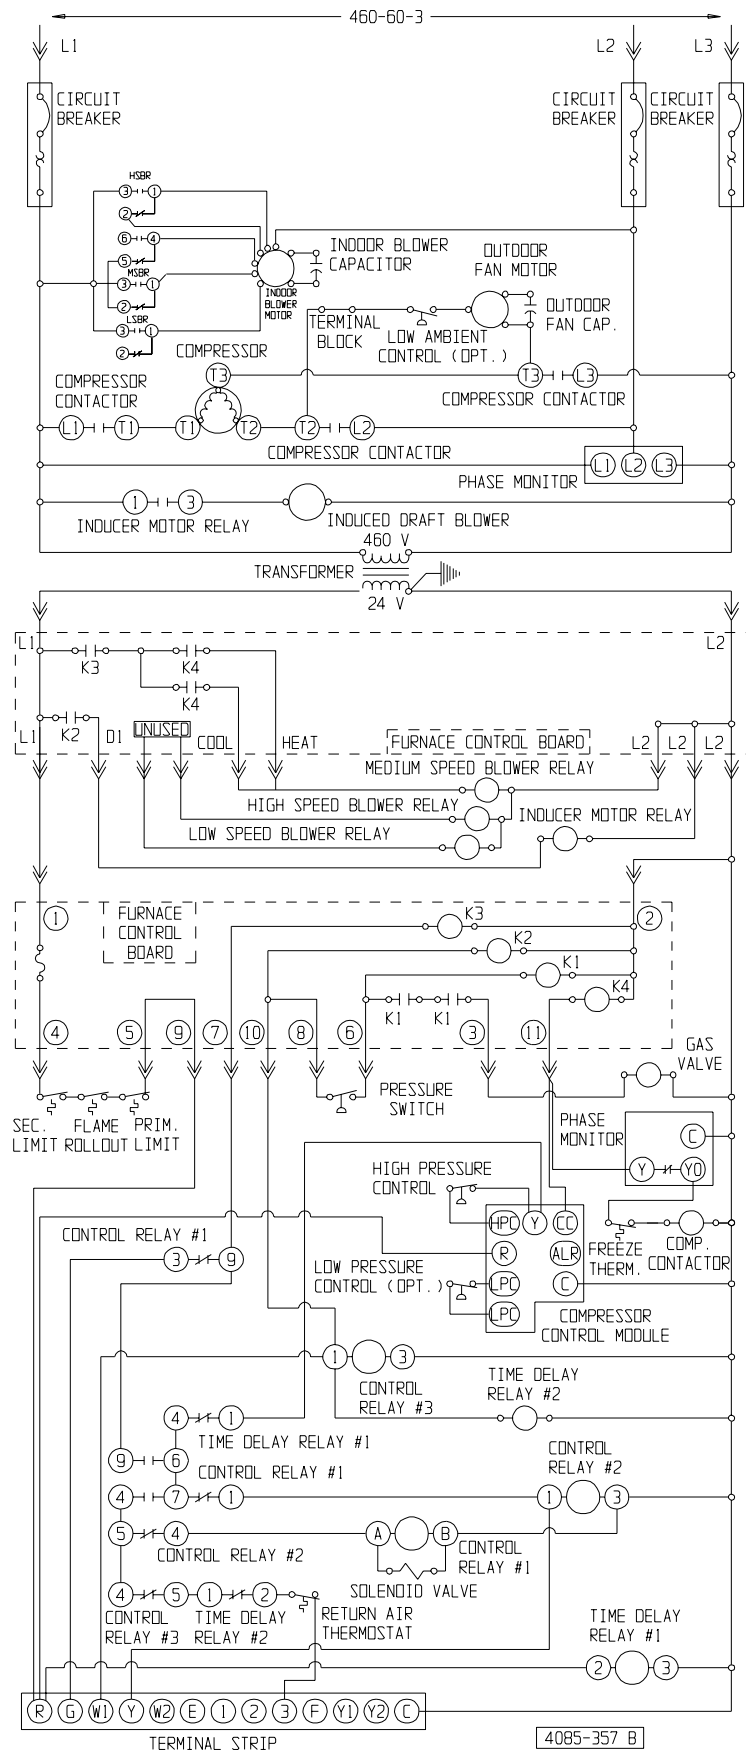


**WG424DC 460-60-3**

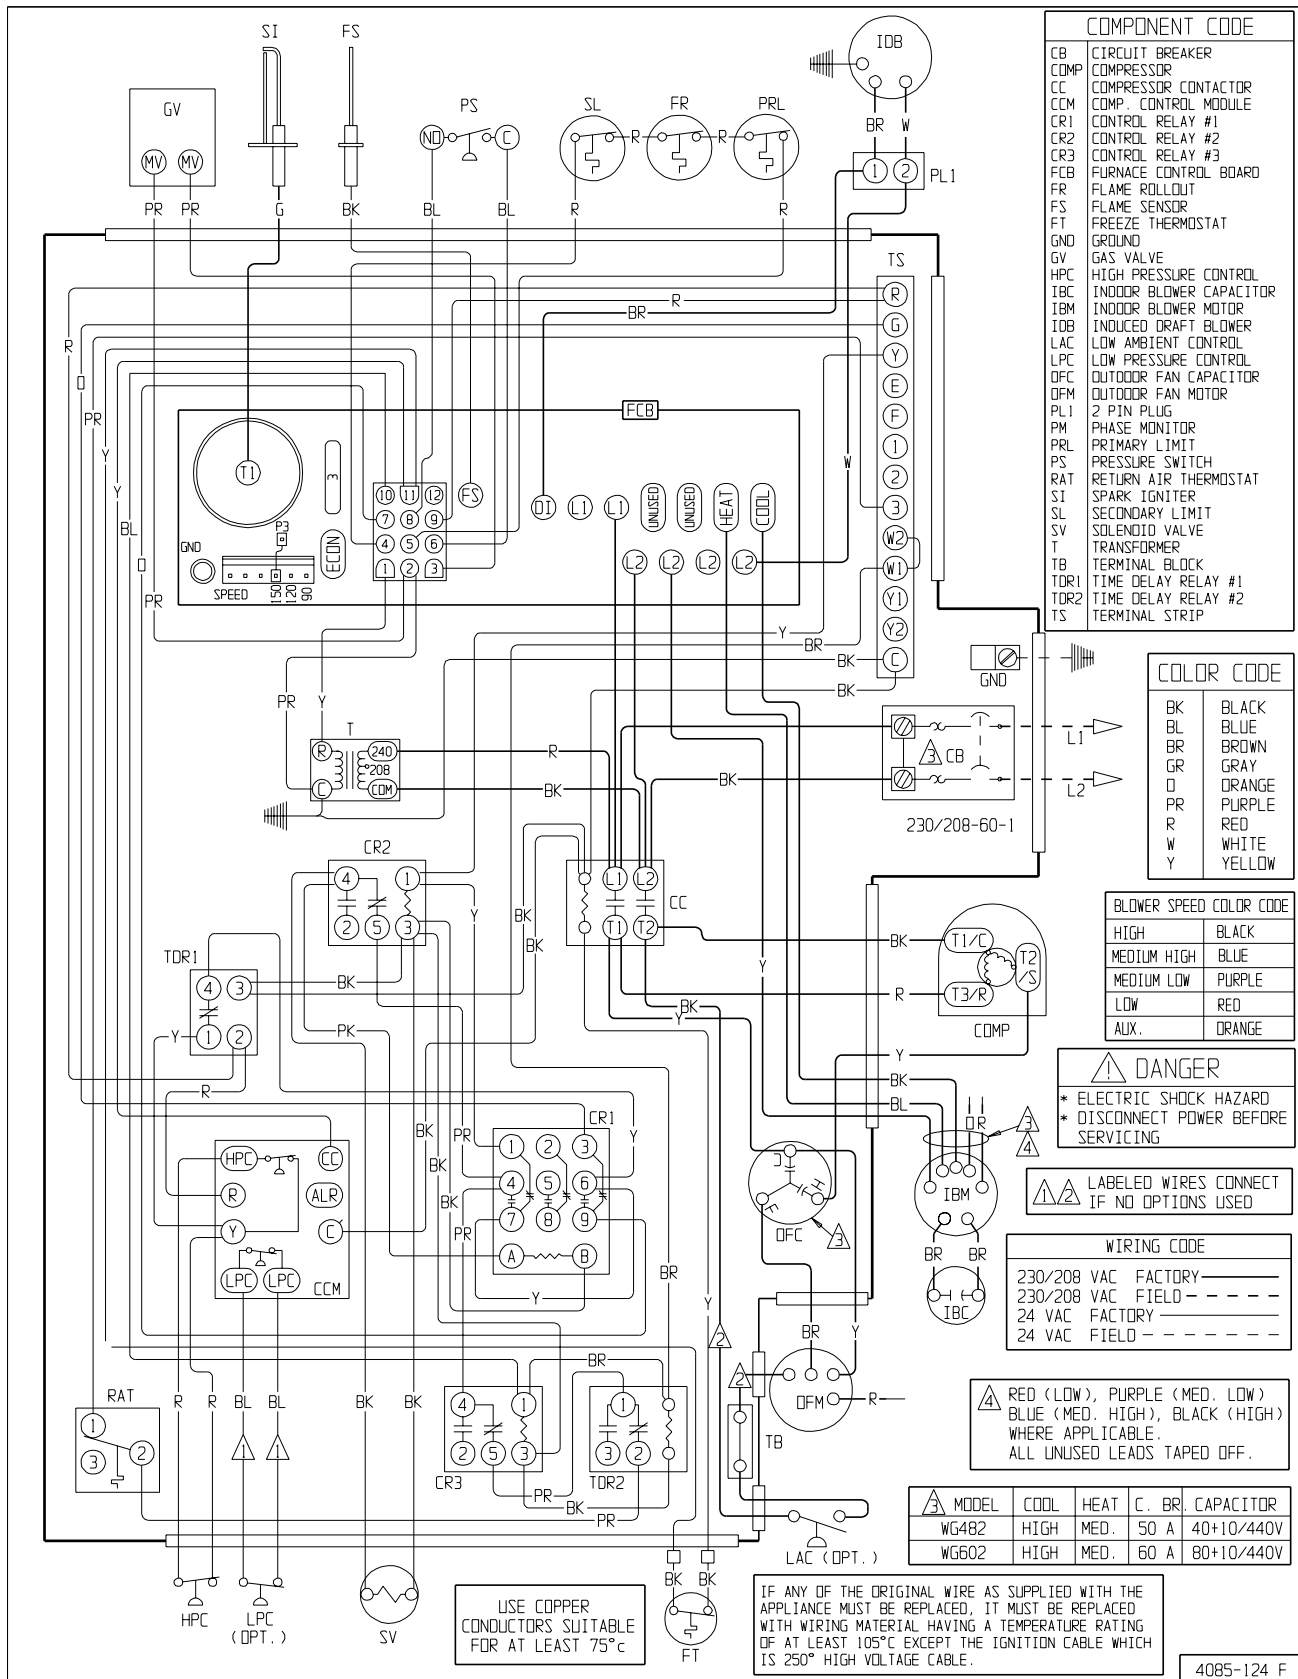


WG482DA, WG602DA 230/208-60-1

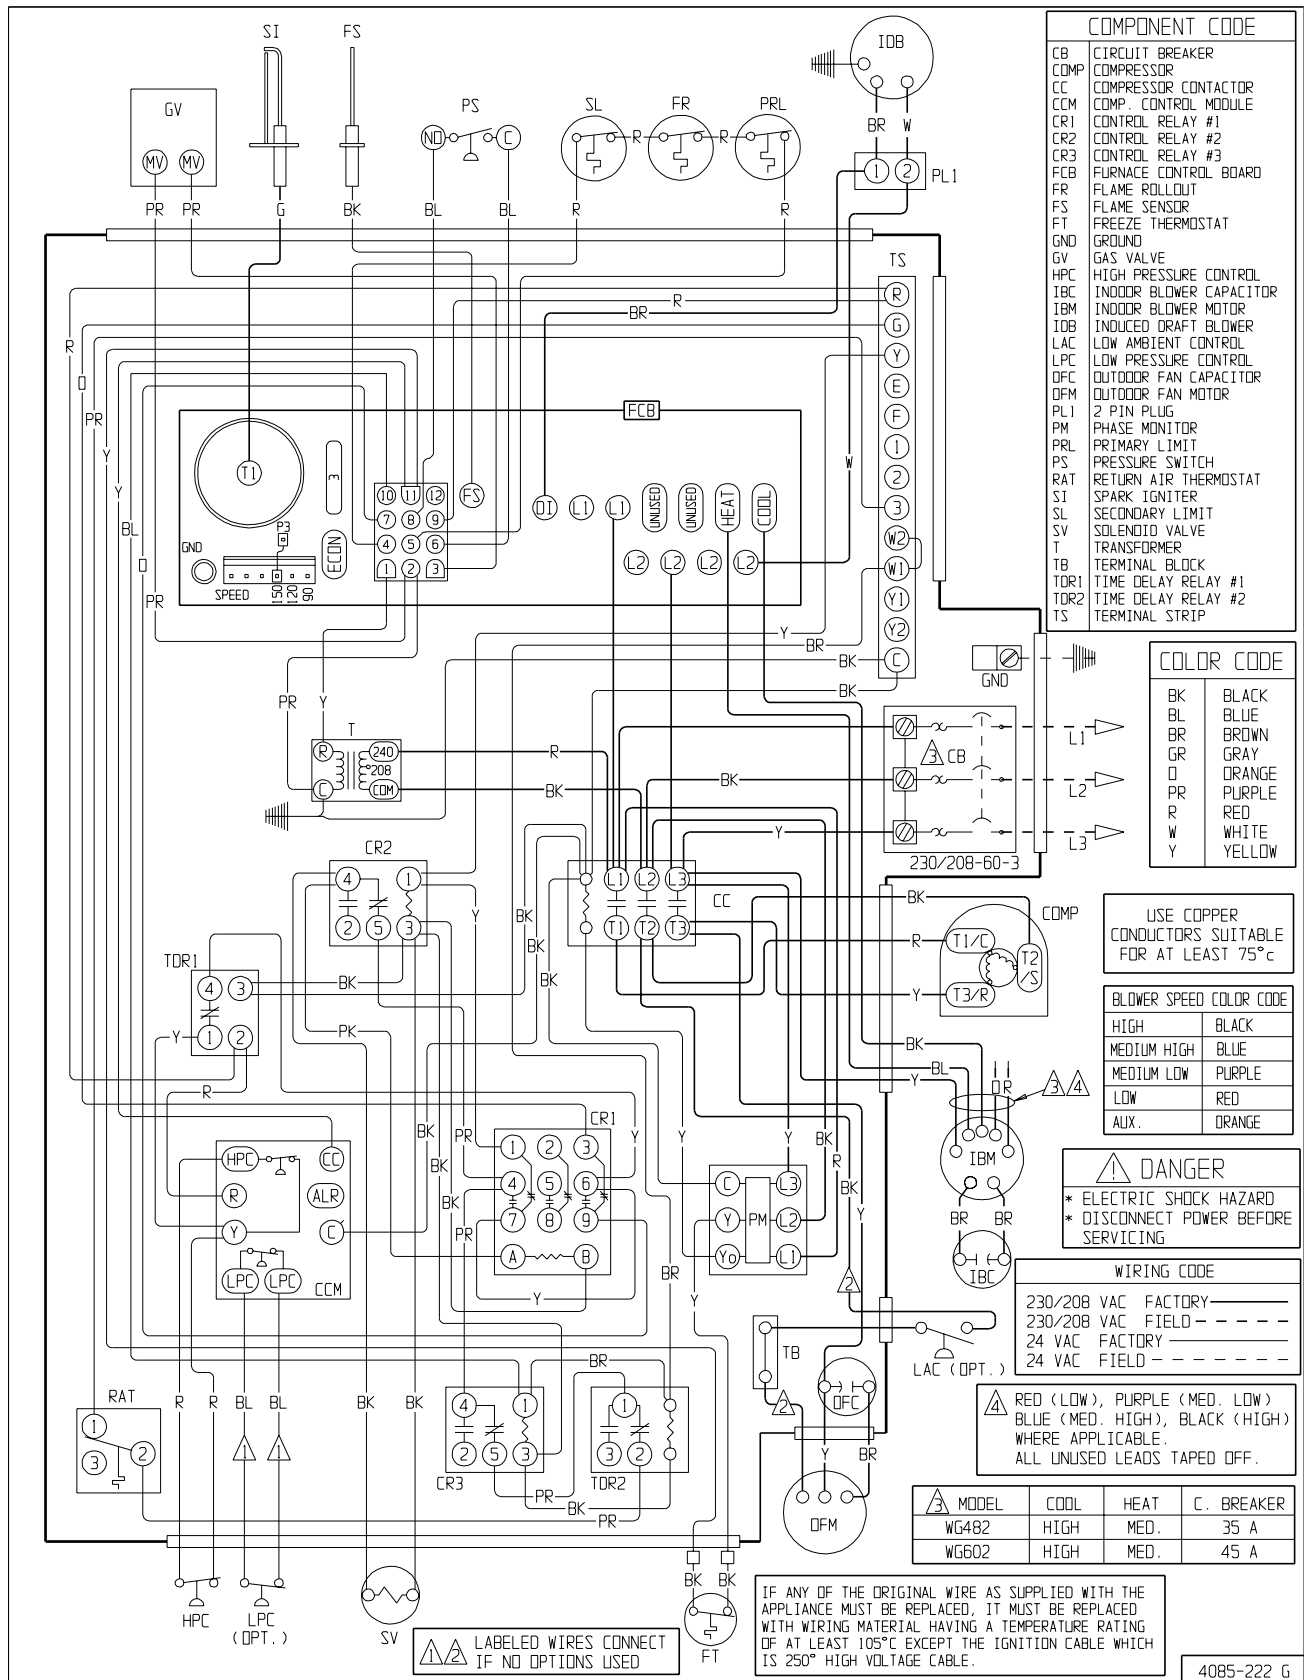

**WG482DB, WG602DB 230/208-60-3**

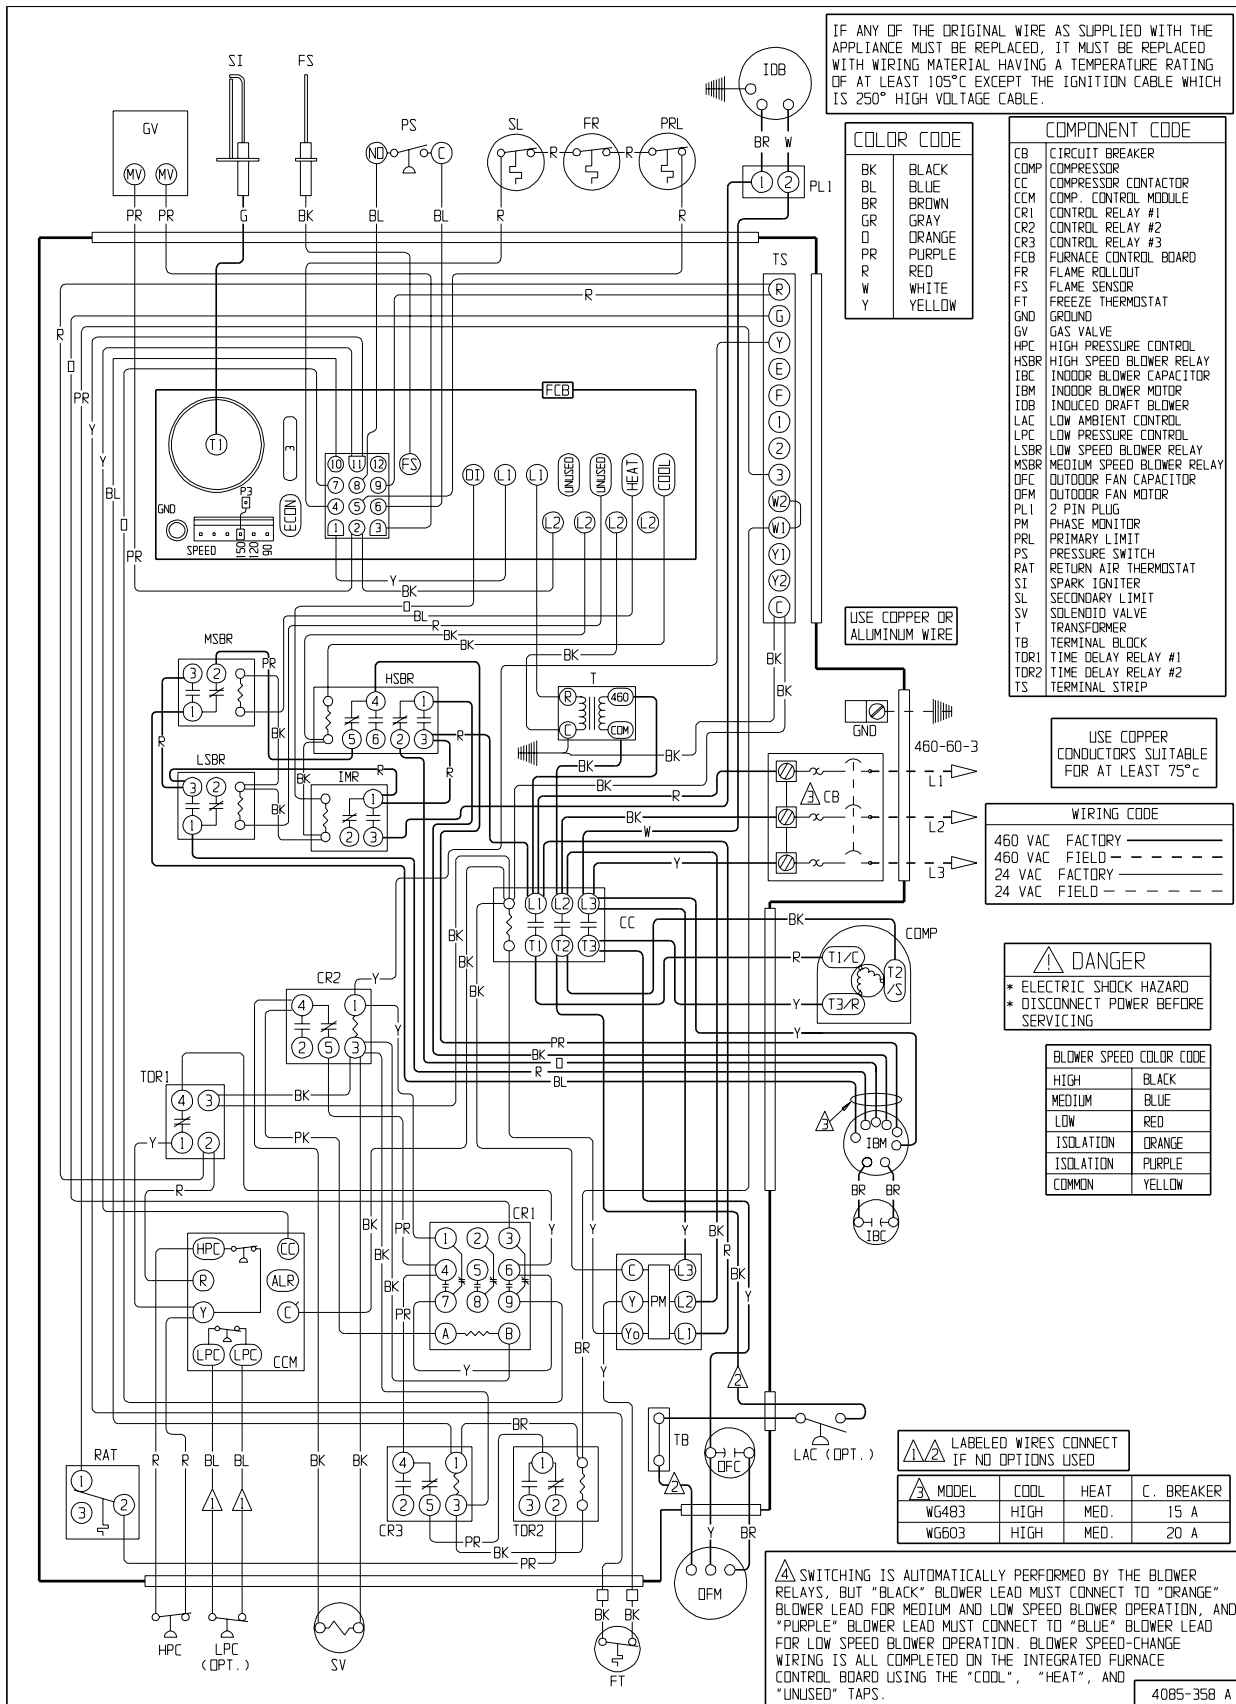

WG483DC, WG603DC 460-60-3

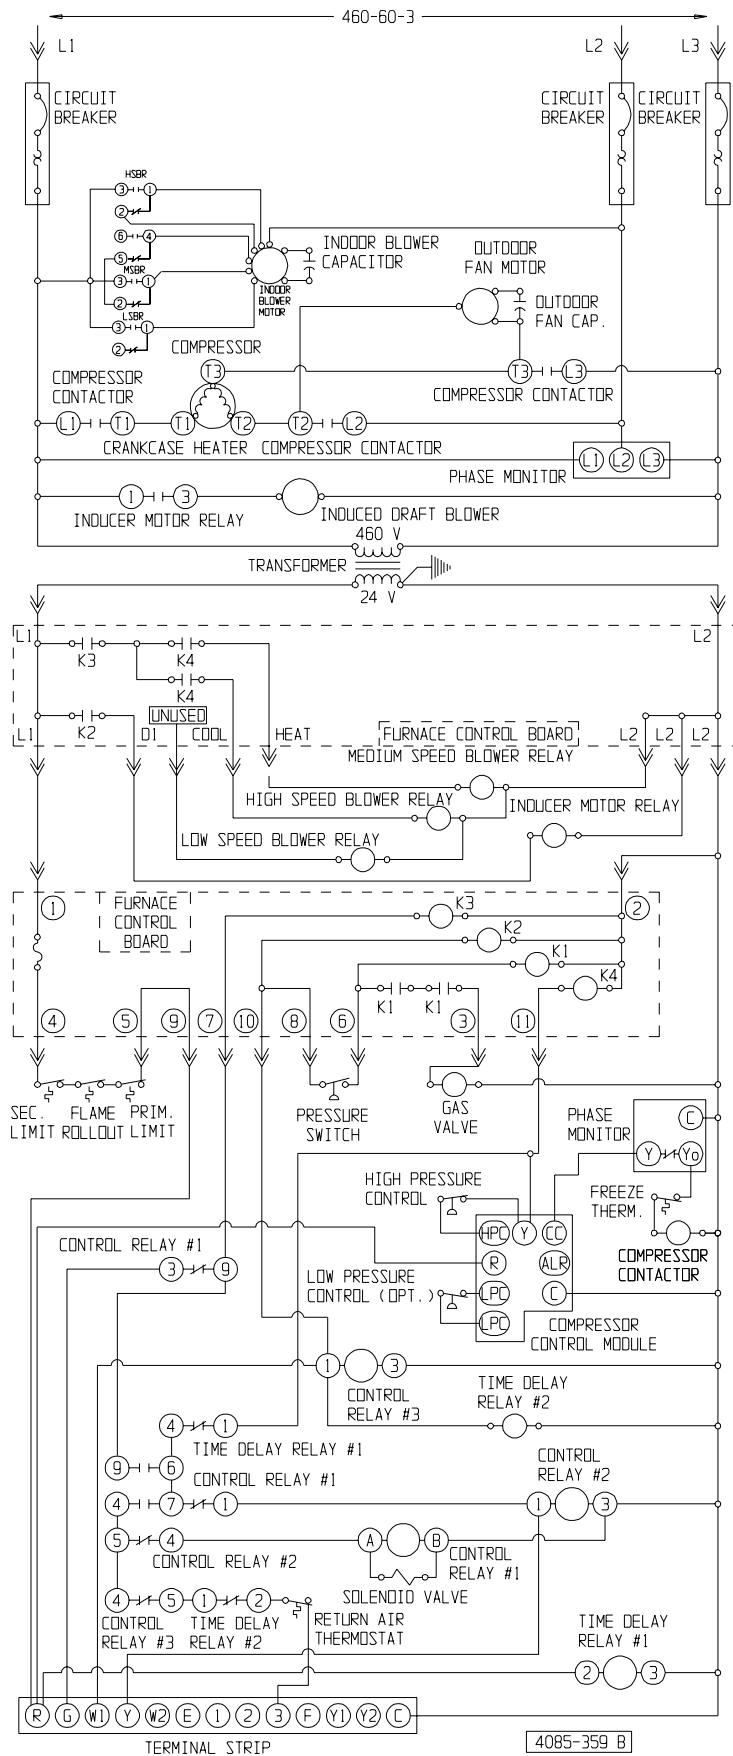

**WG483DC, WG603DC 460-60-3**