
REPLACEMENT PARTS MANUAL

WALL MOUNT HEATER PACKAGES

MODELS:

EHWA03-A05
EHWA03-A15
EHWA03TA10
EHWH30TA10
EHWH36-A10
EHWA03-B06
EHWA37-B15
EHWH03-B09
EHWC03A-C06
EHWA03A-C15

EHWA03-A08
EHWA03-AXH
EHWH30-A05
EHWH36-A05
EHWH36-A15
EHW36A-B06
EHWH03-B06
EHW36H-B09
EHWC03A-C09
EHWH03A-C15

EHWA03-A10
EHWA03-AXK
EHWH30-A10
EHWH36-A08
EHWH36TA10
EHWA03-B09
EHW36H-B06
EHW36H-B15
EHWA03A-C12
EHWA03-E12

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Contents

<i>Description</i>	<i>Page</i>
Heater Packages / Heat Pump	
♦ Exploded View	2
♦ Usage List	3
♦ Usage List	4
♦ Blank Page	5
Heater Packages / Air Conditioner	
♦ Exploded View	6
♦ Usage List	7

Important

 
- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.



Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
Since 1914...Moving ahead, just as planned.

Manual: 2110-621A
Supersedes: 2110-621
File: Tab 18
Date: 03-17-10

HEATER PACKAGES – HEAT PUMP

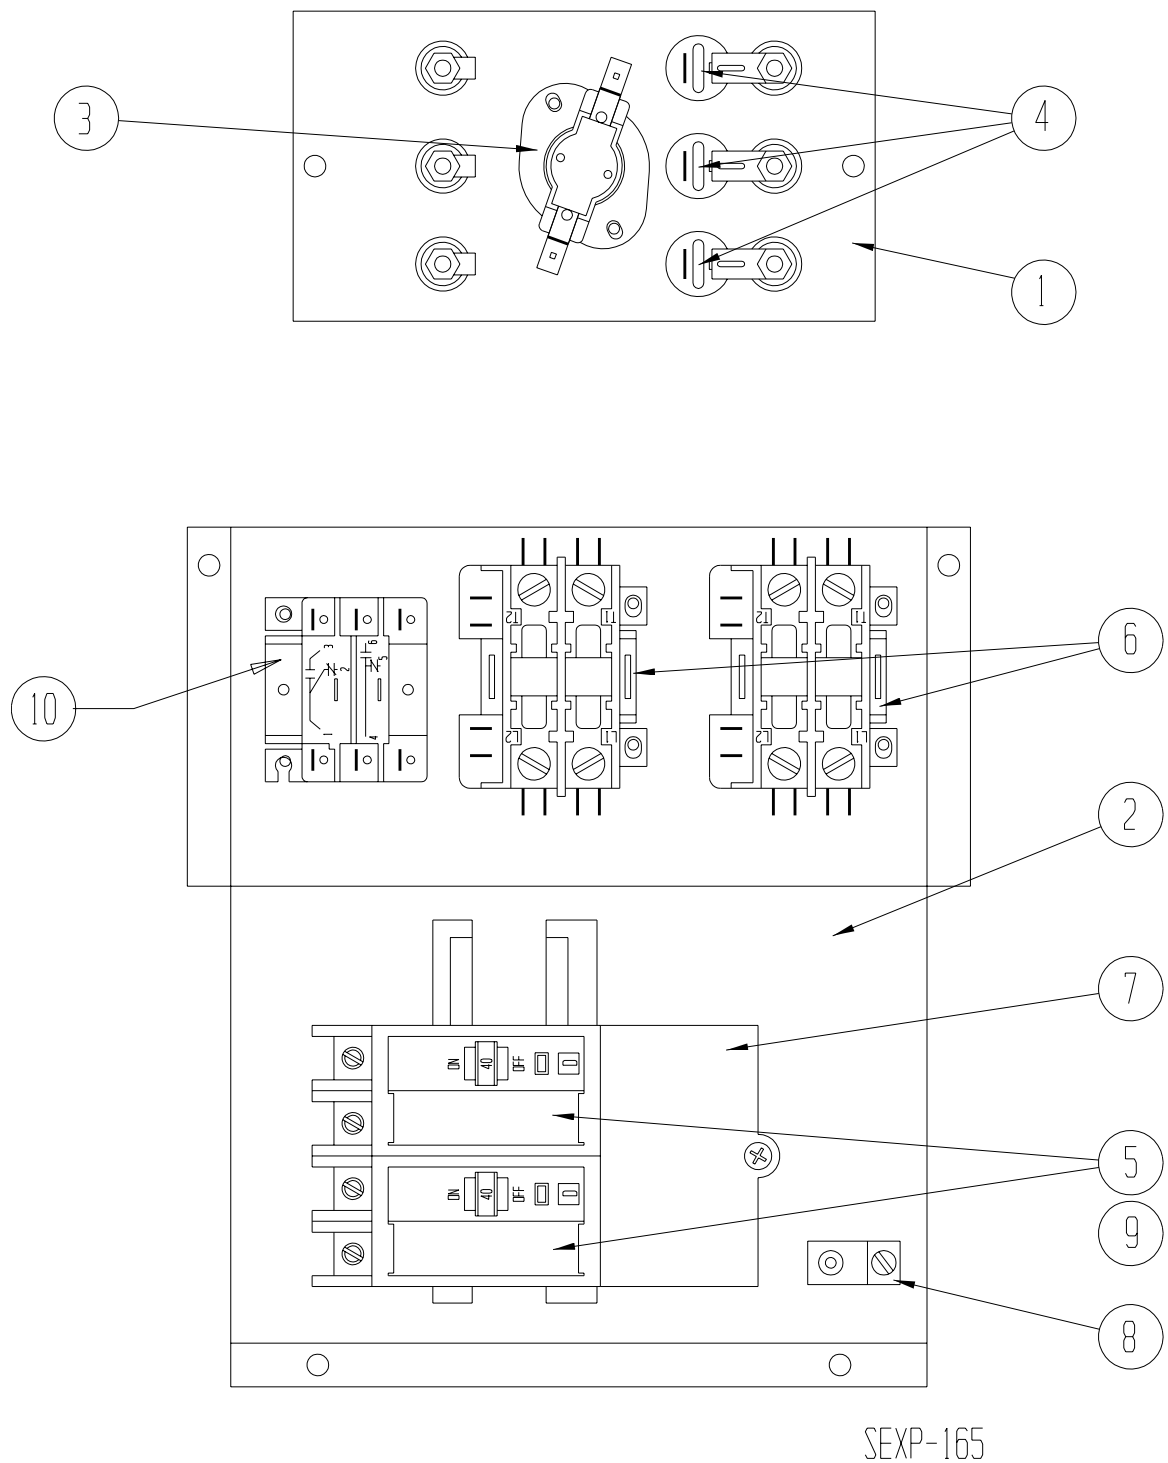

HEATER PACKAGES – HEAT PUMP

Drawing No.	Part No.	Description	EHWH30-A05	EHWH30-A10	EHWH03-B06	EHWH03-B09	EHWH36-A08	EHWH36-A05	EHWH36-A10	EHWH36-A15	EHWH36H-B06	EHWH36H-B09	EHWH36H-B15
1	8604-089	Heat Strip 5 KW	X					X					
1	8604-095	Heat Strip 10 KW		X					X				
1	8604-049	Heat Strip 6 KW			X						X		X
1	8604-048	Heat Strip 9 KW				X						X	X
1	8604-090	Heat Strip 8 KW					X						
1	8604-096	Heat Strip 15 KW								X			
2	127X210	Heater Control Base	X	X	X	X	X	X	X	X	X	X	X
3	8402-028	Limit Control		X					X				
3	8402-065	Limit Control	X		X	X	X	X			X	X	
3	8402-069	Limit Control								X			
3	8402-070	Limit Control											X
4	8402-091	Thermal Cutoff	X				2	X					
4	8402-096	Thermal Cutoff		2					2	3			3
4	8402-092	Thermal Cutoff			2	2					2	2	
5	8615-037	Circuit Breaker 30A		X					X				
5	8615-040	Circuit Breaker 50A	X	X			X						
5	8615-041	Circuit Breaker 60A						X	X	2			
5	8615-043	Circuit Breaker 40A			X								X
5	8615-045	Circuit Breaker 50A				X							
5	8615-039	Circuit Breaker 45A									X		
5	8615-036	Circuit Breaker 25A					X						
5	8615-046	Circuit Breaker 60A										X	
6	8401-006	Heat Contactor	1	1	1	1	1	1	1	2	1	1	2
7	8615-047	Jumper Bar		X			X		X	X			
8	8611-006	Ground Terminal		X			X		X	X			
9	8615-049	Jumper Bar Cover		X			X		X	X			
10	8201-013	Emergency Heat Relay								X			X
NS	4097-121	Wiring Diagram	X					X					
NS	4097-141	Wiring Diagram		X			X		X				
NS	4097-221	Wiring Diagram			X	X					X	X	
NS	4097-151	Wiring Diagram								X			
NS	4097-230	Wiring Diagram											X

NS = Not Shown



HEATER PACKAGES – HEAT PUMP

Drawing No.	Part No.	Description	EHWC03A-C06	EHWC03A-C09	EHWH03A-C15	EHWH30TA10	EHWH36TA10
1	8604-089	Heat Strip 5 KW				X	X
1	8604-100	Heat Strip 6 KW	X		X		
1	8604-101	Heat Strip 9 KW		X	X		
2	127X210	Heater Control Base				X	X
2	127-321	Heater Control Base	X	X	X		
3	8402-065	Limit Control	X	X		X	X
3	8402-070	Limit Control			X		
4	8402-091	Thermal Cutoff				2	2
4	8402-128	Thermal Cutoff	2	2			
4	8402-095	Thermal Cutoff			4		
5	8615-067	Disconnect Switch	X	X	X		
5	8615-037	Circuit Breaker 30A				X	X
5	8615-041	Circuit Breaker 60A				X	
5	8615-040	Circuit Breaker 50A					X
6	8401-006	Heat Contactor				1	1
6	8401-002	Heat Contactor	1	1	2		
7	8615-047	Jumper Bar				X	X
8	8611-006	Ground Terminal				X	X
9	8615-049	Jumper Bar Cover				X	X
10	8201-013	Emergency Heat Relay			X		
NS	4097-141	Wiring Diagram				X	X
NS	4097-322	Wiring Diagram	X	X			
NS	4097-333	Wiring Diagram			X		

NS = Not Shown

This page intentionally left blank.

  HEATER PACKAGES – AIR CONDITIONER

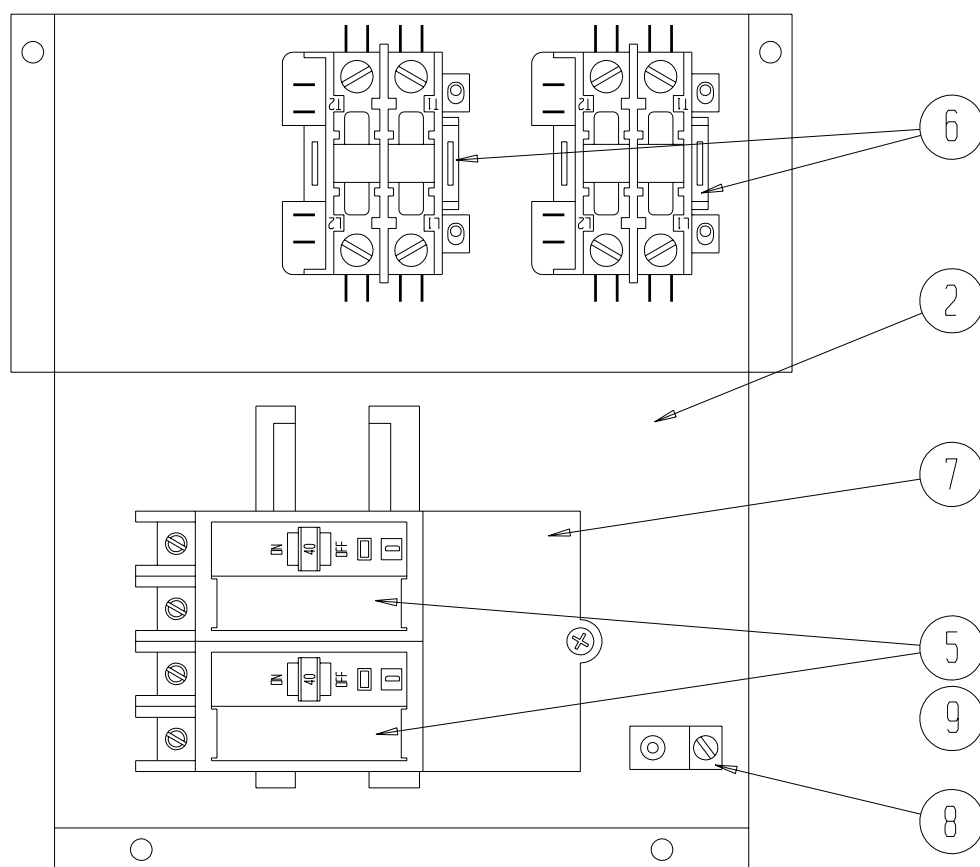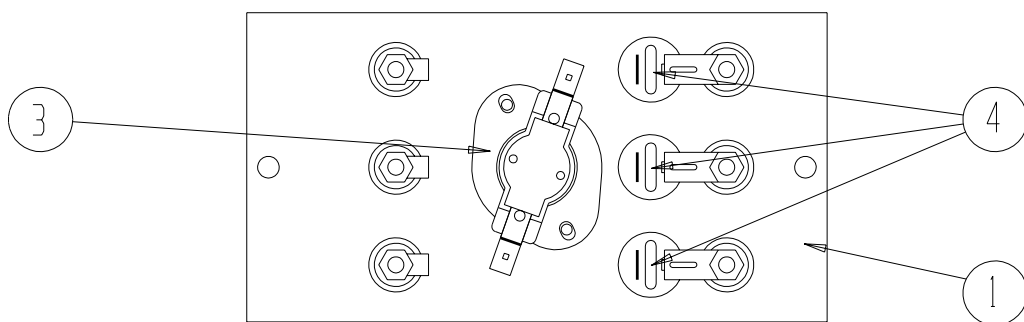

SEXP-164

HEATER PACKAGES – AIR CONDITIONER

Drawing No.	Part No.	Description	EHWA03-A05	EHWA03-A08	EHWA03-A10	EHWA03-A15	EHWA03-B06	EHWA03-B09	EHWA03-B06	EHWA03A-C12	EHWA03A-C15	EHWA03TA10	EHWA37-B15	EHWA03-AXH	EHWA03-AXK	EHWA03-E12
1	8604-089	Heat Strip 5 KW	X													
1	8604-090	Heat Strip 8 KW		X												
1	8604-095	Heat Strip 10 KW			X							X				
1	8604-096	Heat Strip 15 KW				X							X			
1	8604-049	Heat Strip 6 KW					X		X							
1	8604-048	Heat Strip 9 KW						X								
1	8604-100	Heat Strip 6 KW								2	X					
1	8604-101	Heat Strip 9 KW									X					
1	8604-116	Heat Strip 10 KW												X		
1	8604-117	Heat Strip 15 KW													X	
1	8604-046	Heat Strip 12 KW														X
2	127X210	Heater Control Base	X	X	X	X	X	X	X			X	X	X	X	X
2	127-321	Heater Control Base								X	X					
3	8402-028	Limit Control	X	X	X											
3	8402-065	Limit Control				X	X	X				X				
3	8402-069	Limit Control								X	X		X			X
3	8402-070	Limit Control												X	X	
3	8402-120	Limit Control														
4	8402-091	Thermal Cutoff	X	2		3						2				3
4	8402-096	Thermal Cutoff			2		2	2	2				3			
4	8402-092	Thermal Cutoff														
4	8402-095	Thermal Cutoff								4	4					
4	8402-121	Thermal Cutoff												2	3	
5	8615-067	Disconnect Switch								X	X					
5	8615-037	Circuit Breaker 30A				X				X						
5	8615-038	Circuit Breaker 35A	X													
5	8615-040	Circuit Breaker 50A		X												
5	8615-041	Circuit Breaker 60A			X	X								X	X	
5	8615-051	Circuit Breaker 25A, 3-Phase					X									
5	8615-052	Circuit Breaker 30A, 3-Phase							X							
5	8615-042	Circuit Breaker 35A, 3-Phase						X								
5	8615-043	Circuit Breaker 40A, 3-Phase														X
5	8615-046	Circuit Breaker 60A, 3-Phase											X			
6	8401-006	Heat Contactor	X	X	X	2	X	X	X			X	2		X	2
6	8401-002	Heat Contactor								2	2			X		
7	8615-047	Jumper Bar				X							X		X	
8	8611-006	Ground Terminal				X							X		X	
9	8615-049	Jumper Bar Cover				X							X		X	
NS	4097-120	Wiring Diagram	X													
NS	4097-140	Wiring Diagram		X	X							X				
NS	4097-150	Wiring Diagram				X										
NS	4097-220	Wiring Diagram					X	X	X							
NS	4097-230	Wiring Diagram											X			X
NS	4097-332	Wiring Diagram								X	X					
NS	4097-164	Wiring Diagram												X		
NS	4097-165	Wiring Diagram													X	

NS = Not Shown