

REPLACEMENT PARTS MANUAL

MOBILE HOME AIR CONDITIONER AND HEAT PUMP HEATER PACKAGES MODEL EH3MA

Manual 2110-701

Revision --

Date 8-09-89

Supersedes

* GENERAL NOTES *

- *Revised and/or additional pages may be issued from time to time.
- *A complete and current manual consists of pages dated as shown in the following index.


** INDEX **

<u>Page Description</u>	<u>Page</u>	<u>Date</u>	<u>Supersedes</u>
Functional Components--Layout	1	8-09-89	
" " --Usage List	2	8-09-89	

*** IMPORTANT ***

Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plate.

FUNCTIONAL COMPONENTS

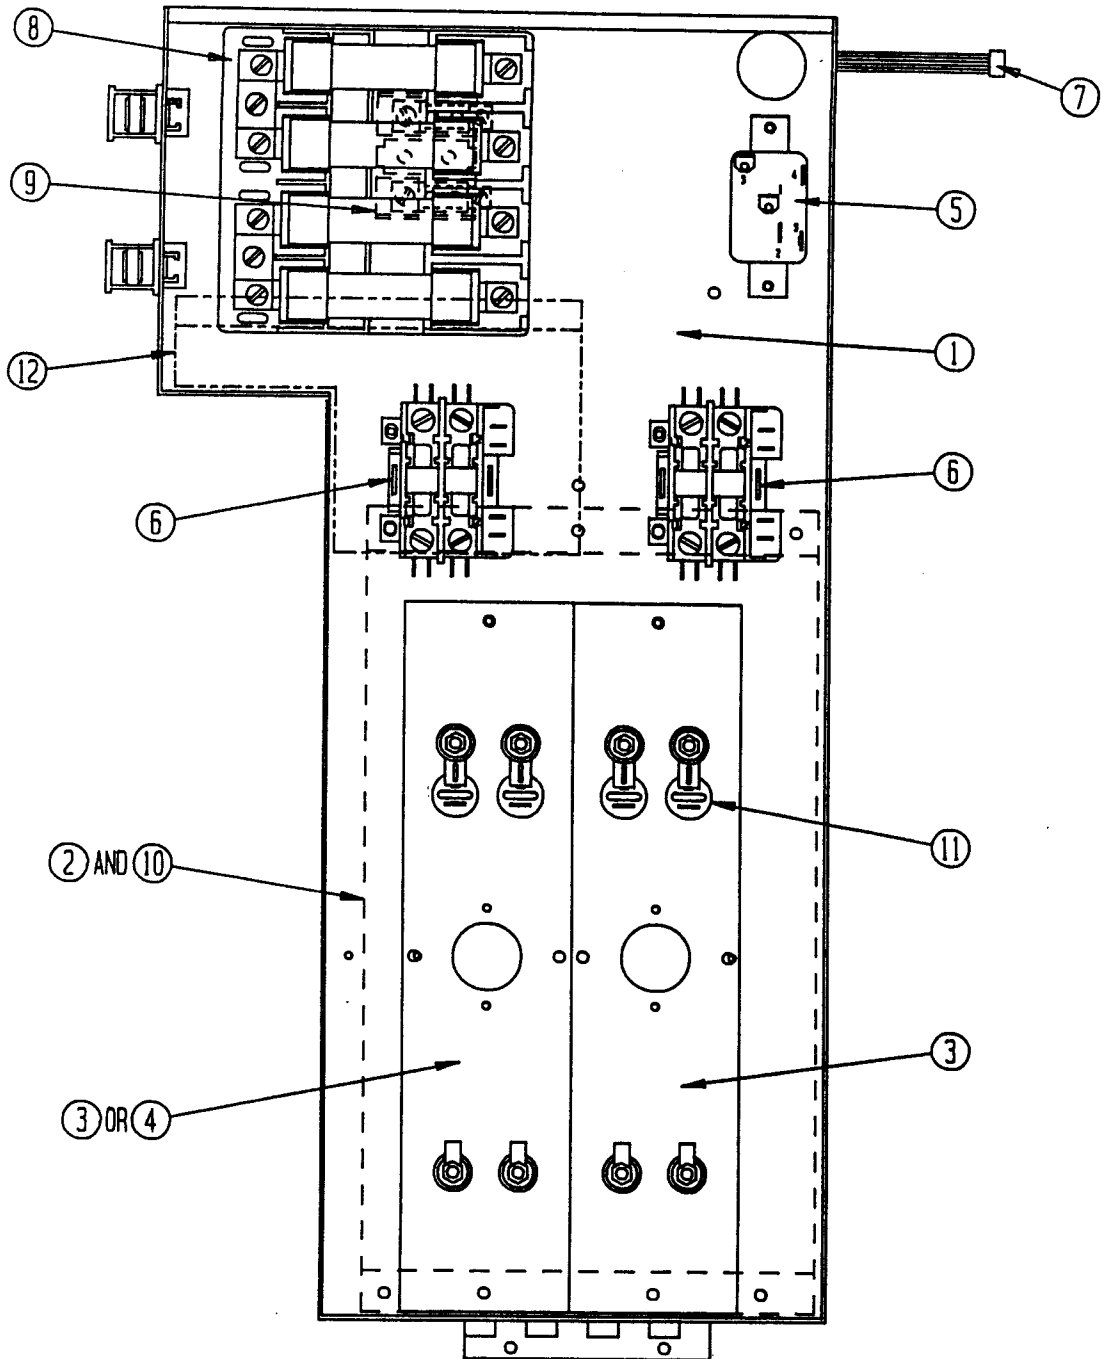

Date: 8-09-89
Supersedes:

FUNCTIONAL COMPONENTS

Dwg. No.	Part No.	Description	E H 3 M A A 0 5	E H 3 M A A 0 8	E H 3 M A A 1 0	E H 3 M A A 1 5	E H 3 M A A 2 0
1	117-027	Heater Control Assembly	x	x	x	x	x
2	134-028	Heater Wrapper	x	x	x	x	x
3	8604-023	Heat Strip 5KW	x				
3	8604-024	Heat Strip 10KW			x		2
3	8604-025	Heat Strip 15KW				x	
3	8604-026	Heat Strip 8KW		x			
4	136-018	Fill Plate	x	x	x		
4	136-019	Fill Plate				x	
5	8201-008	Blower Relay	x	x	x	x	x
6	8401-006	Contactors	x	x	x	2	2
7	3000-915	Wire Assembly	x	x	x		
7	3000-916	Wire Assembly				x	x
8	8614-017	Fuse Block				x	
8	8614-018	Fuse Block					x
9	8607-013	Terminal Block	x	x	x		
10	8402-011	Limit Switch	x	x	x	x	x
11	8402-030	Thermal Cutoff	1	2	2	3	4
12	134-049	Fuse Barrier				x	x
	132-016	Control Panel Cover (not shown)	x	x	x	x	x
THE FOLLOWING PARTS CONTAINED IN THE PLASTIC BAG							
	8611-006	Ground Terminal	x	x	x	x	x
	8607-013	Terminal Block	x	x	x	x	x
	4060-110	Wiring Diagram	x				
	4060-120	Wiring Diagram		x	x		
	4060-130	Wiring Diagram				x	
	4060-140	Wiring Diagram					x

Date: 8-09-89
Supersedes: