

⚠ 2nd heat contactor operated only during emergency heat or compressor cutoff.

⚠ For 208V operation move this wire to 208V transformer tap.

