

2nd heat contactor operates only during emergency heat or compressor cutoff.

For 100V operation move this wire to 100V transformer tap.

