

⚠ 2nd heat contactor operates only during emergency heat or compressor cutoff.

⚠ For 208V operation move this wire to 208V transformer tap.

TB/4H1024/
06/4P1261

or

TB/4H1129/
06/4L1101

