


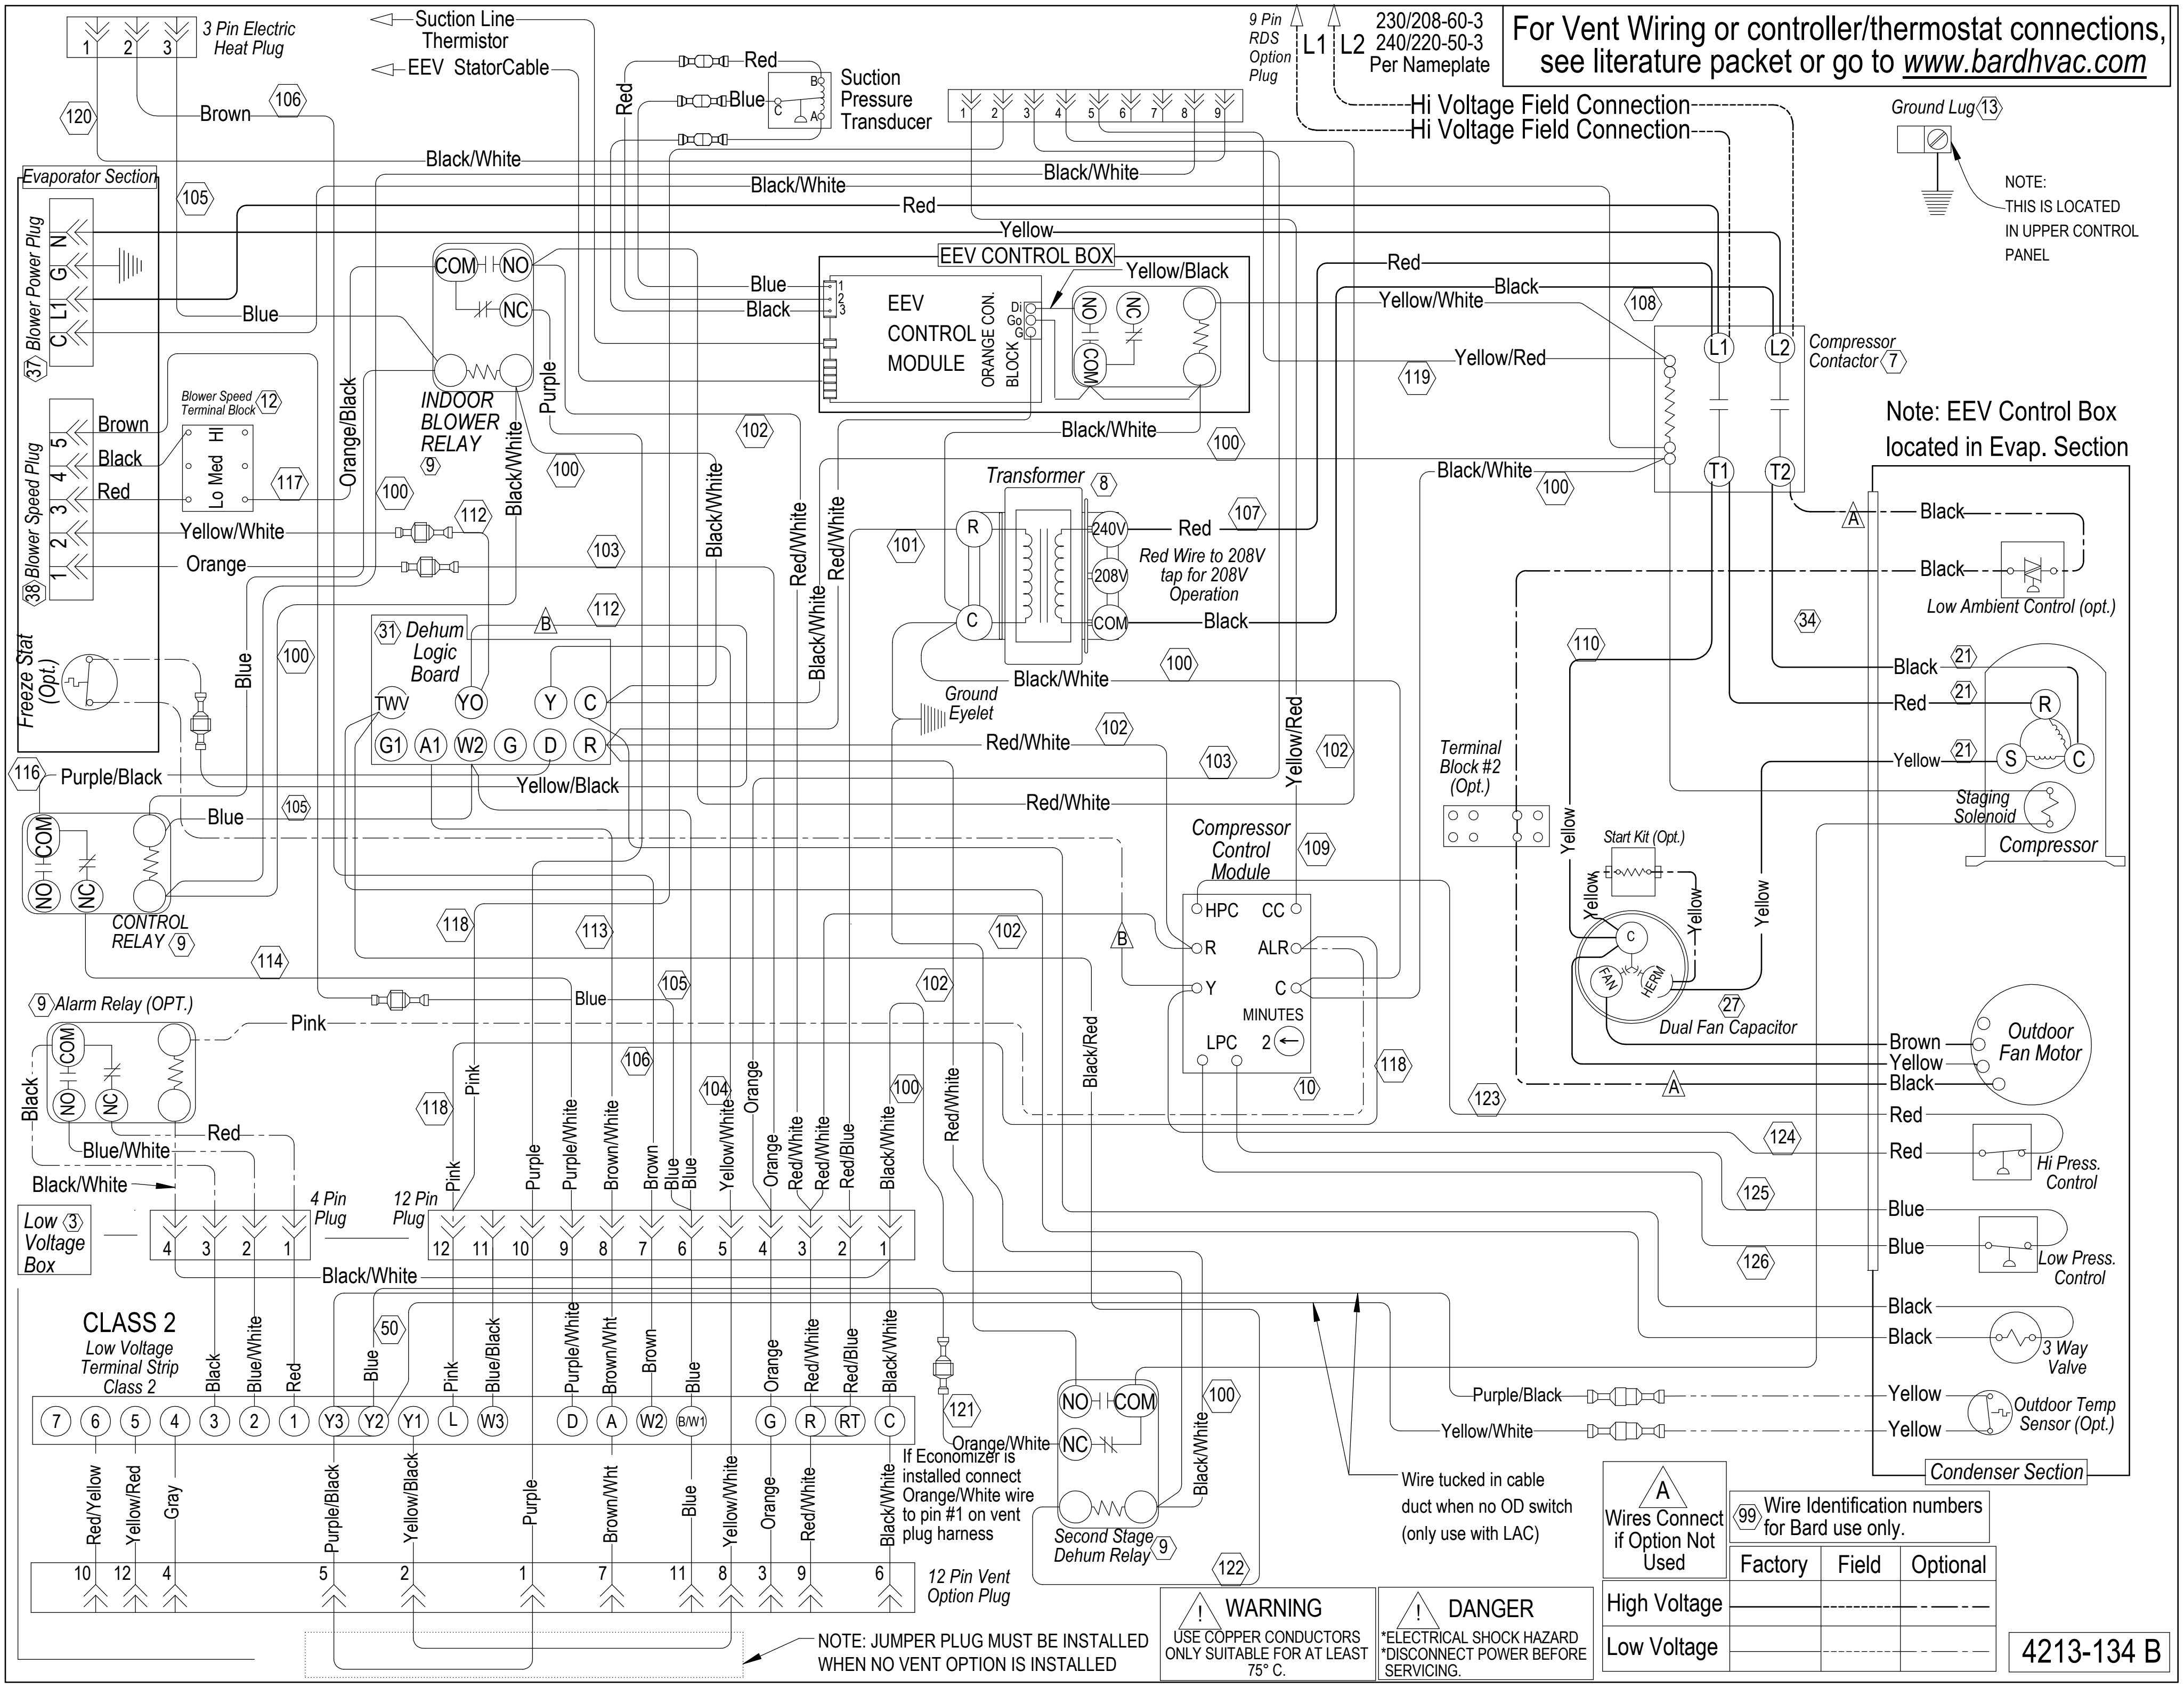

For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

NOTE: THIS IS LOCATED IN UPPER CONTROL PANEL

Note: EEV Control Box located in Evap. Section

Low Ambient Control (opt.)

Staging Solenoid

Outdoor Fan Motor

Hi Press. Control

Low Press. Control

3 Way Valve

Outdoor Temp Sensor (Opt.)

Condenser Section

Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

A Wires Connect if Option Not Used

WARNING USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER ELECTRICAL SHOCK HAZARD *DISCONNECT POWER BEFORE SERVICING.