


For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardhvac.com

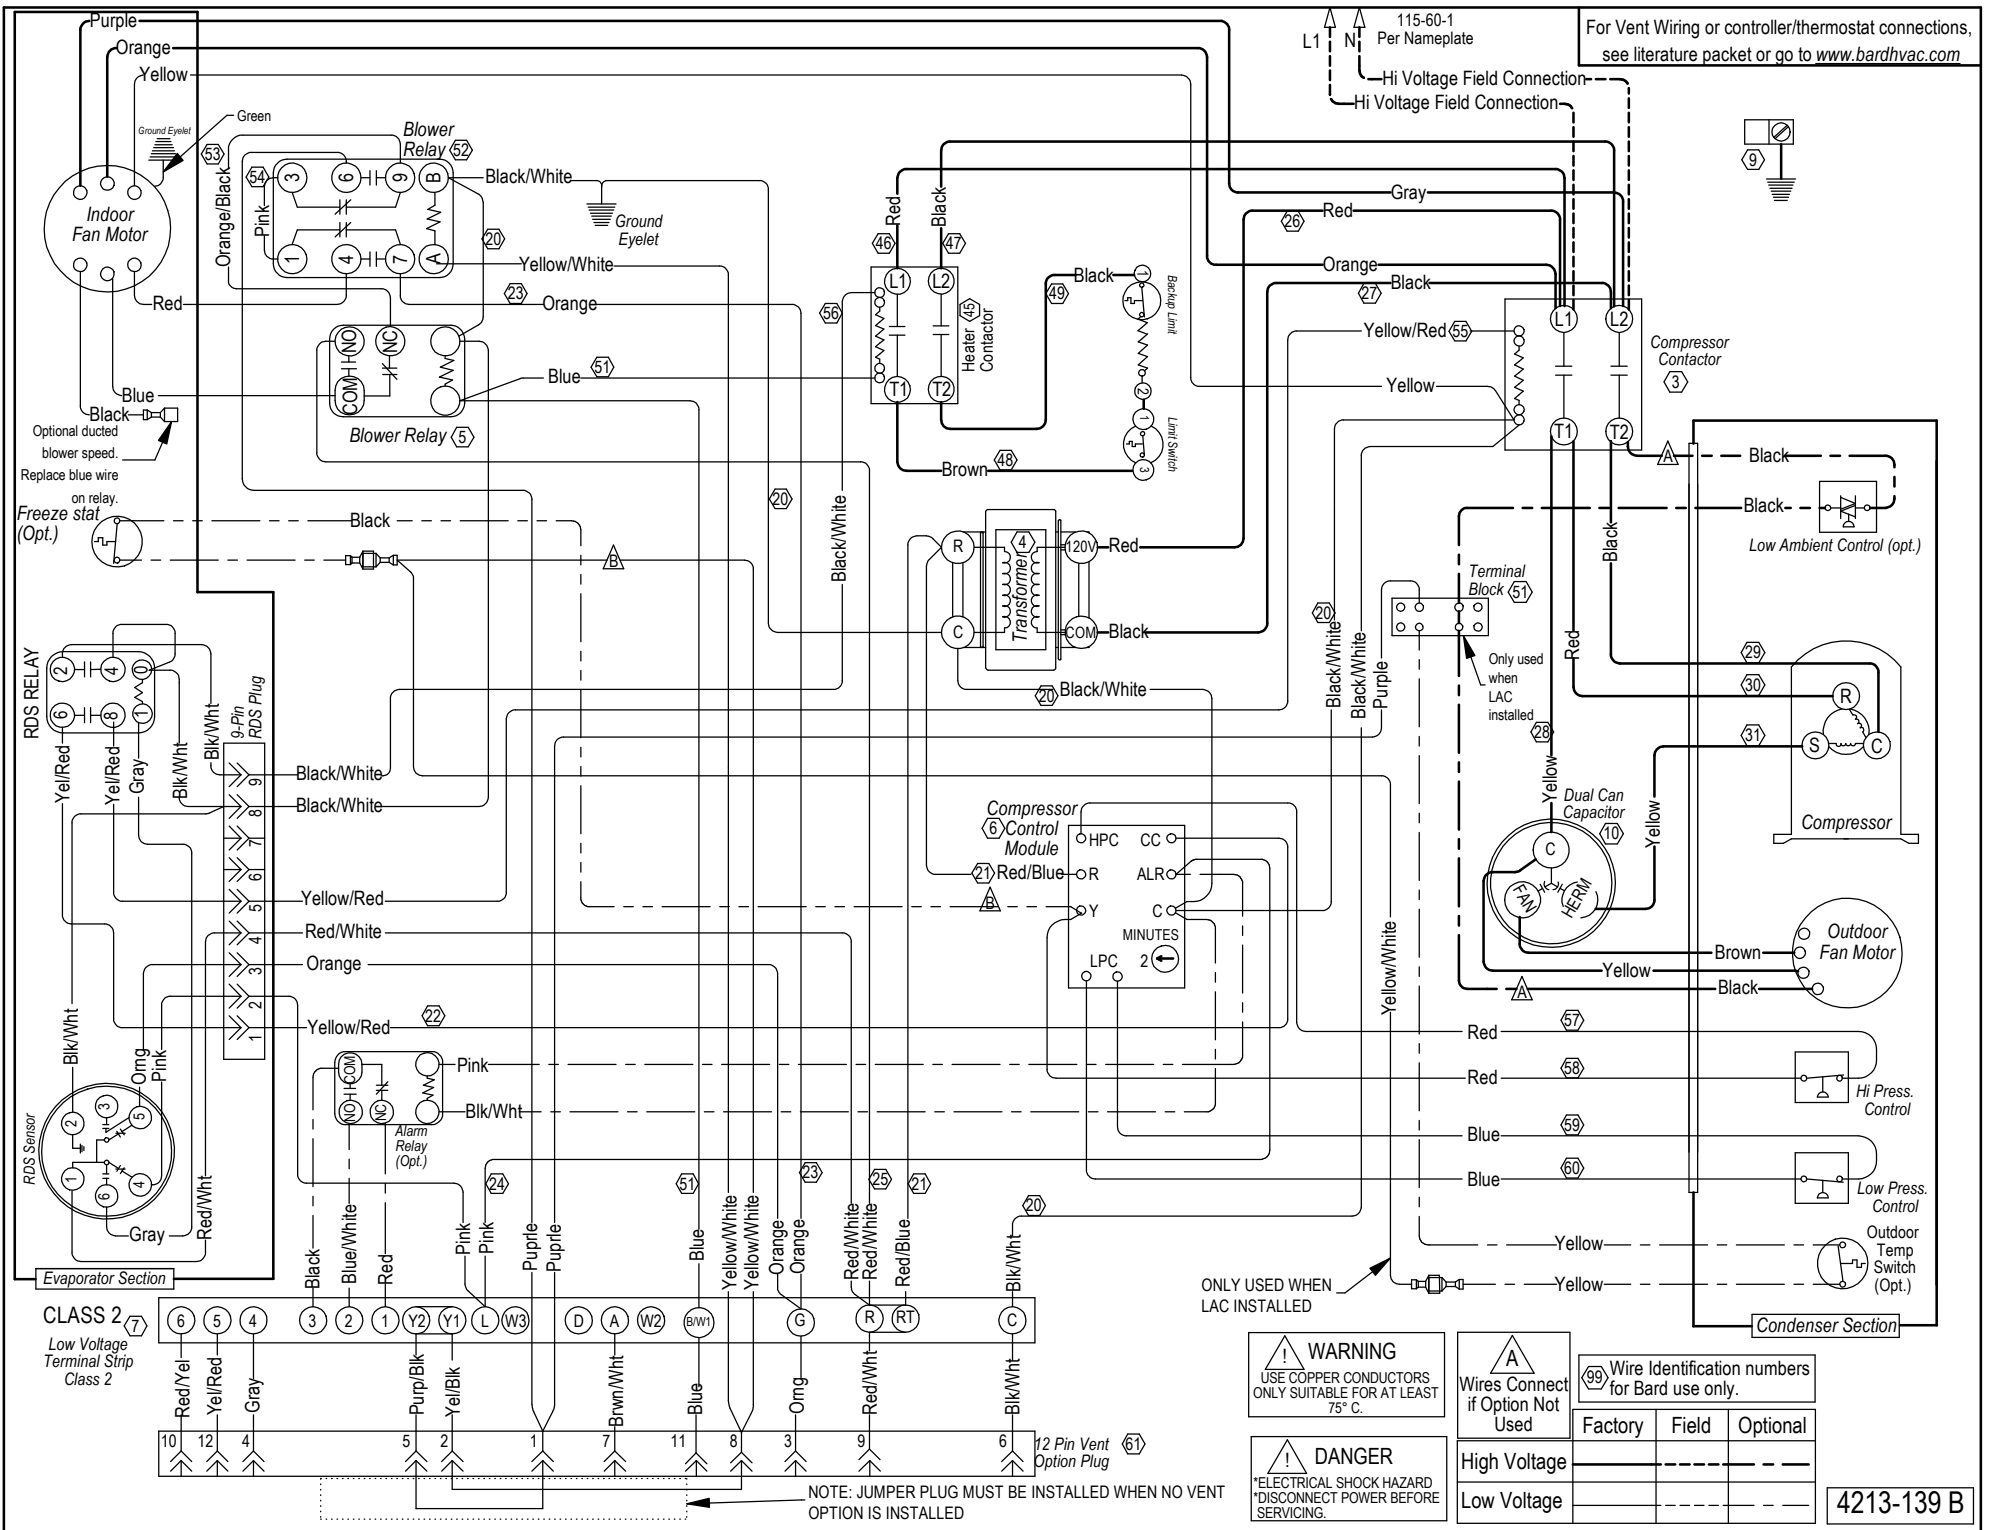

WARNING
USE COPPER CONDUCTORS ONLY SUITABLE FOR AT LEAST 75° C.

DANGER
ELECTRICAL SHOCK HAZARD
DISCONNECT POWER BEFORE SERVICING.

Wires Connect if Option Not Used

	Factory	Field	Optional
High Voltage			
Low Voltage			

Wire Identification numbers for Bard use only.

	Factory	Field	Optional
High Voltage			
Low Voltage			

4213-139 B

Optional ducted blower speed. Replace blue wire on relay. Freeze stat (Opt.)

ONLY USED WHEN LAC INSTALLED

NOTE: JUMPER PLUG MUST BE INSTALLED WHEN NO VENT OPTION IS INSTALLED