


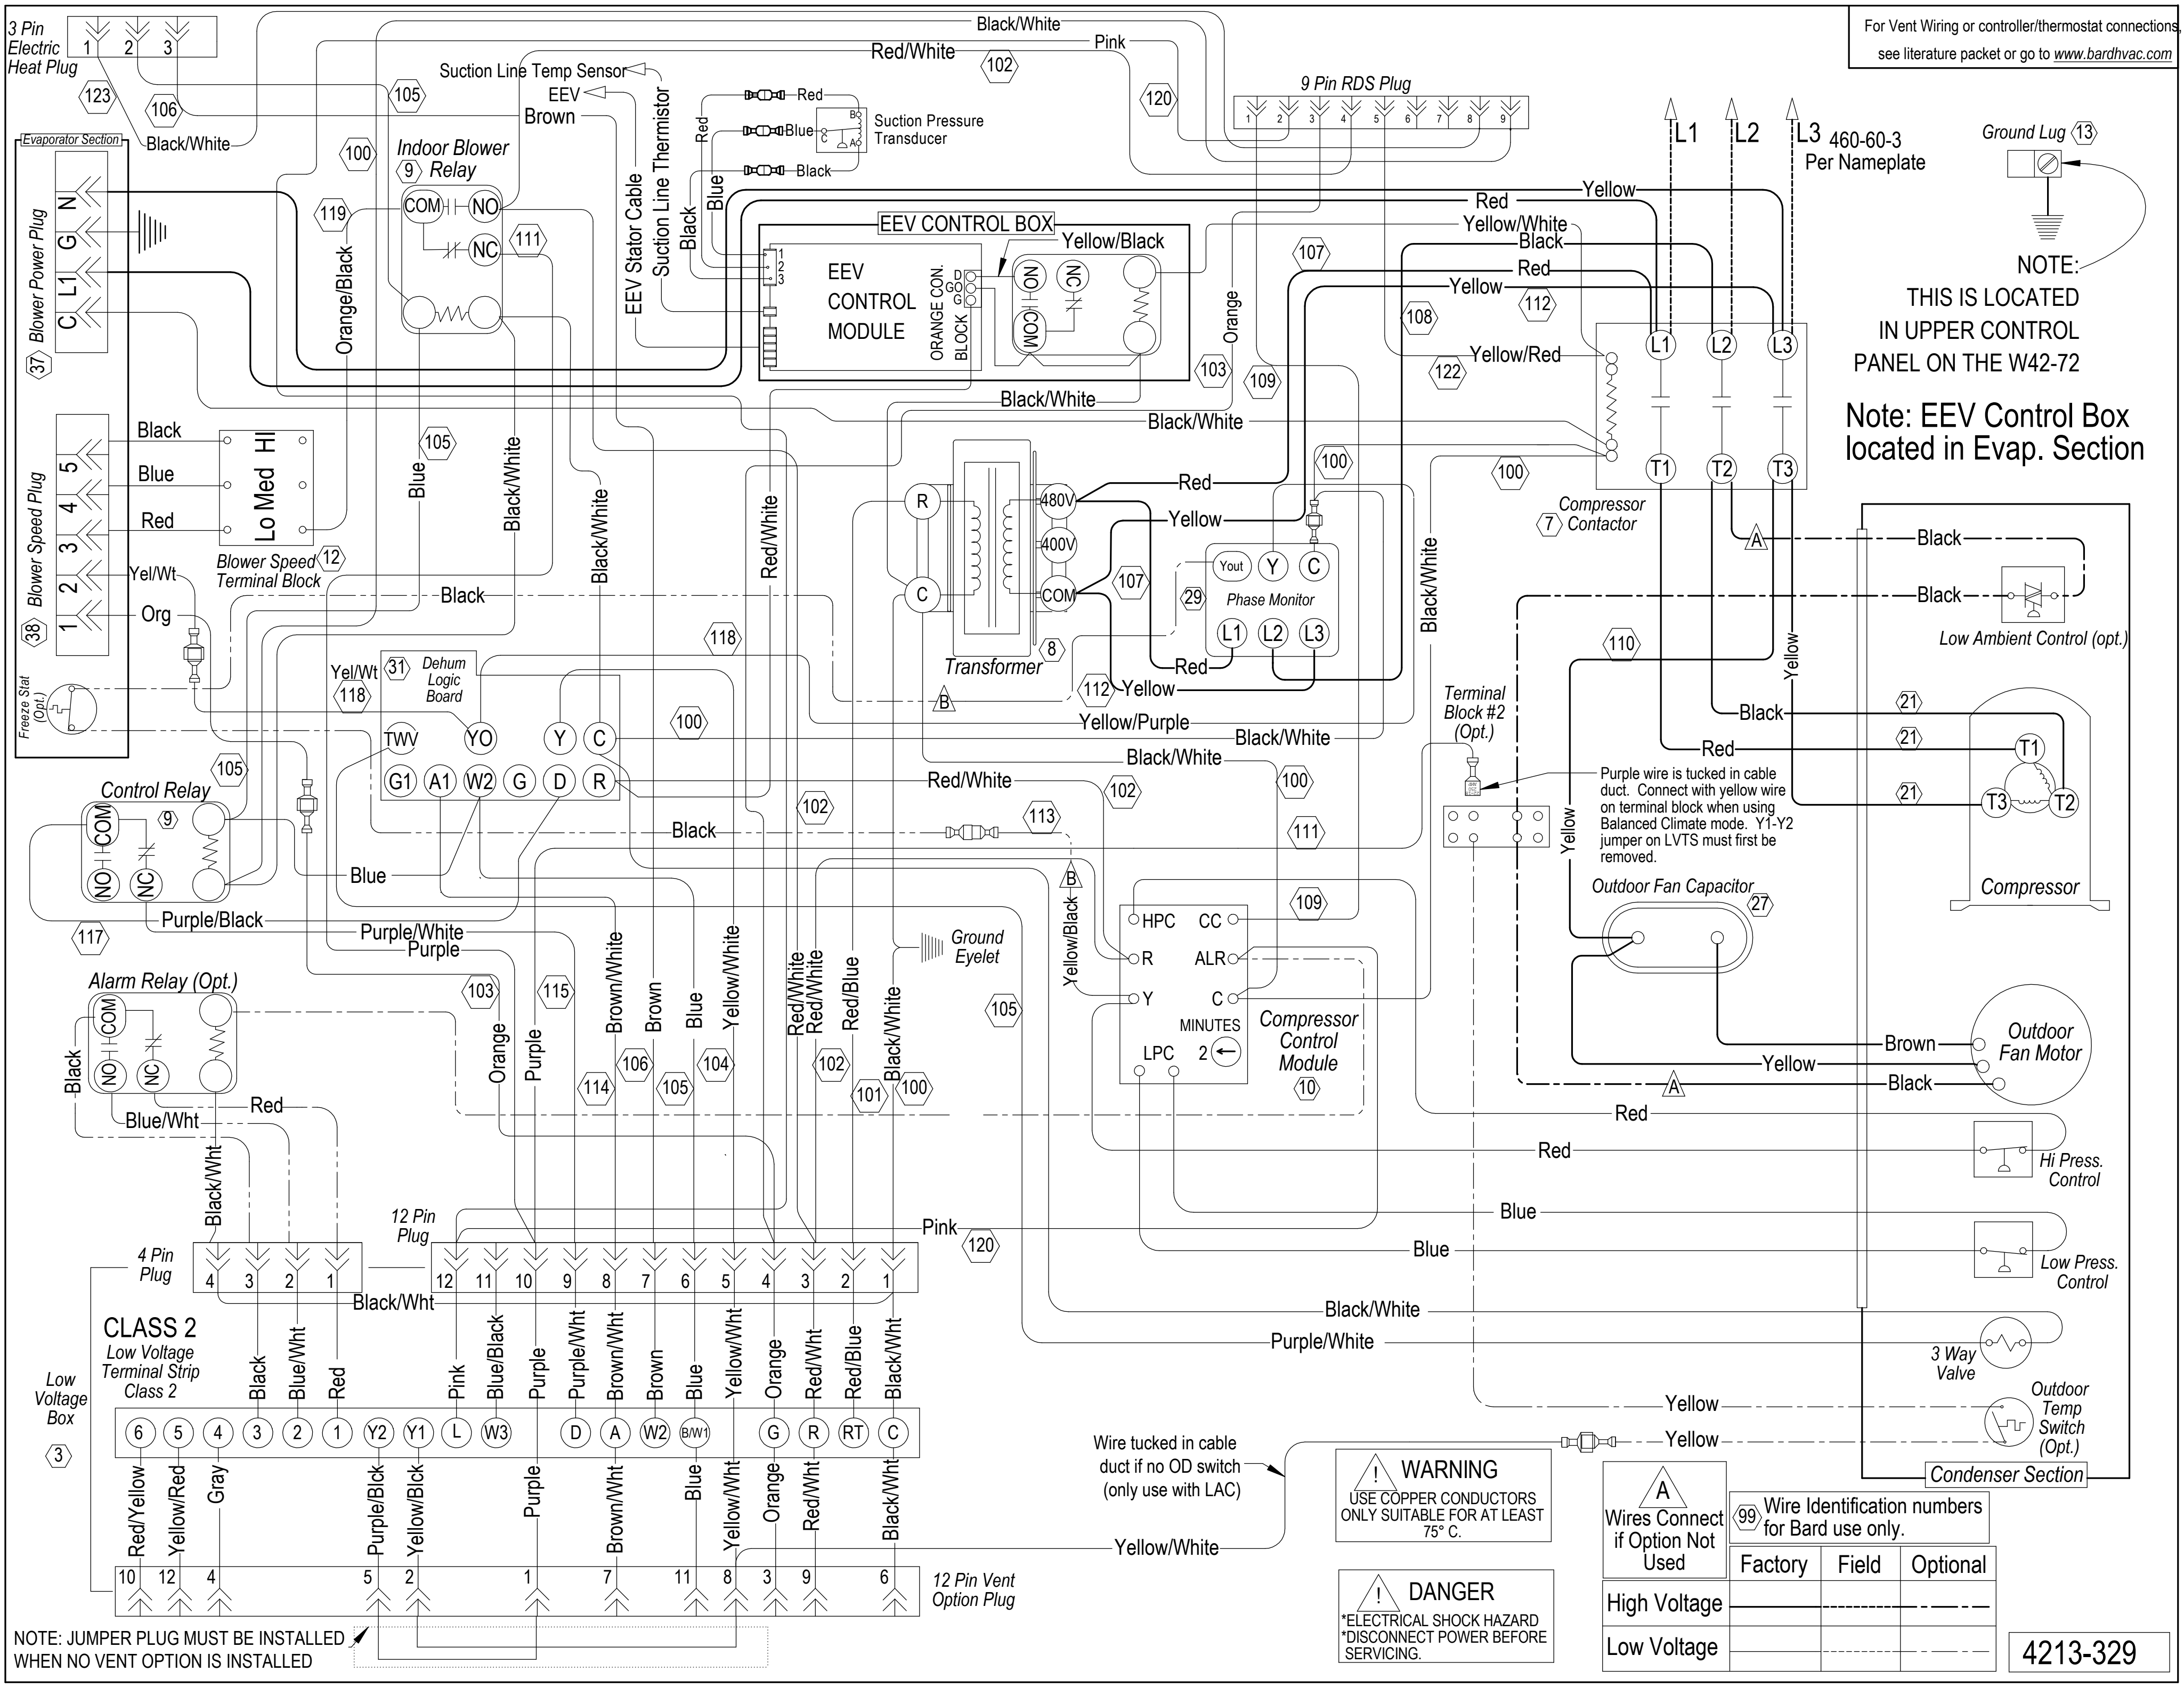

For Vent Wiring or controller/thermostat connections see literature packet or go to www.bardhvac.com

NOTE:
THIS IS LOCATED
IN UPPER CONTROL
PANEL ON THE W42-72
Note: EEV Control Box
located in Evap. Section

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

A
Wires Connect
if Option Not
Used

Wire Identification numbers for Bard use only.		
Factory	Field	Optional
High Voltage		
Low Voltage		