


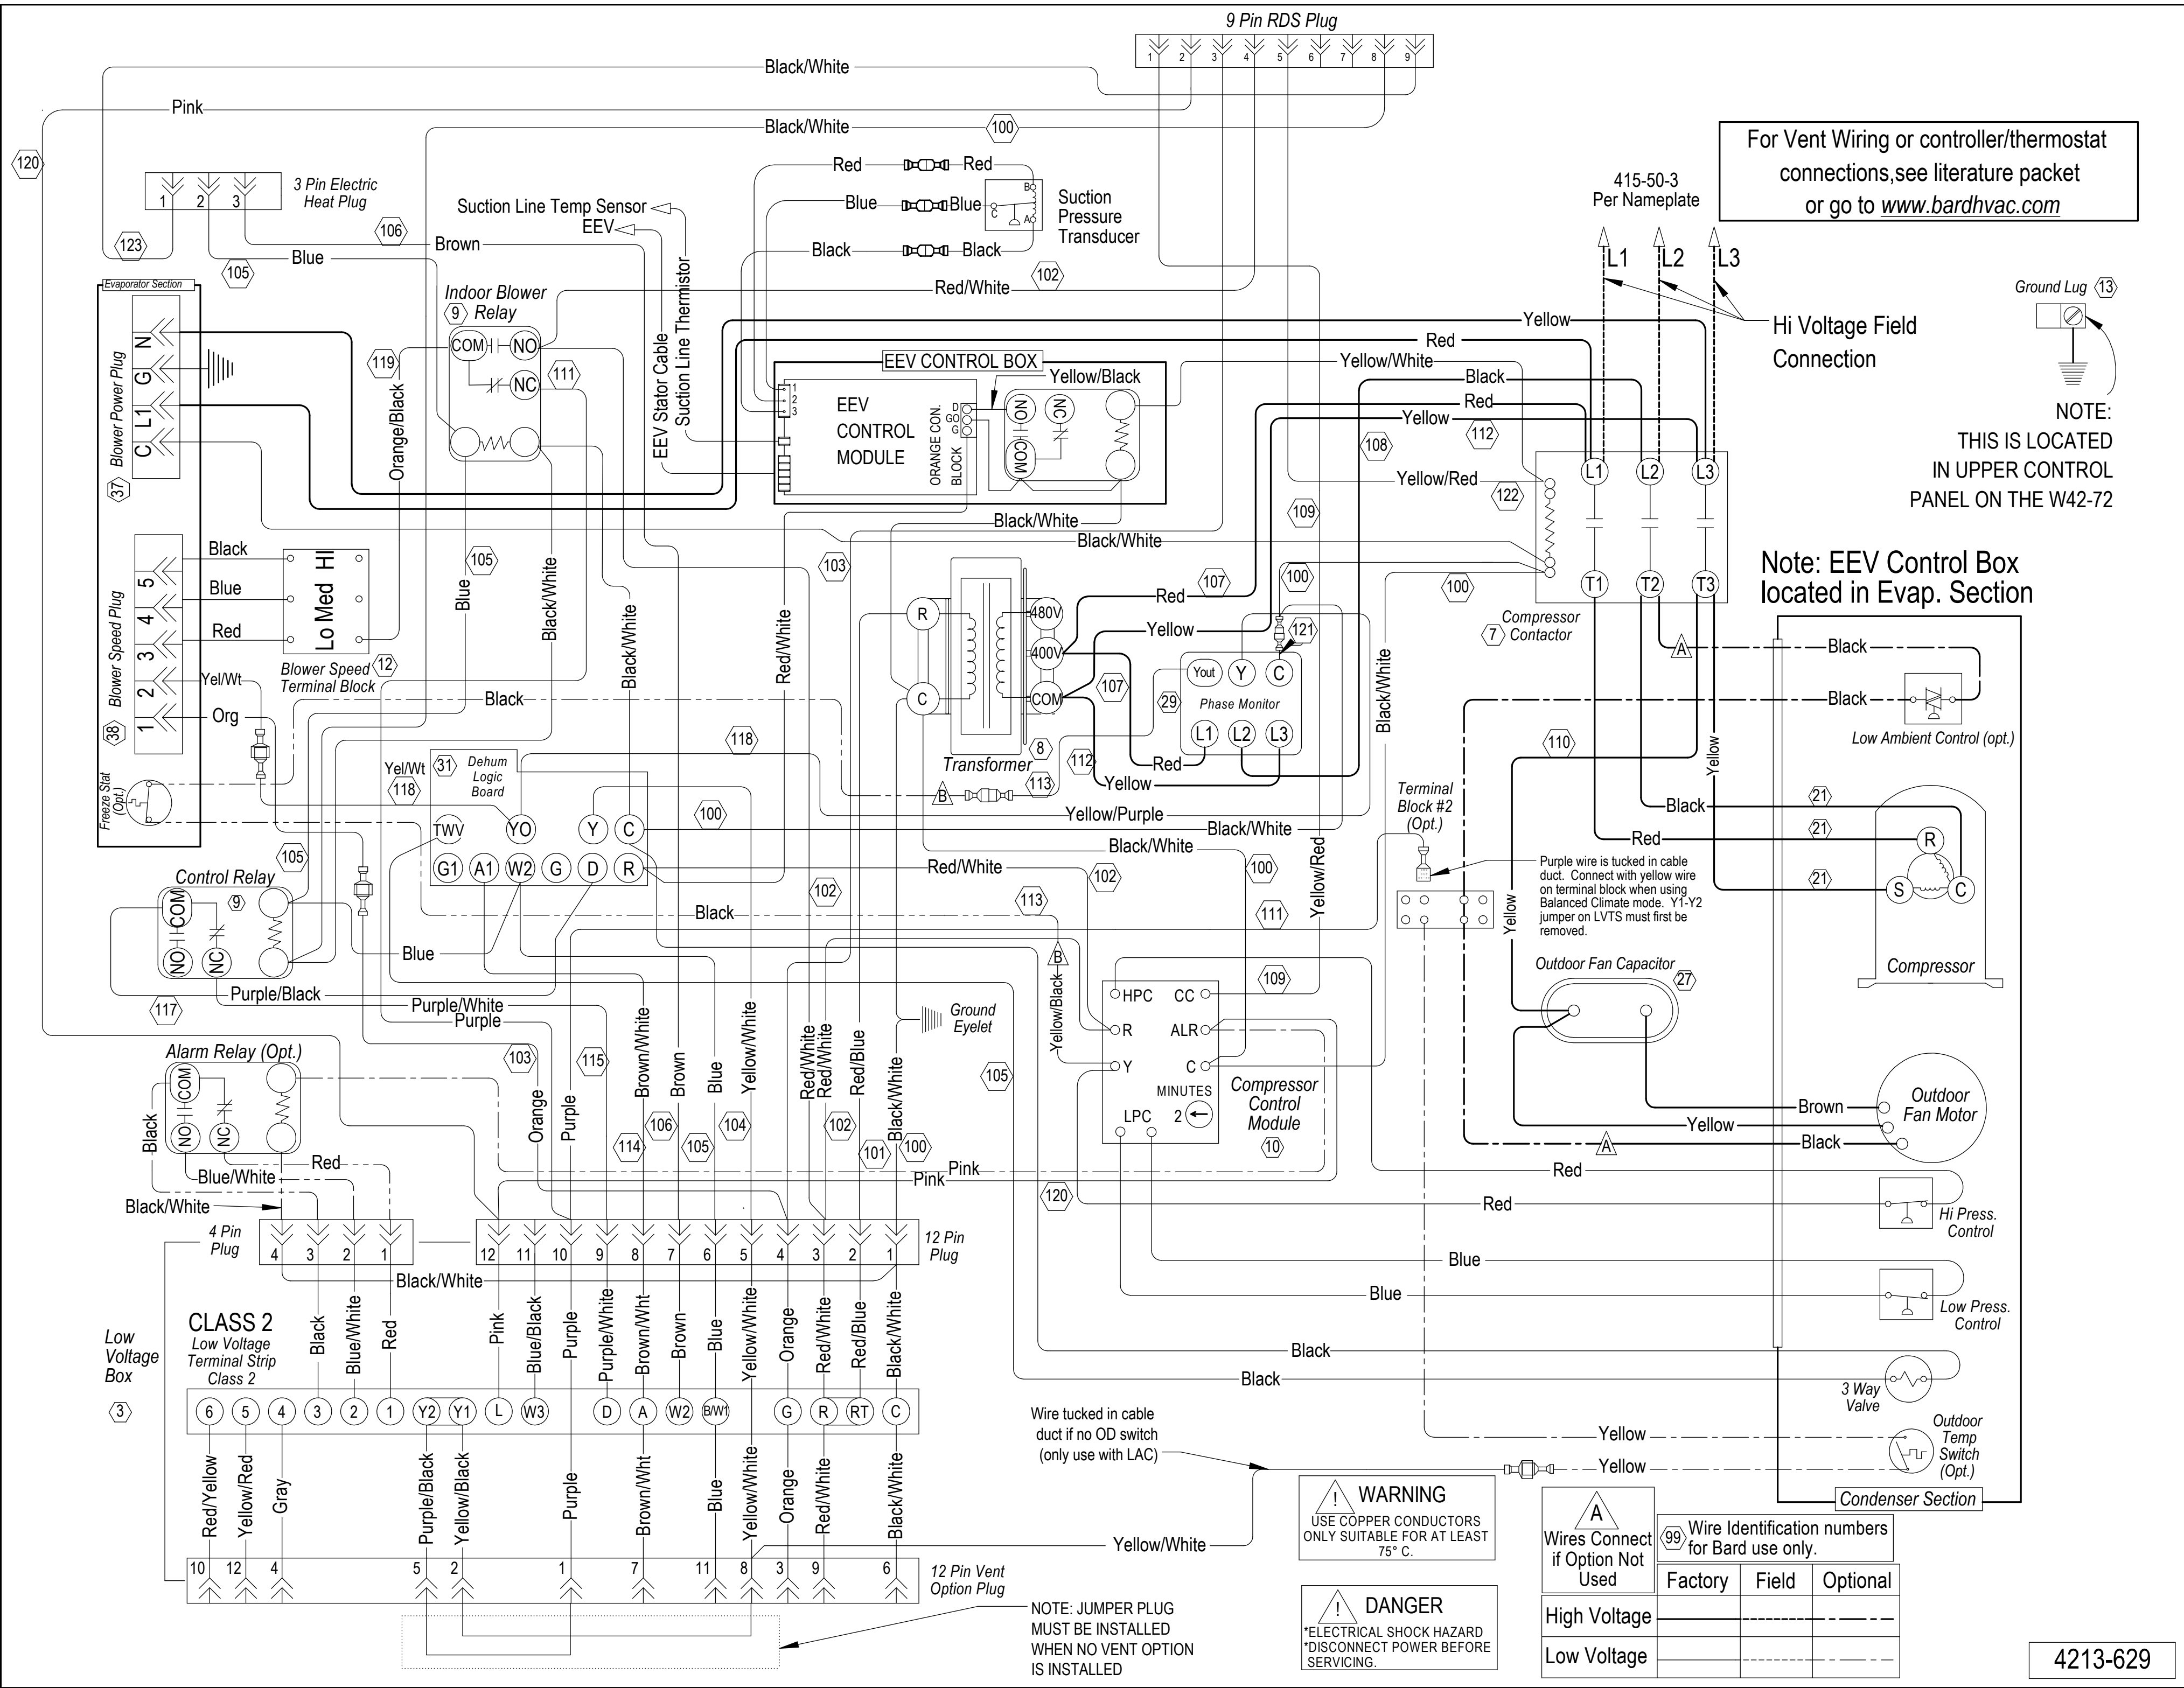

For Vent Wiring or controller/thermostat connections, see literature packet or go to www.bardvac.com

NOTE: THIS IS LOCATED IN UPPER CONTROL PANEL ON THE W42-72

Note: EEV Control Box located in Evap. Section

WARNING
USE COPPER CONDUCTORS
ONLY SUITABLE FOR AT LEAST
75° C.

DANGER
*ELECTRICAL SHOCK HAZARD
*DISCONNECT POWER BEFORE
SERVICING.

Wires Connect if Option Not Used	Wire Identification numbers for Bard use only.		
	Factory	Field	Optional
High Voltage			
Low Voltage			