





507026

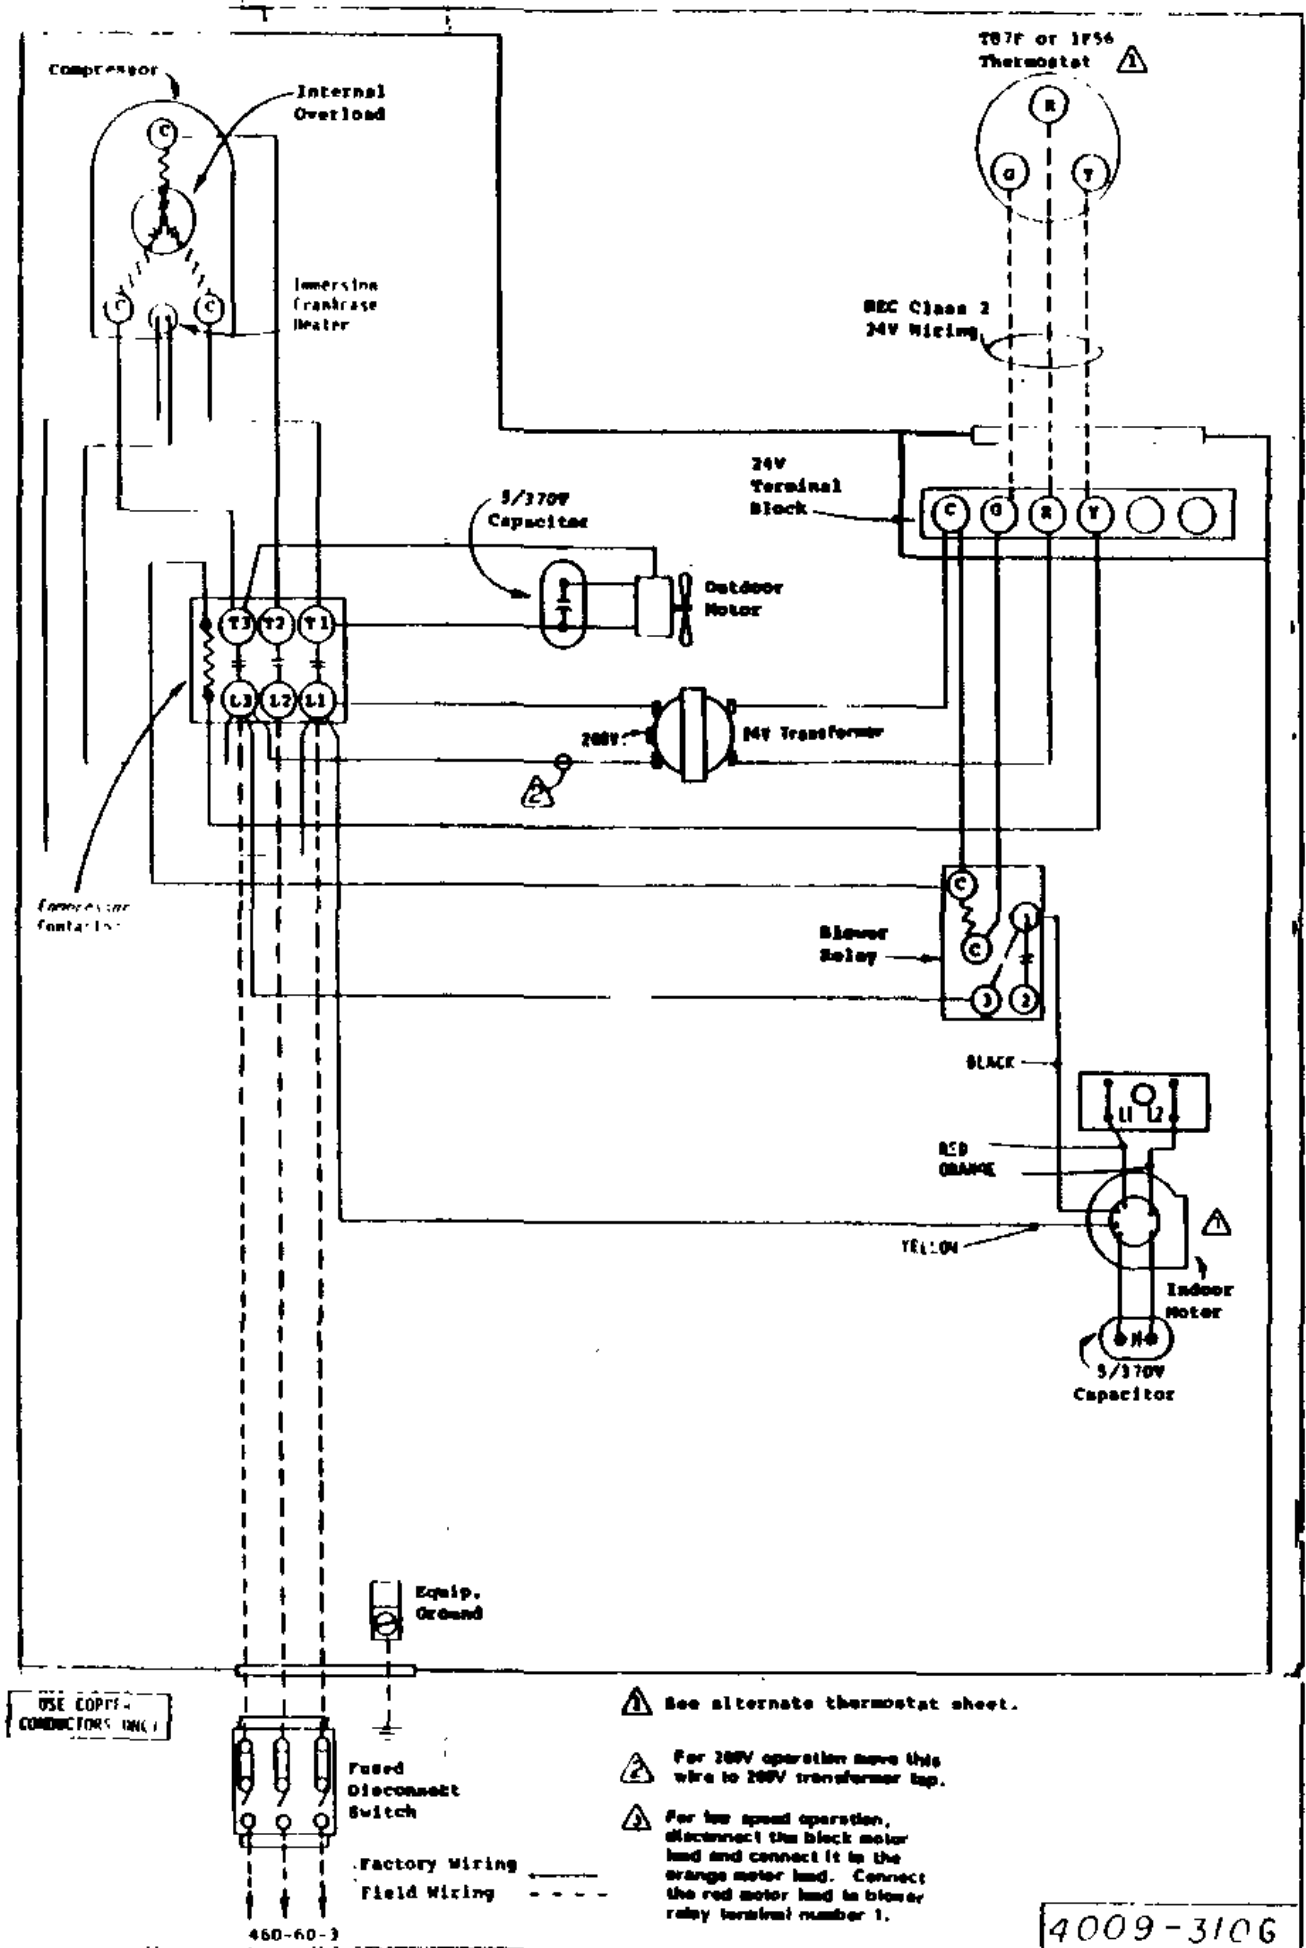

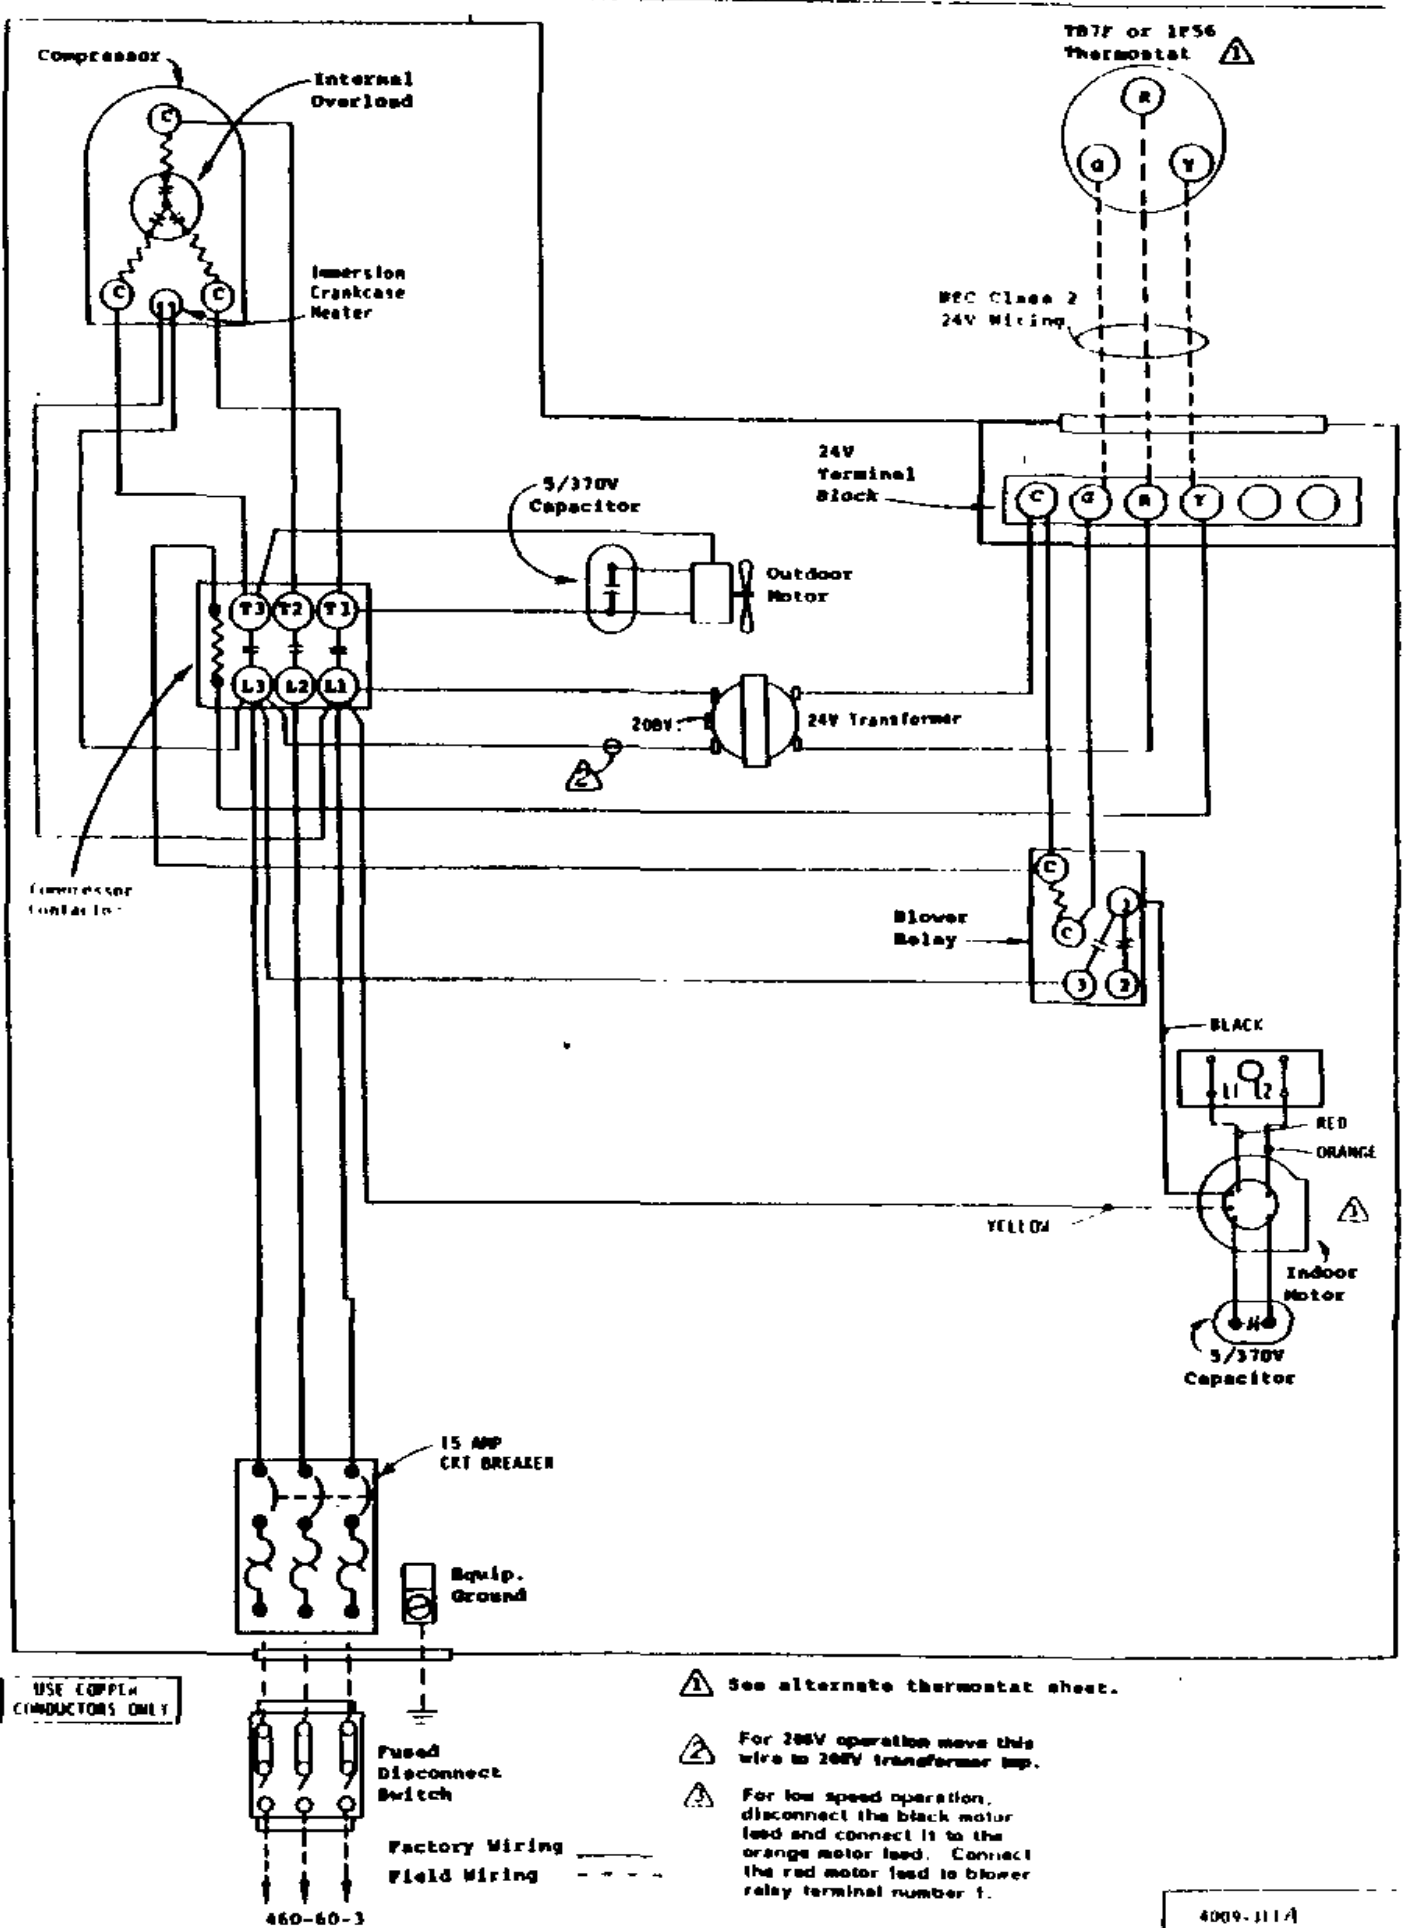

502029

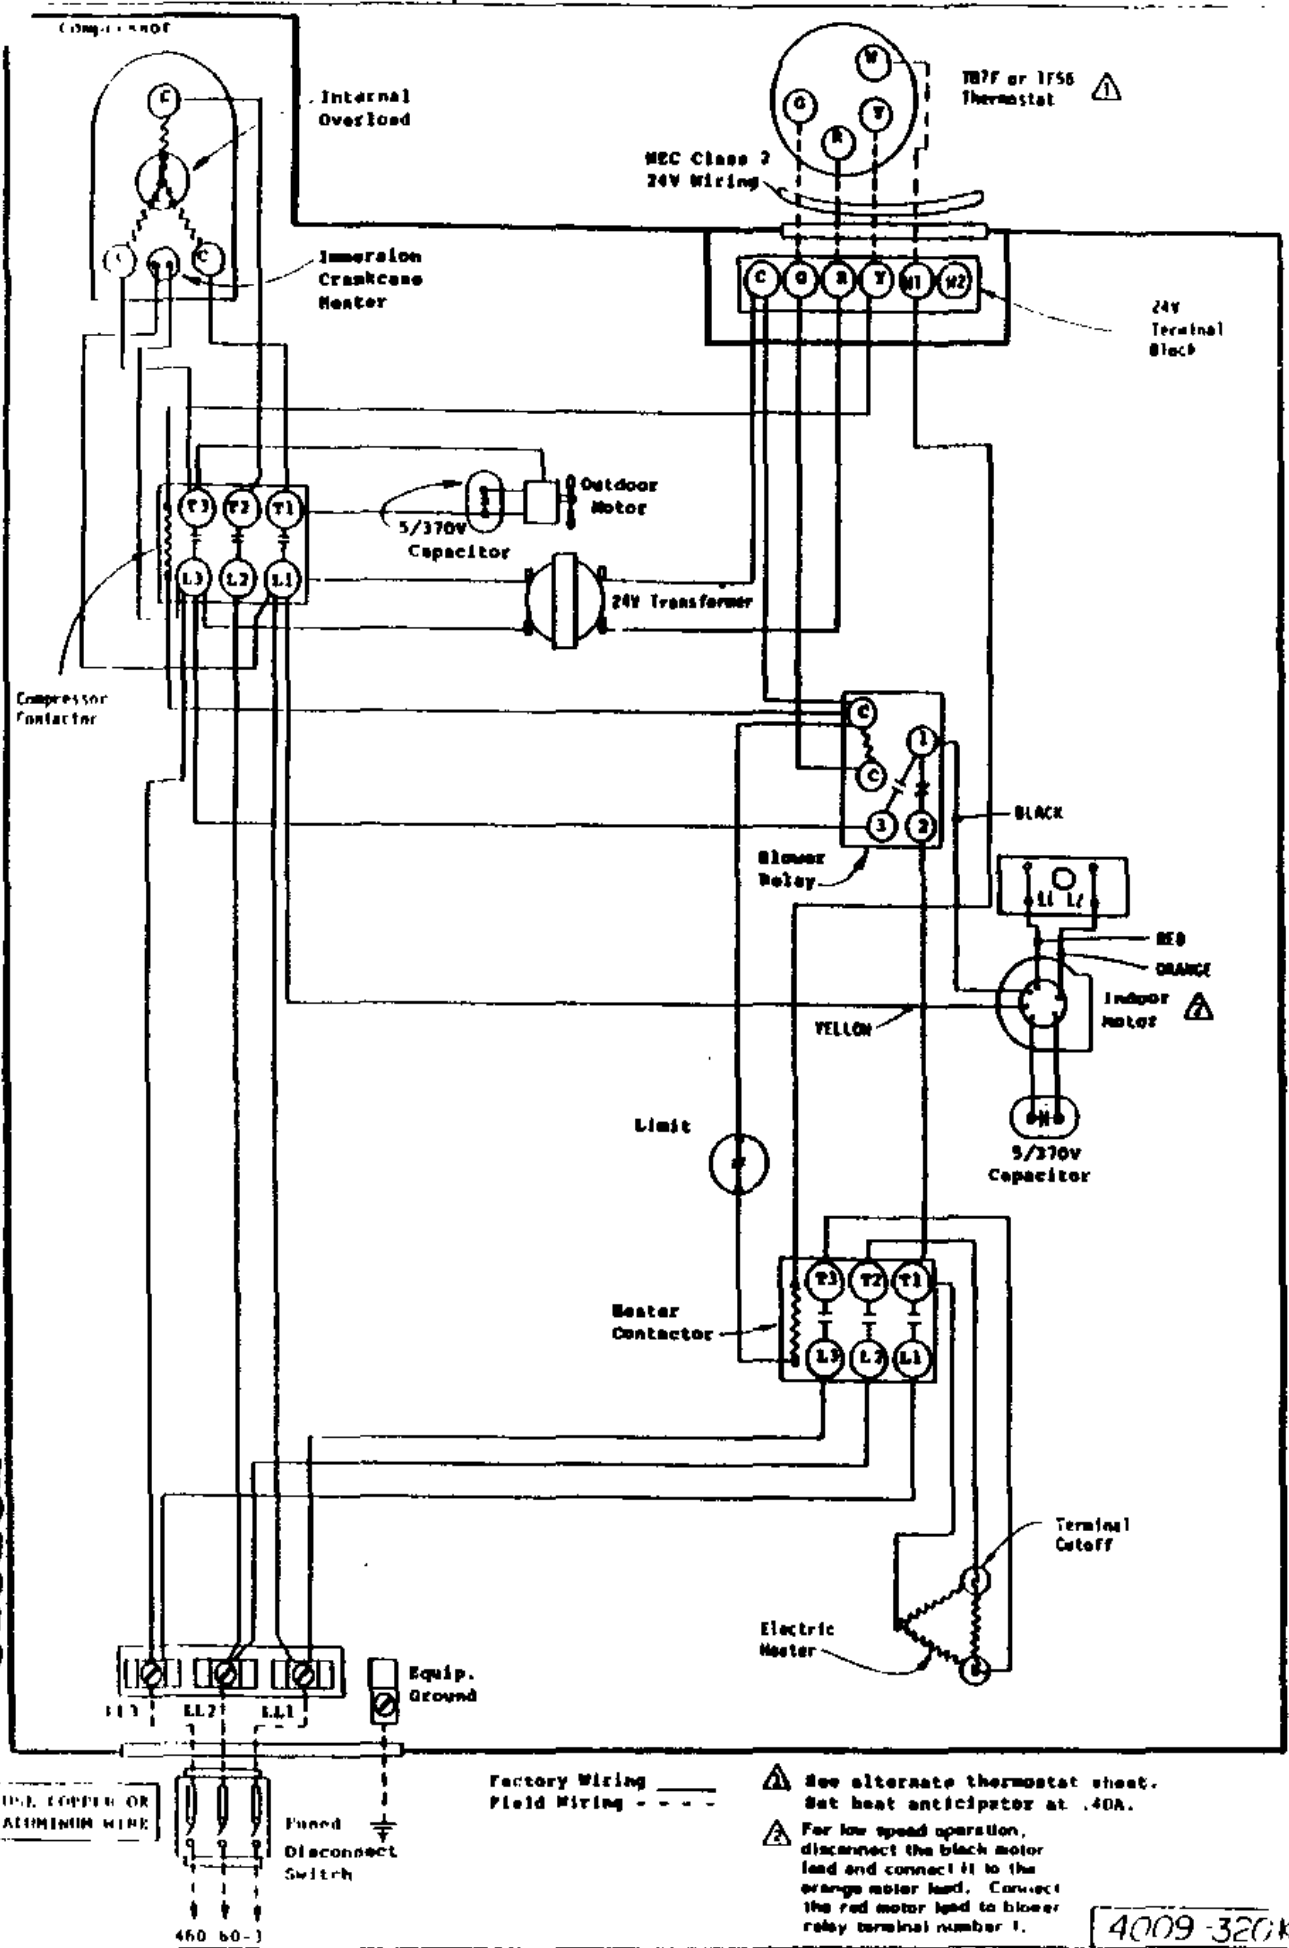

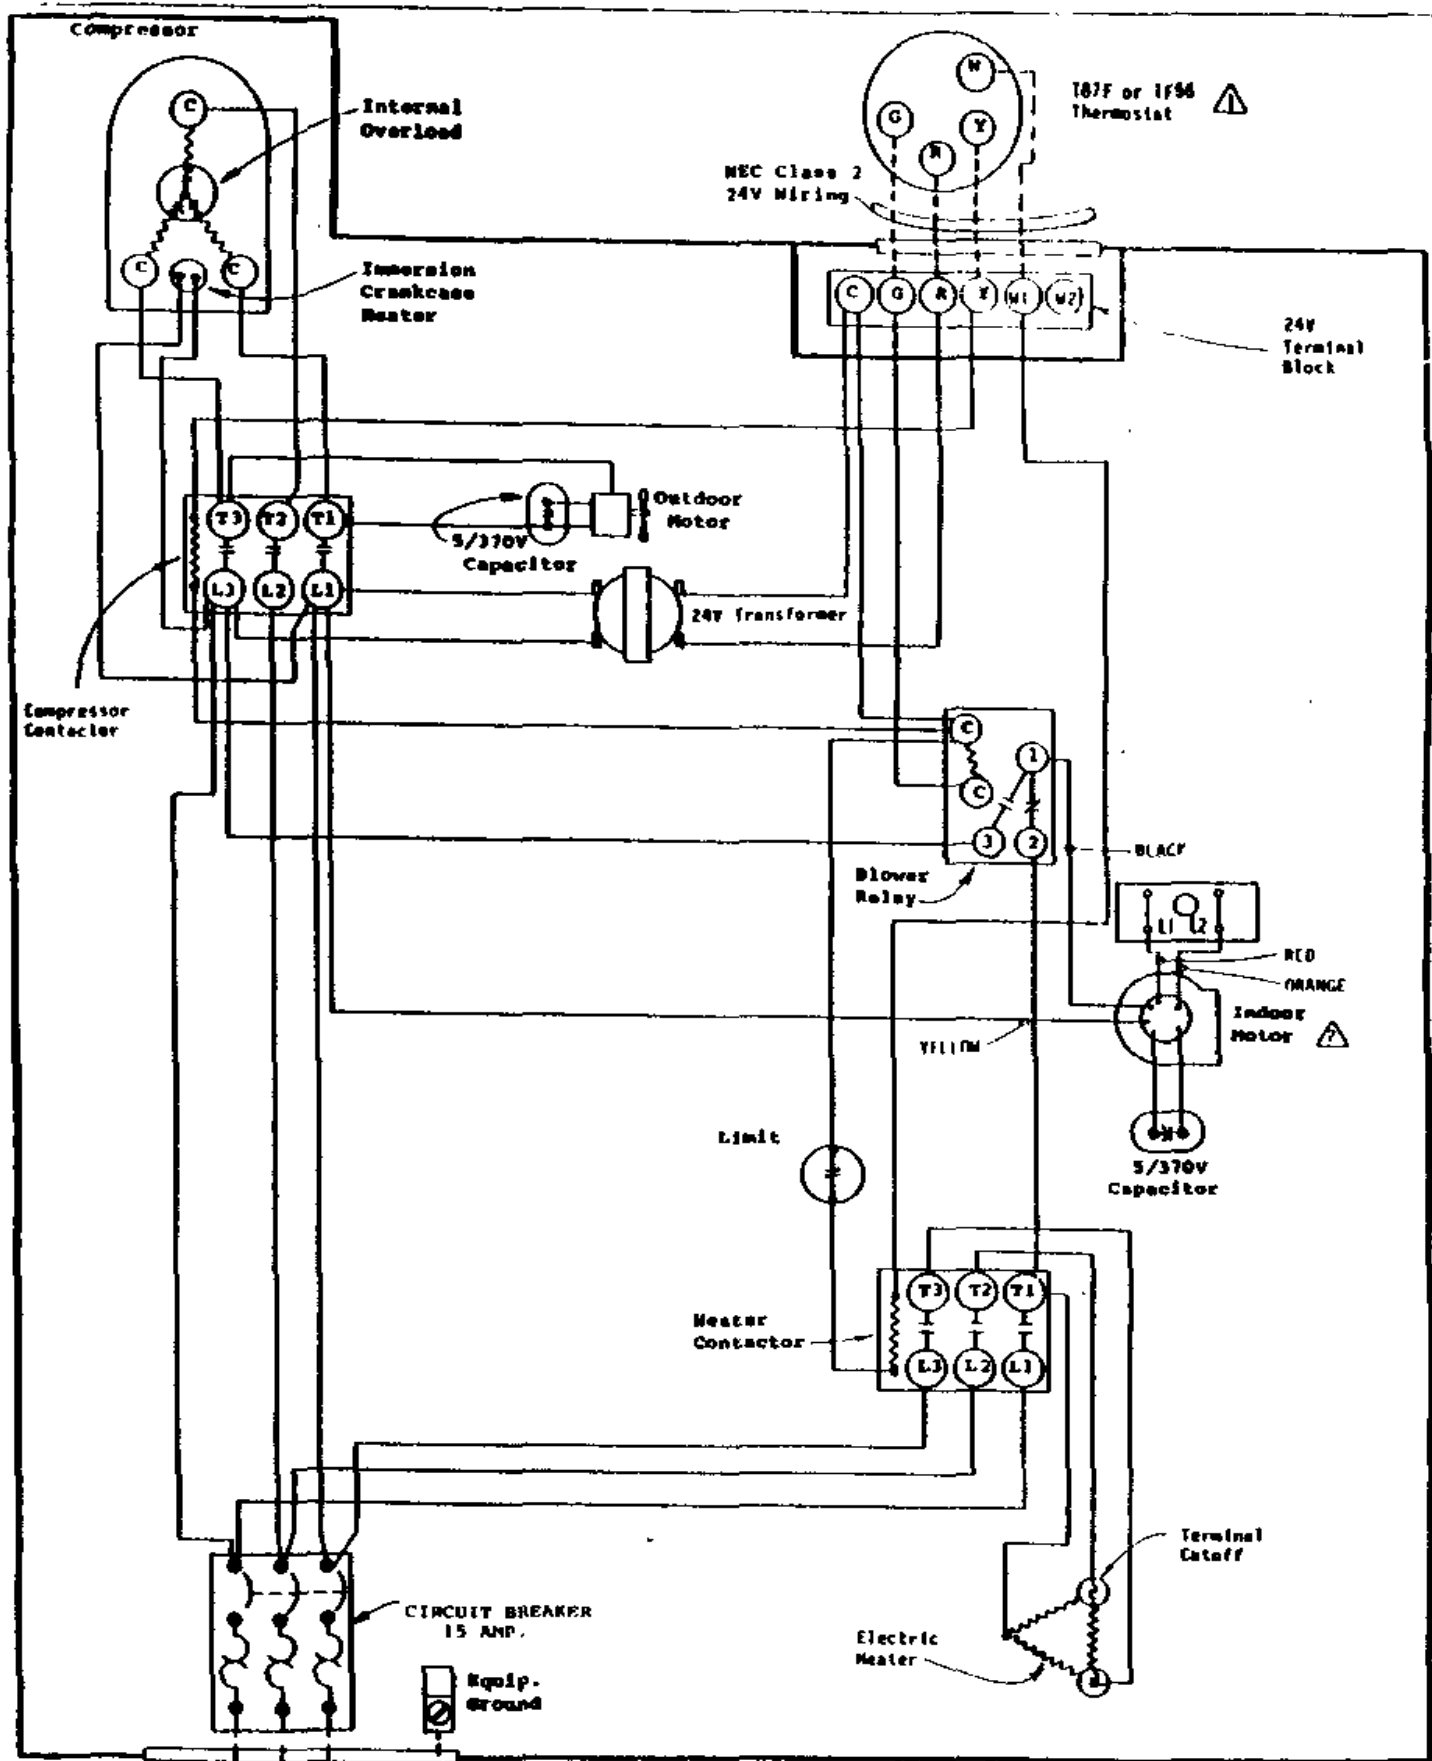


USE COPPER OR ALUMINUM WIRE

Factory Wiring ———
Field Wiring - - - -

- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A.
- ⚠ For low speed operation, disconnect the black motor lead and connect it to the orange motor lead. Connect the red motor lead to blower relay terminal number 1.

502078

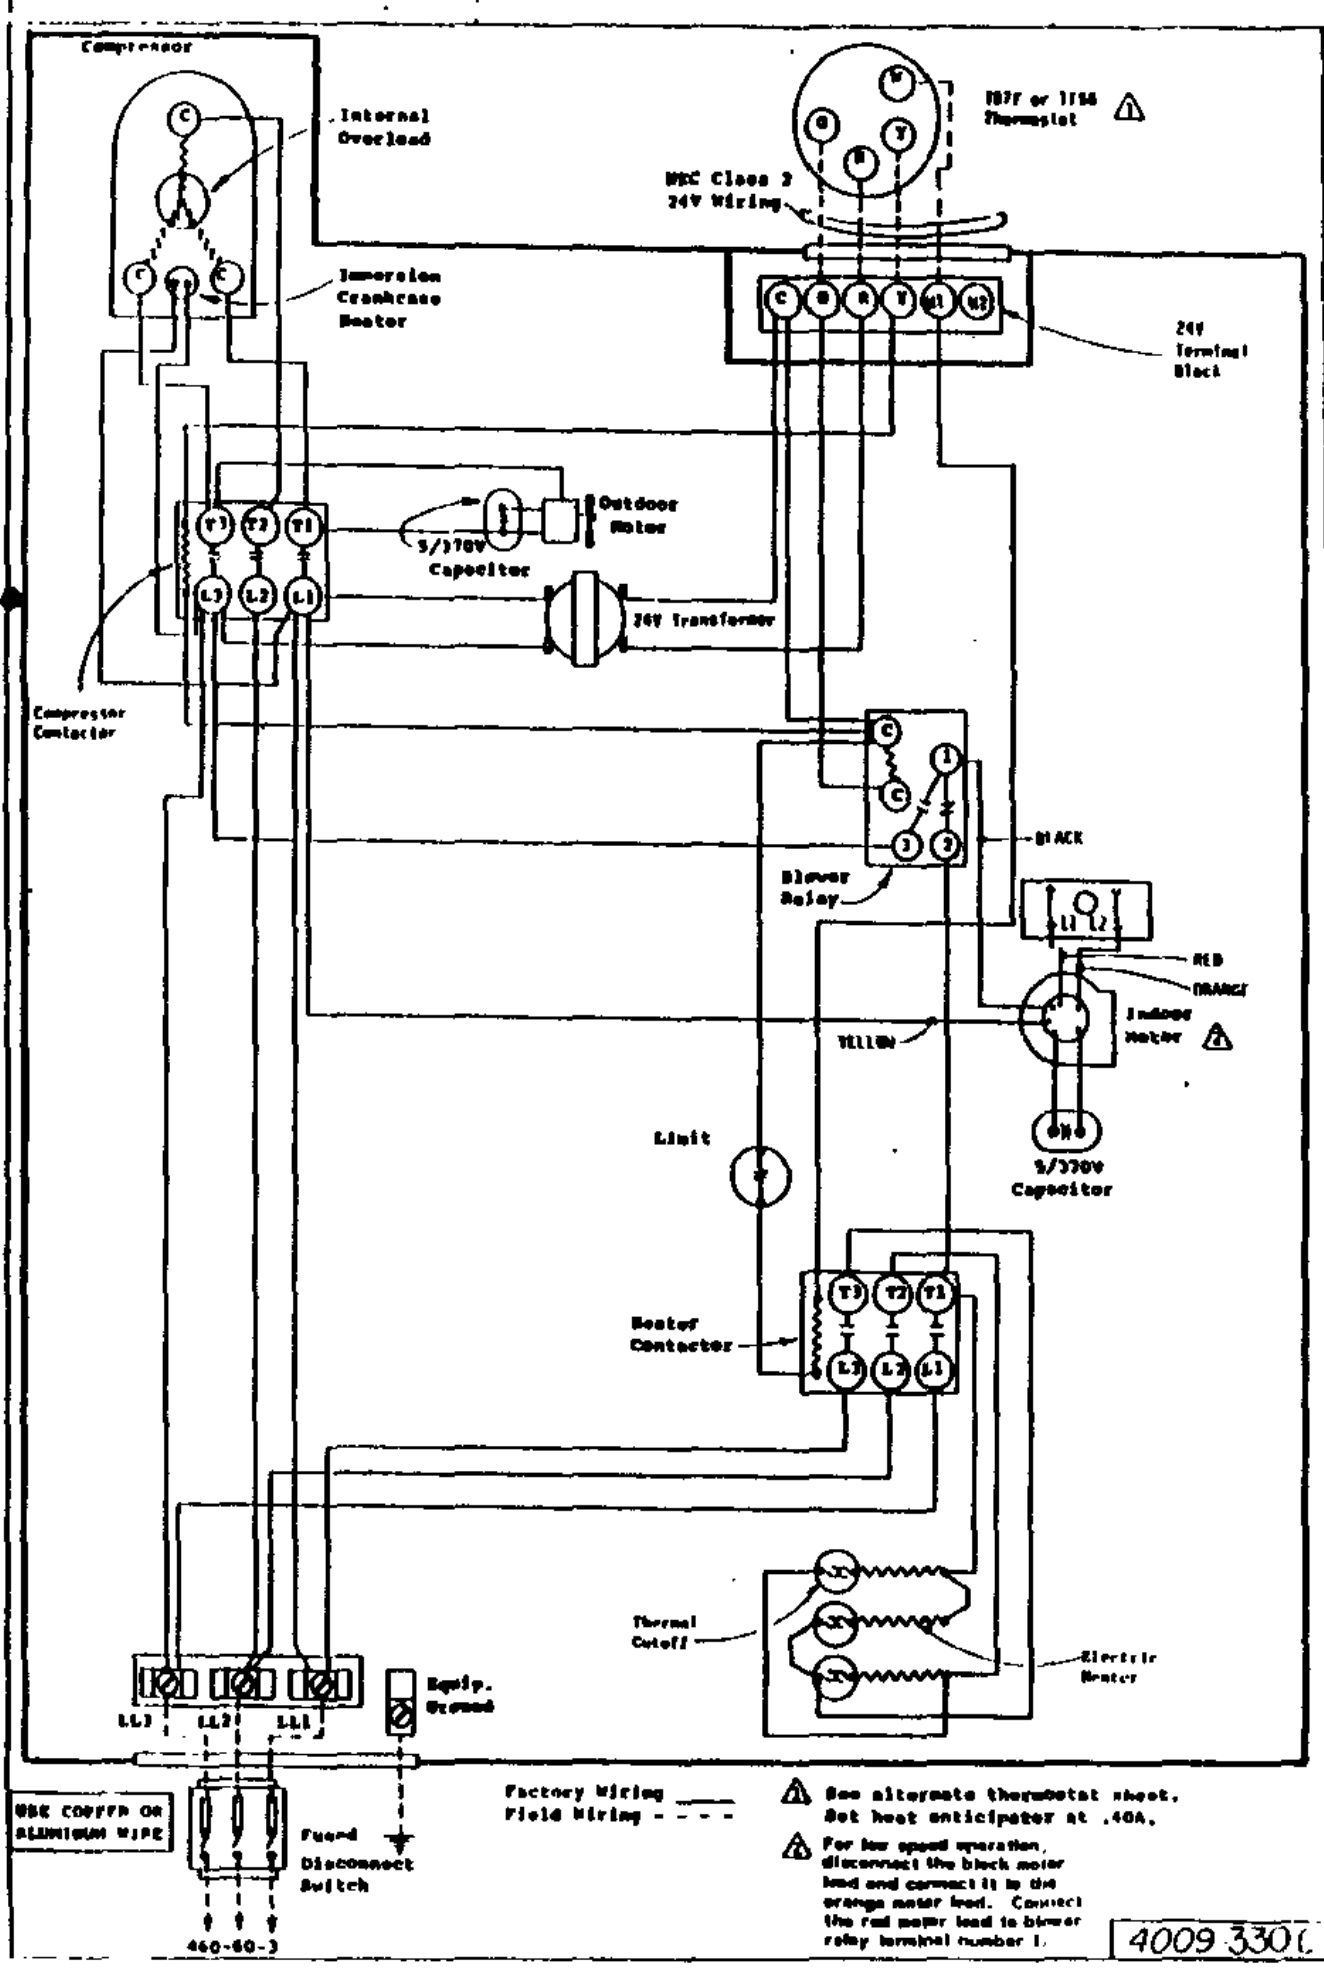

USE COPPER OR ALUMINUM WIRE

Fused Disconnect Switch

Factory Wiring ———
Field Wiring - - -

See alternate thermostat sheet. Set heat anticipator at .40A.
For low speed operation, disconnect the black motor lead and connect it to the orange motor lead. Connect the red motor lead to blower relay terminal number 1.

4009 3306

