



⚠ See alternate thermostat sheet.
Set heat anticipator at .40A.

USE COPPER OR ALUMINUM WIRE

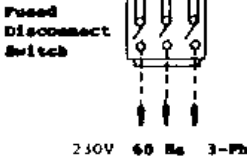

Model
480A2

Factory Wiring ———
Field Wiring - - - - -

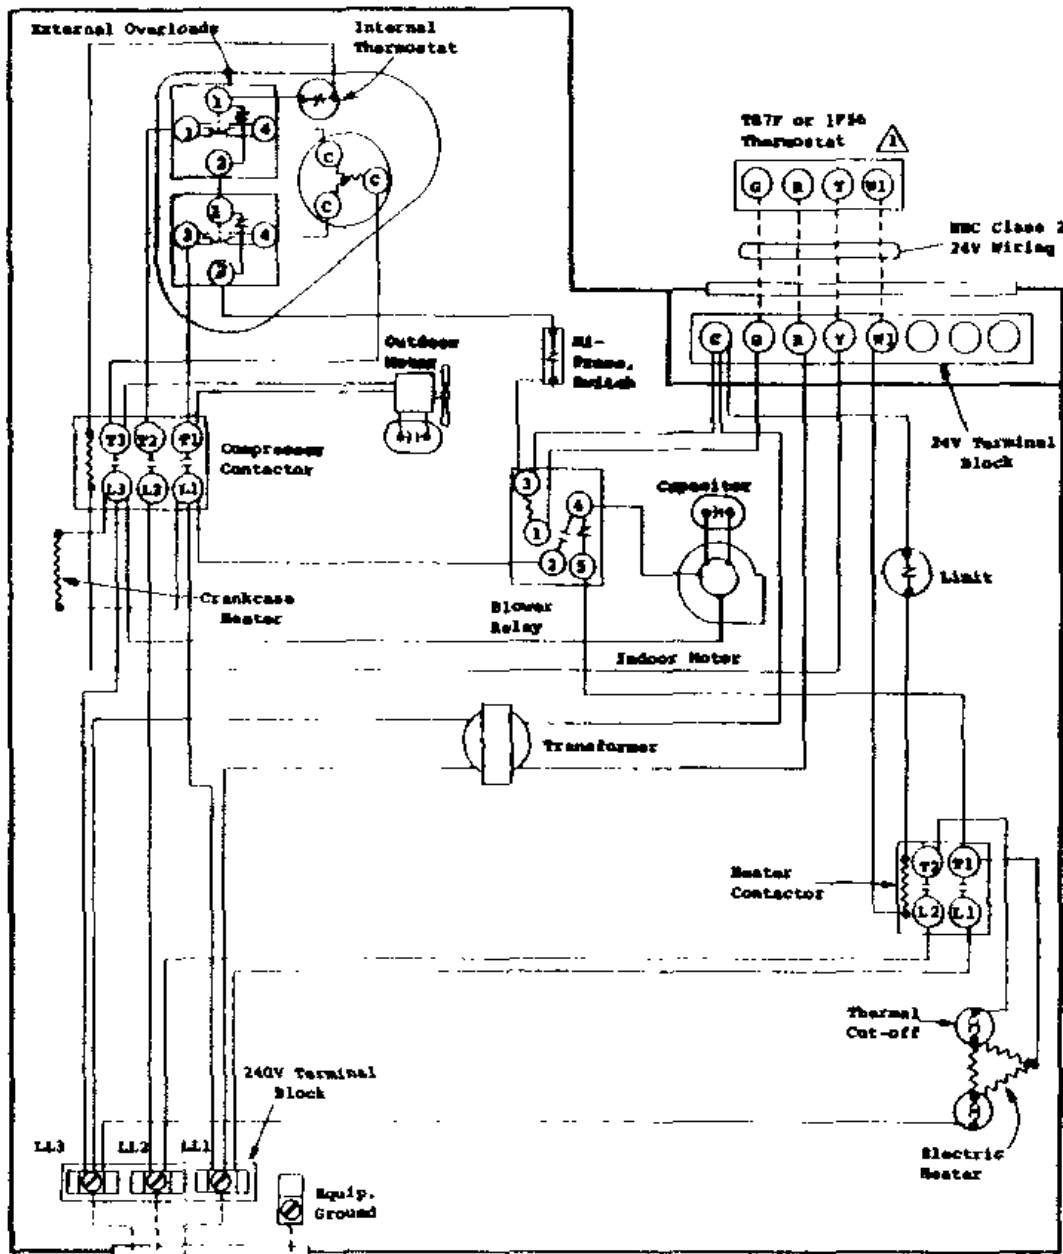


⚠ See alternate thermostat sheet.
Set heat anticipator at .40A.

USE COPPER OR ALUMINUM WIRE

Model
4882.2
w/HR

Factory Wiring ———
Field Wiring - - - -

4810-220

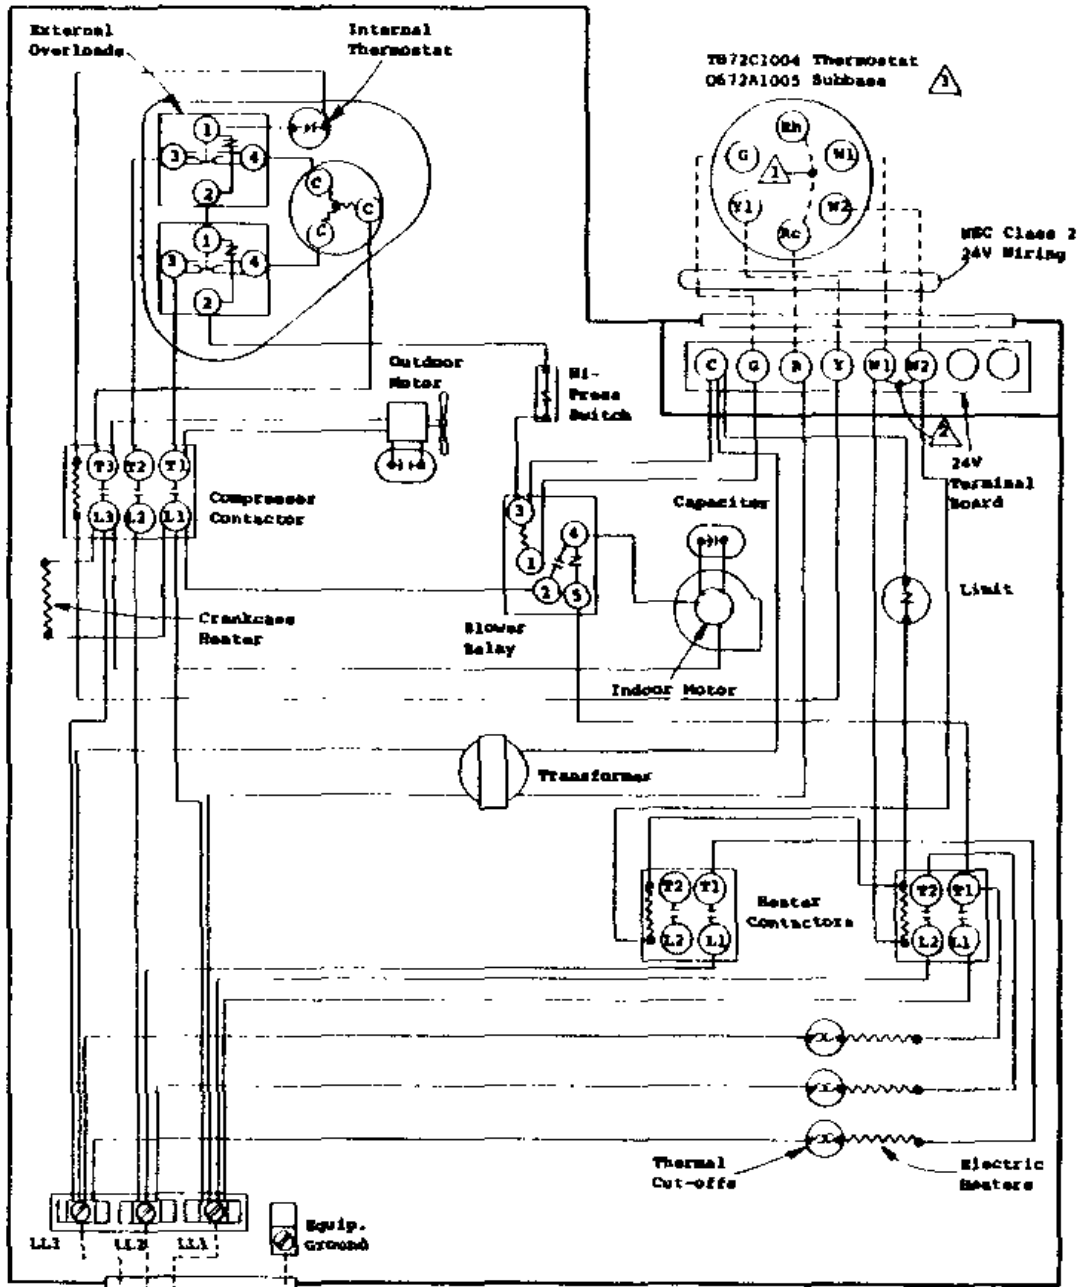

Panel Disconnect Switch

240V 60 Hz 1-Ph


USE COPPER OR ALUMINUM WIRE

- 1 Add jumper Rc to Rh. Set heat anticipator at .40A.
- 2 Remove jumper for 2-stage heat.
- 3 Set heat anticipator for W1 and W2 at .40A.

Model 48A2
w/12 or 15hp

Factory Wiring
Field Wiring

4010-230

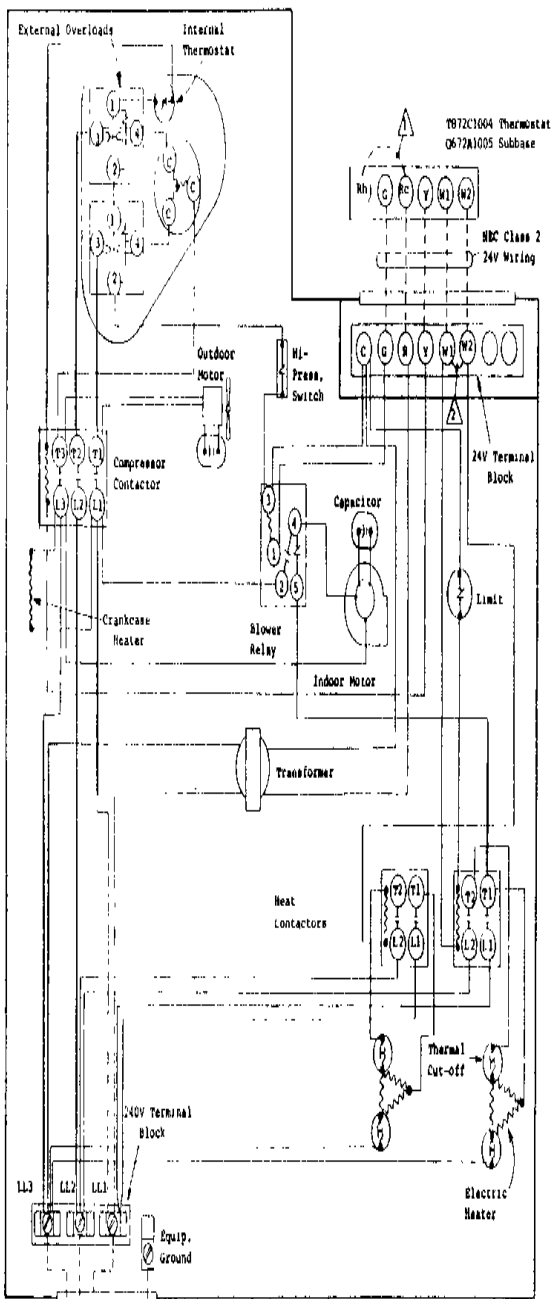

Fused Disconnect Switch
 240V 60 Hz 3-Ph

USE COPPER OR ALUMINUM WIRE

- ▲ Add jumper Rc to Rh. Set heat anticipators at .40A for W1 and W2.
- ▲ Remove jumper W1-W2 for 2-stage heat.

Model
 48WA2

Factory Wiring ———
 Field Wiring - - - - -

4010-240