
INSTALLATION INSTRUCTIONS

WALL MOUNTED PACKAGE HEAT PUMPS

Models:

WH423

WH483

WH604



Climate Control Solutions

Bard Manufacturing Company, Inc.
Bryan, Ohio 43506

Since 1914...Moving ahead, just as planned.

Manual: 2100-487
Supersedes: *NEW*
File: Volume III Tab 17
Date: 01-04-08

CONTENTS

Getting Other Information and Publications

For more information, contact these publishers: 3

Wall Mount General Information

Heat Pump Wall Mount Model Nomenclature 4
 Shipping Damage 7
 General 7
 Duct Work 7
 Filters 7
 Fresh Air Intake 8
 Condensate Drain 8

Installation Instructions

Wall Mounting Information 9
 Mounting the Unit 9
 Typical Installations 9
 Wiring – Main Power 13
 Wiring – Low Voltage Wiring 13
 Optional Outdoor Thermostat Applications 14
 Electric Heat Hold-Off 15

Figures

Figure 1 Unit Dimensions 5
 Figure 2 Blower Damper Assembly 8
 Figure 3 Mounting Instructions 10
 Figure 3A Electric Heat Clearance 10
 Figure 4 Wall-Mounting Instructions 11
 Figure 5 Wall-Mounting Instructions 11
 Figure 6 Common Wall-Mounting Instructions ... 12
 Figure 7 Unit 24V Terminal Board 13
 Figure 8 Compressor Cutoff Thermostat
 Wiring 14
 Figure 9 Compressor Cutoff Thermostat
 Wiring 14
 Figure 10 Electric Heat Hold-Off Wiring 15
 Figure 11 Electric Heat Hold-Off Wiring 15
 Figure 12 Start-Up Label 16
 Figure 13 Defrost Control Board 18
 Figure 14 Fan Blade Setting 21

Start Up

Important Installer Note 16
 Crankcase Heaters 16
 High Pressure Switch 16
 Three Phase Scroll Compressor Start Up
 Information 16
 Phase Monitor 17
 Service Hints 17
 Sequence of Operation 17
 Pressure Service Ports 17
 Defrost Cycle 17-18

Troubleshooting

Solid State Heat Pump Control
 Troubleshooting Procedure 19
 Checking Temperature Sensor Outdoor
 Unit Circuit 20
 Fan Blade Setting Dimensions 21
 Removal of Fan Shroud 21
 Refrigerant Charge 21
 Pressure Chart 22-23
 Optional Accessories 23

Tables

Table 1 Electric Heat Table 4
 Table 2 Electrical Specifications 6
 Table 3 Thermostat Wire Size 14
 Table 4 Wall Thermostat 15
 Table 5 Troubleshooting 19
 Table 6 Fan Blade Dimensions 21
 Table 7 Suction Line Temperatures 21
 Table 8 Recommended Operating Ranges 21
 Table 9 Indoor Blower Performance 21
 Table 10 Maximum ESP of Operation 22
 Table 11 Cooling Pressures 22
 Table 12 Heating Pressures 23
 Table 13 Optional Accessories 23

Getting Other Information and Publications

These publications can help you install the air conditioner or heat pump. You can usually find these at your local library or purchase them directly from the publisher. Be sure to consult current edition of each standard.

National Electrical Code ANSI/NFPA 70

Standard for the Installation ANSI/NFPA 90A
of Air Conditioning and Ventilating Systems

Standard for Warm Air ANSI/NFPA 90B
Heating and Air Conditioning Systems

Load Calculation for ACCA Manual J or
Residential Winter and Summer Air Manual N
Conditioning

Low Pressure, Low Velocity ACCA Manual D or
Duct System Design for Winter Manual Q
and Summer Air Conditioning

FOR MORE INFORMATION, CONTACT THESE PUBLISHERS:

ACCA Air Conditioning Contractors of America
1712 New Hampshire Ave. N.W.
Washington, DC 20009
Telephone: (202) 483-9370
Fax: (202) 234-4721


ANSI American National Standards Institute
11 West Street, 13th Floor
New York, NY 10036
Telephone: (212) 642-4900
Fax: (212) 302-1286

**ASHRAE American Society of Heating Refrigerating
and Air Conditioning Engineers, Inc.**
1791 Tullie Circle, N.E.
Atlanta, GA 30329-2305
Telephone: (404) 636-8400
Fax: (404) 321-5478

NFPA National Fire Protection Association
Batterymarch Park
P.O. Box 9101
Quincy, MA 02269-9901
Telephone: (800) 344-3555
Fax: (617) 984-7057

WALL MOUNT GENERAL INFORMATION

HEAT PUMP WALL MOUNT MODEL NOMENCLATURE

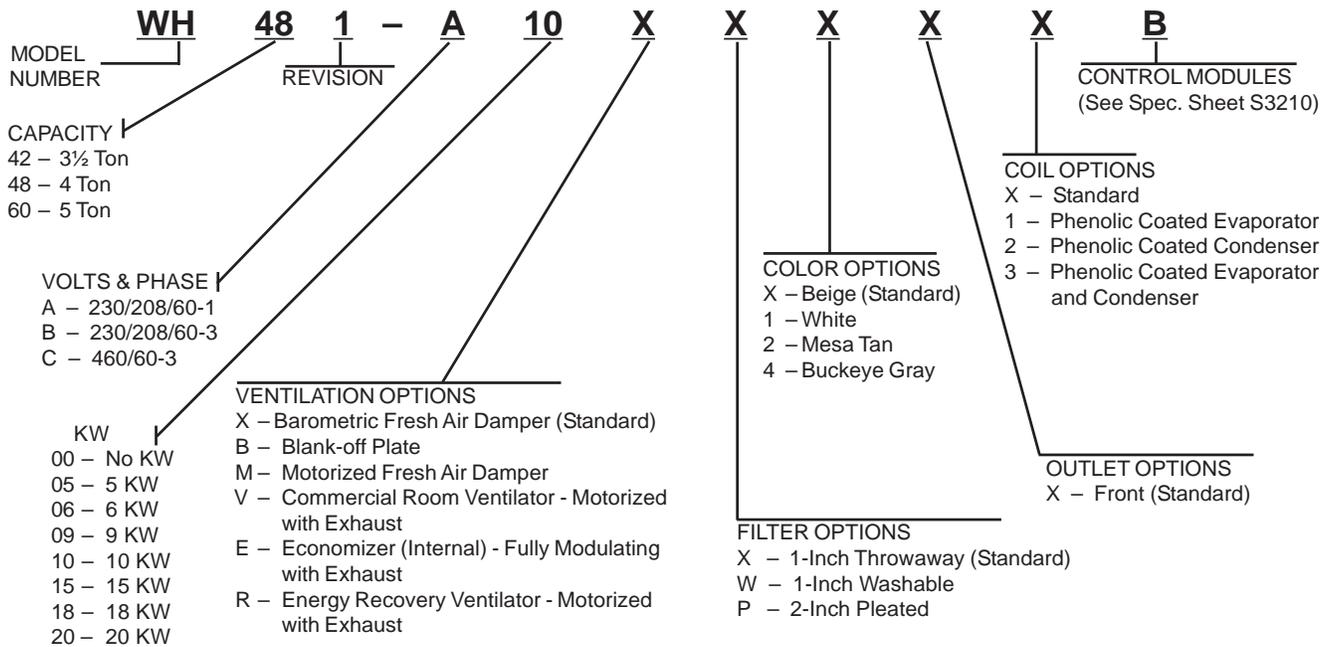

NOTE: For 0KW and circuit breakers (230/208V) or pull disconnects (460V) applications, insert 0Z in the KW field of model number.


**TABLE 1
ELECTRIC HEAT TABLE**

| Models | WH423-A | | | | WH423-B WH483-B | | | | WH423-C | | WH483-A WH604-A | | | | WH483-B WH604-B | | | | WH483-C WH604-C | |
|--------|---------|-------|-------|-------|--------------------|-------|-------|-------|---------|-------|--------------------|-------|-------|-------|--------------------|-------|-------|-------|--------------------|-------|
| | 240-1 | | 208-1 | | 240-3 | | 208-3 | | 460-3 | | 240-1 | | 208-1 | | 240-3 | | 208-3 | | 460-3 | |
| | A | BTU | A | BTU | A | BTU | A | BTU | A | BTU | A | BTU | A | BTU | A | BTU | A | BTU | A | BTU |
| 4 | | | | | | | | | | | 16.7 | 13650 | 14.4 | 10240 | | | | | | |
| 5 | 20.8 | 17065 | 18.1 | 12800 | | | | | | | 20.8 | 17065 | 18.1 | 12800 | | | | | | |
| 6 | | | | | 14.4 | 20500 | 12.5 | 15360 | 7.2 | 20480 | | | | | | | | | | |
| 9 | | | | | 21.7 | 30600 | 18.7 | 23030 | 10.8 | 30700 | | | | | 21.7 | 30600 | 18.7 | 23030 | 10.8 | 30700 |
| 10 | 41.6 | 34130 | 36.2 | 25600 | | | | | | | 41.6 | 34130 | 36.2 | 25600 | | | | | | |
| 15 | 62.5 | 51200 | 54.1 | 38400 | 36.2 | 51200 | 31.2 | 38400 | 18.0 | 51200 | 62.5 | 51200 | 54.1 | 38400 | 36.2 | 51200 | 31.2 | 38400 | 18.0 | 51200 |
| 18 | | | | | | | | | | | | | | | 43.3 | 61400 | 37.5 | 46050 | | |
| 20 | | | | | | | | | | | 83.2 | 68250 | 72.1 | 51200 | | | | | | |

**FIGURE 1
UNIT DIMENSIONS**

SIZE SPECS FOR MIS-411

| UNIT | WIDTH (W) | DEPTH (D) | HEIGHT (H) | SUPPLY | | | RETURN | | E | F | G | I | J | K | L | M | N | O | P | Q |
|----------|-----------|-----------|------------|--------|--------|--------|--------|--------|--------|----|--------|----|----------|----|--------|--------|-------|----|--------|----|
| | | | | A | B | C | B | Q | | | | | | | | | | | | |
| 42-48-60 | 42 | 22-1/4 | 84-7/8 | 9-7/8 | 29-7/8 | 15-7/8 | 29-7/8 | 29-7/8 | 43-7/8 | 19 | 31-5/8 | 30 | 32-11/16 | 27 | 34-3/4 | 32-1/2 | 3-1/4 | 43 | 23-7/8 | 10 |

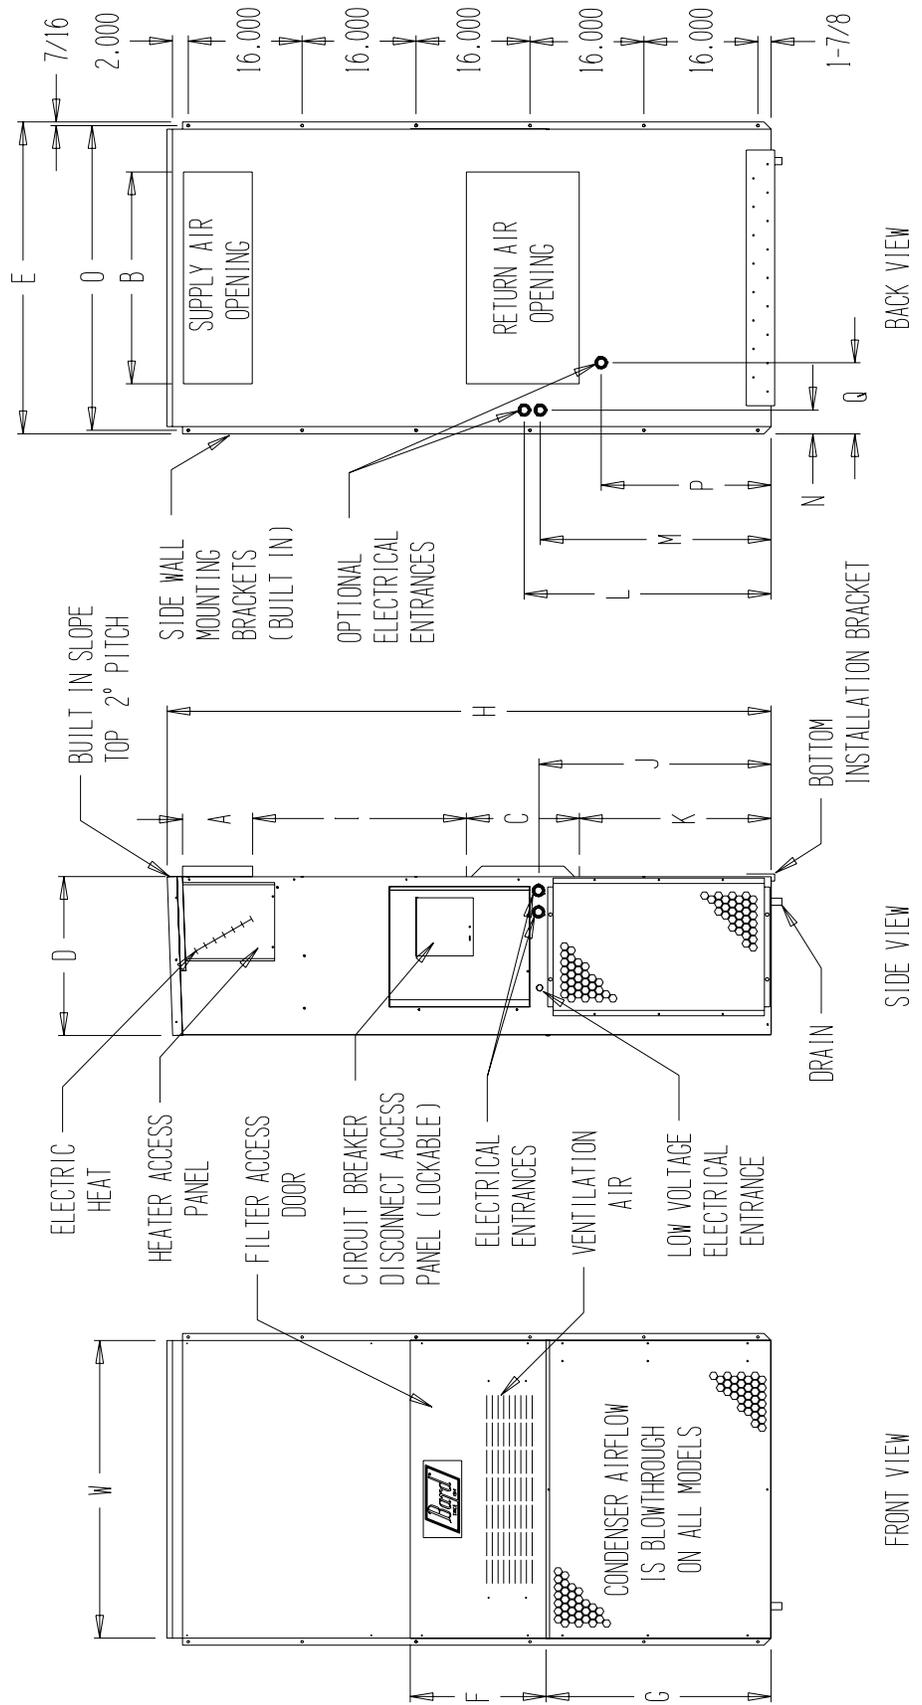

**TABLE 2
ELECTRICAL SPECIFICATIONS**

| Model | SINGLE CIRCUIT | | | | | | DUAL CIRCUIT | | | | | | | |
|---|---------------------|-----------------------|--------------------------|--|-----------------------|------------------|--------------------------|---------------------------------------|-----------------------|-------|------------------|-------|-------|-----|
| | Rated Volts & Phase | No. Field Power Ckts. | ④ | ① | ② | ② | ④ | | ① | | ② | | ② | |
| | | | Minimum Circuit Ampacity | Maximum External Fuse or Circuit Breaker | Field Power Wire Size | Ground Wire Size | Minimum Circuit Ampacity | Maximum External Fuse or Ckt .Breaker | Field Power Wire Size | | Ground Wire Size | | | |
| Ckt A | Ckt B | Ckt A | Ckt B | Ckt A | Ckt B | Ckt A | Ckt B | Ckt A | Ckt B | Ckt A | Ckt B | Ckt A | Ckt B | |
| WH423-A00, A0Z A05 ③ A10 A15 | 230/208-1 | 1 | 34 | 50 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 or 2 | 60 | 70 | 6 | 8 | 34 | 26 | 50 | 30 | 8 | 10 | 10 | 10 |
| | | 1 or 2 | 86 | 90 | 3 | 8 | 34 | 52 | 50 | 60 | 8 | 6 | 10 | 10 |
| | | 1 or 2 | 86 | 90 | 3 | 8 | 34 | 52 | 50 | 60 | 8 | 6 | 10 | 10 |
| WH423-B00, B0Z B06 ③ B09 B15 | 230/208-3 | 1 | 26 | 35 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 44 | 50 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 53 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 53 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| WH423-C00, C0Z C06 ③ C09 C15 | 460-3 | 1 | 13 | 20 | 12 | 12 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 23 | 25 | 10 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 27 | 30 | 10 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 27 | 30 | 10 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| WH483-A00, A0Z A04 A05 ③ A10 A15 A20 | 230/208-1 | 1 | 36 | 50 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 57 | 60 | 6 | 8 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 or 2 | 62 | 70 | 6 | 8 | 36 | 26 | 50 | 30 | 8 | 10 | 10 | 10 |
| | | 1 or 1 | 88 | 100 | 3 | 8 | 36 | 52 | 50 | 60 | 8 | 6 | 10 | 10 |
| | | 1 or 2 | 88 | 100 | 3 | 8 | 36 | 52 | 50 | 60 | 8 | 6 | 10 | 10 |
| | | 1 or 2 | 110 | 110 | 2 | 6 | 59 | 52 | 60 | 60 | 6 | 6 | 10 | 10 |
| WH483-B00, B0Z B06 ③ B09 B15 B18 | 230/208-3 | 1 | 25 | 35 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 43 | 50 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 52 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 52 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 60 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| WH483-C00, C0Z ③ C09 C15 | 460-3 | 1 | 13 | 15 | 14 | 14 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 26 | 30 | 10 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 27 | 30 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| WH604-A00, A0Z A05 ③ A10 A15 A20 | 230/208-1 | 1 | 45 | 60 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 or 2 | 71 | 90 | 4 | 8 | 45 | 26 | 60 | 60 | 8 | 10 | 10 | 10 |
| | | 1 or 1 | 97 | 110 | 3 | 6 | 45 | 52 | 60 | 60 | 8 | 6 | 10 | 10 |
| | | 1 or 2 | 97 | 110 | 3 | 6 | 45 | 52 | 60 | 60 | 8 | 6 | 10 | 10 |
| | | 1 or 2 | 110 | 110 | 2 | 6 | 59 | 52 | 60 | 60 | 6 | 6 | 10 | 10 |
| WH604-B00, B0Z ③ B09 B15 B18 | 230/208-3 | 1 | 33 | 45 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 60 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 60 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 60 | 60 | 6 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| WH604-C00, C0Z ③ C09 C15 | 460-3 | 1 | 16 | 20 | 12 | 12 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 29 | 35 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |
| | | 1 | 29 | 35 | 8 | 10 | N/A | N/A | N/A | N/A | N/A | N/A | N/A | N/A |

① Maximum size of the time delay fuse or HACR type circuit breaker for protection of field wiring conductors.

② Based on 75°C copper wire. All wiring must conform to NEC and all local codes.

③ Maximum KW that can operate with heat pump on.

④ These "Minimum Circuit Ampacity" values are to be used for sizing the field power conductors. Refer to the National Electrical Code (latest version), article 310 for power conductor sizing.

CAUTION: When more than one field power conductor circuit is run through one conduit, the conductors must be derated. Pay special attention to note 8 of table 310 regarding Ampacity Adjustment Factors when more than 3 conductors are in a raceway.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

GENERAL

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians.

The refrigerant system is completely assembled and charged. All internal wiring is complete.

The unit is designed for use with or without duct work. Flanges are provided for attaching the supply and return ducts.

These instructions and any instructions packaged with any separate equipment required to make up the entire heat pump system should be carefully read before beginning the installation. Note particularly "Starting Procedure" and any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not supersede any national and/or local codes in any way. Authorities having jurisdiction should be consulted before the installation is made. See Page 3 for information on codes and standards.

Size of unit for a proposed installation should be based on heat loss calculation made according to methods of Air Conditioning Contractors of America (ACCA). The air duct should be installed in accordance with the Standards of the National Fire Protection Association for the Installation of Air Conditioning and Ventilating Systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

DUCT WORK

Any heat pump is more critical of proper operating charge and an adequate duct system than a straight air conditioning unit. All duct work, supply and return, must be properly sized for the design airflow requirement of the equipment. Air Conditioning Contractors of America (ACCA) is an excellent guide to proper sizing. All duct work or portions thereof not in the conditioned space should be properly insulated in order to both conserve energy and prevent condensation or moisture damage.

Refer to Table 10 for maximum static pressure available for duct design.

Design the duct work according to methods given by the Air Conditioning Contractors of America (ACCA). When duct runs through unheated spaces, it should be insulated with a minimum of one inch of insulation. Use insulation with a vapor barrier on the outside of the insulation. Flexible joints should be used to connect the duct work to the equipment in order to keep the noise transmission to a minimum.

A ¼ inch clearance to combustible material for the first three feet (3') of duct attached to the outlet air frame is required. See Wall Mounting Instructions and Figures 3, 4 and 5 for further details.

Ducts through the walls must be insulated and all joints taped or sealed to prevent air or moisture entering the wall cavity.



CAUTION

Some installations may not require any return air duct. A metallic return air grille is required with installations not requiring a return air duct. The spacing between louvers on the grille shall not be larger than 5/8 inches.

Any grille that meets the 5/8 inch louver criteria, may be used. It is recommended that Bard Return Air Grille Kit RG-2 through RG-5 or RFG-2 through RFG-5 be installed when no return duct is used. Contact distributor or factory for ordering information. If using a return air filter grille, filters must be of sufficient size to allow a maximum velocity of 400 fpm.

NOTE: If no return air duct is used, applicable installation codes may limit this cabinet to installation only in a single story structure.

FILTERS

A 1-inch throwaway filter is supplied with each unit. The filter slides into position making it easy to service. This filter can be serviced from the outside by removing the service door. A 1-inch washable filter and 2-inch pleated filter are also available as optional accessories. The internal filter brackets are adjustable to accommodate the 2-inch filter by bending down the tabs to allow spacing for the 2-inch filters.

FRESH AIR INTAKE

All units are built with fresh air inlet slots punched in the service panel.

If the unit is equipped with the fresh air damper assembly, the assembly is shipped already attached to the unit. The damper blade is locked in the closed position. To allow the damper to operate, the maximum and minimum blade position stops must be installed. See Figure 2.


All capacity, efficiency and cost of operation information as required for Department of Energy "Energyguide" Fact Sheets is based upon the fresh air blank-off plate in place and is recommended for maximum energy efficiency.

The blank-off plate is available upon request from the factory and is installed in place of the fresh air damper shipped with each unit.

CONDENSATE DRAIN

A plastic drain hose extends from the drain pan at the top of the unit down to the unit base. There are openings in the unit base for the drain hose to pass through. In the event the drain hose is connected to a drain system of some type, it must be an open or vented type system to assure proper drainage.

**FIGURE 2
BLOWER DAMPER ASSEMBLY**

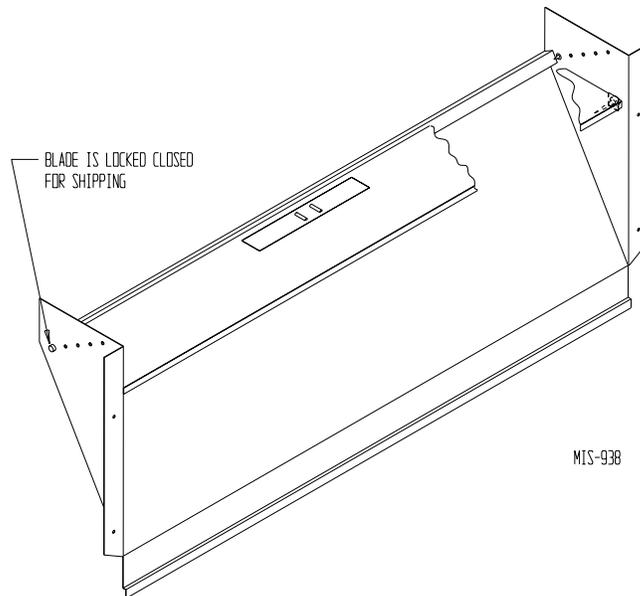

INSTALLATION INSTRUCTIONS

WALL MOUNTING INFORMATION

1. Two holes, for the supply and return air openings, must be cut through the wall as shown in Figure 3.
2. On wood-frame walls, the wall construction must be strong and rigid enough to carry the weight of the unit without transmitting any unit vibration. See Figures 4 and 5.



Fire hazard can result if ¼ inch clearance to combustible materials for supply air duct is not maintained. See Figure 3.

3. Concrete block walls must be thoroughly inspected to insure that they are capable of carrying the weight of the installing unit. See Figure 4.

MOUNTING THE UNIT

1. These units are secured by wall mounting brackets, which secure the unit to the outside wall surface at both sides. A bottom mounting bracket is provided for ease of installation, but it is not required.
2. The unit itself is suitable for “0” inch clearance, but the supply air duct flange and the first 3 feet of supply air duct require a minimum of ¼ inch clearance to combustible material. If a combustible wall, use a minimum of 30½" x 10½" dimensions for sizing. However, it is generally recommended that a 1-inch clearance is used for ease of installation and maintaining the required clearance to combustible material. The supply air opening would then be 32" x 12". See Figures 3, 3A and 5 for details.



WARNING


Failure to provide the ¼ inch clearance between the supply duct and a combustible surface for the first 3 feet of duct can result in fire.

3. Locate and mark lag bolt locations and bottom mounting bracket location. See Figure 4.
4. Mount bottom mounting bracket.
5. Hook top rain flashing under back bend of top. Top rain flashing is shipped secured to the right side of the back.
6. Position unit in opening and secure with 5/16 lag bolts; use 7/8 inch diameter flat washers on the lag bolts.
7. Secure rain flashing to wall and caulk across entire length of top. See Figure 3.
8. For additional mounting rigidity, the return air and supply air frames or collars can be drilled and screwed or welded to the structural wall itself (depending upon wall construction). Be sure to observe required clearance if combustible wall.
9. On side-by-side installations, maintain a minimum of 20 inches clearance on right side to allow access to heat strips and control panel, and to allow proper airflow to the outdoor coil. Additional clearance may be required to meet local or national codes.


TYPICAL INSTALLATIONS

See Figure 6 for common ways to install the wall-mount unit.

**FIGURE 3
MOUNTING INSTRUCTIONS**

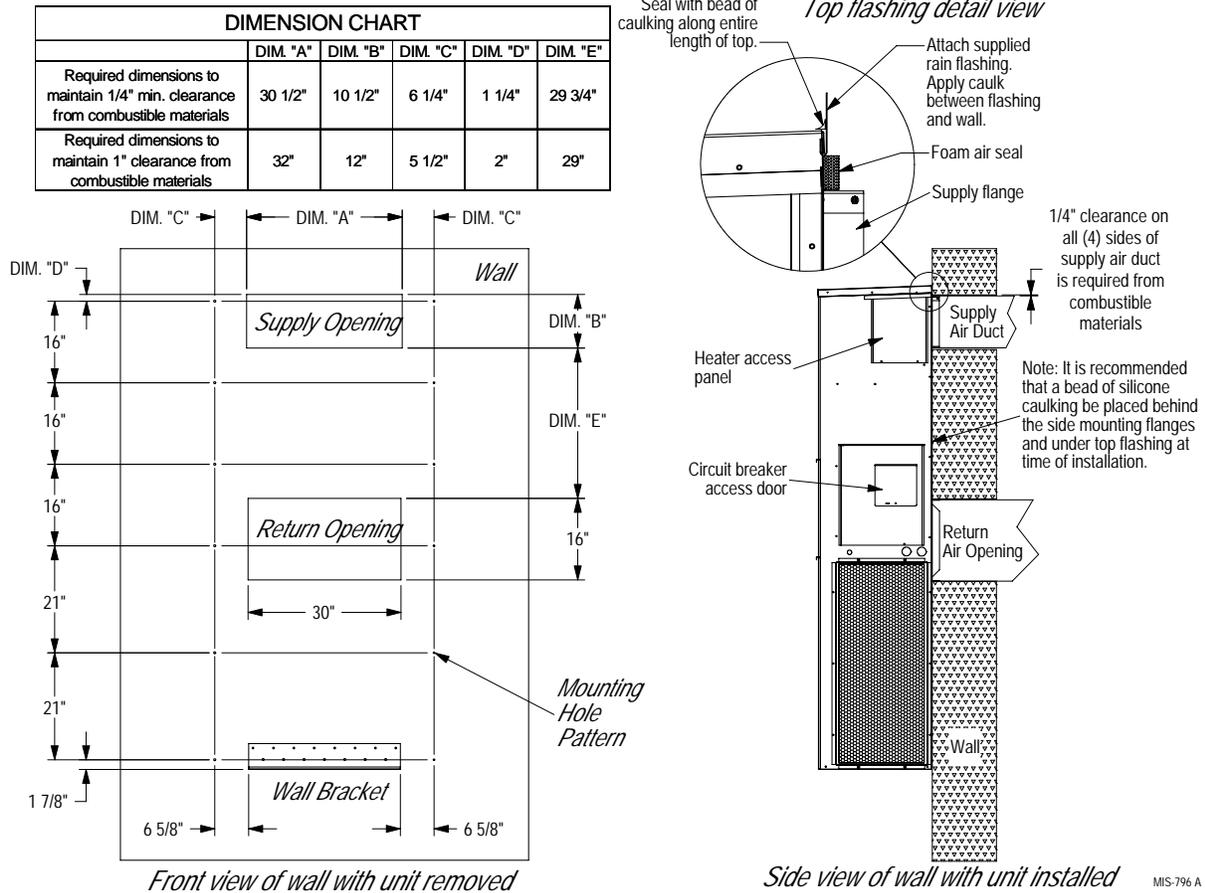

**FIGURE 3A
ELECTRIC HEAT CLEARANCE**

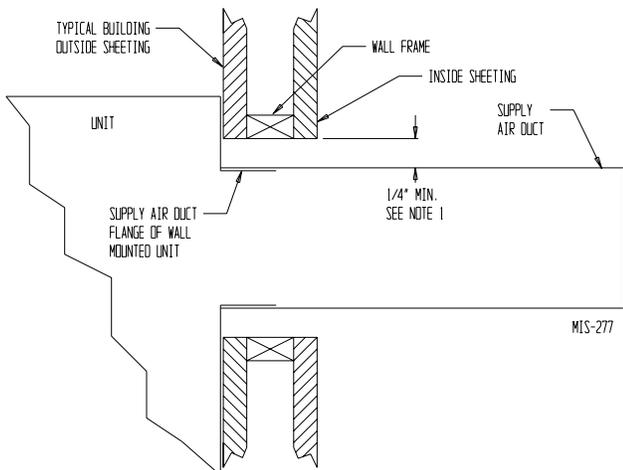

WARNING

- A minimum of 1/4 inch clearance must be maintained between the supply air duct and combustible materials. This is required for the first 3 feet of ducting.
- It is important to insure that the 1/4 inch minimum spacing is maintained at all points.
- Failure to do this could result in overheating the combustible material and may result in fire.

FIGURE 4 WALL-MOUNTING INSTRUCTIONS

SEE FIGURE 3 — MOUNTING INSTRUCTIONS



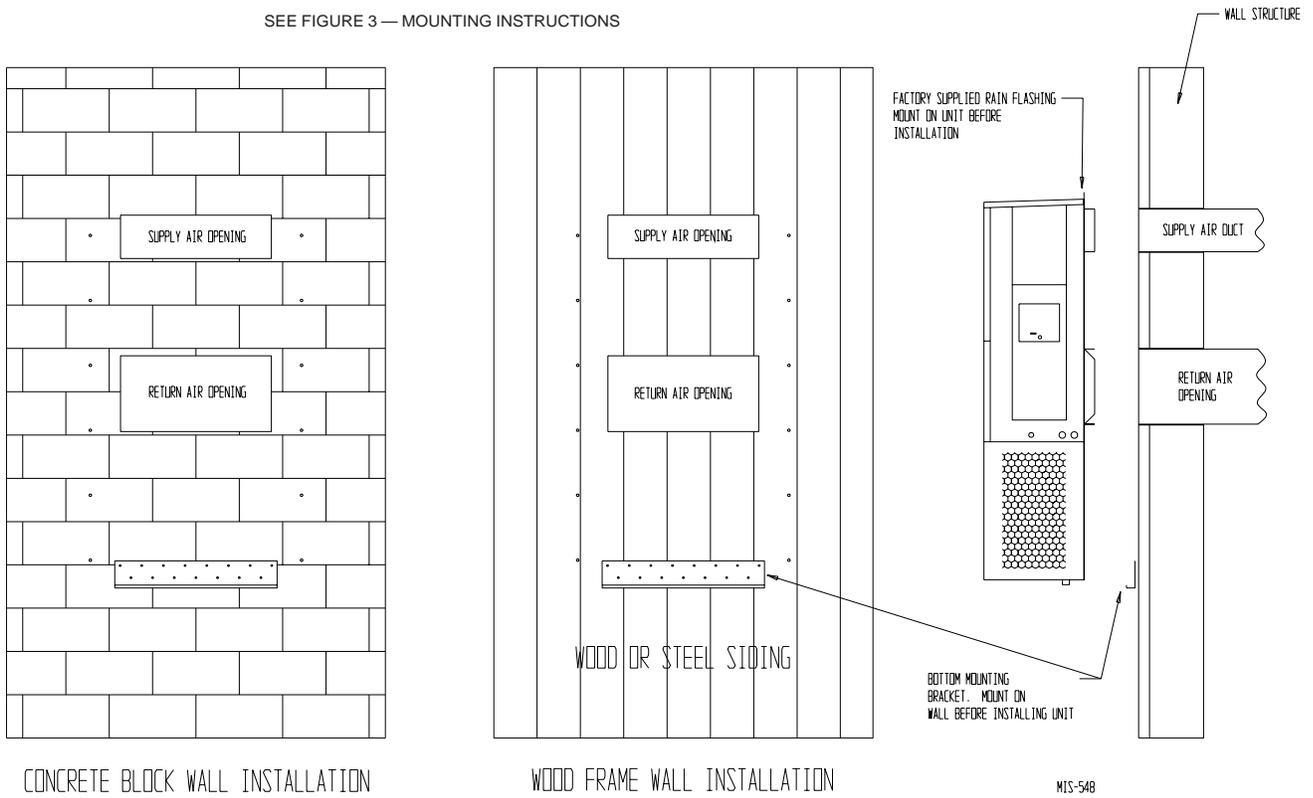


FIGURE 5 WALL-MOUNTING INSTRUCTIONS


SEE UNIT DIMENSIONS, FIGURE 1,
FOR ACTUAL DIMENSIONS

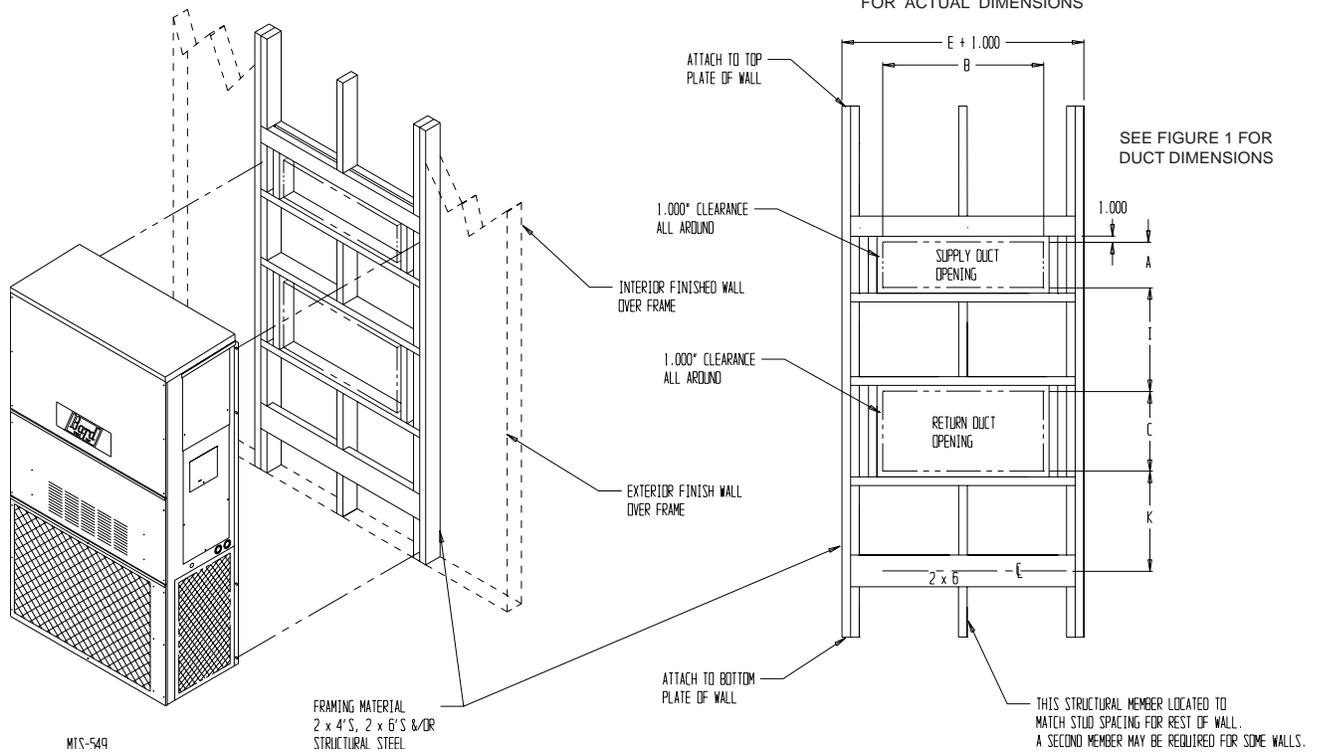


**FIGURE 6
COMMON WALL-MOUNTING INSTALLATIONS**

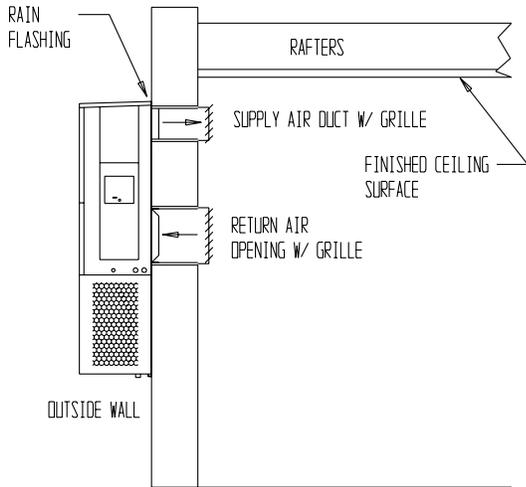


FREE AIR FLOW
NO DUCT

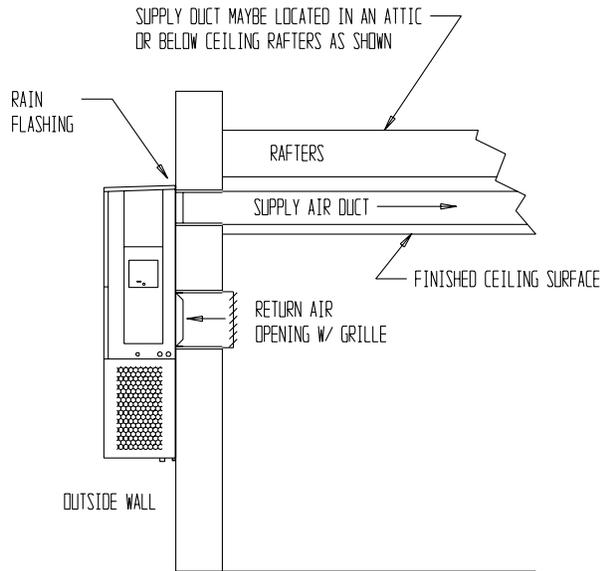

DUCTED SUPPLY
RETURN AT UNIT

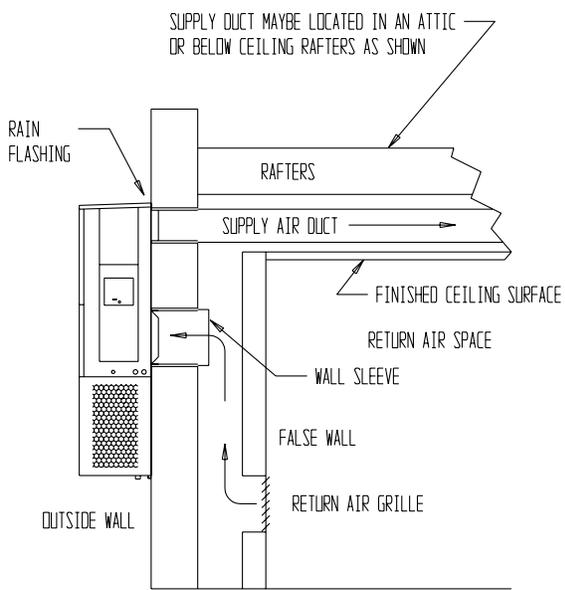

FALSE WALL INSTALLATION

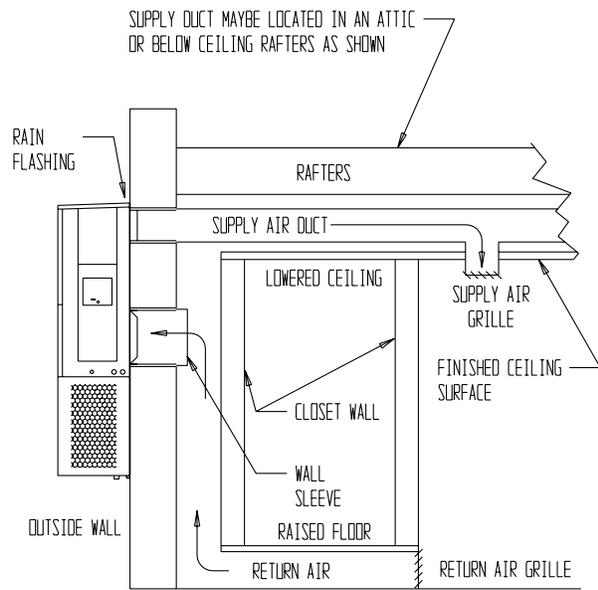

CLOSET INSTALLATION

WIRING — MAIN POWER

Refer to the unit rating plate for wire sizing information and maximum fuse or “HACR” type circuit breaker size. Each outdoor unit is marked with a “Minimum Circuit Ampacity”. This means that the field wiring used must be sized to carry that amount of current. Depending on the installed KW of electric heat, there may be two field power circuits required. If this is the case, the unit serial plate will so indicate. All models are suitable only for connection with copper wire. Each unit and/or wiring diagram will be marked “Use Copper Conductors Only”. These instructions **must be** adhered to. Refer to the National Electrical Code (NEC) for complete current carrying capacity data on the various insulation grades of wiring material. All wiring must conform to NEC and all local codes.

The electrical data lists fuse and wire sizes (75°C copper) for all models, including the most commonly used heater sizes. Also shown are the number of field power circuits required for the various models with heaters.

The unit rating plate lists a “Maximum Time Delay Relay Fuse” or “HACR” type circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor motor.

The disconnect access door on this unit may be locked to prevent unauthorized access to the disconnect. To convert for the locking capability, bend the tab located in the bottom left hand corner of the disconnect opening under the disconnect access panel straight out. This tab will now line up with the slot in the door. When shut, a padlock may be placed through the hole in the tab preventing entry.

See Start-up section for information on three phase scroll compressor start-ups.

WIRING — LOW VOLTAGE WIRING

230/208V, 1 phase and 3 phase equipment dual primary voltage transformers. All equipment leaves the factory wired on 240V tap. For 208V operation, reconnect from 240V to 208V tap. The acceptable operating voltage range for the 240 and 208V taps are:

| Tap | Range |
|-----|-----------|
| 240 | 253 - 216 |
| 208 | 220 - 187 |

NOTE: The voltage should be measured at the field power connection point in the unit and while the unit is operating at full load (maximum amperage operating condition).

If the #8403-058 thermostat is used, nine (9) wires should be run from the thermostat subbase to the 24V terminal board in the unit. If the #8403-060 thermostat/humidistat is used, ten (10) wires should be run from the thermostat subbase to the 24V terminal board. A nine (9) or ten (10) wire conductor (depending on thermostat used), 18 gauge copper color-coded thermostat cable is recommended. The connection points are shown in Figure 7.

LOW VOLTAGE CONNECTIONS

These units use a grounded 24 volt AC low voltage circuit.

The “R” terminal is the *hot* terminal and the “C” terminal is *grounded*.

“G” terminal is the *fan input*.

“Y” terminal is the *compressor input*.

“B” terminal is the *reversing valve input*. The reversing valve must be energized for heating mode.

“R” terminal is 24 VAC hot.

“C” terminal is 24 VAC grounded.

“L” terminal is *compressor lockout output*. This terminal is activated on a high or low pressure trip by the electronic heat pump control. This is a 24 VAC output.

“W2” terminal is *second stage heat* (if equipped).


“O1” terminal is the *ventilation input*. This terminal energizes any factory installed ventilation option.

“E” terminal is the *emergency heat input*. This terminal energizes the emergency heat relay.

NOTE: For total and proper control using DDC, a total of 6 controlled outputs are required (5 if no ventilation system is installed). For proper system operation under Emergency Heat conditions where the compressor needs to be deactivated, the B-W2-E-G outputs need to be energized. Removing the Y (compressor) signal alone turns the compressor off, but does not activate the additional circuitry embedded in the heat pump for proper and complete operation.

| LOW VOLTAGE CONNECTIONS FOR DDC CONTROL | |
|---|----------------------|
| Fan Only | Energize G |
| Cooling Mode | Energize Y, G |
| Heat Pump Heating | Energize Y, G, B |
| 2nd Stg Heating w/Heat Pump (if employed) | Energize G, W2, Y, B |
| Ventilation | Energize G, O1 |
| Emergency Heat | Energize B, W2, E, G |

**FIGURE 7
UNIT 24V TERMINAL BOARD**

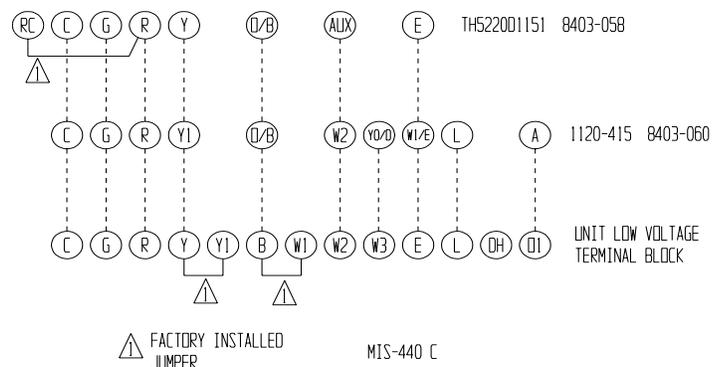

**TABLE 3
THERMOSTAT WIRE SIZE**

| Transformer VA | FLA | Wire Gauge | Maximum Distance In Feet |
|----------------|-----|------------|--------------------------|
| 55 | 2.3 | 20 gauge | 45 |
| | | 18 gauge | 60 |
| | | 16 gauge | 100 |
| | | 14 gauge | 160 |
| | | 12 gauge | 250 |

OPTIONAL OUTDOOR THERMOSTAT APPLICATIONS

Since most equipment at the time of manufacture is not designated for any specific destination of the country and are installed in areas not approaching the lower outdoor temperature range, outdoor thermostats are not factory installed as standard equipment, but are offered as an option. There are also different applications for applying outdoor thermostats. The set point of either type of outdoor thermostat application is variable with geographic region and sizing of the heating equipment to the individual structure. Utilization of the heating Application Data, and the heat loss calculation of the building are useful in determining the correct set points.

NOTE: The additional LAB (low ambient bypass) relay is required to prevent heater operation during low temperature cooling operation.

Temperature and Humidity Controller #8403-060, along with the Outdoor Sensor option Part #8403-061, can be used to:


- Limit minimum outdoor temperature for cooling option.
- Limit minimum outdoor temperature for heat pump option.
- Inhibit electric heat operation for heat pumps above selected outdoor temperature.

Thus, not requiring the optional compressor cut-off thermostat or the electric heat cut-off thermostat option.


OPTIONAL COMPRESSOR CUTOFF THERMOSTAT (See Figures 8 and 9)

Heat pump compressor operation at outdoor temperatures below 0°F are neither desirable nor advantageous in term of efficiency. An outdoor thermostat can be applied to take the mechanical heating (compressor) off line, and send the (compressor) signal to energize electric heat in its place (to make electric heat first stage heating). This can also be applied to bank the quantity of available electric heat. For example: A heat pump operates with 10KW second stage heat – once the outdoor thermostat has switched then operates 15KW without the compressor as first stage heat.

**FIGURE 8
COMPRESSOR CUTOFF THERMOSTAT WIRING
4 - 10KW 1PH --- 6 & 9KW 3-PH**

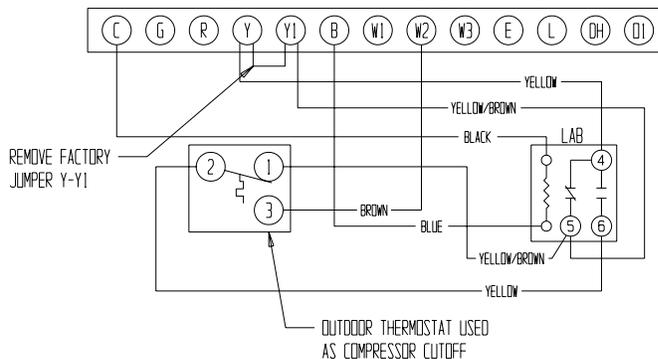

**FIGURE 9
COMPRESSOR CUTOFF THERMOSTAT WIRING
15 - 20KW 1-PH & 3-PH**

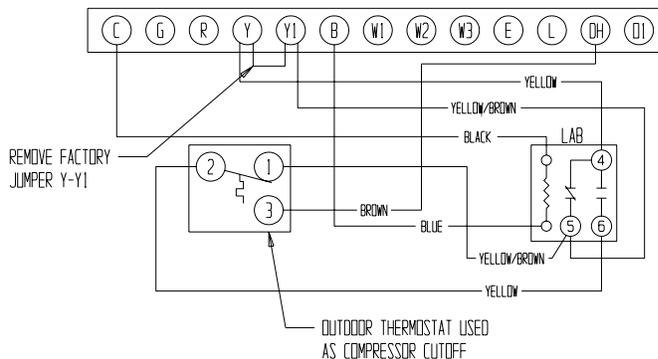


**ELECTRIC HEAT HOLD-OFF
(SEE FIGURES 10 AND 11)**


In other applications, it is desirable to disable the operation of the electric heat until outdoor temperatures have reached a certain design point. This won't allow the electric heat to come on as second stage heating unless the outdoor temperature is below the set point of the outdoor thermostat.

This is done to maximize efficiency by utilizing the heat pump to bring the conditioned space temperature up, rather than cycling on the electric heat due a second stage call for heat from the thermostat on start-up coming off a night set-back condition or someone increasing the thermostat set point. (NOTE: Some programmable thermostats do have a built-in time delay for pulling in second stage heat when coming off set-back conditions.)

**FIGURE 10
ELECTRIC HEAT HOLD-OFF WIRING
4 – 10KW 1 PH — 6 & 9KW 3 PH**

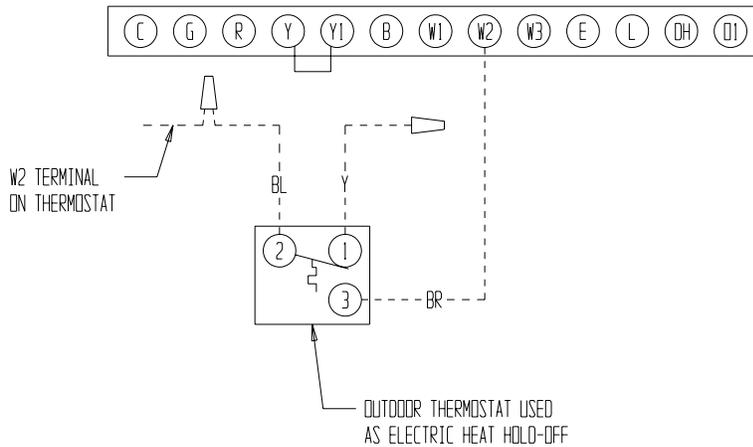

**FIGURE 11
ELECTRIC HEAT HOLD-OFF WIRING
15 – 20KW 1 PH & 3 PH**

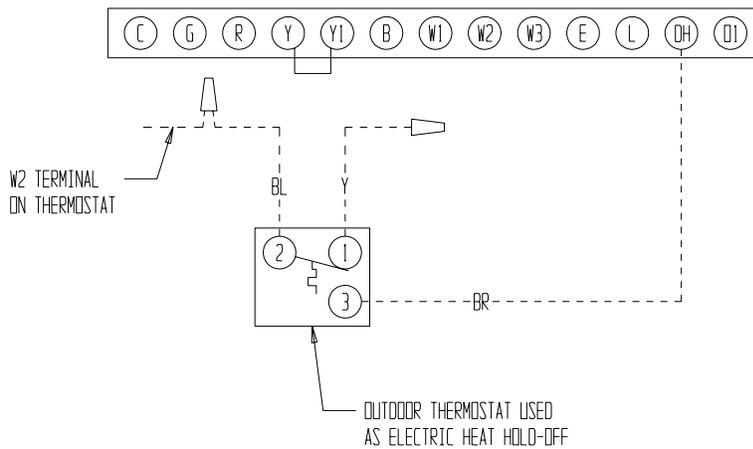

**TABLE 4
WALL THERMOSTAT**

| Thermostat | Predominant Features |
|---------------------------|---|
| 8403-058 (TH5220D1151) | 2 stage Cool; 2 stage Heat Electronic Non-Programmable Auto or Manual changeover |
| 8403-060 (1120-445) | 3 stage Cool; 3 stage Heat Programmable/Non-Programmable Electronic HP or Conventional Auto or Manual changeover |

MIS-1858

START UP

IMPORTANT INSTALLER NOTE

For improved start-up performance, wash the indoor coil with a dishwashing detergent.

CRANKCASE HEATERS

WH423 units are provided with compressor crankcase heat. WH604 and WH483 units are not provided with crankcase heat. These units utilize scroll compressors which do not require crankcase heat in this application.

The WH423 models have an insertion well-type heater located in the lower section of the compressor housing. This is a self-regulating type heater that draws only enough power to maintain the compressor at a safe temperature on these units.

Some form of crankcase heat is essential to prevent liquid refrigerant from migrating to the compressor, causing oil pump out on compressor start-up and possible valve failure due to compressing a liquid.

The decal in Figure 12 is affixed to all WH423 units detailing start-up procedure. This is very important. *Please read carefully.*

HIGH PRESSURE SWITCH

The WH483 and WH604 models are supplied with a remote reset high pressure switch. If tripped, this pressure switch may be reset by turning the thermostat off then back on again.

THREE PHASE SCROLL COMPRESSOR START UP INFORMATION

Scroll compressors, like several other types of compressors, will only compress in one rotational direction. Direction of rotation is not an issue with single phase compressors since they will always start and run in the proper direction.

However, three phase compressors will rotate in either direction depending upon phasing of the power. Since there is a 50-50 chance of connecting power in such a way as to cause rotation in the reverse direction, verification of proper rotation must be made. All three phase units incorporate a phase monitor to ensure proper field wiring. See the Phase Monitor later in this manual.

Verification of *proper rotation* must be made any time a compressor is change or rewired. If improper rotation is corrected at this time there will be no negative impact on the durability of the compressor. However, reverse operation for over one hour may have a negative impact on the bearing due to oil pump out.

FIGURE 12
START UP LABEL

IMPORTANT

THESE PROCEDURES MUST BE FOLLOWED AT INITIAL START UP AND AT ANY TIME POWER HAS BEEN REMOVED FOR 12 HOURS OR LONGER.

TO PREVENT COMPRESSOR DAMAGE WHICH MAY RESULT FROM THE PRESENCE OF LIQUID REFRIGERANT IN THE COMPRESSOR CRANKCASE:

1. MAKE CERTAIN THE ROOM THERMOSTAT IS IN THE "OFF" POSITION. (THE COMPRESSOR IS NOT TO OPERATE.)
2. APPLY POWER BY CLOSING THE SYSTEM DISCONNECT SWITCH. THIS ENERGIZES THE COMPRESSOR HEATER WHICH EVAPORATES THE LIQUID REFRIGERANT IN THE CRANKCASE.
3. ALLOW 4 HOURS OR 60 MINUTES PER POUND OF REFRIGERANT IN THE SYSTEM AS NOTED ON THE UNIT RATING PLATE, WHICHEVER IS GREATER.
4. AFTER PROPER ELAPSED TIME THE THERMOSTAT MAY BE SET TO OPERATE THE COMPRESSOR.
5. EXCEPT AS REQUIRED FOR SAFETY WHILE SERVICING, DO NOT OPEN SYSTEM DISCONNECT SWITCH.

7961-411

NOTE: If compressor is allowed to run in reverse rotation for several minutes, the compressor's internal protector will trip.

All three phase ZR3 compressors are wired identical internally. As a result, once the correct phasing is determined for a specific system or installation, connecting properly phased power leads to the same Fusite terminal should maintain proper rotation direction.

Verification of proper rotation direction is made by observing that suction pressure drops and discharge pressure rises when the compressor is energized. Reverse rotation also results in an elevated sound level over that with correct rotations, as well as, substantially reduced current draw compared to tabulated values.

The direction of rotation of the compressor may be changed by reversing any two line connections to the unit.

PHASE MONITOR

All units with three phase scroll compressors are equipped with a 3 phase line monitor to prevent compressor damage due to phase reversal.

The phase monitor in this unit is equipped with two LEDs. If the Y signal is present at the phase monitor and phases are correct, the green LED will light. If phases are reversed, the red fault LED will be lit and compressor operation is inhibited.

If a fault condition occurs, reverse two of the supply leads to the unit. Do not reverse any of the unit factory wires as damage may occur.

SERVICE HINTS

1. Caution owner/operator to maintain clean air filters at all times. Also, not to needlessly close off supply and return air registers. This reduces airflow through the system, which shortens equipment service life as well as increasing operating costs
2. Switching to heating cycle at 75°F or higher outside temperature may cause a nuisance trip of the remote reset high pressure switch. Turn thermostat off, then on to reset the high pressure switch.
3. The heat pump wall thermostats perform multiple functions. Be sure that all function switches are correctly set for the desired operating mode before trying to diagnose any reported service problems.
4. Check all power fuses or circuit breakers to be sure they are the correct rating.
5. Periodic cleaning of the outdoor coil to permit full and unrestricted airflow circulation is essential.

SEQUENCE OF OPERATION

COOLING – Circuit R-Y makes at thermostat pulling in compressor contactor, starting the compressor and outdoor motor. The G (indoor motor) circuit is automatically completed on any call for cooling operation or can be energized by manual fan switch on subbase for constant air circulation.

HEATING – A 24V solenoid coil on reversing valve controls heating cycle operation. Two thermostat options, one allowing “Auto” changeover from cycle to cycle and the other constantly energizing solenoid coil during heating season, and thus eliminating pressure equalization noise except during defrost, are to be used. On “Auto” option a circuit is completed from R-W1 and R-Y on each heating “on” cycle, energizing reversing valve solenoid and pulling in compressor contactor starting compressor and outdoor motor. R-G also make starting indoor blower motor. Heat pump heating cycle now in operation. The second option has no “Auto”

changeover position, but instead energizes the reversing valve solenoid constantly whenever the system switch on subbase is placed in “Heat” position, the “B” terminal being constantly energized from R. A Thermostat demand for heat completes R-Y circuit, pulling in compressor contactor starting compressor and outdoor motor. R-G also make starting indoor blower motor.

PRESSURE SERVICE PORTS

High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Pressure tables can be found later in the manual covering all models on both cooling and heating cycles. It is imperative to match the correct pressure curve to the unit by model number.

DEFROST CYCLE

The defrost cycle is controlled by temperature and time on the solid state heat pump control. See Figure 13.

When the outdoor temperature is in the lower 40°F temperature range or colder, the outdoor coil temperature is 32°F or below. This coil temperature is sensed by the coil temperature sensor mounted near the bottom of the outdoor coil. Once coil temperature reaches 30°F or below, the coil temperature sensor sends a signal to the control logic of the heat pump control and the defrost timer will start.

After 60 minutes at 30°F or below, the heat pump control will place the system in the defrost mode.

During the defrost mode, the refrigerant cycle switches back to the cooling cycle, the outdoor motor stops, electric heaters are energized, and hot gas passing through the outdoor coil melts any accumulated frost. When the temperature rises to approximately 57°F, the coil temperature sensor will send a signal to the heat pump control which will return the system to heating operations automatically.

If some abnormal or temporary condition such as a high wind causes the heat pump to have a prolonged defrost cycle, the heat pump control will restore the system to heating operation automatically after 10 minutes.

The heat pump defrost control board has an option of 30, 60 or 90-minute setting. All models are shipped from the factory on the 60-minute pin. If special circumstances require a change to another time, remove the wire from the 60-minute terminal and reconnect to the desired terminal. The manufacturer’s recommendation is for 60-minute defrost cycles. Refer to Figure 13.

There is a cycle speed up jumper on the control. This can be used to reduce the time between defrost cycle operation without waiting for time to elapse.

Use a small screwdriver or other metallic object, or another ¼ inch QC, to short between the *SPEEDUP* terminals to accelerate the HPC timer and initiate defrost.

Be careful not to touch any other terminals with the instrument used to short the *SPEEDUP* terminals. It may take up to 10 seconds with the *SPEEDUP* terminals shorted for the speedup to be completed and the defrost cycle to start.

As soon as the defrost cycle kicks in remove the shorting instrument from the SPEEDUP terminals. Otherwise the timing will remain accelerated and run through the 1-minute minimum defrost length sequence in a matter of seconds and will automatically terminate the defrost sequence.

There is an initiate defrost jumper (sen jump) on the control that can be used at any outdoor ambient during the heating cycle to simulate a 0° coil temperature.


This can be used to check defrost operation of the unit without waiting for the outdoor ambient to fall into the defrost region.

By placing a jumper across the *SEN JMP* terminals (a ¼ inch QC terminal works best) the defrost sensor mounted on the outdoor coil is shunted out and will activate the timing circuit. This permits the defrost cycle to be checked out in warmer weather conditions without the outdoor temperature having to fall into the defrost region.

In order to terminate the defrost test the *SEN JMP* jumper must be removed. If left in place too long, the compressor could stop due to the high pressure control opening because of high pressure condition created by operating in the cooling mode with outdoor fan off. Pressure will rise fairly fast as there is likely no actual frost on the outdoor coil in this artificial test condition.

There is also a 5-minute compressor time delay function built into the HPC. This is to protect the compressor from short cycling conditions. In some instances, it is helpful to the service technician to override or speed up this timing period, and shorting out the *SPEEDUP* terminals for a few seconds can do this.

**FIGURE 13
DEFROST CONTROL BOARD**

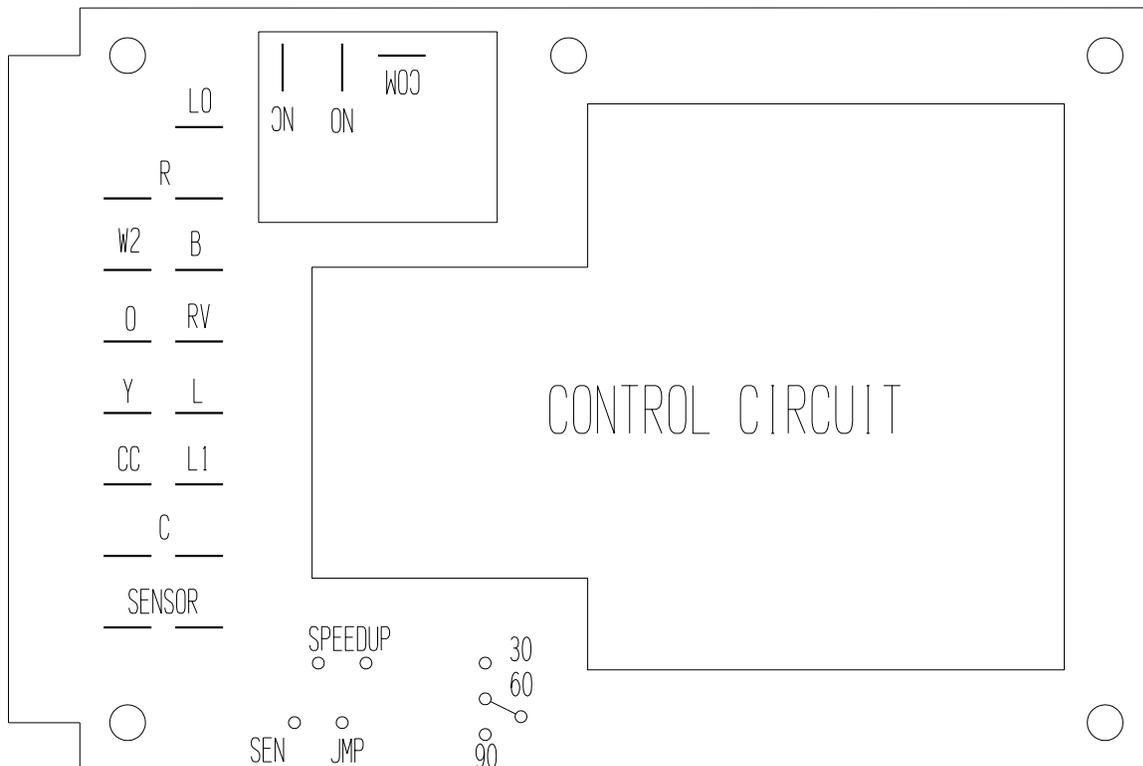

MIS-1174

TROUBLESHOOTING

SOLID STATE HEAT PUMP CONTROL TROUBLESHOOTING PROCEDURE

1. **NOTE:** A thorough understanding of the defrost cycle sequence is essential. Review that section earlier in this manual prior to troubleshooting the control. Turn on AC power supply to unit.
2. Turn thermostat blower switch to “fan on” – the indoor blower should start. (If it doesn’t, troubleshoot indoor unit and correct problem.)
3. Turn thermostat blower to “auto” position. Indoor blower should stop. **NOTE:** Many models have a 1-minute blower time delay on “off” command; wait for this to time-out.

4. Set system switch to “heat” or “cool”. Adjust thermostat to call for heat or cool. The indoor blower, compressor and outdoor fan should start.

NOTE: If there was no power to 24 volt transformer, the compressor and outdoor fan motor will not start for 5 minutes. This is because of the compressor short cycle protection.

**TABLE 5
TROUBLESHOOTING**

| Symptom | Possible Causes | What & How to Check / Repair |
|---|---|---|
| Compressor will not start (heating or cooling) | Check for 24V from R to C on the heat pump control | If 24V is not present at R, check wiring from board to transformer and check transformer input and output voltage. If transformer has no 24V output, determine cause and replace transformer. |
| | Check for 24V from Y to C on low voltage terminal strip | If 24V is not present, check thermostat and thermostat wiring, outdoor thermostat (if equipped) phase monitor (if equipped, used on some 3-phase models). If 24V is present continue to next step. |
| | Check for 24V from C to CC on heat pump control | If 24V is present, check and/or replace compressor contactor. If 24V is not present, jump the speed up terminal for 10 seconds. If compressor does not start check for 24V from C to L1 on the heat pump control. |
| | Compressor lock out | If 24V is not present at L1 of the heat pump control, check the high pressure switch and low pressure bypass relay (if equipped) and all associated wiring and terminals. The safety circuit is a closed circuit. If the high pressure switch or low pressure bypass relay are open, the control will lock out the compressor. Replace defective component. Cycle power off and on to reset lock out. Jump speed up terminals for 10 seconds to override 5-minute time delay. |
| | Defective heat pump control | If 24V is present from C to Y, and C to L1 on the heat pump control, the time delay has been overridden or expired and no 24V is present at CC, replace the heat pump control. |
| Fan outdoor motor does not run (cooling or heating except during defrost) | Heat pump control defective | Check across fan relay on heat pump control. (Com-NC) Replace heat pump control. |
| | Motor defective | Check for open or shorted motor winding. Replace motor. |
| | Motor capacitor defective | Check capacitor rating. Check for open or shorted capacitor. Replace capacitor. |
| Reversing valve does not energize (heating only) | Heat pump control defective | Check for 24V between RV-C and B-C. 1. Check control circuit wiring. 2. Replace heat pump control |
| | Reversing valve solenoid coil defective | Check for open or shorted coil. Replace solenoid coil. |
| Unit will not go into defrost (heating only) | Temperature sensor or heat pump control defective | Disconnect temperature sensor from board and jumper across "SPEEDUP" terminals and "SEN JMP" terminals. This should cause the unit to go through a defrost cycle within one minute. 1. If unit goes through defrost cycle, replace temperature sensor. 2. If unit does not go through defrost cycle, replace heat pump control. |
| Unit will not come out of defrost (heating only) | Temperature sensor or heat pump control defective. | Jumper across "SPEEDUP" terminal. This should cause the unit to come out of defrost within one minute. 1. If unit comes out of defrost cycle, replace temperature sensor. 2. If unit does not come out of defrost cycle, replace heat pump control. |

CHECKING TEMPERATURE SENSOR OUTSIDE UNIT CIRCUIT

1. Disconnect temperature sensor from board and from outdoor coil.
2. Use an ohmmeter and measure the resistance of the sensor. Also use ohmmeter to check for short or open.
3. Check resistance reading to chart of resistance. Use sensor ambient temperature. (Tolerance of part is $\pm 10\%$.)
4. If sensor resistance reads very low, then sensor is shorted and will not allow proper operation of the heat pump control.
5. If sensor is out of tolerance, shorted, open or reads very low ohms then it should be replaced.

TEMPERATURE F VS. RESISTANCE R OF TEMPERATURE SENSOR


| F | R | F | R | F | R | F | R |
|-------|--------|------|-------|------|-------|-------|------|
| -25.0 | 196871 | 13.0 | 56985 | 53.0 | 19374 | 89.0 | 7507 |
| -24.0 | 190099 | 14.0 | 55284 | 52.0 | 18867 | 90.0 | 7334 |
| -23.0 | 183585 | 15.0 | 53640 | 53.0 | 18375 | 91.0 | 7165 |
| -22.0 | 177318 | 16.0 | 52051 | 54.0 | 17989 | 92.0 | 7000 |
| -21.0 | 171289 | 17.0 | 50514 | 55.0 | 17434 | 93.0 | 6840 |
| -20.0 | 165487 | 18.0 | 49028 | 56.0 | 16984 | 94.0 | 6683 |
| -19.0 | 159904 | 19.0 | 47590 | 57.0 | 16547 | 95.0 | 6531 |
| -18.0 | 154529 | 20.0 | 46200 | 58.0 | 16122 | 96.0 | 6383 |
| -17.0 | 149355 | 21.0 | 44855 | 59.0 | 15710 | 97.0 | 6239 |
| -16.0 | 144374 | 22.0 | 43554 | 60.0 | 15310 | 98.0 | 6098 |
| -15.0 | 139576 | 23.0 | 42295 | 61.0 | 14921 | 99.0 | 5961 |
| -14.0 | 134956 | 24.0 | 41077 | 62.0 | 14544 | 100.0 | 5827 |
| -13.0 | 130506 | 25.0 | 39898 | 63.0 | 14177 | 101.0 | 5697 |
| -12.0 | 126219 | 26.0 | 38757 | 64.0 | 13820 | 102.0 | 5570 |
| -11.0 | 122089 | 27.0 | 37652 | 65.0 | 13474 | 103.0 | 5446 |
| -10.0 | 118108 | 28.0 | 36583 | 66.0 | 13137 | 104.0 | 5326 |
| -9.0 | 114272 | 29.0 | 35548 | 67.0 | 12810 | 105.0 | 5208 |
| -8.0 | 110575 | 30.0 | 34545 | 68.0 | 12492 | 106.0 | 5094 |
| -7.0 | 107010 | 31.0 | 33574 | 69.0 | 12183 | 107.0 | 4982 |
| -6.0 | 103574 | 32.0 | 32634 | 70.0 | 11883 | 108.0 | 4873 |
| -5.0 | 100260 | 33.0 | 31723 | 71.0 | 11591 | 109.0 | 4767 |
| -4.0 | 97064 | 34.0 | 30840 | 72.0 | 11307 | 110.0 | 4663 |
| -3.0 | 93981 | 35.0 | 29986 | 73.0 | 11031 | 111.0 | 4562 |
| -2.0 | 91008 | 36.0 | 29157 | 74.0 | 10762 | 112.0 | 4464 |
| -1.0 | 88139 | 37.0 | 28355 | 75.0 | 10501 | 113.0 | 4367 |
| 0.0 | 85371 | 38.0 | 27577 | 76.0 | 10247 | 114.0 | 4274 |
| 1.0 | 82699 | 39.0 | 26823 | 77.0 | 10000 | 115.0 | 4182 |
| 2.0 | 80121 | 40.0 | 26092 | 78.0 | 9760 | 116.0 | 4093 |
| 3.0 | 77632 | 41.0 | 25383 | 79.0 | 9526 | 117.0 | 4006 |
| 4.0 | 75230 | 42.0 | 24696 | 80.0 | 9299 | 118.0 | 3921 |
| 5.0 | 72910 | 43.0 | 24030 | 81.0 | 9077 | 119.0 | 3838 |
| 6.0 | 70670 | 44.0 | 23384 | 82.0 | 8862 | 120.0 | 3757 |
| 7.0 | 68507 | 45.0 | 22758 | 83.0 | 8653 | 121.0 | 3678 |
| 8.0 | 66418 | 46.0 | 22150 | 84.0 | 8449 | 122.0 | 3601 |
| 9.0 | 64399 | 47.0 | 21561 | 85.0 | 8250 | 123.0 | 3526 |
| 10.0 | 62449 | 48.0 | 20989 | 86.0 | 8057 | 124.0 | 3452 |
| 11.0 | 60565 | 49.0 | 20435 | 87.0 | 7869 | | |
| 12.0 | 58745 | 50.0 | 19896 | 88.0 | 7686 | | |

FAN BLADE SETTING DIMENSIONS

Shown in the drawing in Figure 14 are the correct fan blade setting dimensions for proper air delivery across the outdoor coil.

Any service work requiring removal or adjustment in the fan and/or motor area will require that the dimensions below be checked and blade adjusted in or out on the motor shaft accordingly.

**FIGURE 14
FAN BLADE SETTING**

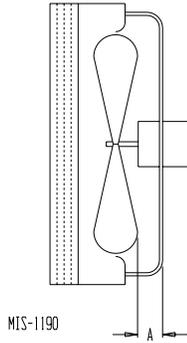

**TABLE 6
FAN BLADE DIMENSIONS**

| Model | Dimension A |
|-------|-------------|
| WH423 | 1.75 |
| WH483 | |
| WH604 | |

REMOVAL OF FAN SHROUD

1. Disconnect all power to unit.
2. Remove the screws holding both grilles – one on each side of unit – and remove grilles.
3. Remove screws holding fan shroud to condenser and bottom – (9) screws.
4. Unwire condenser fan motor.
5. Slide complete motor, fan blade, and shroud assembly out the left side of the unit.
6. Service motor/fan as needed.
7. Reverse steps to reinstall.

REFRIGERANT CHARGE

The correct system R-22 charge is shown on the unit rating plate. Optimum unit performance will occur with a refrigerant charge resulting in a suction line temperature (6 inches from compressor) as shown in the Table 7.

**TABLE 7
SUCTION LINE TEMPERATURES**

| Model | Rated Airflow | 95°F O.D. Temperature | 82°F O.D. Temperature |
|-------|---------------|-----------------------|-----------------------|
| WH423 | 1400 | 52 -- 54 | 62 -- 64 |
| WH483 | 1550 | 53 -- 55 | 62 -- 64 |
| WH604 | 1700 | 52 -- 54 | 61 -- 63 |

The suction line temperatures in Table 7 are based upon 80°F dry bulb/67 degrees F wet bulb (50 percent R.H.) temperature and rated airflow across the evaporator during cooling cycle.

**TABLE 8
RECOMMENDED OPERATING RANGES**

| Model | Rated CFM * | Rated ESP * | Recommended Air Flow Range |
|-------|-------------|-------------|----------------------------|
| WH423 | 1400 | .30 | 1600 -- 1150 |
| WH483 | 1550 | .20 | 1750 -- 1285 |
| WH604 | 1700 | .30 | 1950 -- 1375 |

* Rated CFM and ESP on high speed tap.

**TABLE 9
INDOOR BLOWER PERFORMANCE
CFM @ 230V**

| E.S.P. In H ₂ O | WH423, WH483 | | | | WH604 | | | |
|-------------------------------|--------------|----------|-----------|----------|----------|----------|-----------|----------|
| | Low 230V | | High 230V | | Low 230V | | High 230V | |
| | Dry Coil | Wet Coil | Dry Coil | Wet Coil | Dry Coil | Wet Coil | Dry Coil | Wet Coil |
| .0 | 1650 | 1600 | 1885 | 1800 | 1600 | 1450 | 2200 | 2000 |
| .1 | 1550 | 1500 | 1770 | 1665 | 1525 | 1375 | 2100 | 1900 |
| .2 | 1450 | 1400 | 1635 | 1540 | | | 2000 | 1800 |
| .3 | 1350 | 1300 | 1500 | 1400 | | | 1875 | 1700 |
| .4 | 1300 | 1175 | 1370 | 1285 | | | 1775 | 1600 |
| .5 | ----- | ----- | 1250 | 1150 | | | 1650 | 1475 |

**TABLE 10
MAXIMUM ESP OF OPERATION
ELECTRIC HEAT ONLY**

| Model Speed KW | WH423 | | WH483 | | WH604 | |
|-------------------|------------|-----------|------------|-----------|------------|-----------|
| | High Speed | Low Speed | High Speed | Low Speed | High Speed | Low Speed |
| -A00 | .50 | .50 | .50 | .50 | .50 | .40 |
| -A04 | ---- | ---- | .50 | .50 | ---- | ---- |
| -A05 | .50 | .50 | .50 | .50 | .50 | .25 |
| -A10 | .50 | .45 | .50 | .45 | .50 | .25 |
| -A15 | .50 | .45 | .50 | .45 | .50 | .25 |
| -A20 | ---- | ---- | .50 | .45 | .50 | .25 |
| -B00 | .50 | .50 | .50 | .50 | .50 | .40 |
| -B09 | .50 | .45 | .50 | .45 | .50 | .30 |
| -B15 | .50 | .45 | .50 | .45 | .50 | .30 |
| -B18 | ---- | ---- | .50 | .45 | .50 | .30 |
| -C00 | .50 | .50 | .50 | .50 | .50 | .40 |
| -C09 | .50 | .40 | .50 | .40 | .50 | .35 |
| -C15 | .50 | .40 | .50 | .40 | .50 | .35 |

Values shown are for units equipped with STD 1 inch throwaway filter on 1 inch washable filter.
Derate ESP by .15 for 2 inch pleated filters.

**TABLE 11
COOLING PRESSURE – (ALL TEMPERATURES °F)**

| Model | Return Air Temperature | Pressure | 75 | 80 | 85 | 90 | 95 | 100 | 105 | 110 | 115 |
|-------|---------------------------|-----------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| WH423 | 75 deg. DB 62 deg. WB | Low Side High Side | 72 211 | 73 226 | 75 241 | 76 256 | 78 272 | 79 288 | 80 304 | 82 321 | 84 337 |
| | 80 deg. DB 67 deg. WB | Low Side High Side | 77 216 | 78 232 | 80 247 | 81 263 | 83 279 | 85 295 | 86 312 | 88 329 | 90 346 |
| | 85 deg. DB 72 deg. WB | Low Side High Side | 80 224 | 81 240 | 83 256 | 84 272 | 86 289 | 88 305 | 89 323 | 91 341 | 93 358 |
| WH483 | 75 deg. DB 62 deg. WB | Low Side High Side | 72 215 | 73 229 | 74 245 | 76 261 | 77 278 | 78 295 | 79 313 | 80 332 | 81 351 |
| | 80 deg. DB 67 deg. WB | Low Side High Side | 77 220 | 78 235 | 79 251 | 81 268 | 82 285 | 83 303 | 84 321 | 86 340 | 87 360 |
| | 85 deg. DB 72 deg. WB | Low Side High Side | 80 228 | 81 243 | 82 260 | 84 277 | 85 295 | 86 314 | 87 332 | 89 352 | 90 373 |
| WH604 | 75 deg. DB 62 deg. WB | Low Side High Side | 71 208 | 72 224 | 74 242 | 75 258 | 76 276 | 77 293 | 79 311 | 79 329 | 80 347 |
| | 80 deg. DB 67 deg. WB | Low Side High Side | 76 213 | 77 230 | 79 248 | 80 265 | 81 283 | 82 301 | 84 319 | 85 337 | 86 356 |
| | 85 deg. DB 72 deg. WB | Low Side High Side | 79 220 | 80 238 | 82 257 | 83 274 | 84 293 | 85 312 | 87 330 | 88 349 | 89 368 |

Low side pressure ± 2 psig
High side pressure ± 5 psig

Tables are based upon rated CFM (airflow) across the evaporator coil. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated and recharged to serial plate instruction.

**TABLE 12
HEATING PRESSURES – (ALL TEMPERATURES °F)**

| Model | Return Air Temperature | Pressure | 0 | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 |
|-------|------------------------|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| WH423 | 70 deg. | Low Side | 19 | 21 | 24 | 27 | 30 | 34 | 38 | 42 | 47 | 51 | 56 | 61 | 67 |
| | | High Side | 172 | 169 | 168 | 168 | 170 | 174 | 179 | 185 | 193 | 202 | 213 | 226 | 239 |
| WH483 | 70 deg. | Low Side | 24 | 26 | 27 | 28 | 29 | 32 | 35 | 39 | 44 | 51 | 58 | 66 | 74 |
| | | High Side | 171 | 173 | 176 | 178 | 180 | 184 | 190 | 197 | 205 | 214 | 225 | 237 | 250 |
| WH604 | 70 deg. | Low Side | 24 | 24 | 25 | 27 | 29 | 32 | 36 | 41 | 46 | 52 | 59 | 66 | 74 |
| | | High Side | 198 | 194 | 191 | 191 | 193 | 197 | 203 | 212 | 223 | 236 | 251 | 268 | 288 |

Low side pressure ± 2 psig
High side pressure ± 5 psig

Tables are based upon rated CFM (airflow) across the evaporator coil. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated and recharged to serial plate instruction.

**TABLE 13
OPTIONAL ACCESSORIES**

| Model | Description | WH423-A | WH423-B | WH423-C | WH483-A | WH483-B | WH483-C | WH604-A | WH604-B | WH604-C |
|------------|-----------------------------------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| EHW42-A05 | Heater Packages | X | | | X | | | | | |
| EHW42-A10 | Heater Packages | X | | | X | | | | | |
| EHW42-A15 | Heater Packages | X | | | X | | | | | |
| EHW42-C06 | Heater Packages | | | X | | | | | | |
| EHW04-A04 | Heater Packages | | | | X | | | | | |
| EHW04-A05 | Heater Packages | | | | | | | X | | |
| EHW04-A10 | Heater Packages | | | | | | | X | | |
| EHW04-A15 | Heater Packages | | | | | | | X | | |
| EHW04-A20 | Heater Packages | | | | X | | | X | | |
| EHW04-B09 | Heater Packages | | | | | | | | | |
| EHW04-B15 | Heater Packages | | | | | | | | | |
| EHW04-B18 | Heater Packages | | | | | X | | | X | |
| EHW05-B06 | Heater Packages | | X | | X | | | | | |
| EHW05-B09 | Heater Packages | | X | | X | | | | X | |
| EHW05-B15 | Heater Packages | | X | | X | | | | X | |
| EHW05A-C09 | Heater Packages | | | X | | | X | | | X |
| EHW05A-C15 | Heater Packages | | | X | | | X | | | X |
| BOP-5 | Blank Off Plate | X | X | X | X | X | X | X | X | X |
| BFAD-5 | Barometric Fresh Air Damper | X | X | X | X | X | X | X | X | X |
| MFAD-5 | Motorized Fresh Air Damper | X | X | X | X | X | X | X | X | X |
| CRV-5 | Classroom Ventilator with Exhaust | X | X | X | X | X | X | X | X | X |
| EIFM-4 | Economizer with Exhaust | X | X | X | X | X | X | X | X | X |
| WERV-A5B | Energy Recovery Ventilator | X | X | | X | X | | X | X | |
| WERV-C5B | Energy Recovery Ventilator | | | X | | | X | | | X |
| CMH-3 | Low Pressure Control (LPC) | X | X | | | X | | | X | |
| CMH-7 | Low Ambient Control (LAC) | X | X | X | X | X | X | X | X | X |
| CMH-9 | LAC + LPC | X | X | X | X | X | X | X | X | X |
| CMH-14 | Outdoor Thermostat (ODT) | X | X | X | X | X | X | X | X | X |
| CMH-15 | Start Kit (SK) | X | | | | | | | | |
| WMCB-05B | Circuit Breaker | | X | | | | | | | |
| WMCB-06B | Circuit Breaker | | | | | X | | | | |
| WMPD-01 | Circuit Breaker | | | X | | | X | | | X |
| WMCB-07B | Circuit Breaker | | | | | | | | X | |
| WMCB-09A | Circuit Breaker | | | | X | | | X | | |
| WMCB-08B | Circuit Breaker | X | | | | | | | | |