# REPLACEMENT PARTS MANUAL

## Wall Mounted Gas/Electric

Models:

| | | | |
|---|---|---|---|
| WG2SF-A | WG2SFDA | WG3SF-A | WG3SFDA |
| WG2SF-B | WG2SFDB | WG3SF-B | WG3SFDB |
| WG2SF-C | WG2SFDC | WG3SF-C | WG3SFDC |

## Contents


*Description* *Page*

Cabinet Components
- Exploded View ....2
- Usage List ....3
- Usage List ....4

Functional Components
- Exploded View ....6
- Usage List - Standard ....7
- Usage List - Dehumidification ....8

Burner Components
- Exploded View ....10
- Usage List ....11

Control Panel
- Layout View ....12
- Usage List ....13
- Usage List ....14

Blower Assembly
- Exploded View ....15
- Usage List ....15


## General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

## Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure to have the complete model and serial number available from the unit rating plates.


Intertek

Bard® SINCE 1914
*Climate Control Solutions*


Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 2110-824B
Supersedes: 2110-824A
Date: 11-3-25

# CABINET COMPONENTS

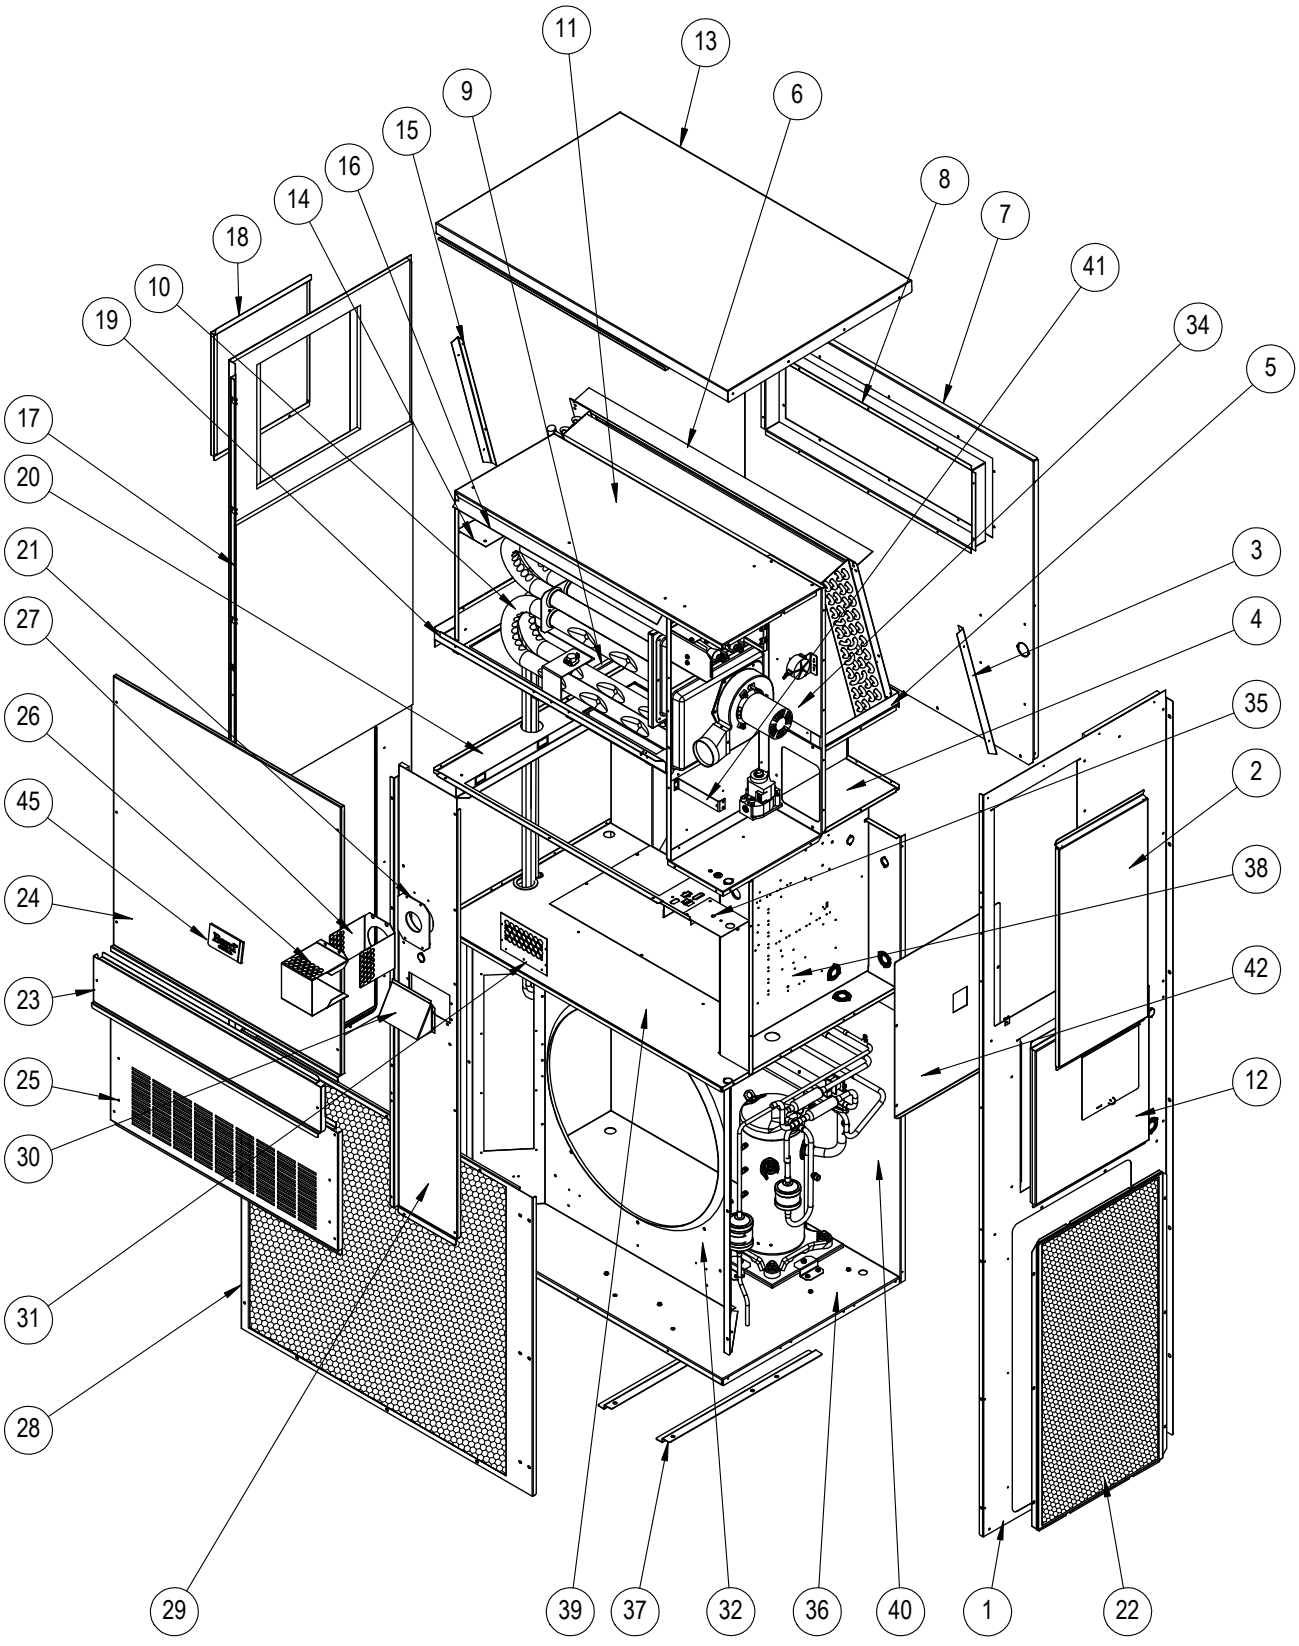




**This drawing to be used for reference for pages 3 and 4**

| Drawing No. | Part No. | Description | WG2SF | WG2SFD | WG3SF | WG3SFD |
|---|---|---|---|---|---|---|
| 1 | 501-1180-*BX | Right Side Assembly | X | X | X | X |
| 2 | 553-801BX | Vestibule Service Door | X | X | X | X |
| 3 | 105X1073BX | Right Evaporator Support Angle | X | X | X | X |
| 4 | 541-285BX | Right Drain Pan Support Assembly | X | X | X | X |
| 5 | 523-124BX | Drain Pan Assembly | X | X | X | X |
| 6 | 105-1115BX | Evaporator Coil Fill Angle | X | X | X | X |
| 7 | 509-496BX | Upper Back | X | X | X | X |
| 8 | 111-091BX | Supply Air Frame | X | X | X | X |
| 9 | 103-452BX | Heat Exchanger Support Angle | X | X | X | X |
| 10 | Heat Exch Assy | See **BURNER COMPONENTS** on page 10 | X | X | X | X |
| 11 | 135-217BX | Inner Air Baffle | X | X | X | X |
| 12 | 553-346-*BX | Control Panel Cover Assembly | X | X | X | X |
| 13 | 507-434-*BX | Top Assembly | X | X | X | X |
| 14 | 135-201BX | Right Heat Exchanger Panel | X | X | X | X |
| 15 | 105Y1073BX | Left Evaporator Support Angle | X | X | X | X |
| 16 | 105-1113BX | Top Heat Exchanger Deflector | X | X | X | X |
| 17 | 501-1181-*BX | Left Side Assembly | X | X | X | X |
| 18 | 543-070-*BX | Left Access Cover | X | X | X | X |
| 19 | 121-469BX | Blower Partition | X | X | X | X |
| 20 | 919-0008BX | Filter Tray | X | X | X | X |
| 21 | 1921-051BX | Vent Terminal Gasket | X | X | X | X |
| 22 | 118-083-*BX | Side Grille (2) | X | X | X | X |
| 23 | 553-560-*BX | Filter Access Panel Assembly | X | X | X | X |
| 24 | 553-804-*BX | Front Door Assembly | X | X | X | X |
| 25 | 553-346-*BX | Vent Option Door Assembly | X | X | X | X |
| 26 | 169-119BX | Outer Vent Hood | X | X | X | X |
| 27 | 169-120BX | Inner Vent Hood | X | X | X | X |
| 28 | 118-059-*BX | Condenser Grille | X | X | X | X |
| 29 | 549-144BX | Right Front Corner | X | X | X | X |
| 30 | 135-181-*BX | Air Intake Hood | X | X | X | X |
| 31 | 134-182-*BX | Air Intake Back | X | X | X | X |
| 32 | 125-115BX | Fan Shroud | X | X | X | X |
| 33 | 542-138BX | Condenser Partition Blank-Off Plate | X | X | X | X |
| 34 | 541-402BX | Heat Exchanger Support Assembly | X | X | X | X |
| 35 | 142-080BX | Filter Blank-Off Plate | X | X | X | X |

*Continued on page 4*

* Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, include the complete model number and serial number of the unit for which parts are being ordered.

# CABINET COMPONENTS


| Drawing No. | Part No. | Description | WG2SF | WG2SFD | WG3SF | WG3SFD |
|---|---|---|---|---|---|---|
| | | *Continued from page 3* | | | | |
| 36 | 549-636BX | Lower Base | X | X | X | X |
| 37 | 103-449BX | Lower Base Offset | X | X | X | X |
| 38 | 517-364BX | Control Panel Assembly | X | X | X | X |
| 39 | 521-441BX | Condenser Partition Assembly | X | X | X | X |
| 40 | 509-491BX | Lower Back Assembly | X | X | X | X |
| 41 | 113-268BX | Manifold Bracket | X | X | X | X |
| 42 | 133-376BX | Inner Control Panel Door | X | X | X | X |
| NS | 134-199BX | Conduit Access Panel | X | X | X | X |
| NS | 156-030BX | Conduit Entrance Plate | X | X | X | X |
| 45 | 5252-033BX | Bard Nameplate | X | X | X | X |

NS - Not Shown

**Refer to drawing on page 2**

*This page intentionally left blank*

# FUNCTIONAL COMPONENTS – STANDARD & DEHUMIDIFICATION

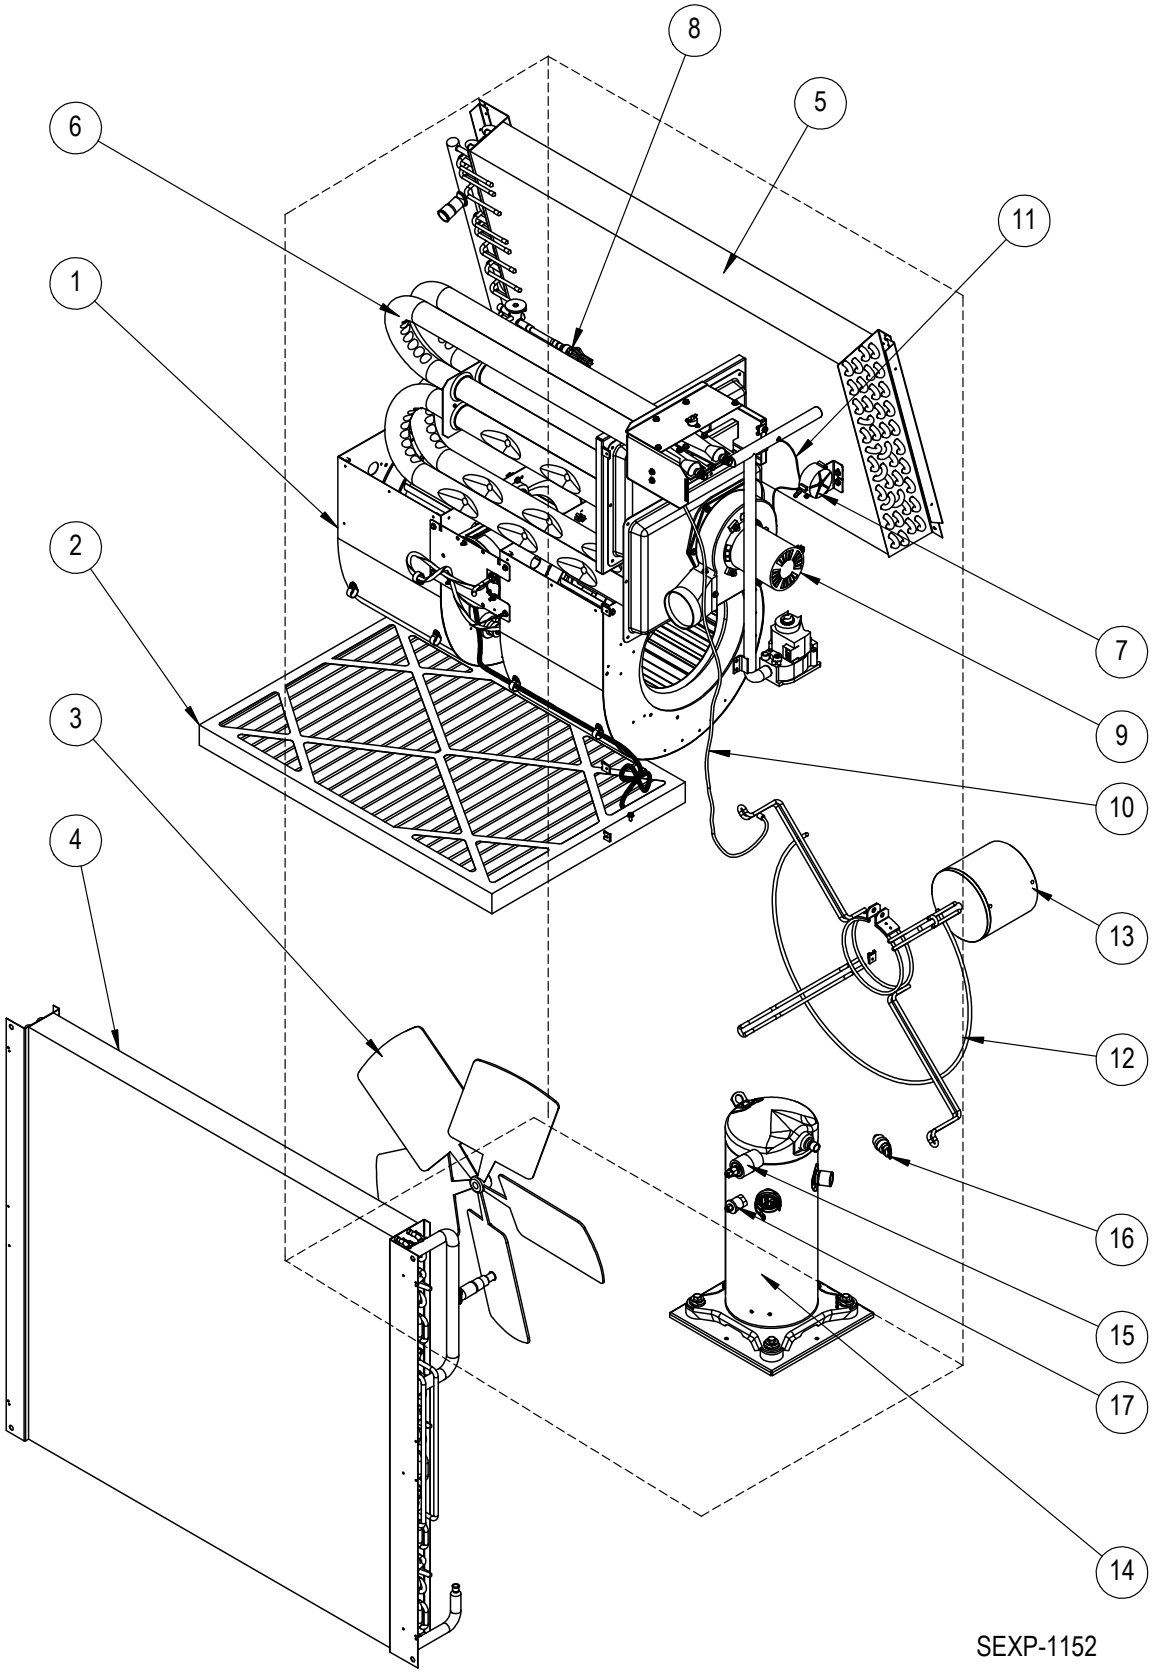




**This drawing to be used for reference for pages 7 and 8**

| Drawing No. | Part No. | Description | WG2SF-A | WG2SF-B | WG2SF-C | WG3SF-A | WG3SF-B | WG3SF-C |
|---|---|---|---|---|---|---|---|---|
| 1 | 900-375-0278BX | Complete Blower Assembly 230/208 | X | X | | | | |
| 1 | 900-376-0280BX | Complete Blower Assembly 460V | | | X | | | |
| 1 | 900-375-0277BX | Complete Blower Assembly 230/208 | | | | X | X | |
| 1 | 900-376-0279BX | Complete Blower Assembly 460V | | | | | | X |
| 2 | 7004-040 | 20 x 25 x 2 MERV 8 Filter (Standard) | X | X | X | X | X | X |
| 2 | 7003-042 | 20 x 25 x 1 AF Filter | O | O | O | O | O | O |
| 2 | 7004-071 | 20 x 25 x 2 MERV 13 Filter | O | O | O | O | O | O |
| 2 | 7004-074 | 20 x 25 x 2 MERV 11 Filter | O | O | O | O | O | O |
| 3 | 5151-045BX | Fan Blade | X | X | X | X | X | X |
| 4 | 5051-066BX | Condenser Coil | X | X | X | | | |
| 4 | 5054-066BX | Coated Condenser Coil | O | O | O | | | |
| 4 | 5051-234BX | Condenser Coil | | | | X | X | X |
| 4 | 5054-234BX | Coated Condenser Coil | | | | O | O | O |
| 5 | 5060-148BX | Evaporator Coil | X | X | X | | | |
| 5 | 5062-148BX | Coated Evaporator Coil | O | O | O | | | |
| 5 | 5060-149BX | Evaporator Coil | | | | X | X | X |
| 5 | 5062-149BX | Coated Evaporator Coil | | | | O | O | O |
| 6 | Heat Exchanger | See **BURNER COMPONENTS** on page 10 | X | X | X | X | X | X |
| 7 | 8406-103BX | .55" + .05" Pressure Switch | X | X | X | X | X | X |
| 8 | 5625-007BX | Distributor 4 Tube | X | X | X | | | |
| 8 | 5625-008BX | Distributor 6 Tube | | | | X | X | X |
| 9 | 8109-014BX | Induced Draft Blower 230V w/Transition | X | X | | X | X | |
| 9 | 8109-015BX | Induced Draft Blower 460V w/Transition | | | X | | | X |
| 10 | 8600-011BX | Suppression Ignition Cable | X | X | X | X | X | X |
| 11 | 3000-1615BX | Wire Assembly | X | X | X | X | X | X |
| 12 | 8200-001BX | Fan Motor Mount | X | X | X | X | X | X |
| 13 | 8103-029BX | Motor 230/208V | X | X | | X | X | |
| 13 | 8103-030BX | Motor 460V | | | X | | | X |
| 14 | 8000-530BX | Compressor YAS20K1E-PFV-ASE | X | | | | | |
| 14 | 8000-531BX | Compressor YAS20K1E-TF5-ASE | | X | | | | |
| 14 | 8000-532BX | Compressor YAS20K1E-TFD-ASE | | | X | | | |
| 14 | 8000-518BX | Compressor YAS30K1E-PFV-ASE | | | | X | | |
| 14 | 8000-519BX | Compressor YAS30K1E-TF5-ASE | | | | | X | |
| 14 | 8000-520BX | Compressor YAS30K1E-TFD-ASE | | | | | | X |
| 15 | 8406-112BX | Low Ambient Control | O | O | O | O | O | O |
| 16 | 8406-166BX | Low Pressure Switch | X | X | X | X | X | X |
| 17 | 8406-167BX | High Pressure Switch | X | X | X | X | X | X |
| NS | 910-2277BX | RDS Assembly | X | X | X | X | X | X |
| NS | 8408-048BX | Freeze Stat | O | O | O | O | O | O |
| NS | 6031-009 | Coremax Valve Core | X | X | X | X | X | X |

NS - Not Shown

X - Standard
O - Optional

# FUNCTIONAL COMPONENTS – DEHUMIDIFICATION

| Drawing No. | Part No. | Description | WG2SFDA | WG2SFDB | WG2SFDC | WG3SFDA | WG3SFDB | WG3SFDC |
|---|---|---|---|---|---|---|---|---|
| 1 | 900-375-0278BX | Complete Blower Assembly 230/208 | X | X | | | | |
| 1 | 900-376-0280BX | Complete Blower Assembly 460V | | | X | | | |
| 1 | 900-375-0277BX | Complete Blower Assembly 230/208 | | | | X | X | |
| 1 | 900-376-0279BX | Complete Blower Assembly 460V | | | | | | X |
| 2 | 7004-040 | 20 x 25 x 2 MERV 8 Filter (Standard) | X | X | X | X | X | X |
| 2 | 7003-042 | 20 x 25 x 1 AF Filter | O | O | O | O | O | O |
| 2 | 7004-071 | 20 x 25 x 2 MERV 13 Filter | O | O | O | O | O | O |
| 2 | 7004-074 | 20 x 25 x 2 MERV 11 Filter | O | O | O | O | O | O |
| 3 | 5151-045BX | Fan Blade | X | X | X | X | X | X |
| 4 | 5051-066BX | Condenser Coil | X | X | X | | | |
| 4 | 5054-066BX | Coated Condenser Coil | O | O | O | | | |
| 4 | 5051-234BX | Condenser Coil | | | | X | X | X |
| 4 | 5054-234BX | Coated Condenser Coil | | | | O | O | O |
| 5 | 917-0154BX | Evaporator Coil | X | X | X | | | |
| 5 | 917-0155BX | Coated Evaporator Coil | O | O | O | | | |
| 5 | 917-0156BX | Evaporator Coil | | | | X | X | X |
| 5 | 917-0157BX | Coated Evaporator Coil | | | | O | O | O |
| 6 | Heat Exchanger | See **BURNER COMPONENTS** on page 10 | X | X | X | X | X | X |
| 7 | 8406-103BX | .55" + .05" Pressure Switch | X | X | X | X | X | X |
| 8 | 5625-007BX | Distributor | X | X | X | | | |
| 8 | 5625-008BX | Distributor | | | | X | X | X |
| 9 | 8109-014BX | Induced Draft Blower 230V w/Transition | X | X | | X | X | |
| 9 | 8109-015BX | Induced Draft Blower 460V w/Transition | | | X | | | X |
| 10 | 8600-011BX | Suppression Ignition Cable | X | X | X | X | X | X |
| 11 | 3000-1615BX | Wire Assembly | X | X | X | X | X | X |
| 12 | 8200-001BX | Fan Motor Mount | X | X | X | X | X | X |
| 13 | 8103-029BX | Motor 230/208V | X | X | | X | X | |
| 13 | 8103-030BX | Motor 460V | | | X | | | X |
| 14 | 8000-530BX | Compressor YAS20K1E-PFV-ASE | X | | | | | |
| 14 | 8000-531BX | Compressor YAS20K1E-TF5-ASE | | X | | | | |
| 14 | 8000-532BX | Compressor YAS20K1E-TFD-ASE | | | X | | | |
| 14 | 8000-518BX | Compressor YAS30K1E-PFV-ASE | | | | X | | |
| 14 | 8000-519BX | Compressor YAS30K1E-TF5-ASE | | | | | X | |
| 14 | 8000-520BX | Compressor YAS30K1E-TFD-ASE | | | | | | X |
| 15 | 8406-112BX | Low Ambient Control | O | O | O | O | O | O |
| 16 | 8406-166BX | Low Pressure Switch | X | X | X | X | X | X |
| 17 | 8406-167BX | High Pressure Switch | X | X | X | X | X | X |
| NS | 910-2277BX | RDS Assembly | X | X | X | X | X | X |
| NS | 8408-048BX | Freeze Stat | O | O | O | O | O | O |
| NS | 6031-009 | Coremax Valve Core | X | X | X | X | X | X |
| NS | 5651-219BX | Check Valve | X | X | X | X | X | X |
| NS | 5650-051BX | Three Way Valve with Solenoid | X | X | X | X | X | X |
| NS | 5651-245BX | Expansion Valve | X | X | X | X | X | X |
| NS | 5651-246BX | EEV Cable and Stator | X | X | X | X | X | X |
| NS | 8408-056BX | EEV Thermistor | X | X | X | X | X | X |
| NS | 8406-158BX | Transducer | X | X | X | X | X | X |
| NS | 5201-021BX | Filter Drier | X | X | X | X | X | X |
| NS | 5650-046BX | Solenoid Coil | X | X | X | X | X | X |




NS - Not Shown

**Refer to drawing on page 6**

X - Standard
O - Optional

*This page intentionally left blank*

## BURNER COMPONENTS

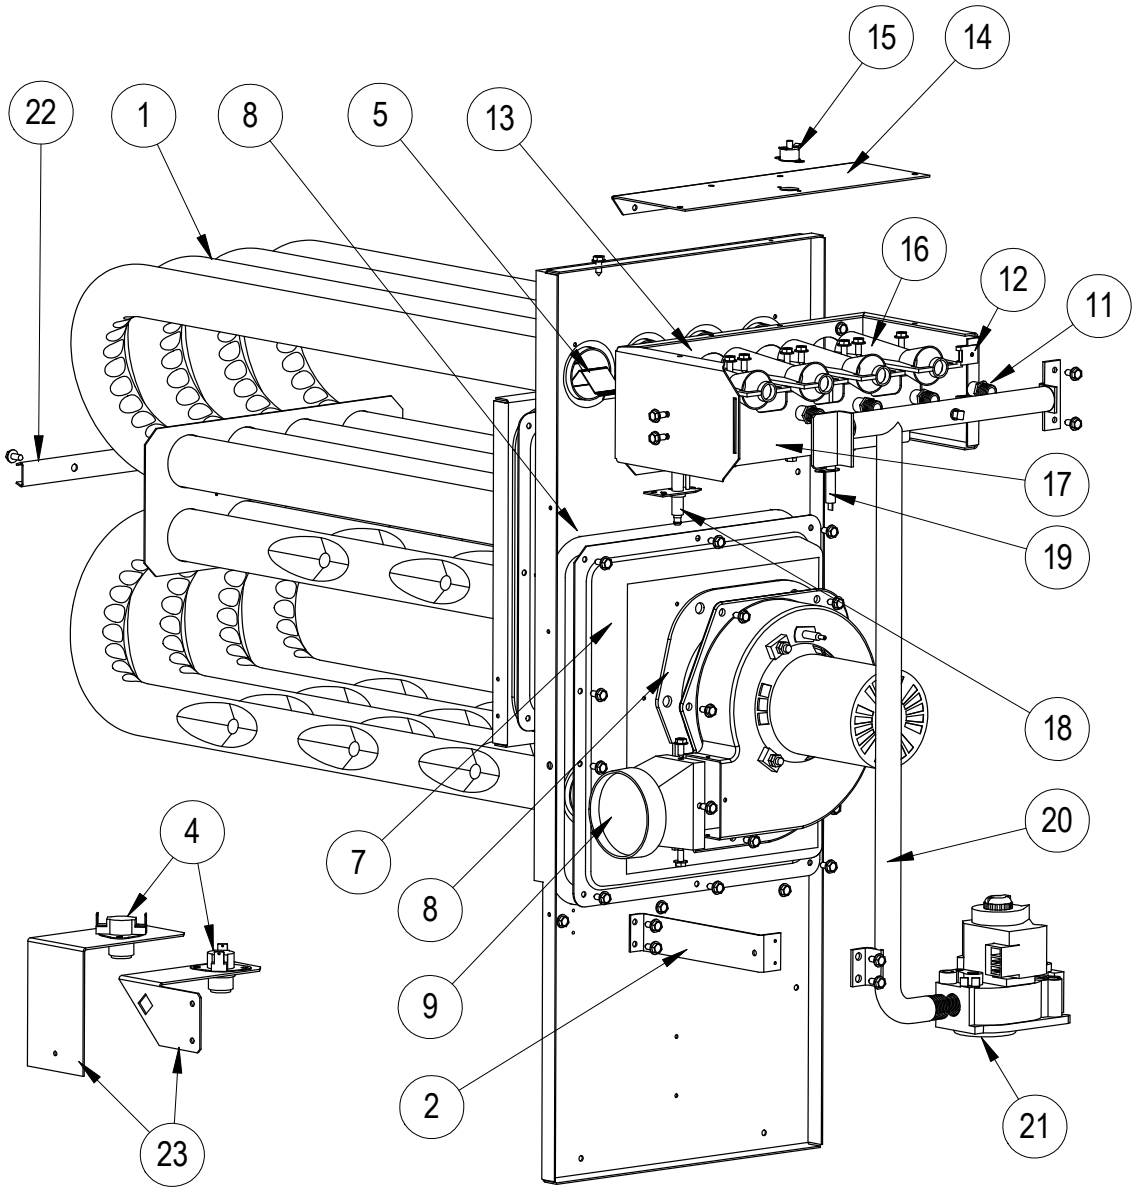



SEXP-678 A

| Drawing No. | Part No. | Description | WG2SF**XA | WG2SF**XB | WG2SF**XC | WG3SF**XA | WG3SF**XB | WG3SF**XC |
|---|---|---|---|---|---|---|---|---|
| 1 | 171-303BX | Heat Exchanger Assembly (2 Burner) | X | | | X | | |
| 1 | 171-305BX | Heat Exchanger Assembly (3 Burner) | | X | | | X | |
| 1 | 171-307BX | Heat Exchanger Assembly (4 Burner) | | | X | | | X |
| 2 | 113-268BX | Manifold Bracket | X | X | X | X | X | X |
| 4 | 8402-180BX | Limit Control L140-30 | X | | | X | | |
| 4 | 8402-178BX | Limit Control L120-30 | | X | | | X | |
| 4 | 8402-177BX | Limit Control L115-30 | | | X | | | X |
| 7 | 168-142BX | Collector Box | X | | | X | | |
| 7 | 168-143BX | Collector Box | | X | | | X | |
| 7 | 168-144BX | Collector Box | | | X | | | X |
| 8 | 1921-043BX | Gasket Set | X | X | X | X | X | X |
| 9 | 5809-013BX | 3" Cast Inducer Transition | X | X | X | X | X | X |
| 11 | 9010-082BX | Orifice 2.30mm (.0885 diameter) | 2 | 3 | 4 | 2 | 3 | 4 |
| 11 | 9010-087BX | Orifice 2.20mm (10% derate) | 2 | 3 | 4 | 2 | 3 | 4 |
| 12 | 1012-314 | U Clip Fastener | 2 | 2 | 2 | 2 | 2 | 2 |
| 13 | 163-050BX | Burner Box | X | | | X | | |
| 13 | 163-049BX | Burner Box | | X | | | X | |
| 13 | 163-052BX | Burner Box | | | X | | | X |
| 14 | 141-493BX | Flame Rollout Support | X | X | | X | X | |
| 14 | 141-494BX | Flame Rollout Support | | | X | | | X |
| 15 | 8402-124BX | Flame Rollout Switch L270 | X | X | X | X | X | X |
| 16 | 9010-078BX | In-Shot Burner 2.5 x 4.5 | 2 | 3 | 4 | 2 | 3 | 4 |
| 17 | 163-048BX | Burner Support | X | | | X | | |
| 17 | 163-041BX | Burner Support | | X | | | X | |
| 17 | 163-043BX | Burner Support | | | X | | | X |
| 18 | 8554-024BX | DSI Spark Igniter | X | X | X | X | X | X |
| 19 | 8554-025BX | Flame Sensor | X | X | X | X | X | X |
| 20 | 5818-053BX | 2-Hole Gas Manifold - 1/2” | X | | | X | | |
| 20 | 5818-054BX | 3-Hole Gas Manifold - 1/2” | | X | | | X | |
| 20 | 5818-055BX | 4-Hole Gas Manifold - 1/2” | | | X | | | X |
| 21 | 5651-160BX | Natural Gas Valve 1/2 x 1/2 | X | X | X | X | X | X |
| 22 | 168-140BX | Tube Brace 2 Burner | X | | | X | | |
| 22 | 168-135BX | Tube Brace 3 Burner | | X | | | X | |
| 22 | 168-134BX | Tube Brace 4 Burner | | | X | | | X |
| 23 | 112-355BX | Limit Bracket | X | | | X | | |
| 23 | 112-475BX | Limit Bracket | | X | X | | X | X |
| NS | 400-0203BX | Orifice Parts Bag 2 Tube 45K | X | | | X | | |
| NS | 400-0204BX | Orifice Parts Bag 3 Tube 67.5K | | X | | | X | |
| NS | 400-0205BX | Orifice Parts Bag 4 Tube 90K | | | X | | | X |
| NS | 8600-011BX | Ignition Cable | X | X | X | X | X | X |

NS – Not Shown

# CONTROL PANEL

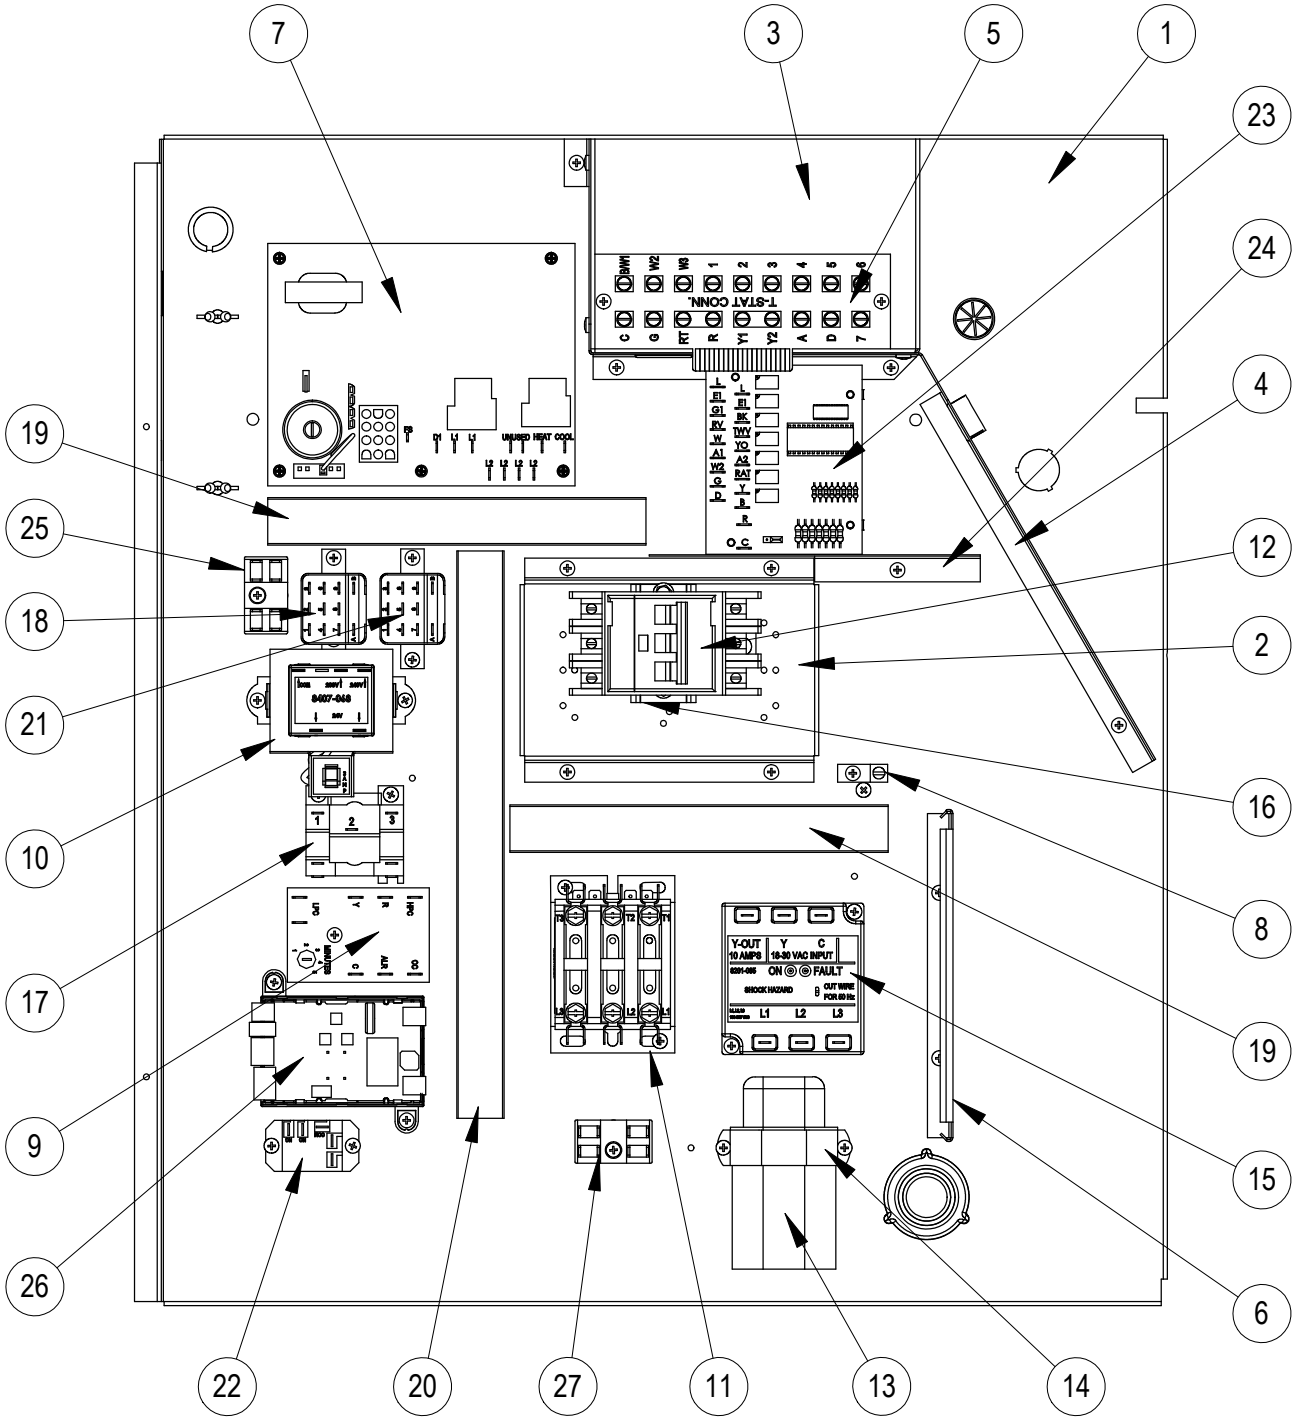


SEXP-1013

**This drawing to be used for reference for pages 13 and 14**

| Dwg. No. | Part No. | Description | WG2SF-A | WG2SF-B | WG2SF-C | WG2SFDA | WG2SFDB | WG2SFDC | WG3SF-A | WG3SF-B | WG3SF-C | WG3SFDA | WG3SFDB | WG3SFDC |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| 1 | 517-463BX | Control Panel | X | X | X | X | X | X | X | X | X | X | X | X |
| 2 | 113-269BX | Circuit Breaker Mounting Bracket | X | X | | X | X | | X | X | | X | X | |
| 2 | 127-590BX | 460V Disconnect Base | | | X | | | X | | | X | | | X |
| 3 | 117-410BX | Low Voltage Box | X | X | X | X | X | X | X | X | X | X | X | X |
| 4 | 117-409BX | Low Voltage Partition | X | X | X | X | X | X | X | X | X | X | X | X |
| 5 | 8607-062BX | Terminal Strip | X | X | X | X | X | X | X | X | X | X | X | X |
| 6 | 135-130BX | Wire Shield | X | X | X | X | X | X | X | X | X | X | X | X |
| 7 | 5651-159BX | Integrated Furnace Control | X | X | X | X | X | X | X | X | X | X | X | X |
| 8 | 8611-281 | Terminal | X | X | X | X | X | X | X | X | X | X | X | X |
| 9 | 8201-176BX | Compressor Control Module | X | X | X | X | X | X | X | X | X | X | X | X |
| 10 | 8407-068BX | Transformer | X | X | | X | X | | X | X | | X | X | |
| 10 | 8407-069BX | Transformer | | | X | | | X | | | X | | | X |
| 11 | 8401-002BX | Compressor Contactor | | X | X | | X | X | | X | X | | X | X |
| 11 | 8401-025BX | Compressor Contactor | X | | | X | | | X | | | X | | |
| 12 | 8615-035BX | Circuit Breaker 20A 2-Pole | X | | | X | | | | | | | | |
| 12 | 8615-037BX | Circuit Breaker 30A 2-Pole | | | | | | | X | | | X | | |
| 12 | 8615-051BX | Circuit Breaker 25A 3-Pole | | | | | | | | X | | | X | |
| 12 | 8615-056BX | Circuit Breaker 15A 3-Pole | | X | | | X | | | | | | | |
| 12 | 8615-095BX | Toggle Disconnect | | | X | | | X | | | X | | | X |
| 12 | 8615-096BX | Toggle Disconnect Cover | | | X | | | X | | | X | | | X |
| 13 | 8552-002BX | Capacitor 5MFD 370V | | X | X | | X | X | | X | X | | X | X |
| 13 | 8552-047BX | Capacitor 30/5MFD 370V | X | | | X | | | | | | | | |
| 13 | 8552-052BX | Capacitor 45/5MFD 370V | | | | | | | X | | | X | | |
| 14 | 8550-003BX | Capacitor Bracket 1-1/4" Oval | | X | X | | X | X | | X | X | | X | X |
| 14 | 8550-008BX | Capacitor Bracket 2-1/2" Round | X | | | X | | | X | | | X | | |
| 15 | 8201-174BX | Phase Monitor | | X | X | | X | X | | X | X | | X | X |
| 16 | 8611-209BX | DIN Rail | | X | X | X | X | X | | X | X | X | X | X |
| 16 | 8611-210BX | DIN Rail | X | X | X | X | X | X | X | X | X | X | X | X |
| 17 | 8201-032BX | Inducer Relay | X | X | X | X | X | X | X | X | X | X | X | X |
| 18 | 8201-159BX | Blower Relay | X | X | X | X | X | X | X | X | X | X | X | X |
| 19 | 8611-140-0800 | Cable Duct - 8" x 1" Wide | X | X | X | X | X | X | X | X | X | X | X | X |
| 20 | 8611-140-1200 | Cable Duct - 12" x 1" Wide | X | X | X | X | X | X | X | X | X | X | X | X |
| 21 | 8201-159BX | Lockout Relay | | | | X | X | X | | | | X | X | X |
| 22 | 8201-130BX | Dehumidification Control Relay | | | | X | X | X | | | | X | X | X |
| 23 | 8201-113BX | Dehumidification Logic Board | | | | X | X | X | | | | X | X | X |
| 24 | 135-266BX | Wire Shield | X | X | X | X | X | X | X | X | X | X | X | X |
| 25 | 8607-017BX | Terminal Block | X | X | X | X | X | X | X | X | X | X | X | X |
| 26 | 8301-079-0005BX | EEV Control Board (see also page 8) | | | | X | X | X | | | | X | X | X |
| 27 | 8607-017BX | Terminal Block - LAC Kit | O | O | O | O | O | O | O | O | O | O | O | O |

*Continued on page 14*


X - Standard
O - Optional

# CONTROL PANEL

| Drawing No. | Part No. | Description | WG2SF-A | WG2SF-B | WG2SF-C | WG2SFDA | WG2SFDB | WG2SFDC | WG3SF-A | WG3SF-B | WG3SF-C | WG3SFDA | WG3SFDB | WG3SFDC |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| *Continued from page 13* | | | | | | | | | | | | | | |
| NS | 4218-101 | Wiring Diagram | X | | | X | | | X | | | X | | |
| NS | 4218-102 | Wiring Diagram | | | | | | | | | | | | |
| NS | 4218-201 | Wiring Diagram | | X | | | | | | X | | | | |
| NS | 4218-202 | Wiring Diagram | | | | | X | | | | | | X | |
| NS | 4218-301 | Wiring Diagram | | | X | | | | | | X | | | |
| NS | 4218-302 | Wiring Diagram | | | | | | X | | | | | | X |
| NS | 3000-1616BX | Blower Power Plug | X | X | X | X | X | X | X | X | X | X | X | X |
| NS | 3000-1617BX | Blower Speed Plug | X | X | X | X | X | X | X | X | X | X | X | X |
| NS | 3000-1224BX | Compressor Power Plug | X | | | X | | | X | | | X | | |
| NS | 3000-1231BX | Compressor Power Plug | | X | X | | X | X | | X | X | | X | X |
| NS | 3000-1223BX | Compressor Staging Solenoid Plus | X | X | X | X | X | X | X | X | X | X | X | X |
| NS | 3003-212BX | Control Panel Wire Harness | X | | | | | | X | | | | | |
| NS | 3003-213BX | Control Panel Wire Harness | | X | X | | | | | X | X | | | |
| NS | 3003-214BX | Control Panel Wire Harness | | | | X | | | | | | X | | |
| NS | 3003-215BX | Control Panel Wire Harness | | | | | X | X | | | | | X | X |
| NS | 3000-1618BX | Integrated Furnace Control Plug | X | X | X | X | X | X | X | X | X | X | X | X |

NS - Not Shown

**Refer to drawing on page 12**

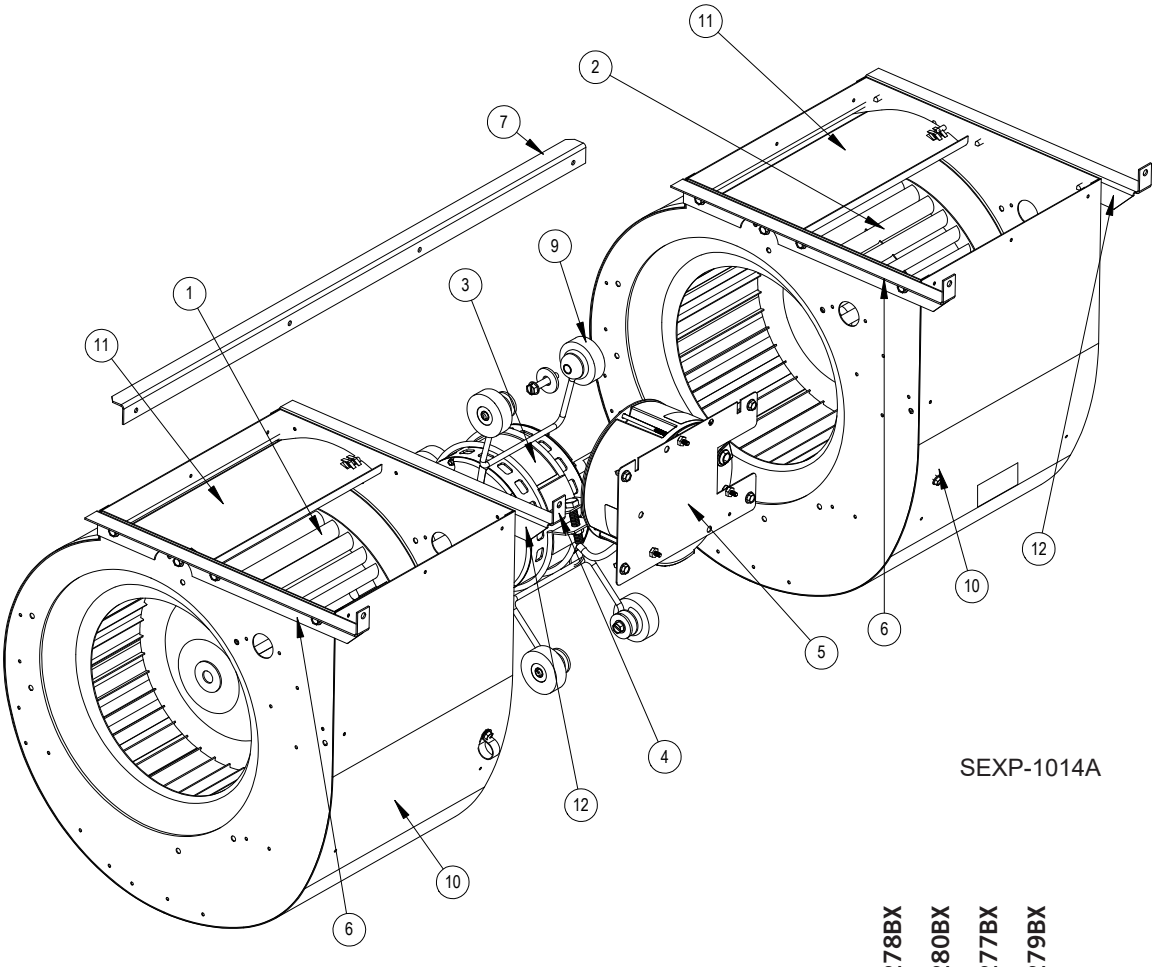


SEXP-1014A

| Drawing No. | Part No. | Description | 900-375-0278BX | 900-376-0280BX | 900-375-0277BX | 900-376-0279BX |
|---|---|---|---|---|---|---|
| 1 | 5152-096BX | Blower Wheel | X | X | X | X |
| 2 | 5152-072BX | Blower Wheel | X | X | X | X |
| 3 | 8106-068-0278BX | Blower Motor & Control (230/208V) | X | | | |
| 3 | 8106-068-0280BX | Blower Motor & Control (460V) | | X | | |
| 3 | 8106-068-0277BX | Blower Motor & Control (230/208V) | | | X | |
| 3 | 8106-068-0279BX | Blower Motor & Control (460V) | | | | X |
| 4 | 8200-040BX | Motor Mount | X | X | X | X |
| 5 | 112-775BX | Motor Control Bracket | X | X | X | X |
| 6 | 105Y1075BX | Angle – Left | 2 | 2 | 2 | 2 |
| 7 | 105-1109BX | Angle – Back | X | X | X | X |
| 9 | 5451-011 | Grommet | 6 | 6 | 6 | 6 |
| 10 | 151-117BX | Blower Housing | 2 | 2 | 2 | 2 |
| 11 | 144-167BX | Diffuser | 2 | 2 | 2 | 2 |
| 12 | 105X1075BX | Angle – Right | 2 | 2 | 2 | 2 |