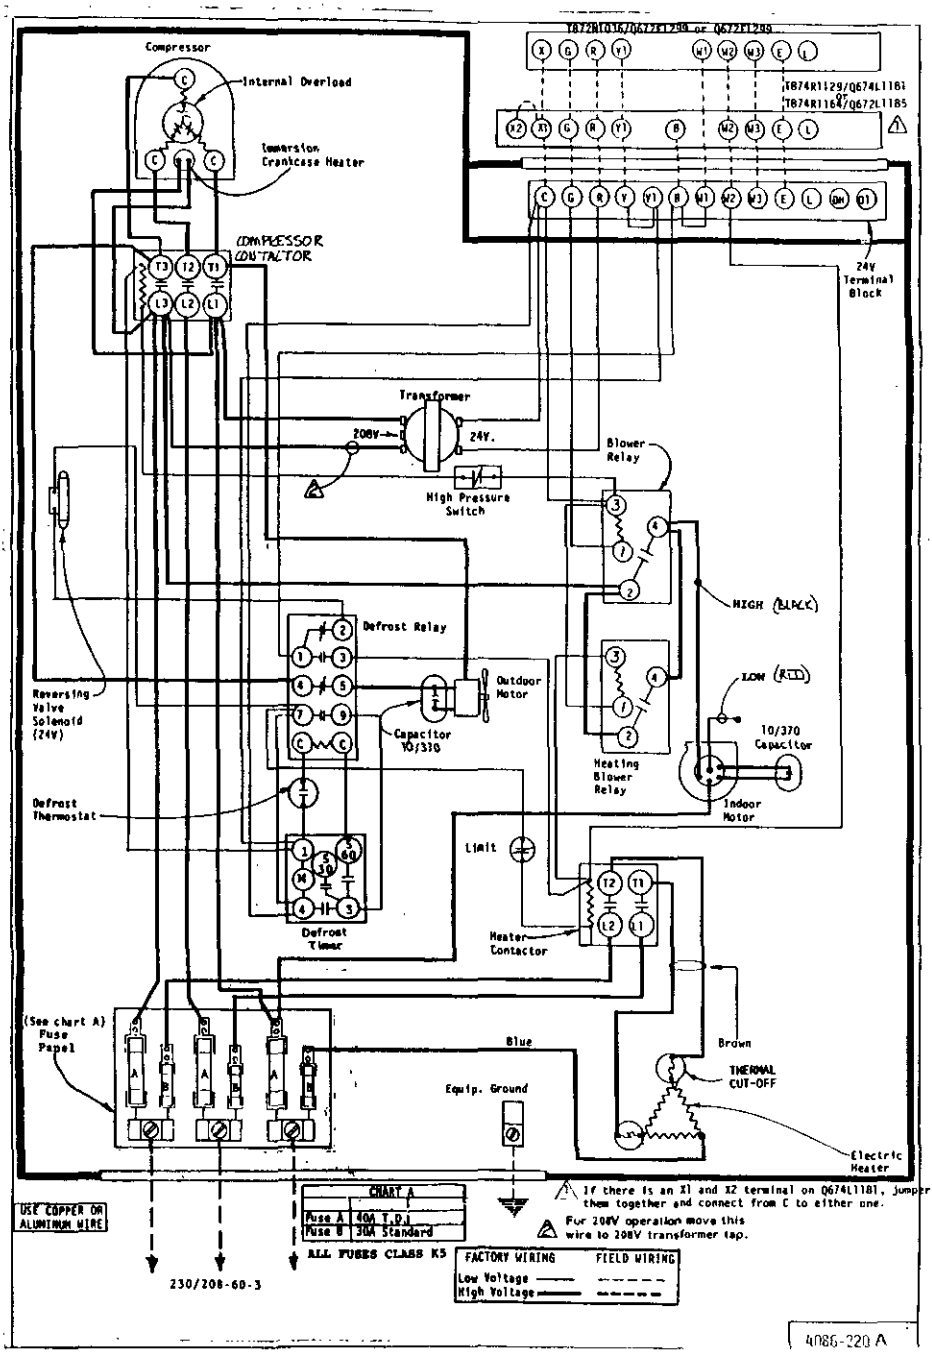
T872M1016/Q672F1299 or Q672F1299
T874R1129/Q674L1181
or
T874R1164/Q672L1185
Compressor
Internal Overload
Immersion Crankcase Heater
COMPRESSOR CONTACTOR
24V Terminal Block
Transformer
208V
24V.
Blower Relay
High Pressure Switch
HIGH (BLACK)
LOW (RED)
Defrost Relay
Outdoor Motor
Capacitor 70/330
Reversing Valve Solenoid (24V)
Heating Blower Relay
10/370 Capacitor
Indoor Motor
Defrost Thermostat
Limit
Defrost Timer
Heater Contactor
(See chart A) Fuse Panel
Blue
Brown
THERMAL CUT-OFF
Equip. Ground
Electric Heater
USE COPPER OR ALUMINUM WIRE
CHART A
Fuse A 40A T.D.
Fuse B 30A Standard
ALL FUSES CLASS K5
230/208-60-3
If there is an X1 and X2 terminal on Q674L1181, jumper them together and connect from C to either one.
For 208V operation move this wire to 208V transformer tap.
FACTORY WIRING
FIELD WIRING
Low Voltage
High Voltage
4086-220 A