


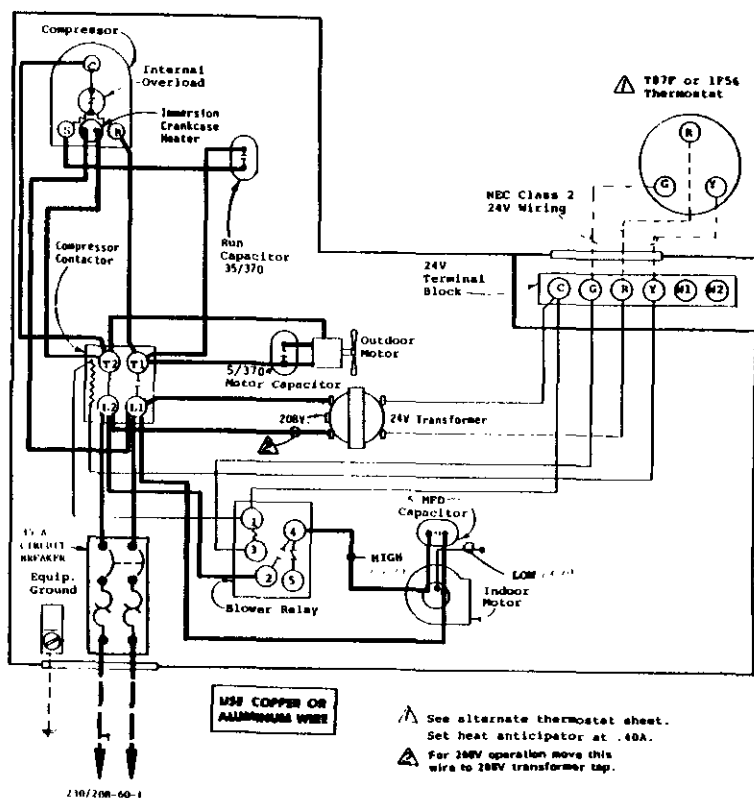

- ⚠ See alternate thermostat sheet.  
Set heat anticipator at .40A.
- ⚠ For 208V operation move this wire to 208V transformer tap.

| FACTORY WIRING | FIELD WIRING |
|----------------|--------------|
| Low Voltage    | -----        |
| High Voltage   | -----        |

4008-112 D