


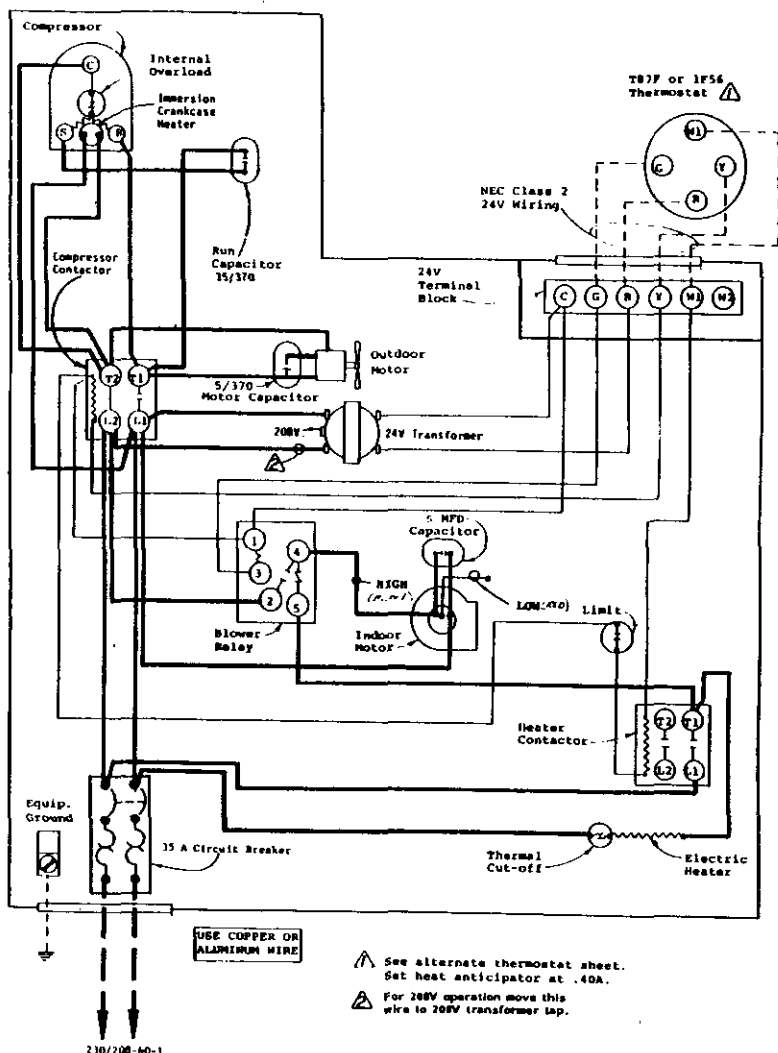

- ⚠ See alternate thermostat sheet.
Set heat anticipator at .40A.
- ⚠ For 208V operation move this wire to 208V transformer tap.

FACTORY WIRING	FIELD WIRING
Low Voltage	Low Voltage
High Voltage	High Voltage

4008-122 E