


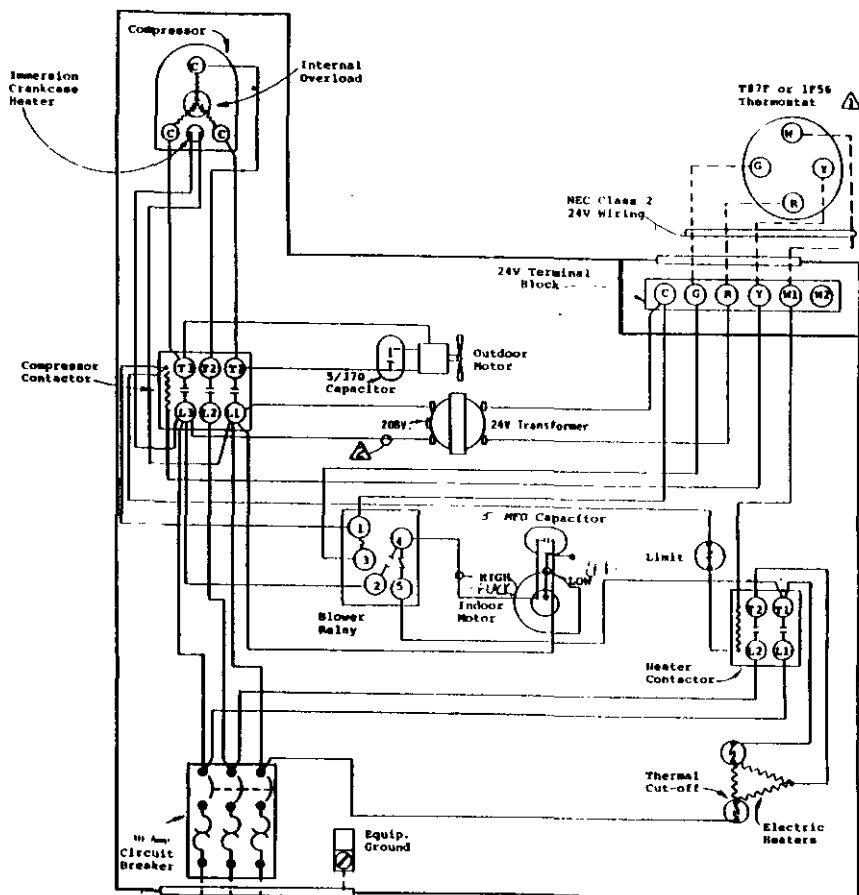

USE COPPER OR ALUMINUM WIRE

- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A
- ⚠ For 208V operation move this wire to 208V transformer tap.

230/208-60-3

Factory Wiring ———
Field Wiring - - - - -

4008-271L