


501958

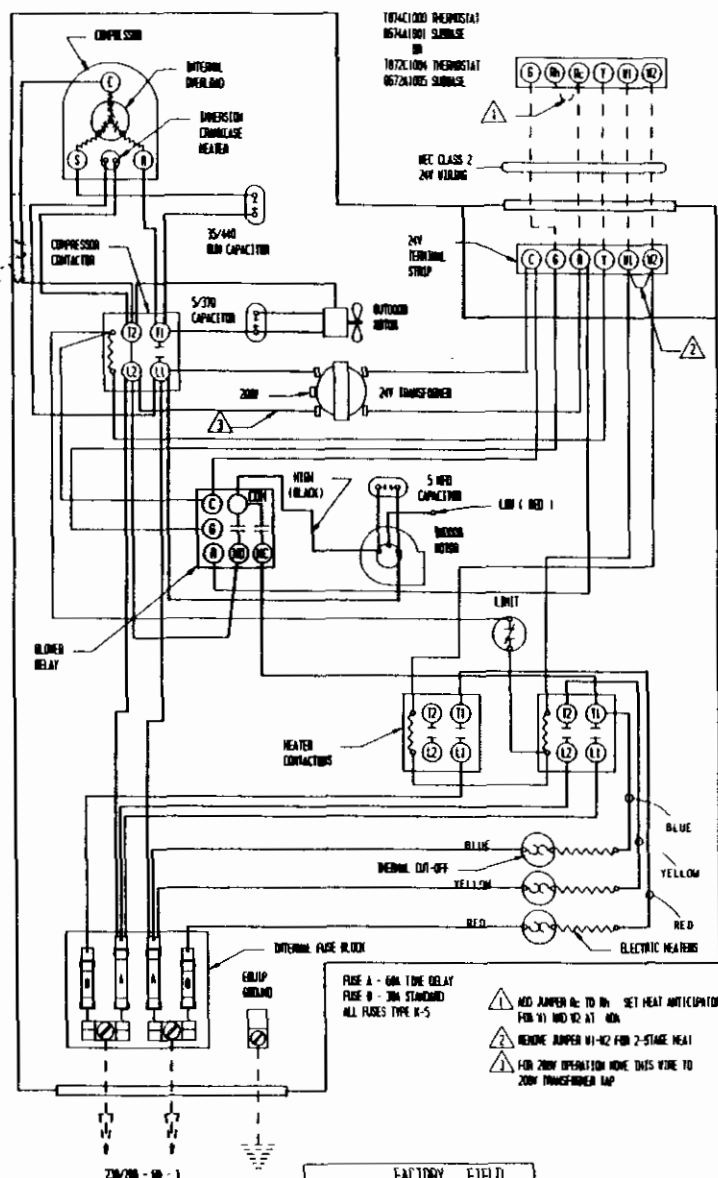

24V/200V - 00 - 1

USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	---	---
High Voltage	---	---

- ⚠ ADD JUMPER R1 TO R4 SET HEAT ANTICIPATION FOR R1 AND R2 AT 10A
 ⚠ REMOVE JUMPER R1-R2 FOR 2-STAGE HEAT
 ⚠ FOR 200V OPERATION REMOVE THIS WIRE TO 200V TRANSFORMER TAP

4000-140 Q