


T872C1004 Thermostat
0672A1005 Subbase  or T874C1000
0674A1001

Immersion
Crankcase
Heater

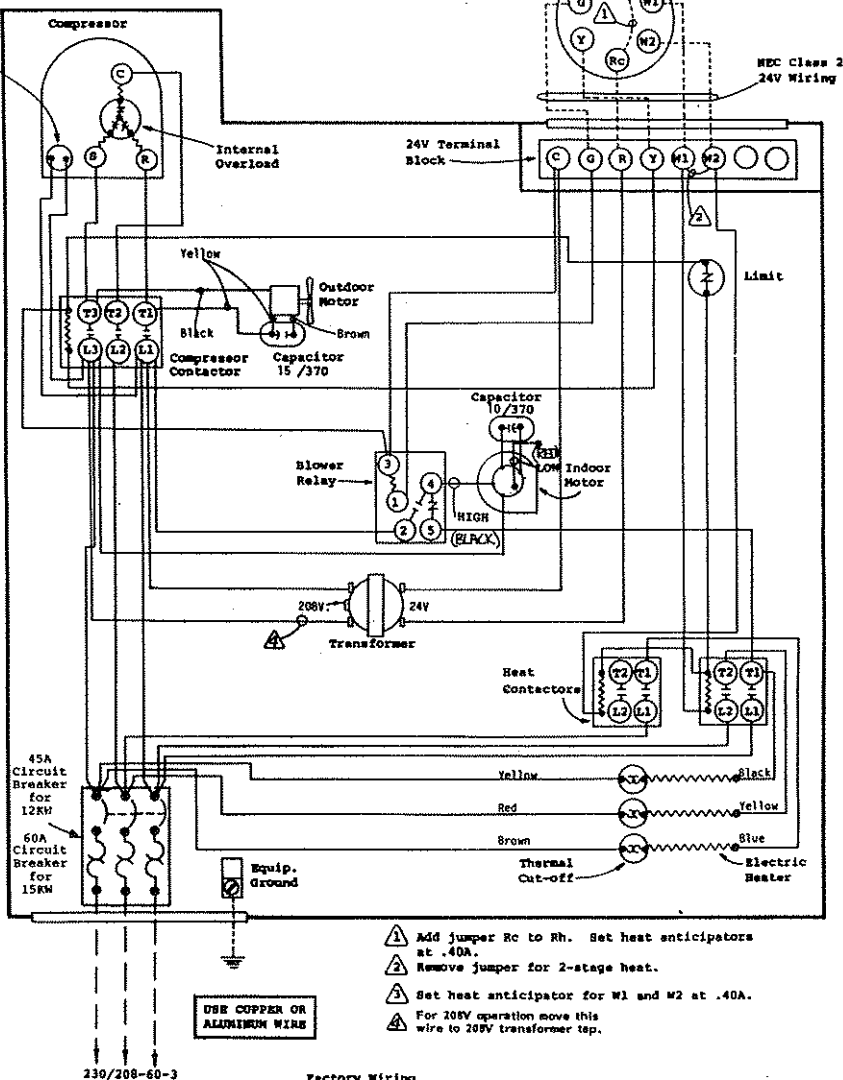

-  Add jumper Rc to Rh. Set heat anticipators at .40A.
-  Remove jumper for 2-stage heat.
-  Set heat anticipator for W1 and W2 at .40A.
-  For 208V operation move this wire to 208V transformer tap.

4010-231G