




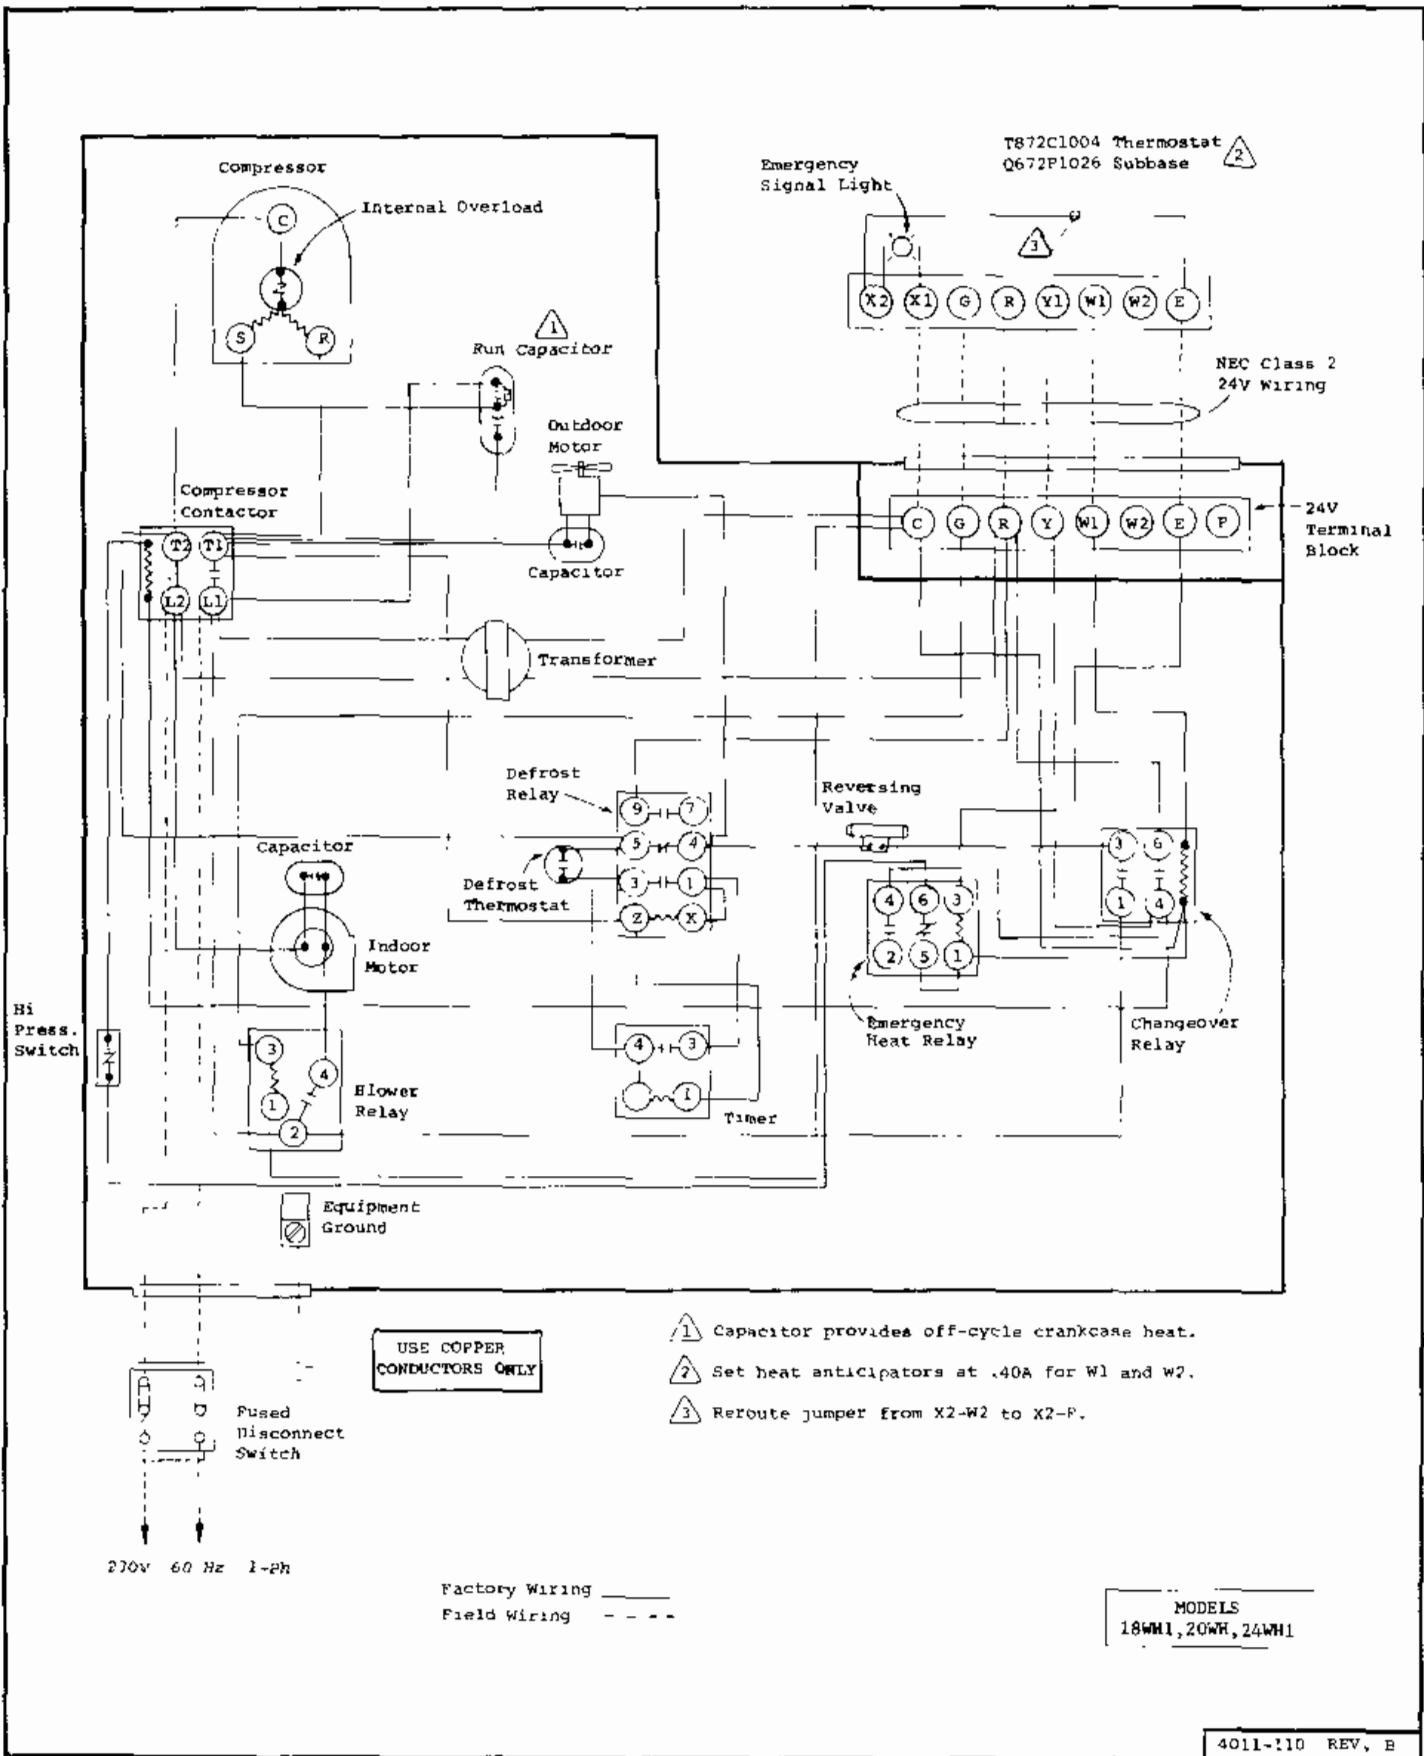

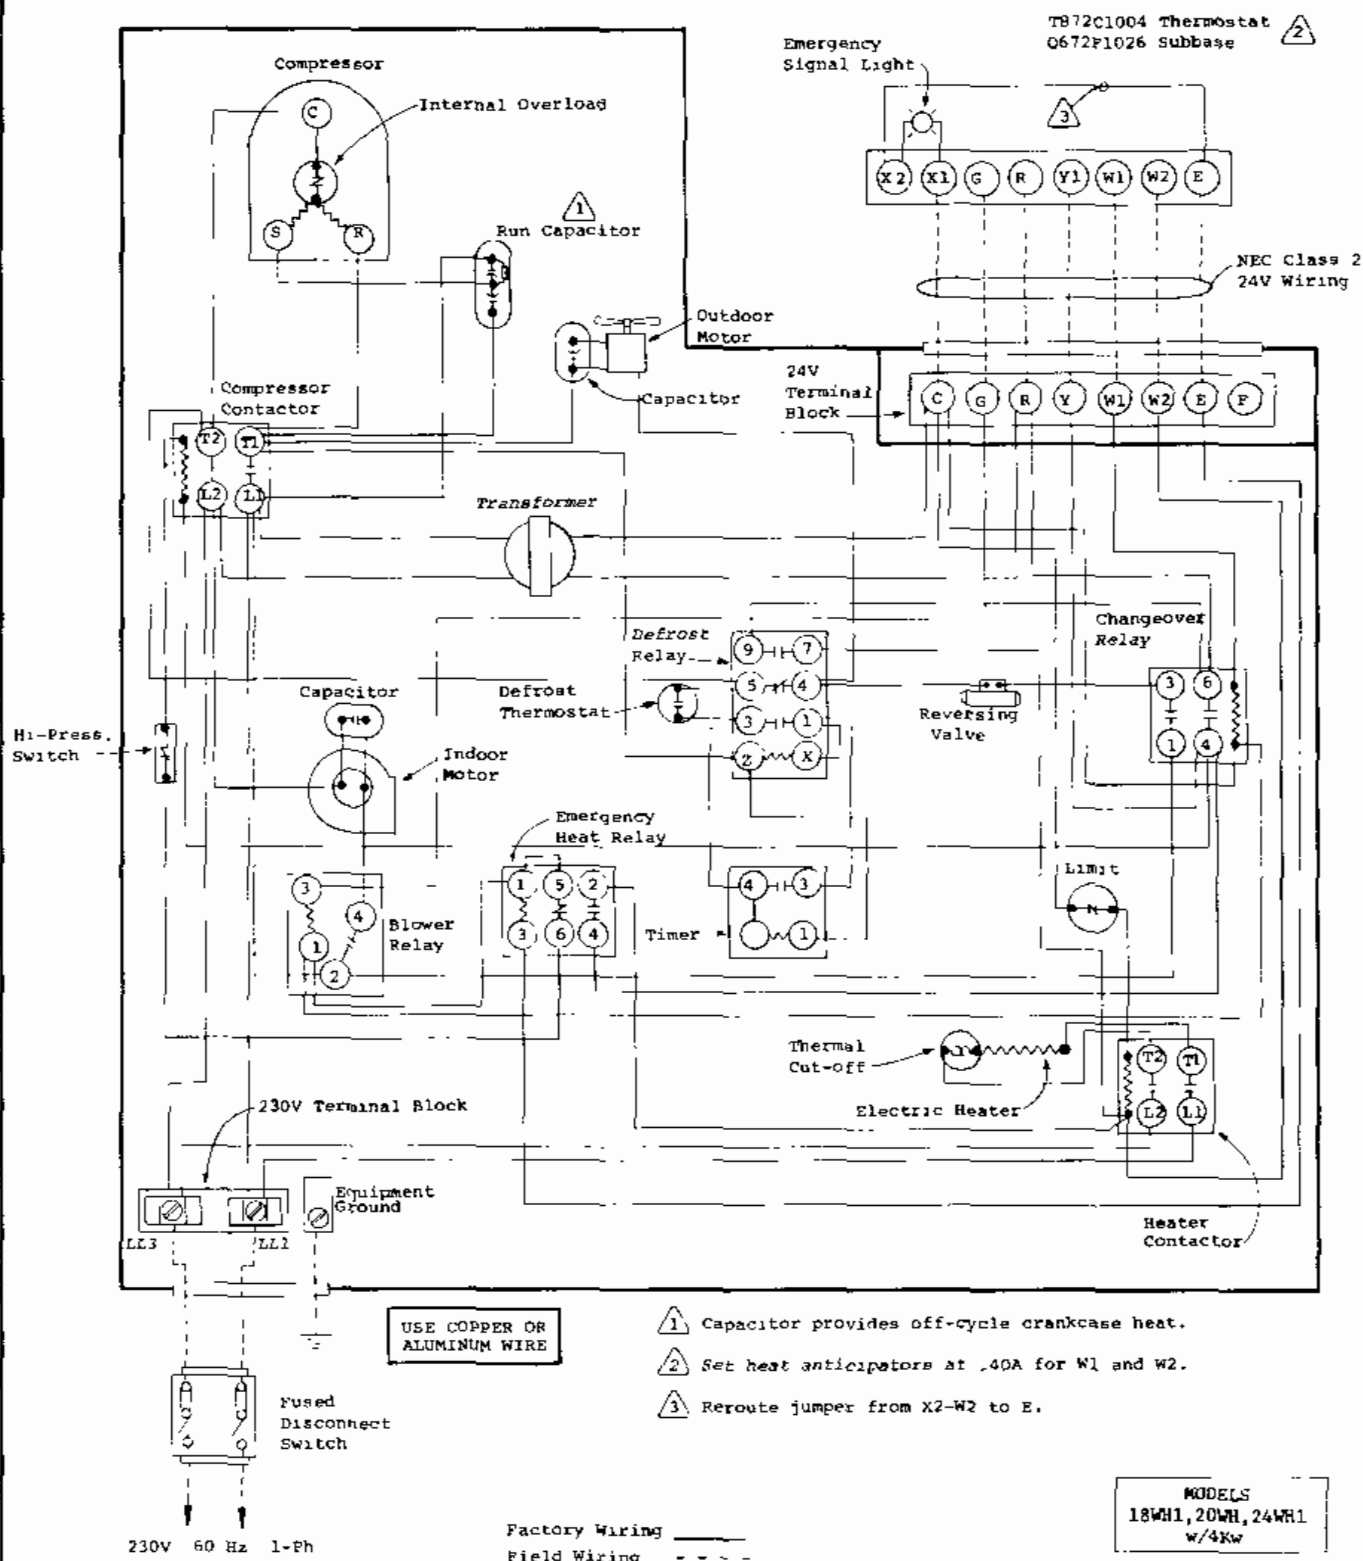

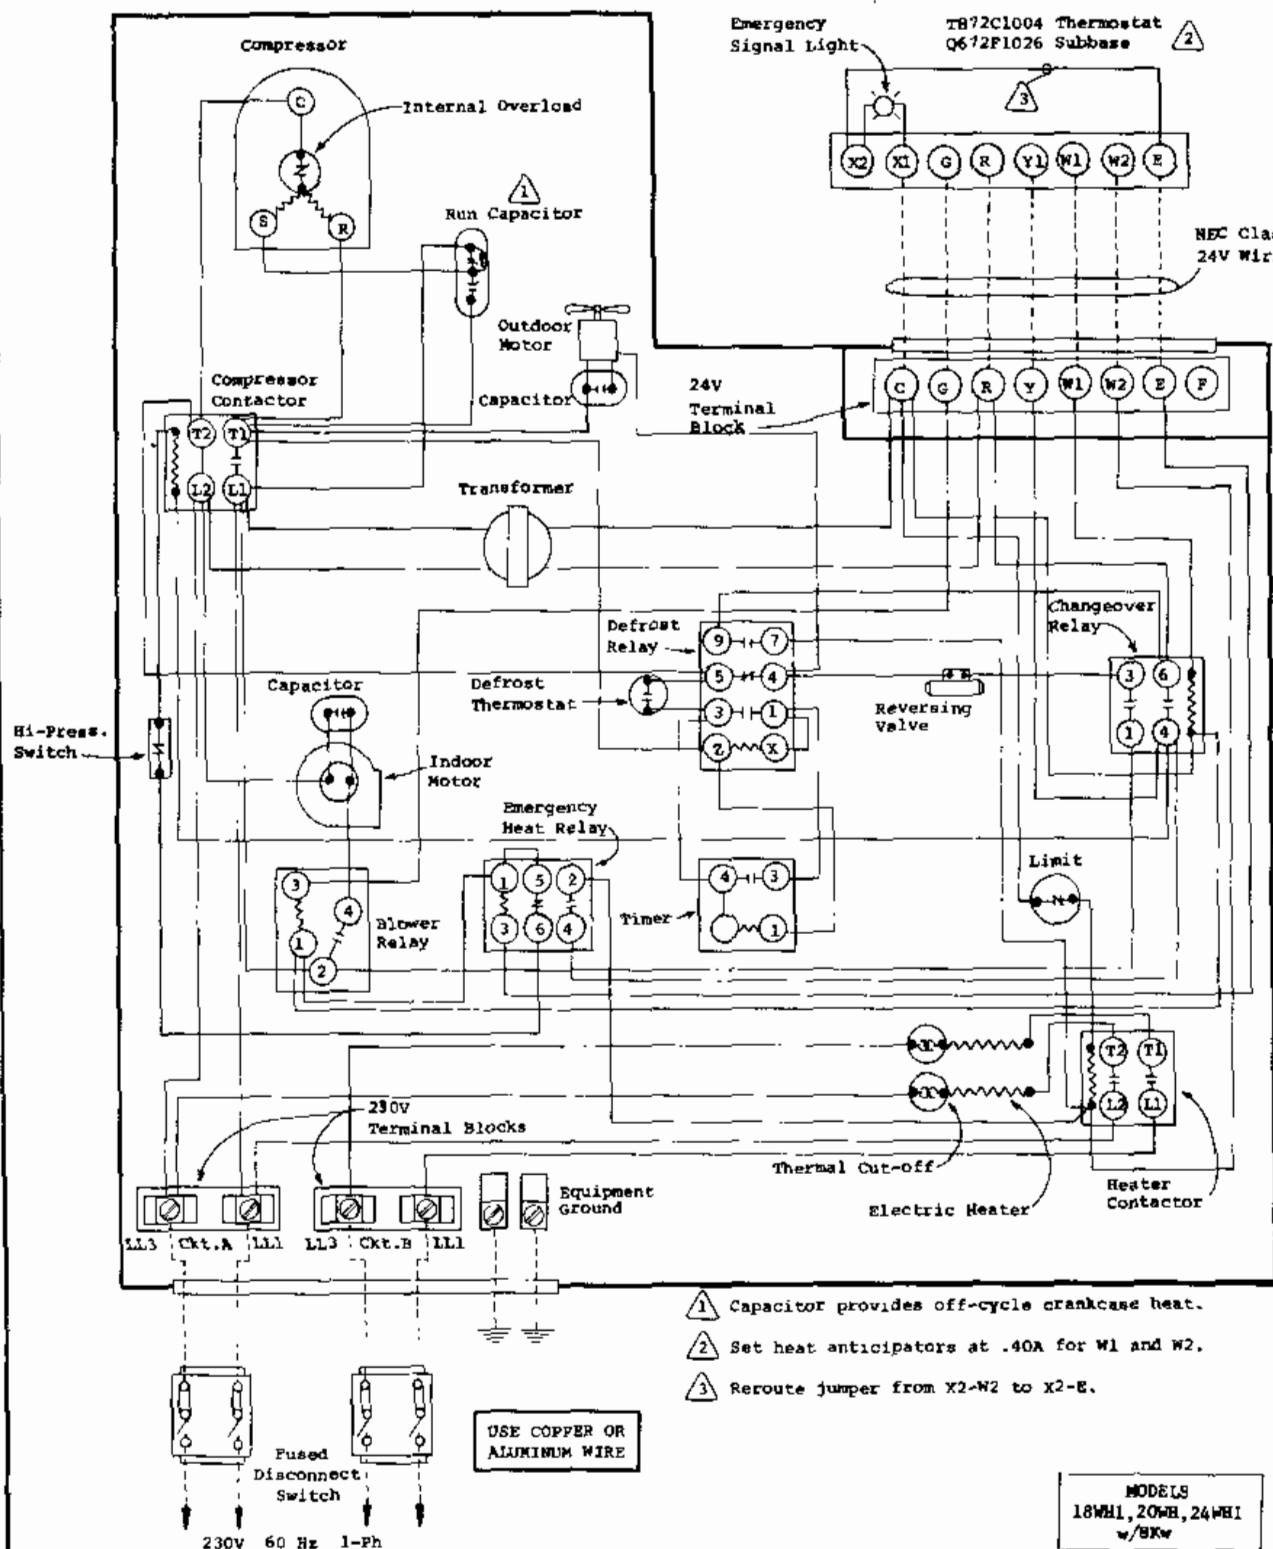

- ① Capacitor provides off-cycle crankcase heat.
- ② Set heat anticipators at .40A for W1 and W2.
- ③ Reroute jumper from X2-W2 to X2-E.

USE COPPER OR ALUMINUM WIRE

MODELS
18WH1, 20WH, 24WH1
w/BKW

Factory Wiring ———
Field Wiring - - - -