



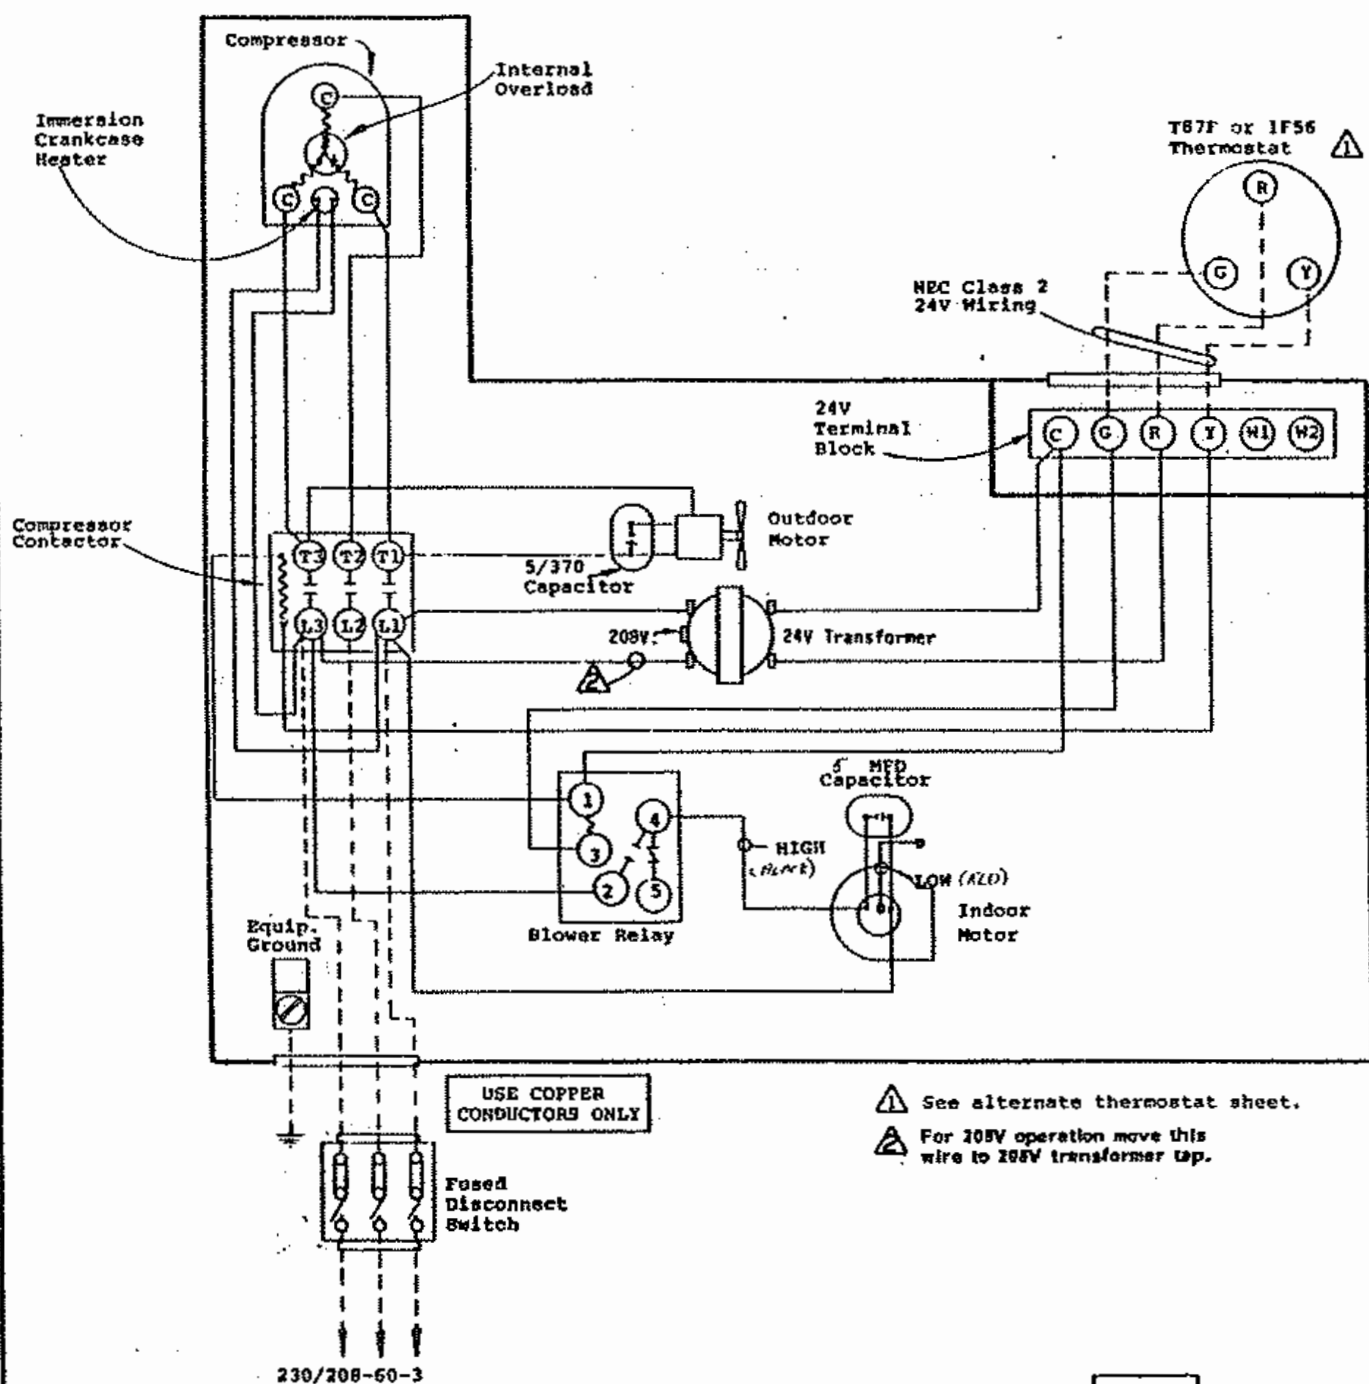

MODEL
30WA5-3

Factory Wiring ———
Field Wiring - - - - -


4008-210 B

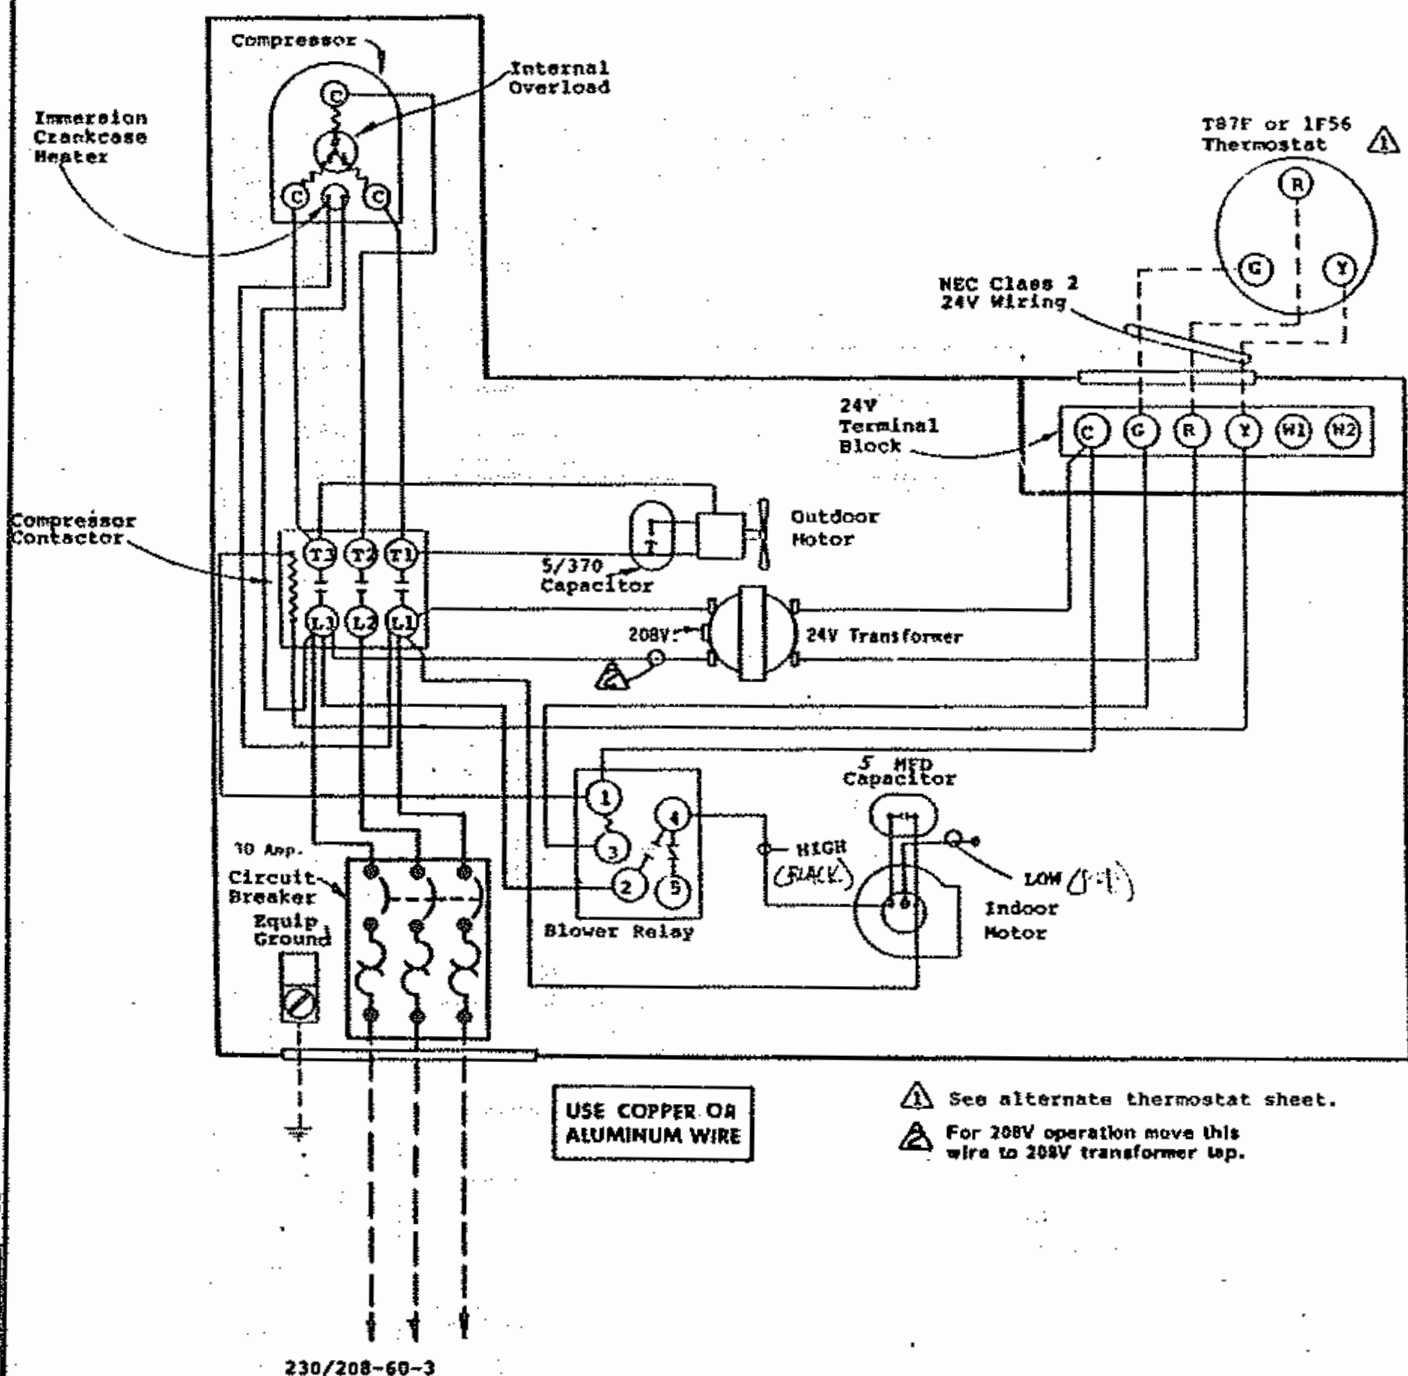


- ⚠ See alternate thermostat sheet.
- ⚠ For 208V operation move this wire to 208V transformer tap.

MODEL
30WA5-3

4008-2110

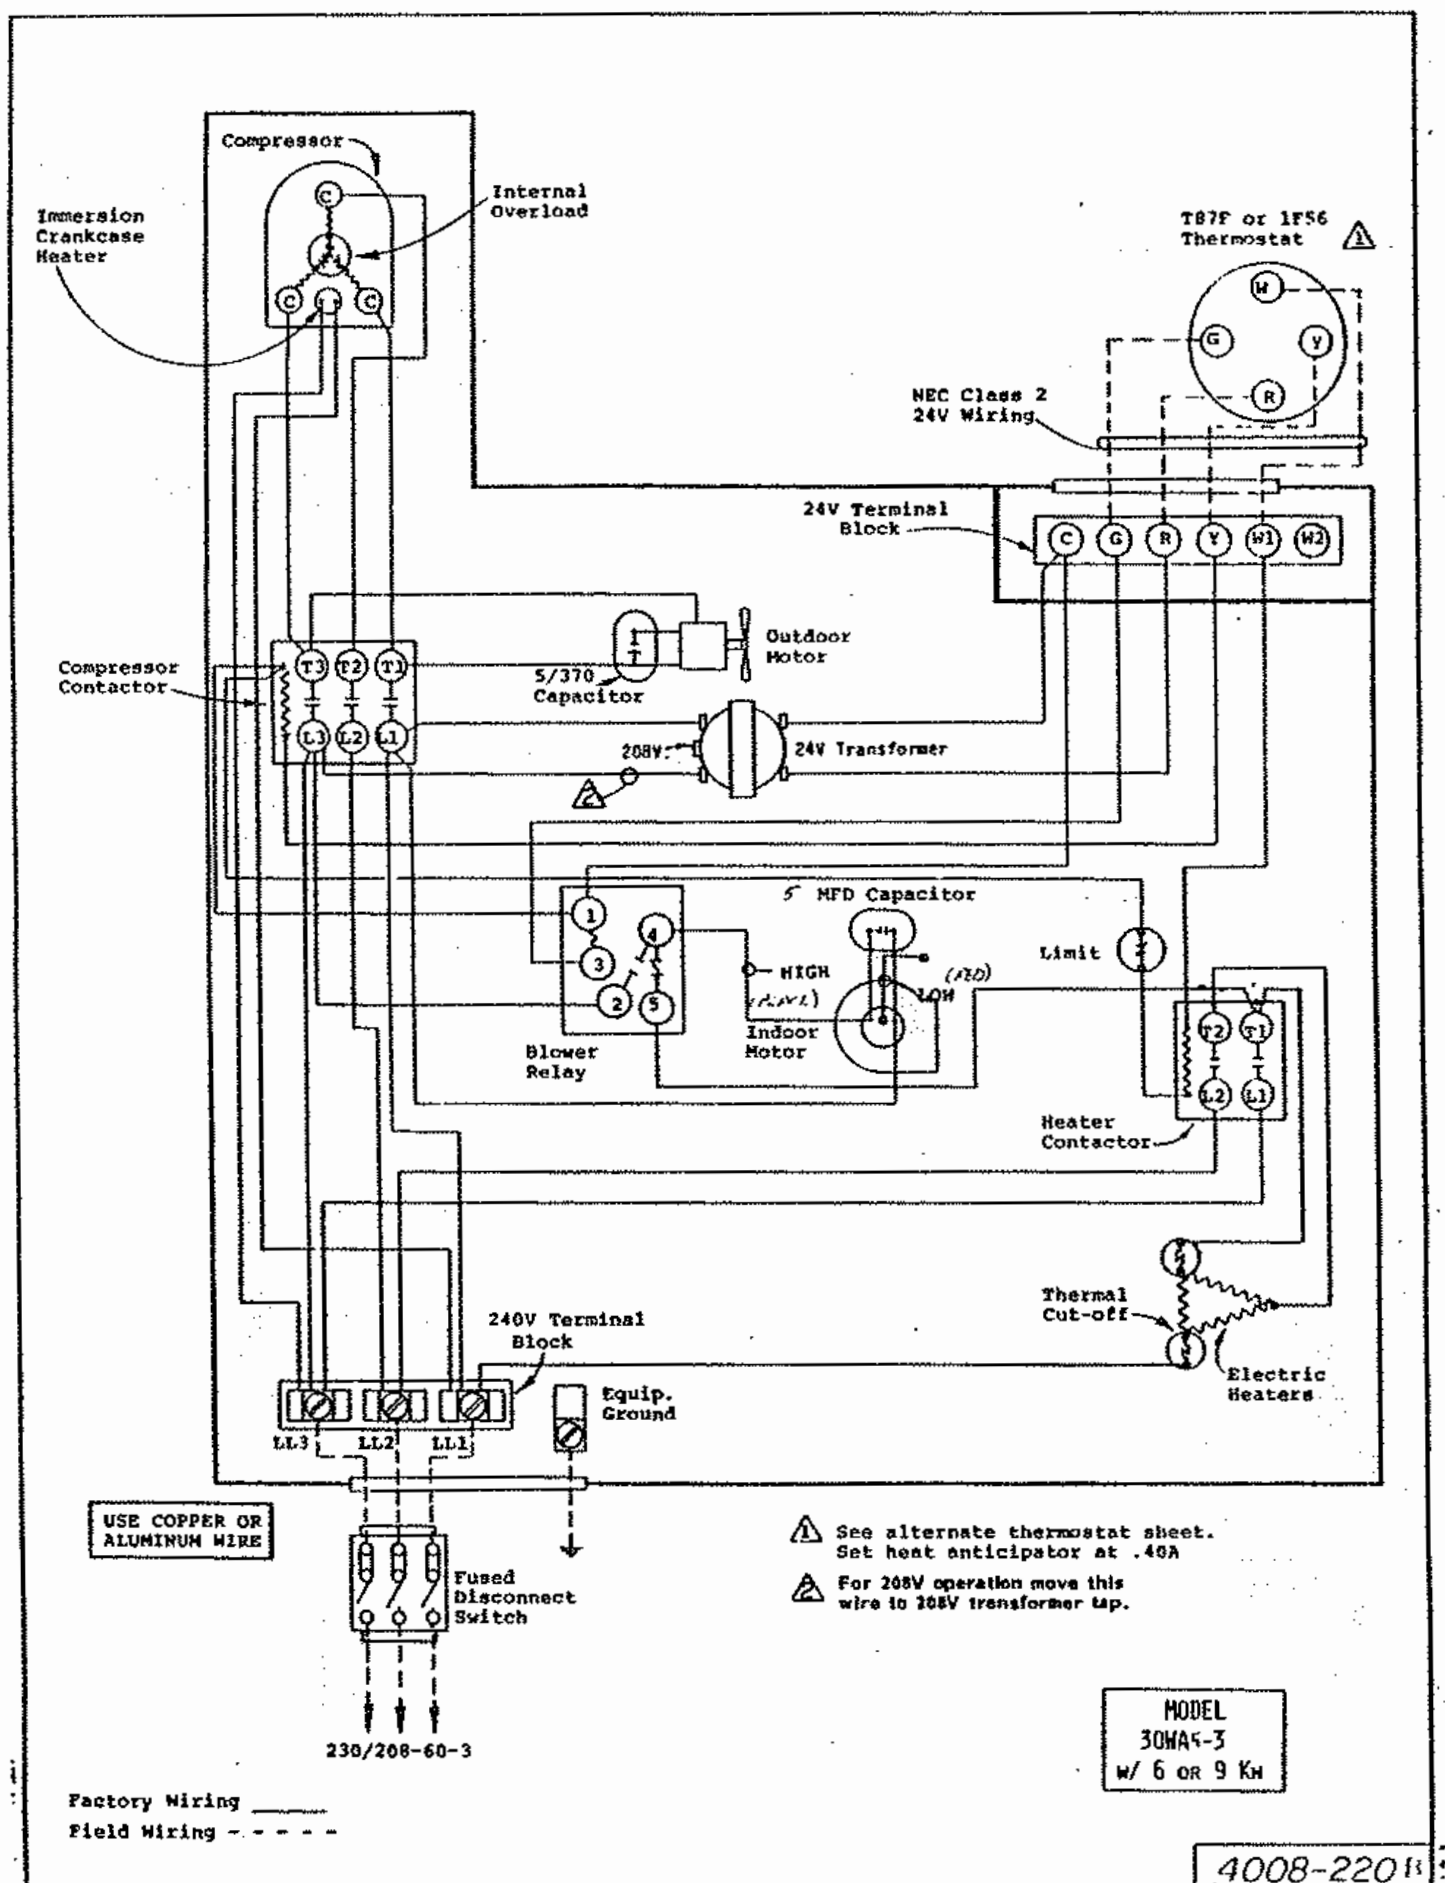

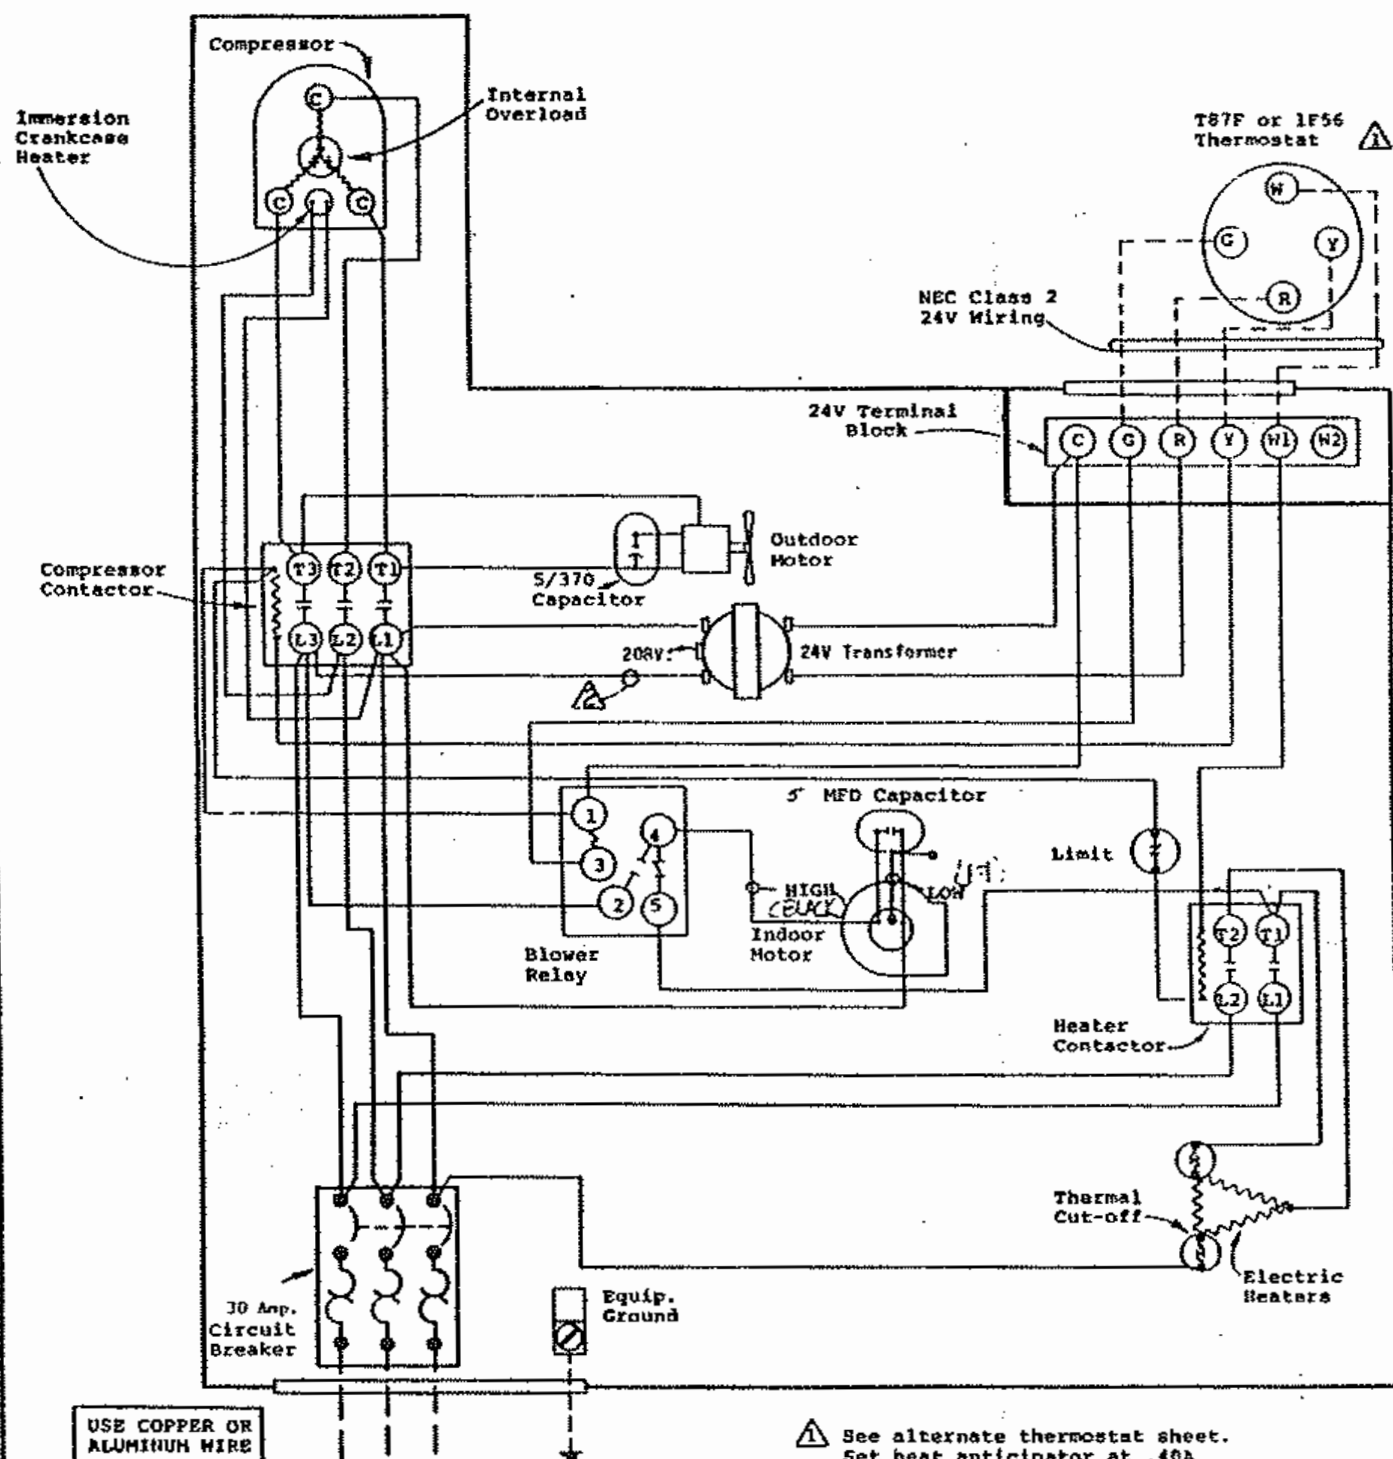

USE COPPER OR
ALUMINUM WIRE


- ⚠ See alternate thermostat sheet.
Set heat anticipator at .40A
- ⚠ For 208V operation move this
wire to 208V transformer tap.

230/208-60-3

Factory Wiring ———
Field Wiring - - - - -

MODEL
30NAS-3
w/ 6 OR 9 KW

4008-2211

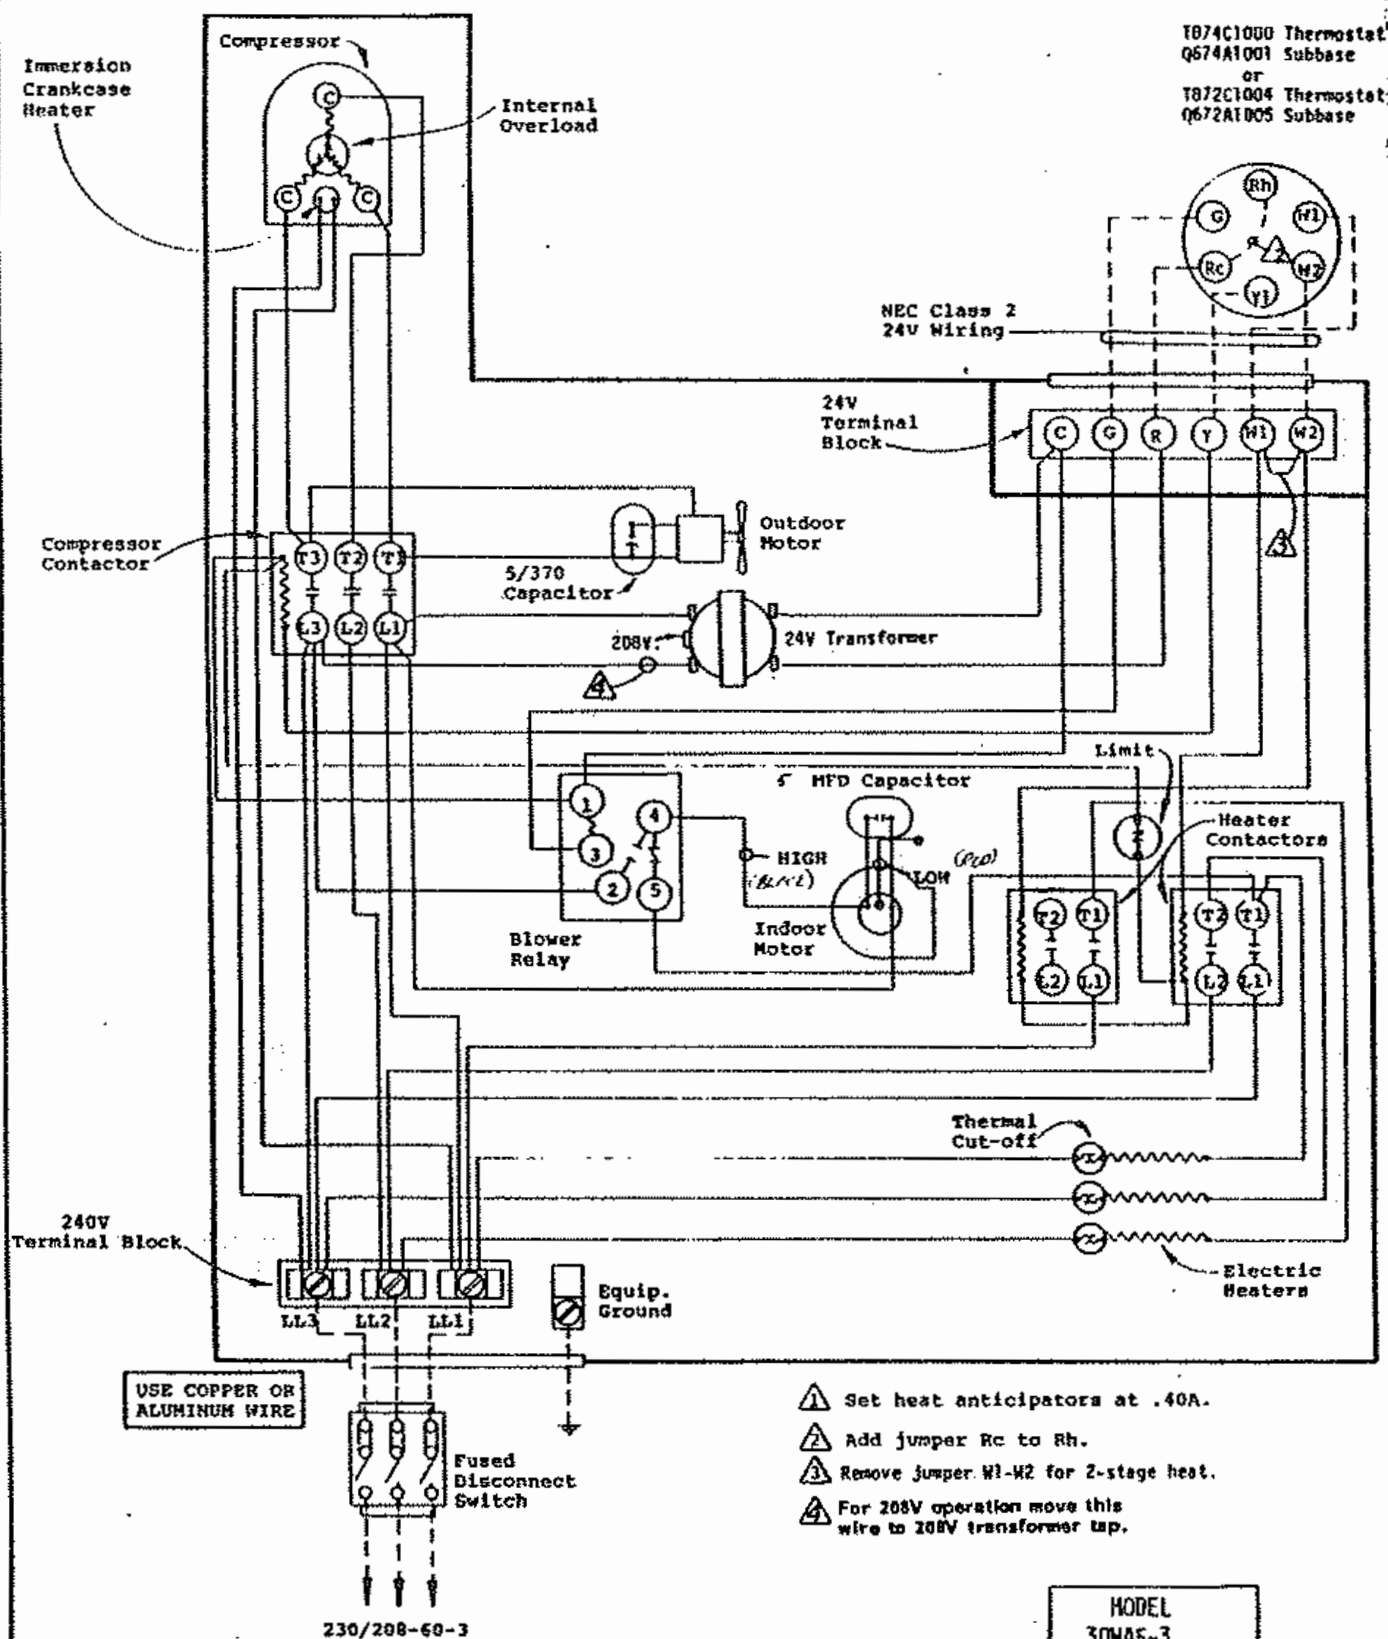


- ⚠ Set heat anticipators at .40A.
- ⚠ Add jumper Rc to Rh.
- ⚠ Remove jumper W1-W2 for 2-stage heat.
- ⚠ For 208V operation move this wire to 208V transformer tap.

MODEL
30WAS-3
w/ 12 OR 15 Kw

Factory Wiring _____
Field Wiring - - - - -

4008-230B

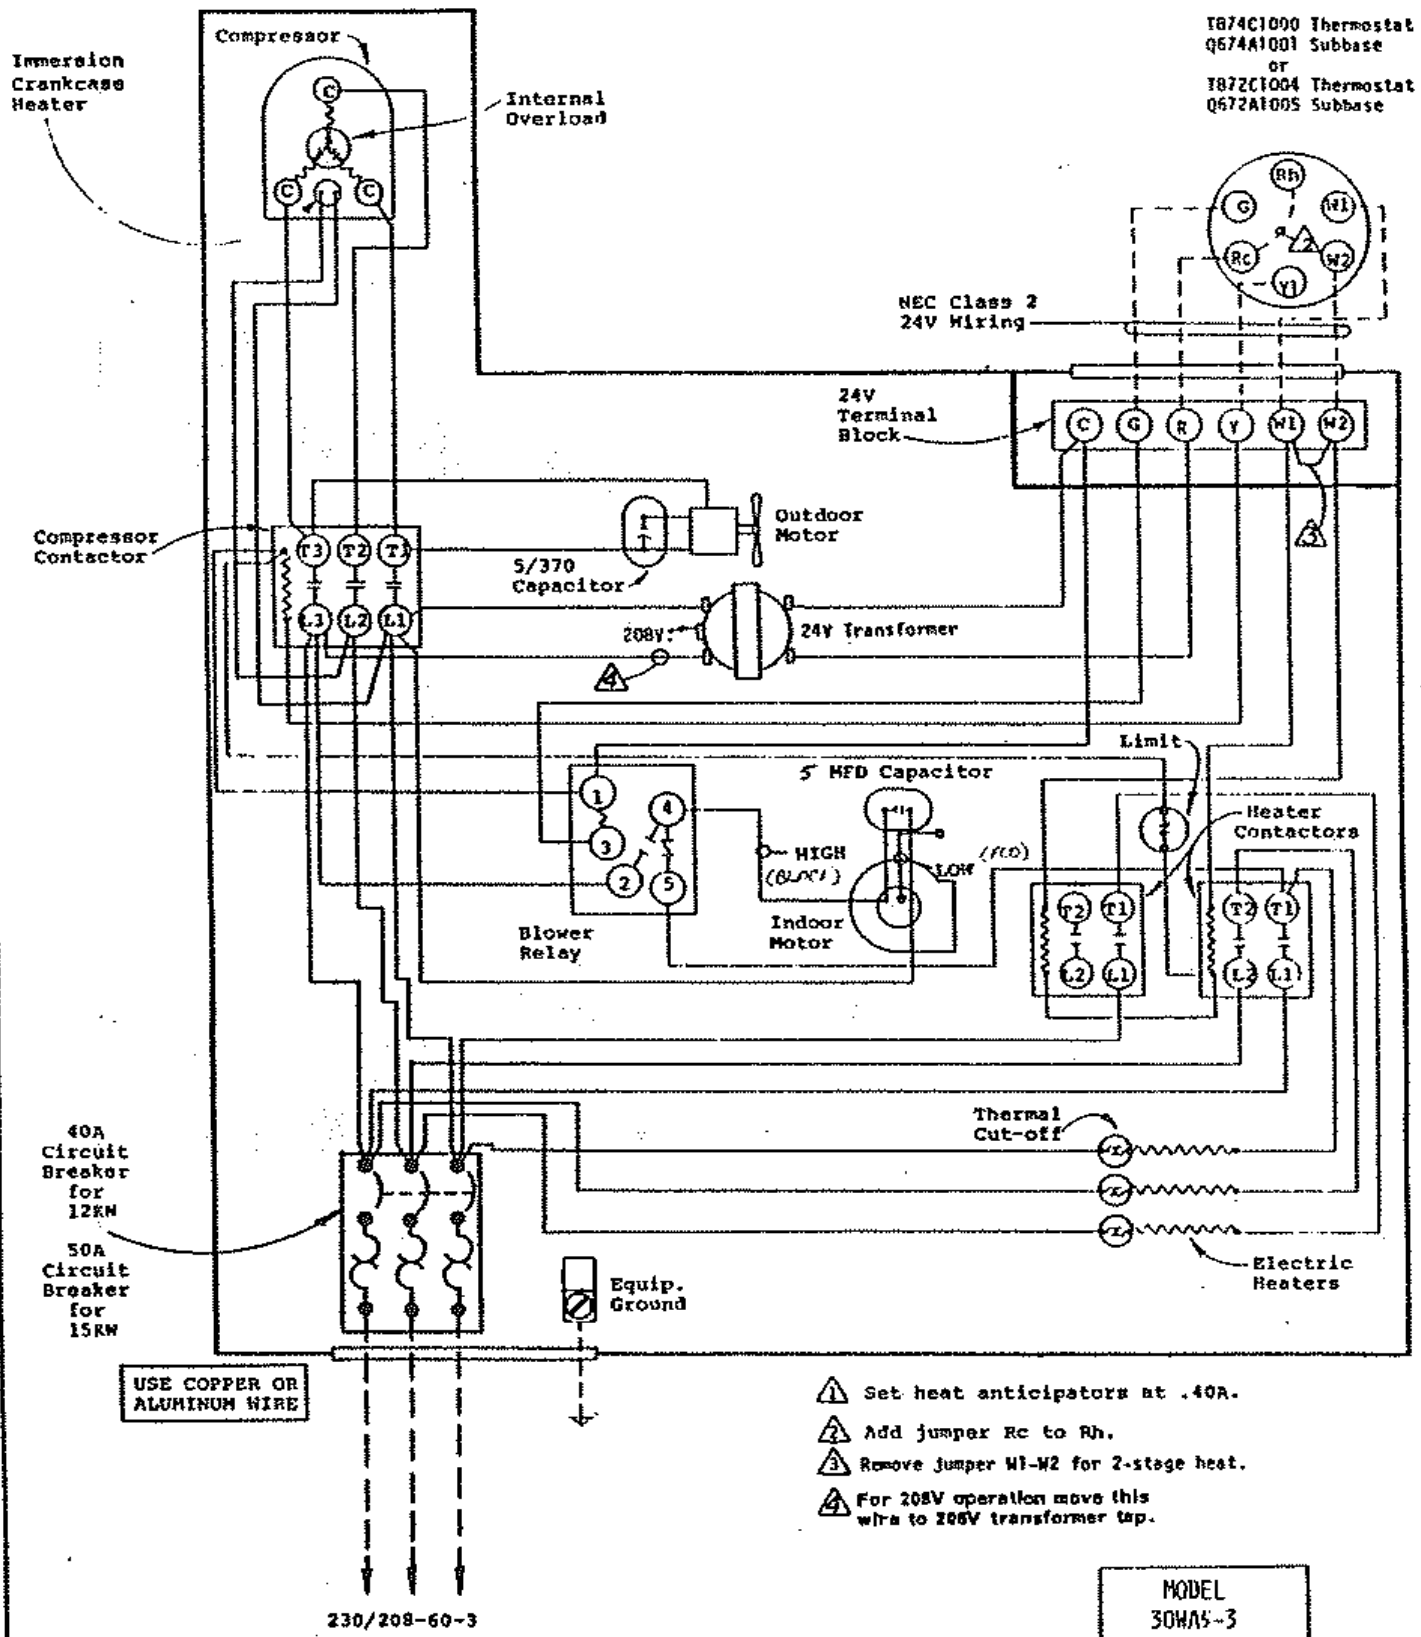

- ⚠ Set heat anticipators at .40A.
- ⚠ Add jumper Rc to Rh.
- ⚠ Remove jumper W1-W2 for 2-stage heat.
- ⚠ For 208V operation move this wire to 208V transformer tap.

MODEL
30WAS-3
W/ 12 OR 15 KW

Factory Wiring _____
Field Wiring - - - - -

4008-231C