


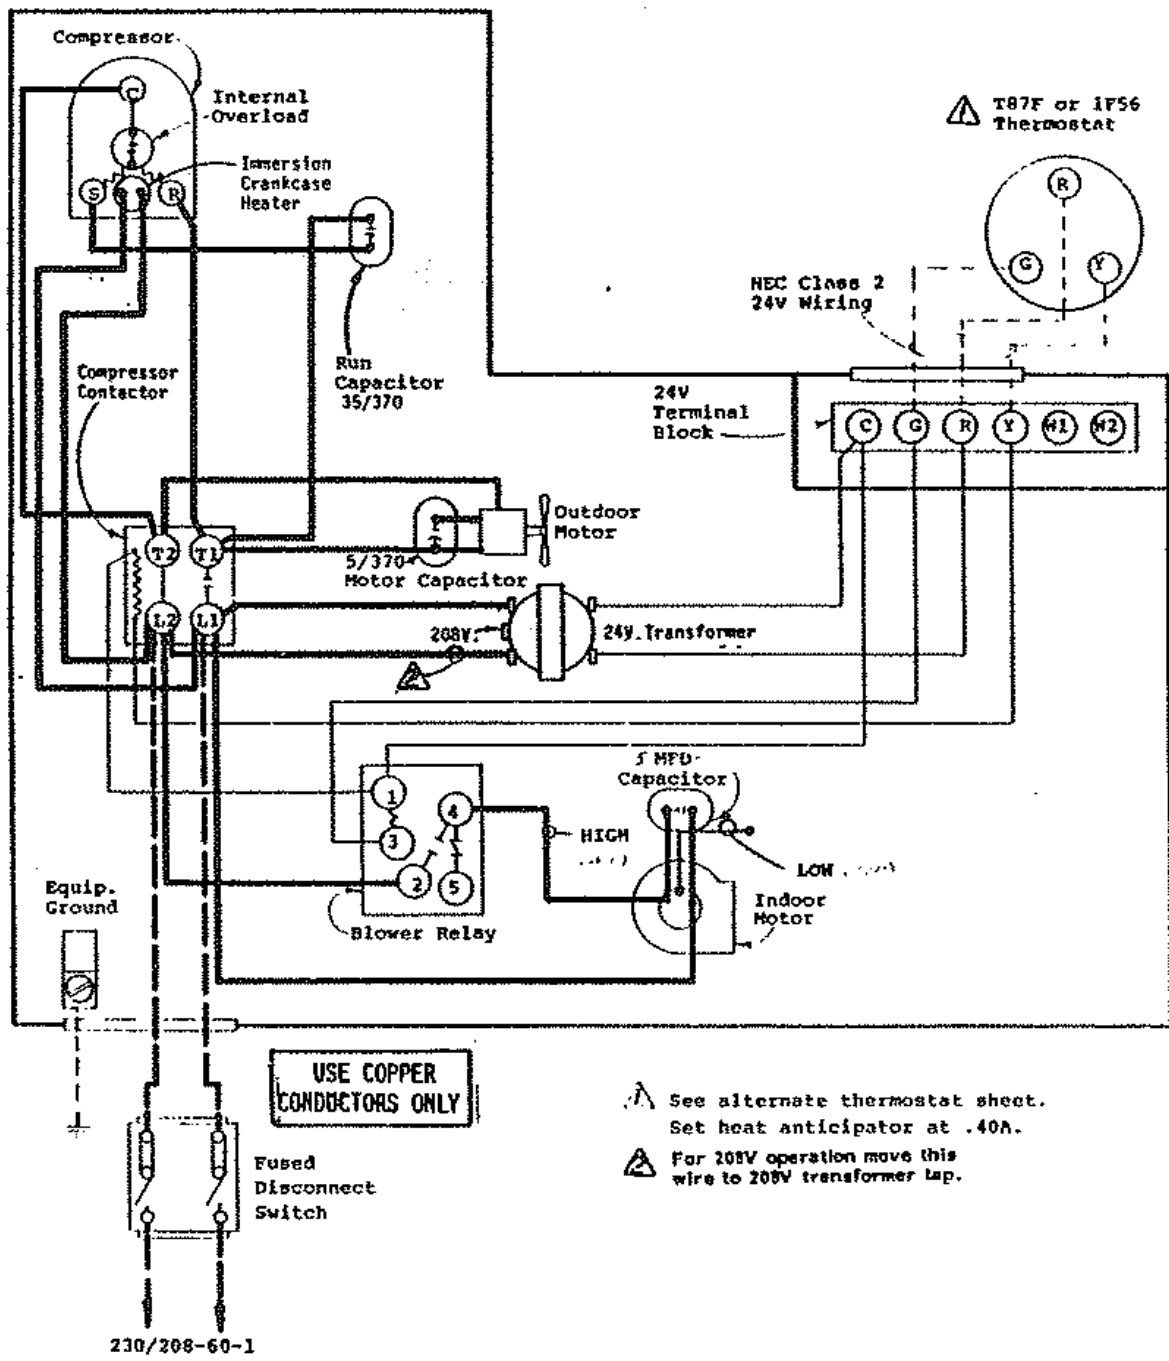


- See alternate thermostat sheet. Set heat anticipator at .40A.
- For 208V operation move this wire to 208V transformer tap.

MODEL 30WAS

FACTORY WIRING	FIELD WIRING
Low Voltage	
High Voltage	


4008-110 K

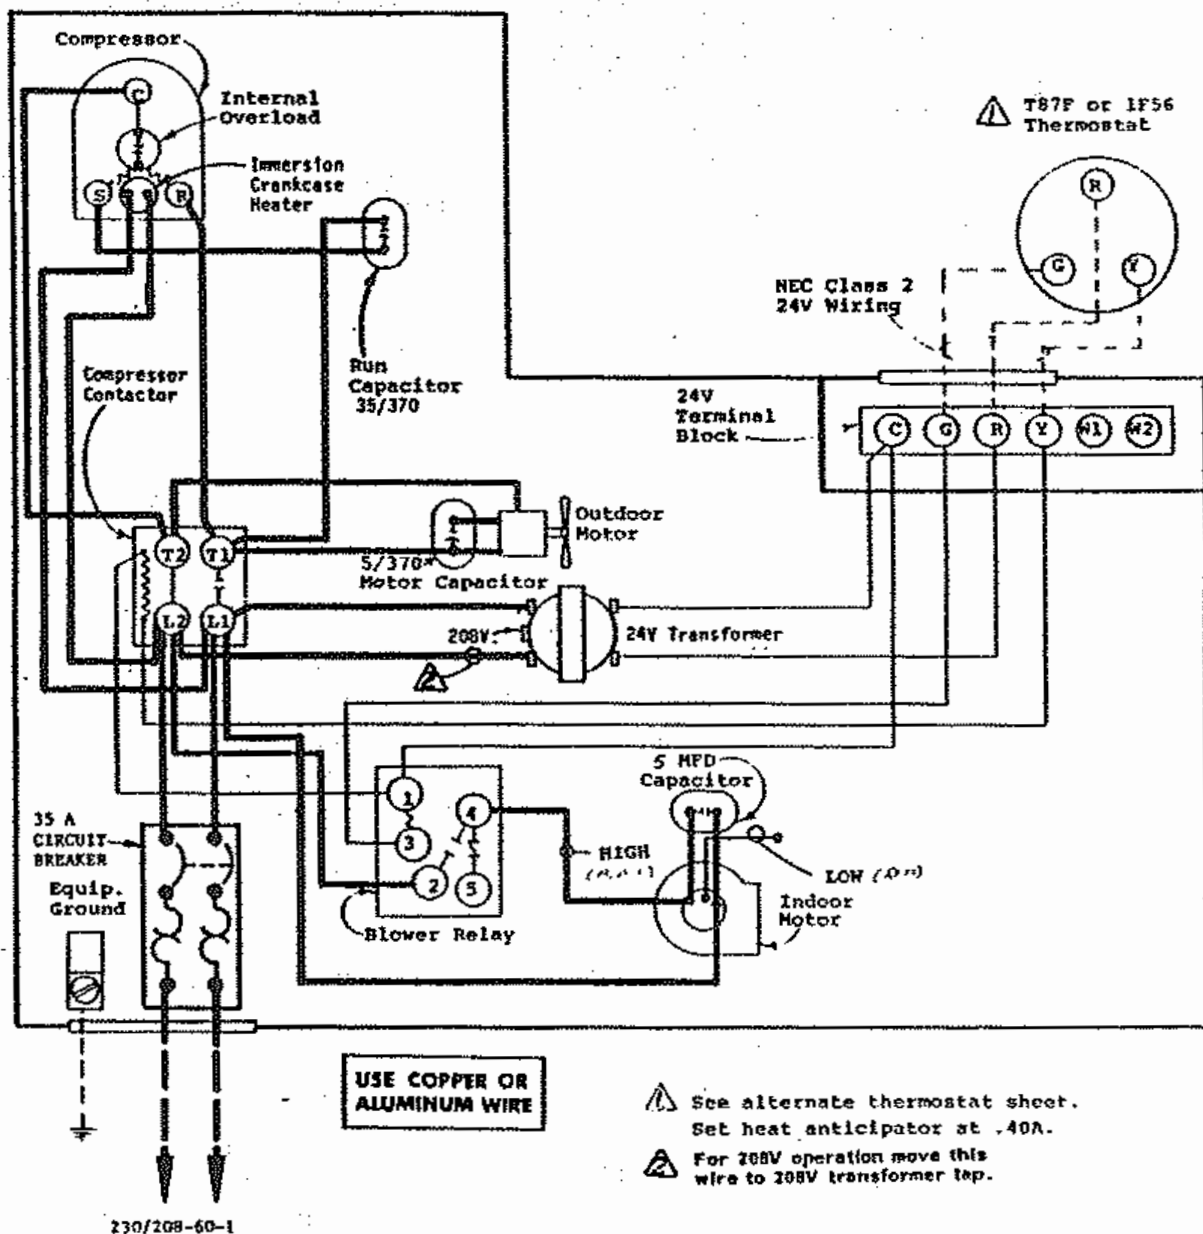


MODEL
30MAS

FACTORY WIRING	FIELD WIRING
Low Voltage	-----
High Voltage	-----

4008-112 C

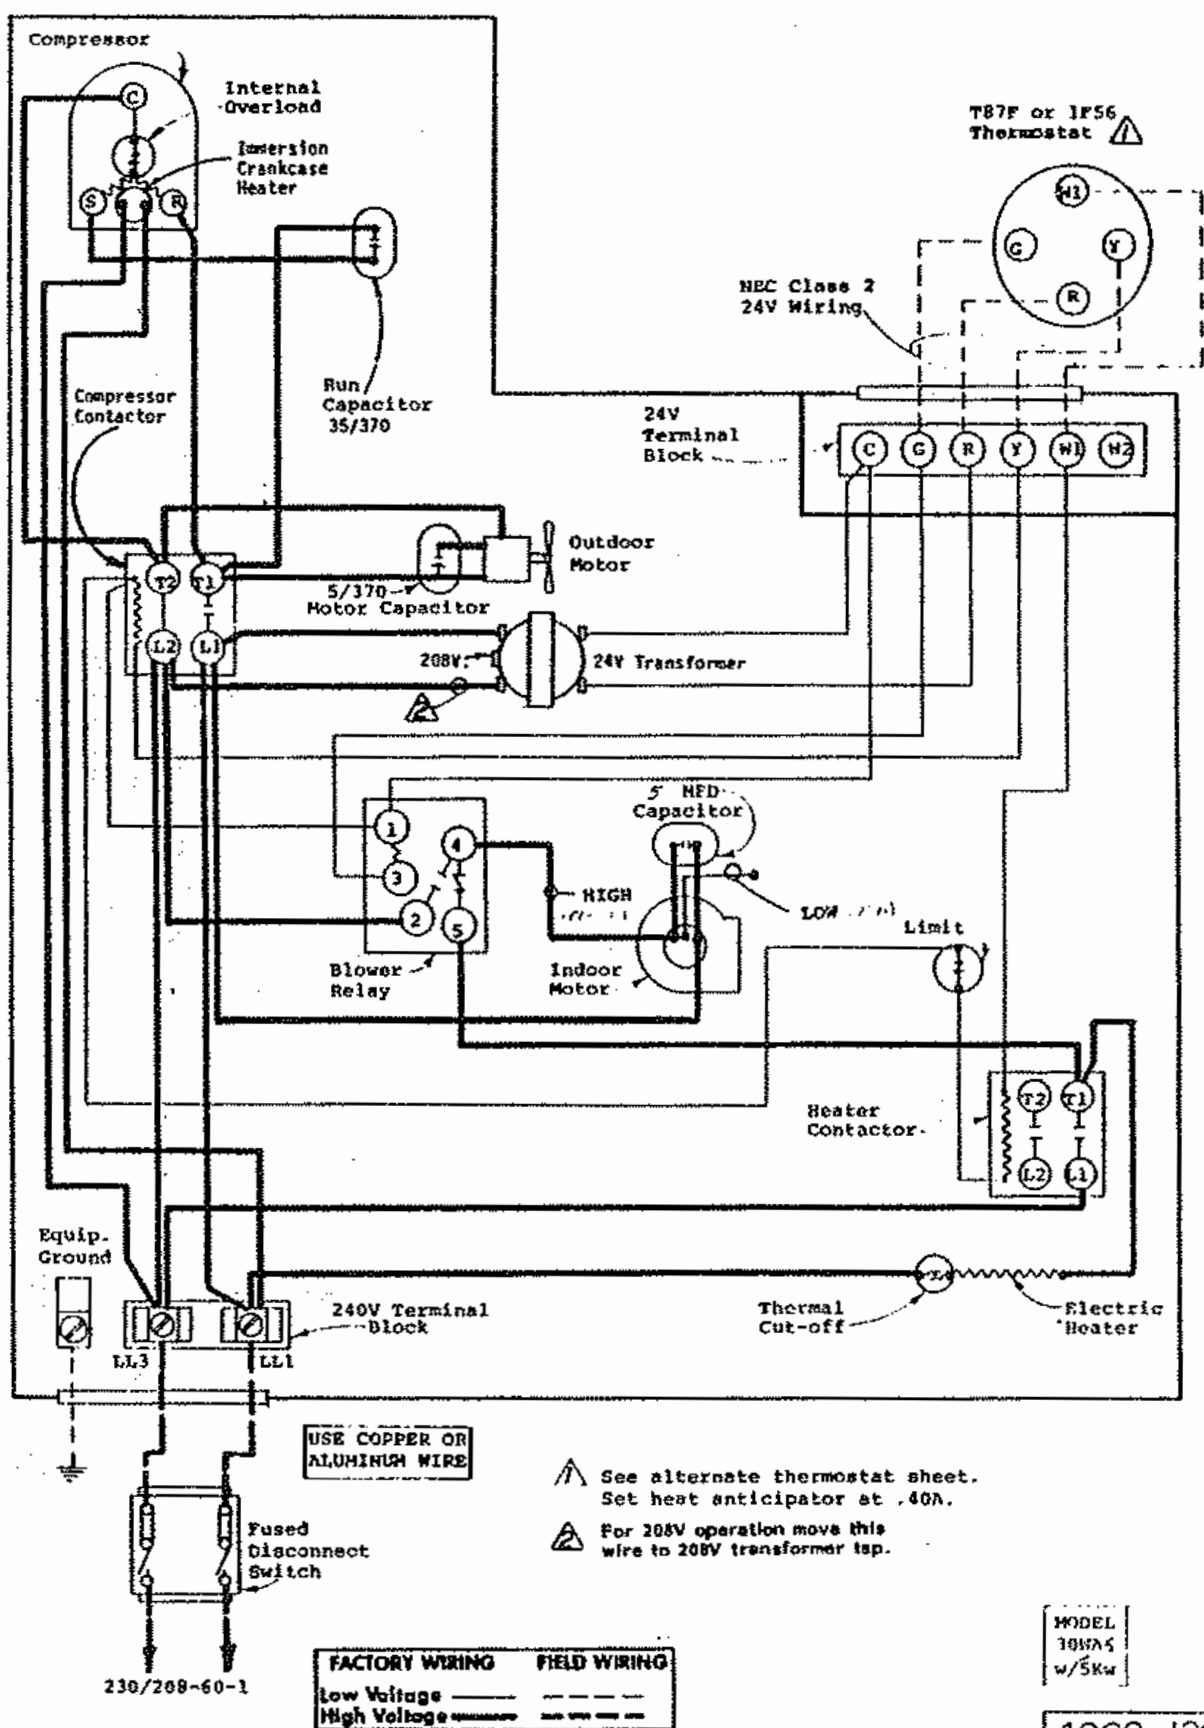

See alternate thermostat sheet.
Set heat anticipator at .40A.
For 208V operation move this wire to 208V transformer tap.

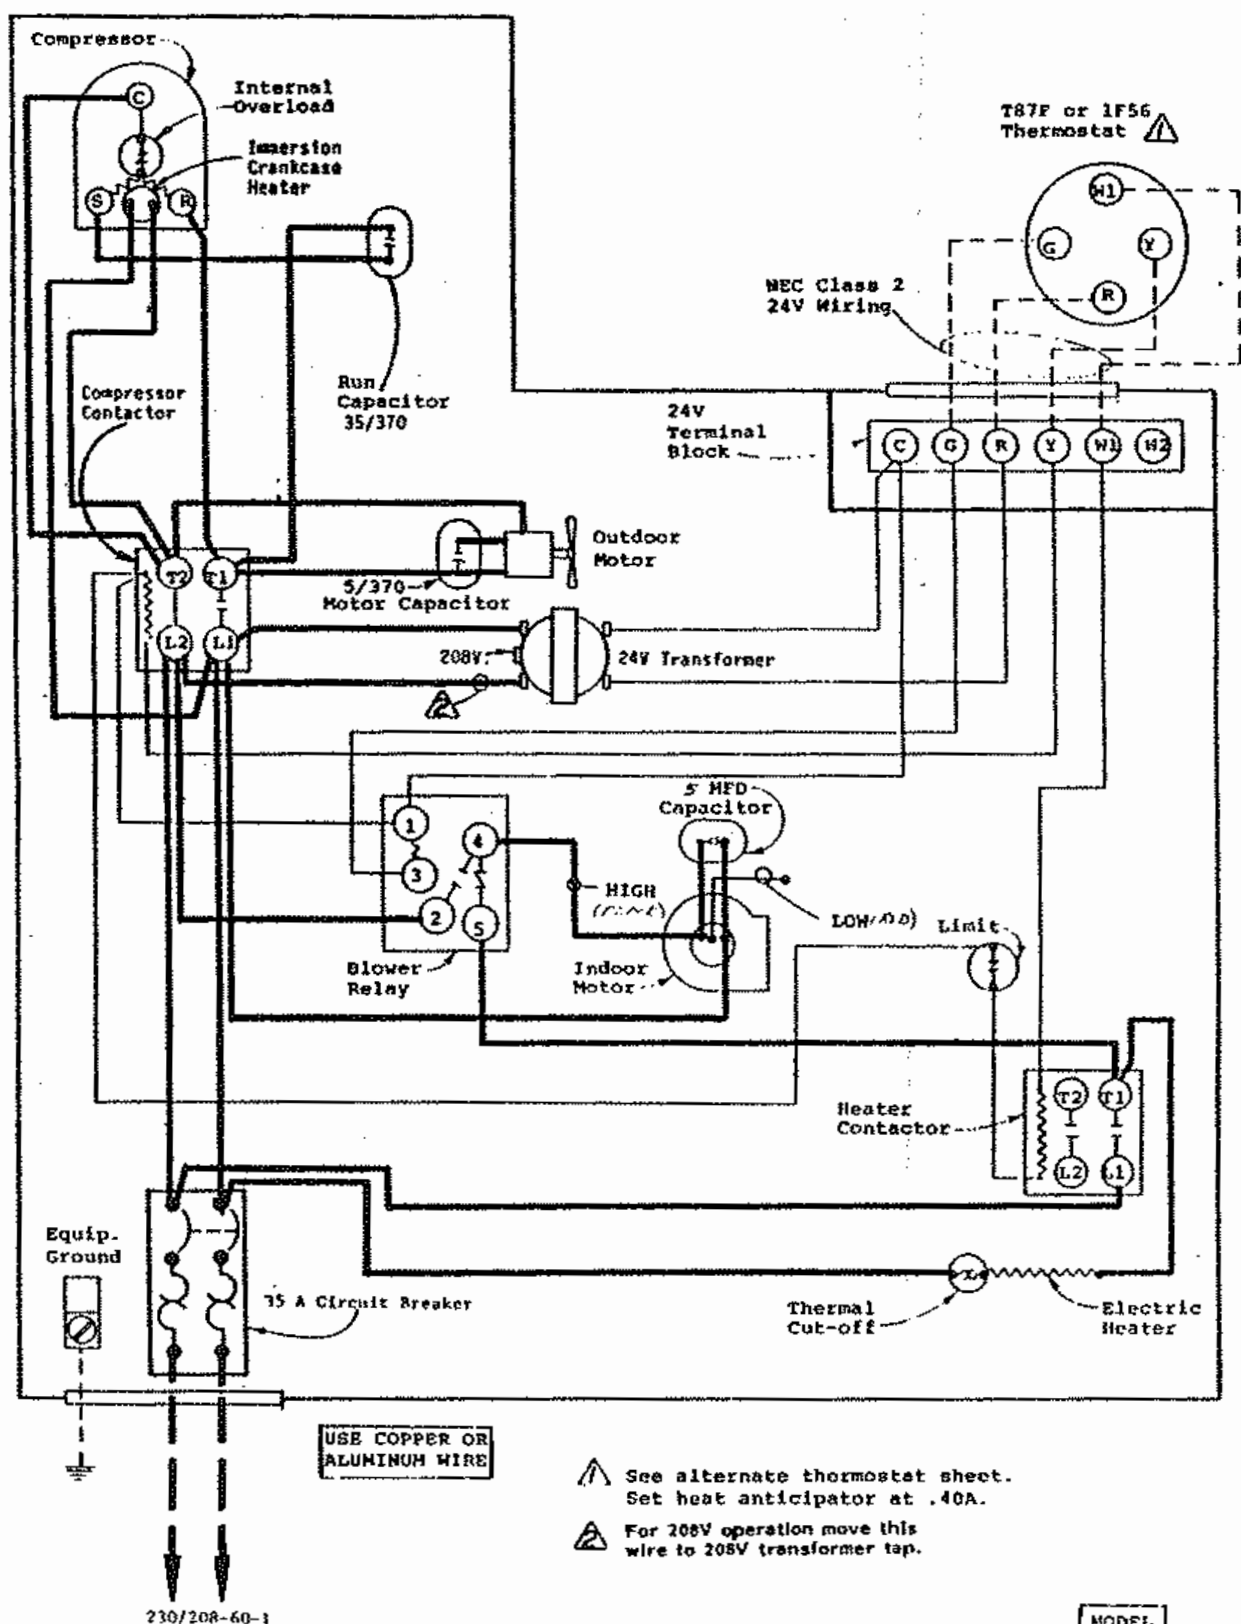


USE COPPER OR ALUMINUM WIRE

- See alternate thermostat sheet. Set heat anticipator at .40A.
- For 208V operation move this wire to 208V transformer tap.


FACTORY WIRING	FIELD WIRING
Low Voltage	
High Voltage	

MODEL 38W41 w/5Kw

4008-122 D

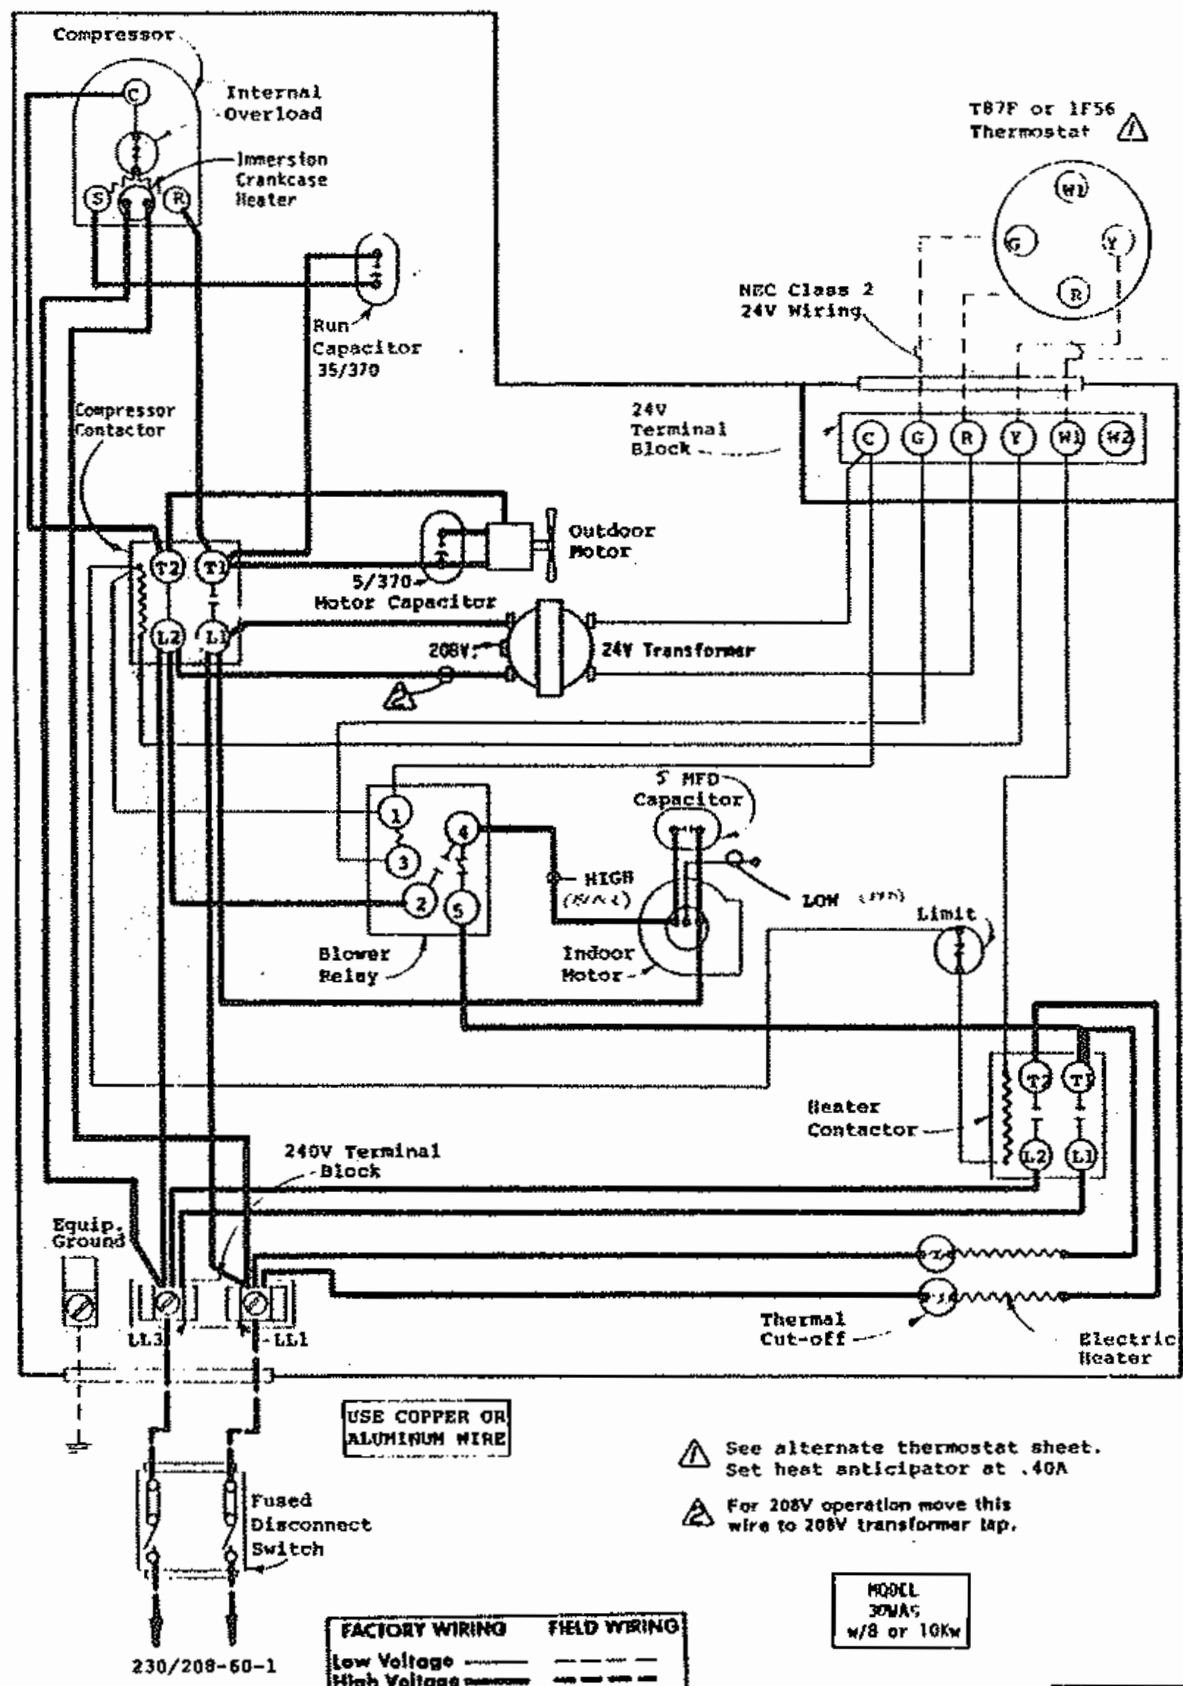


4008-130 J

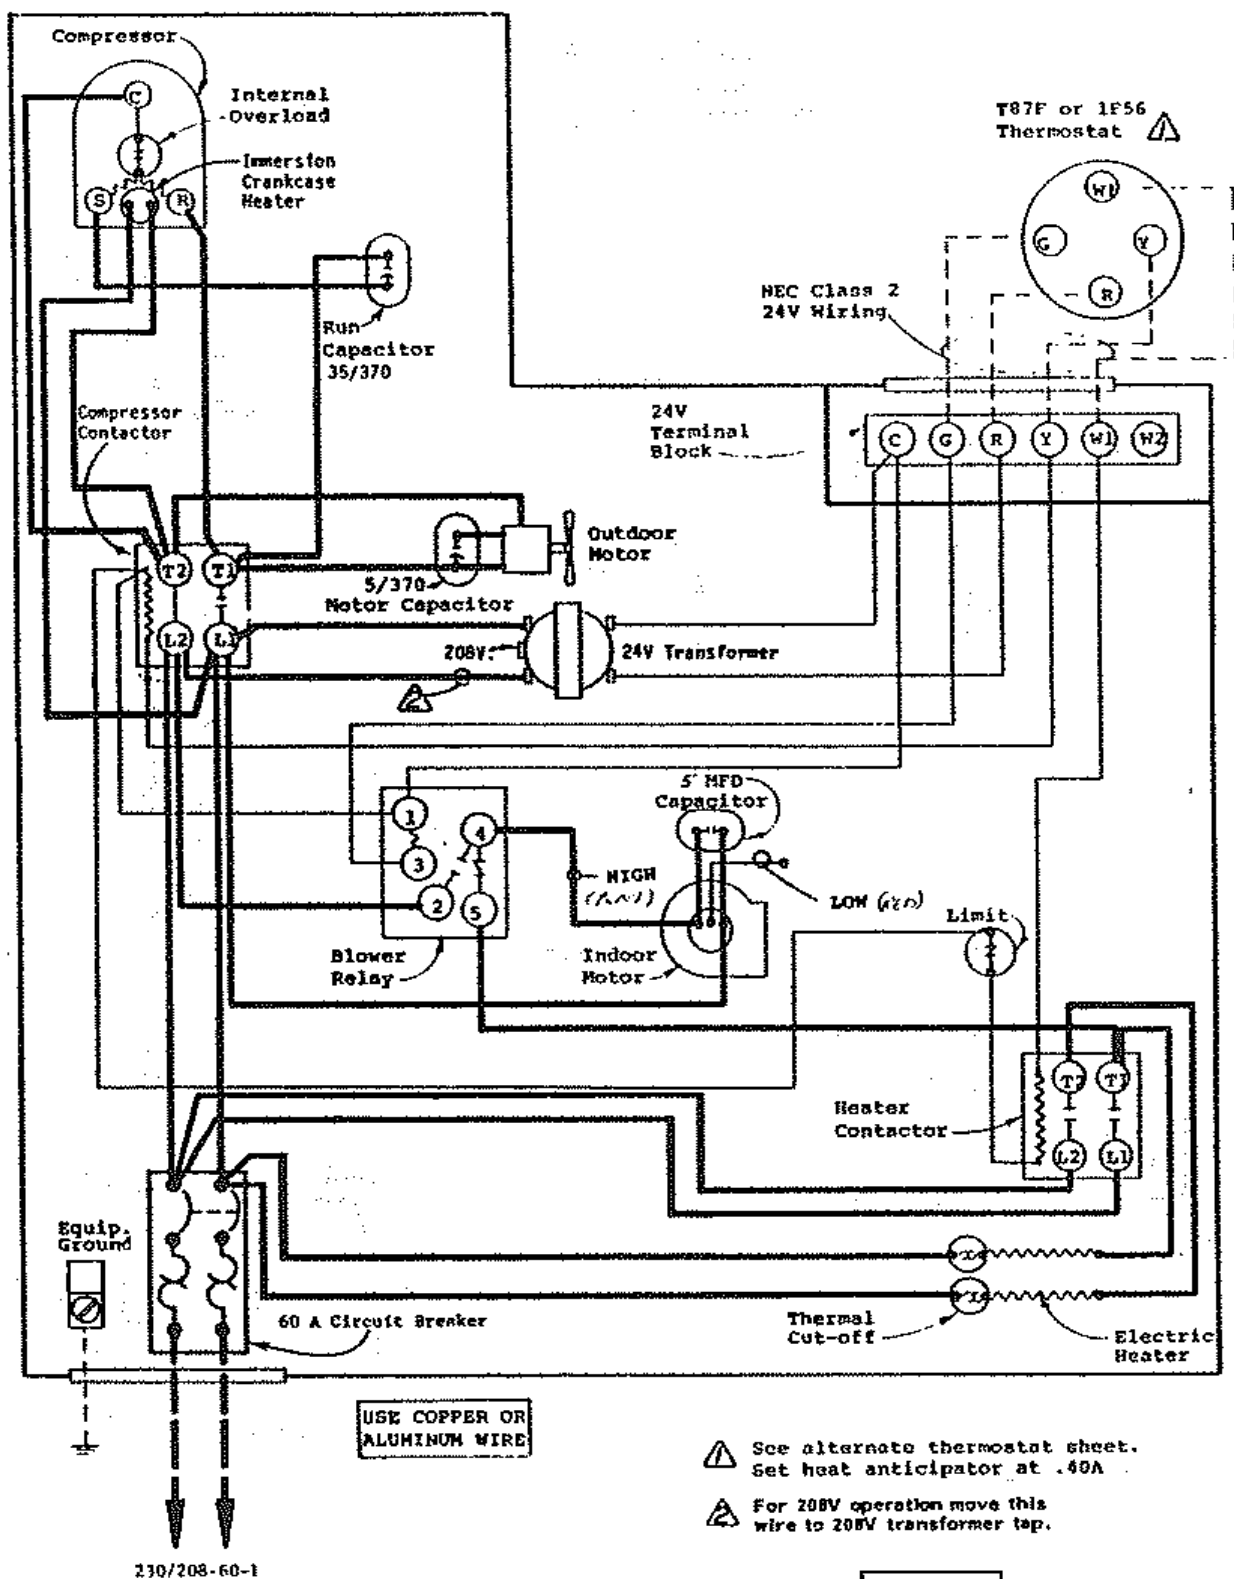

FACTORY WIRING	FIELD WIRING
Low Voltage	Low Voltage
High Voltage	High Voltage

4008-132 D

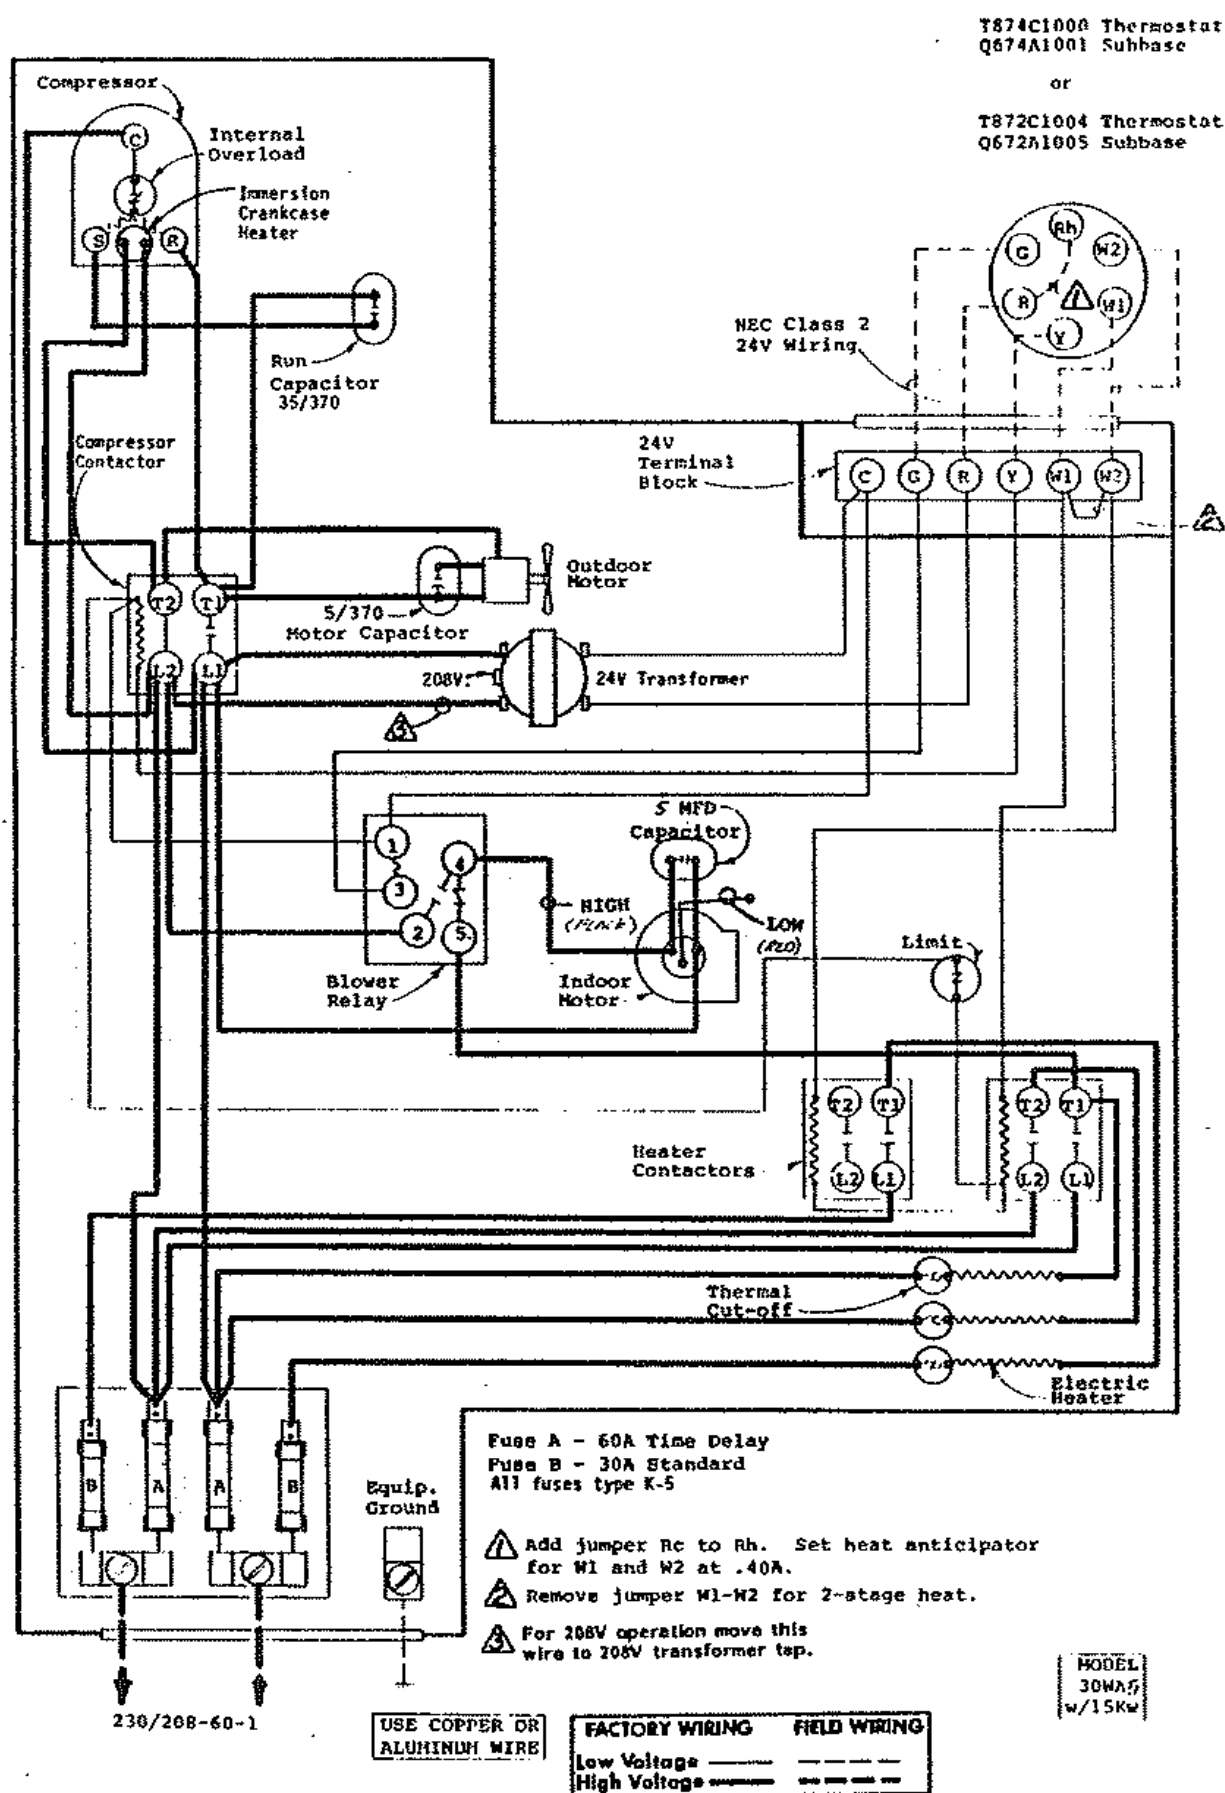

4008-140J

T874C1000 Thermostat
Q674A1001 Subbase

or

T872C1004 Thermostat
Q672A1005 Subbase

