



502011

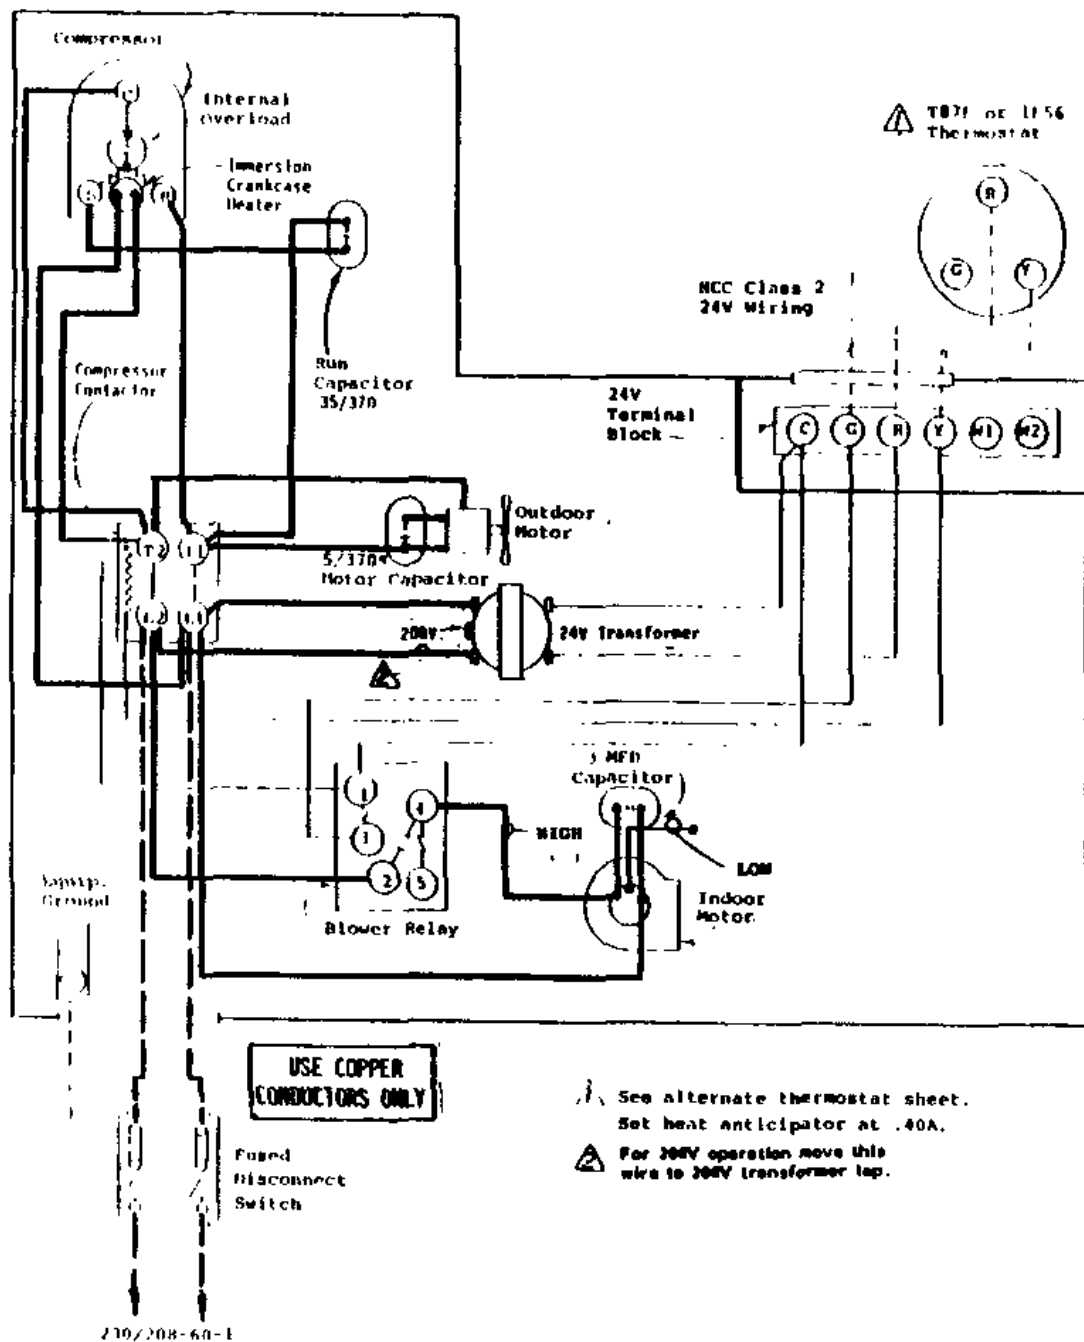

See alternate thermostat sheet.
Set heat anticipator at .40A.
For 208V operation move this wire to 208V transformer tap.


FACTORY WIRING	FIELD WIRING
Low Voltage	
High Voltage	

4008-110L

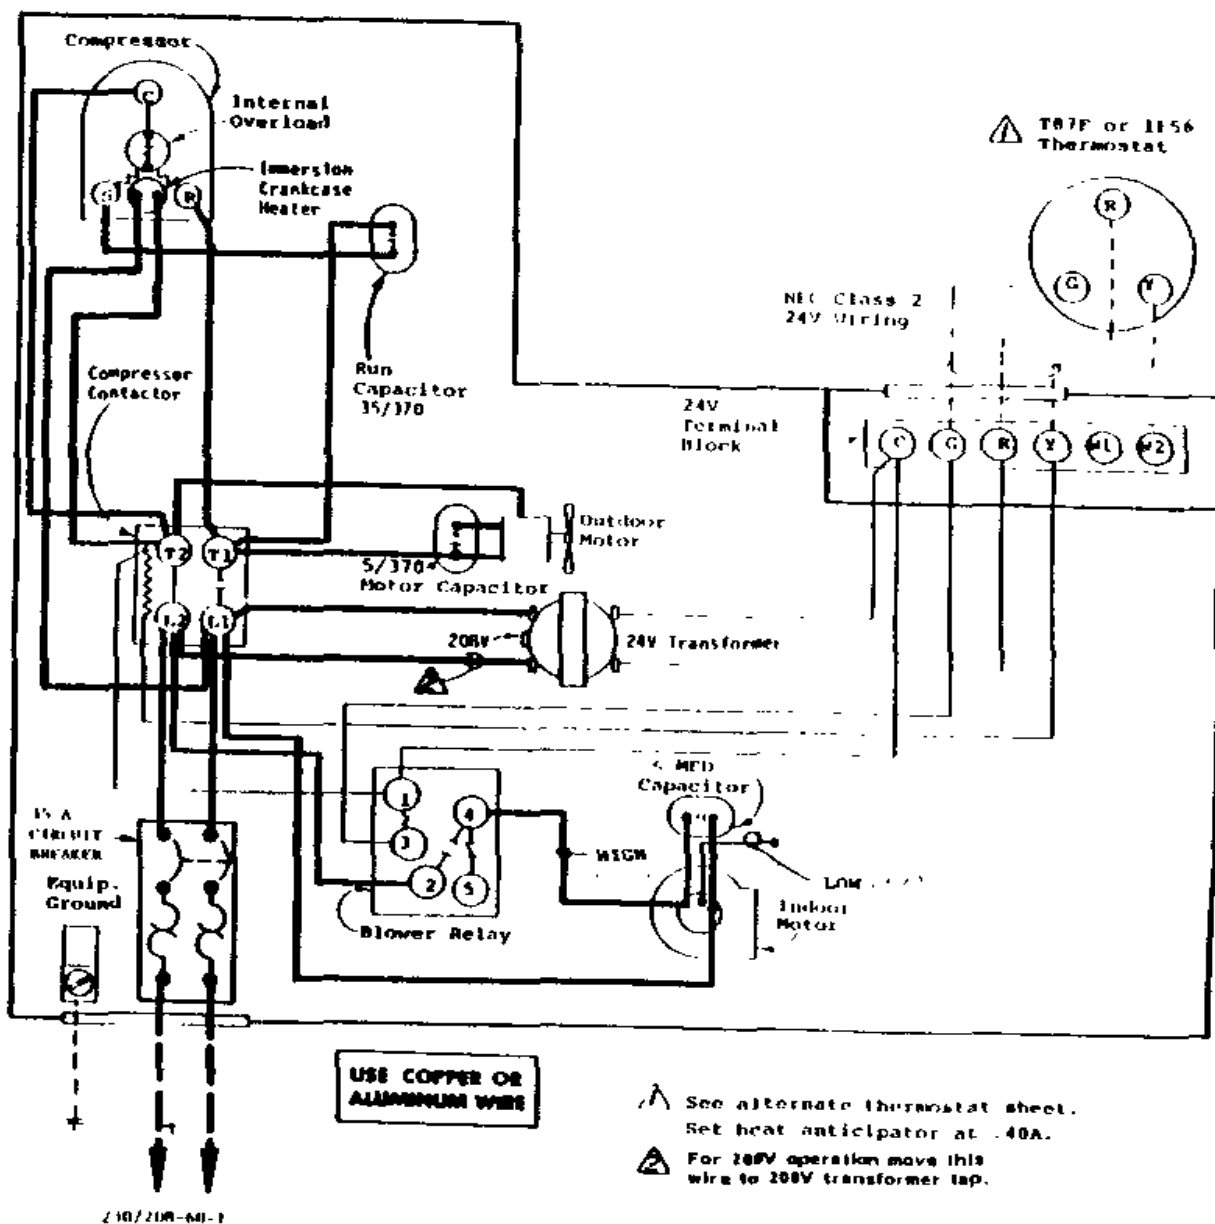


FACTORY WIRING	FIELD WIRING
Low Voltage	---
High Voltage	---

502013

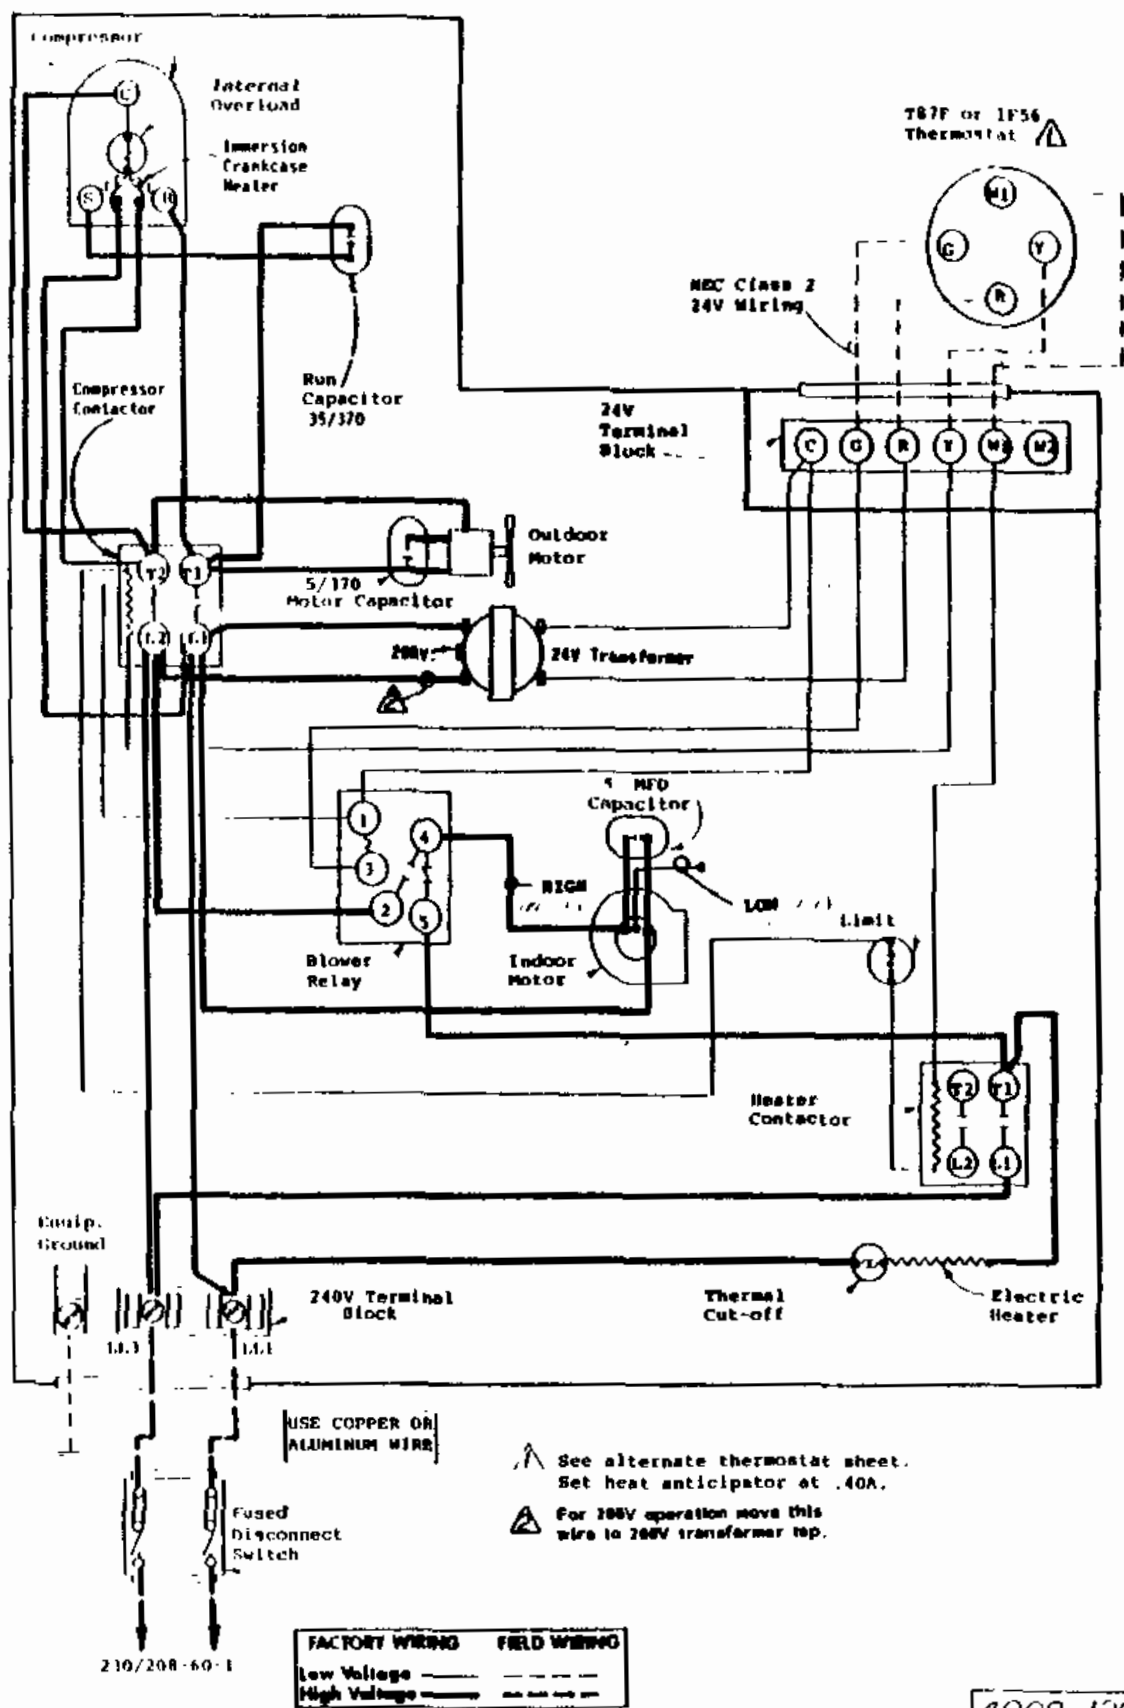


4008-120K

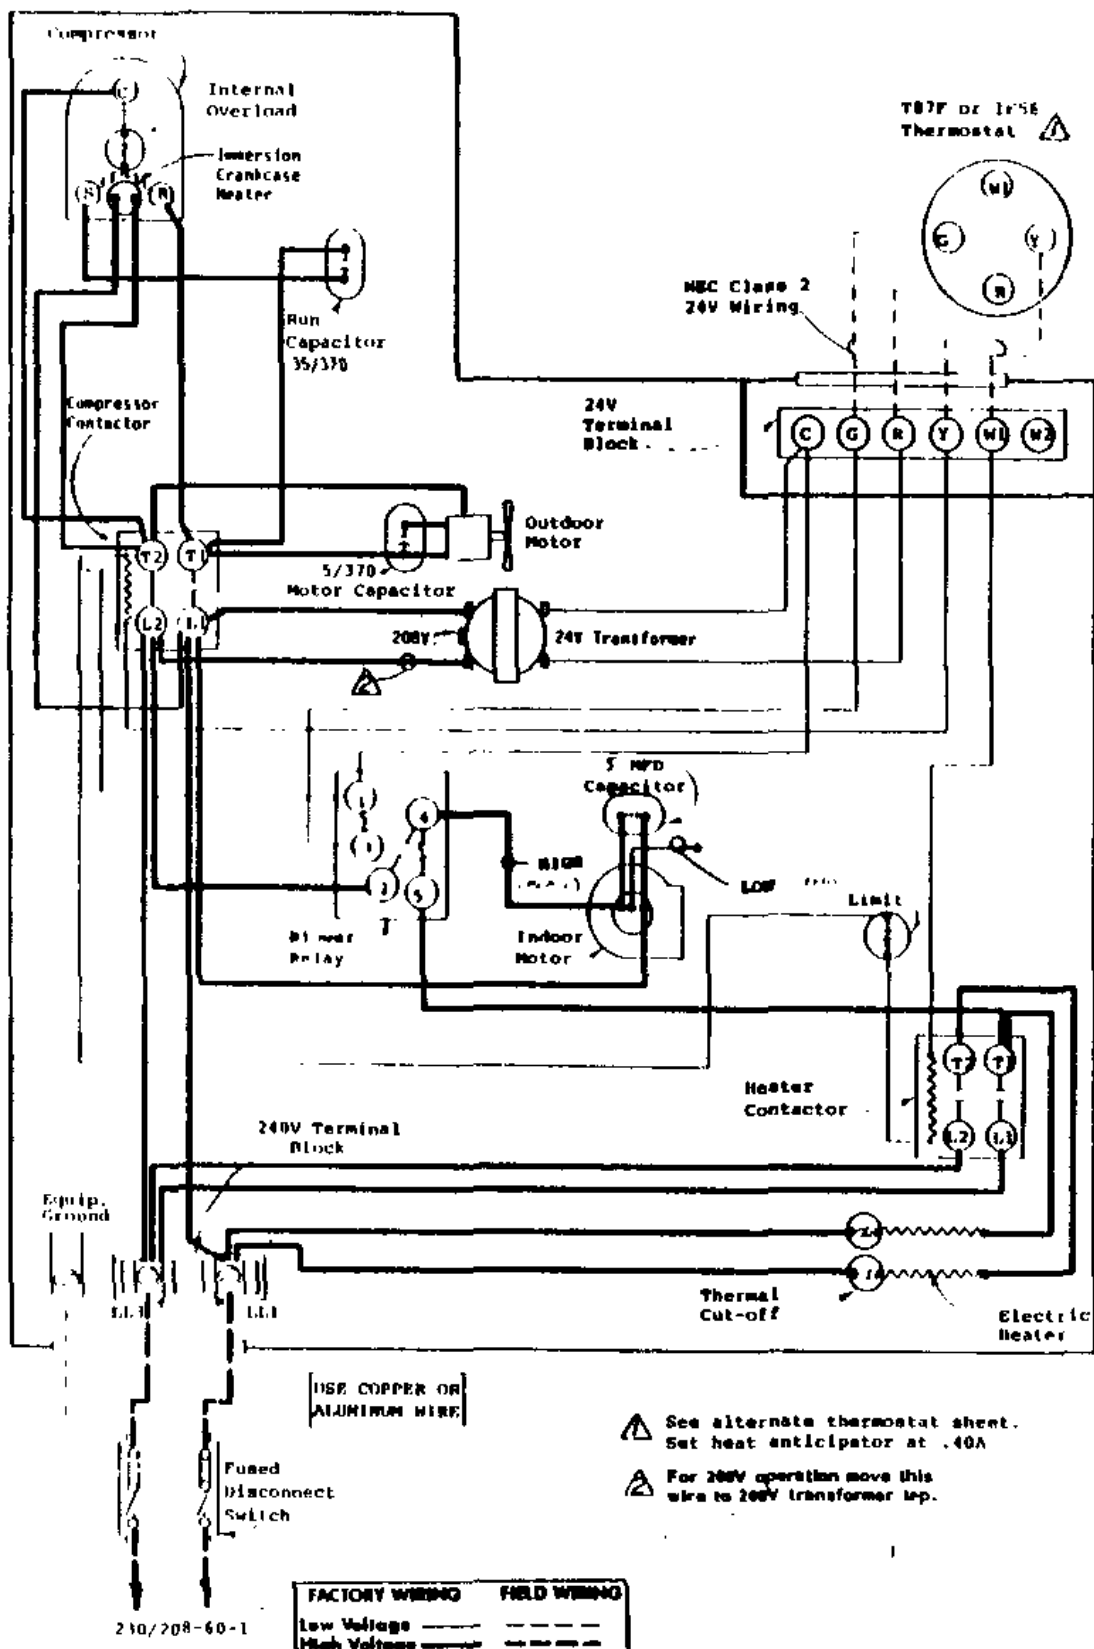

502012


4008-130 K

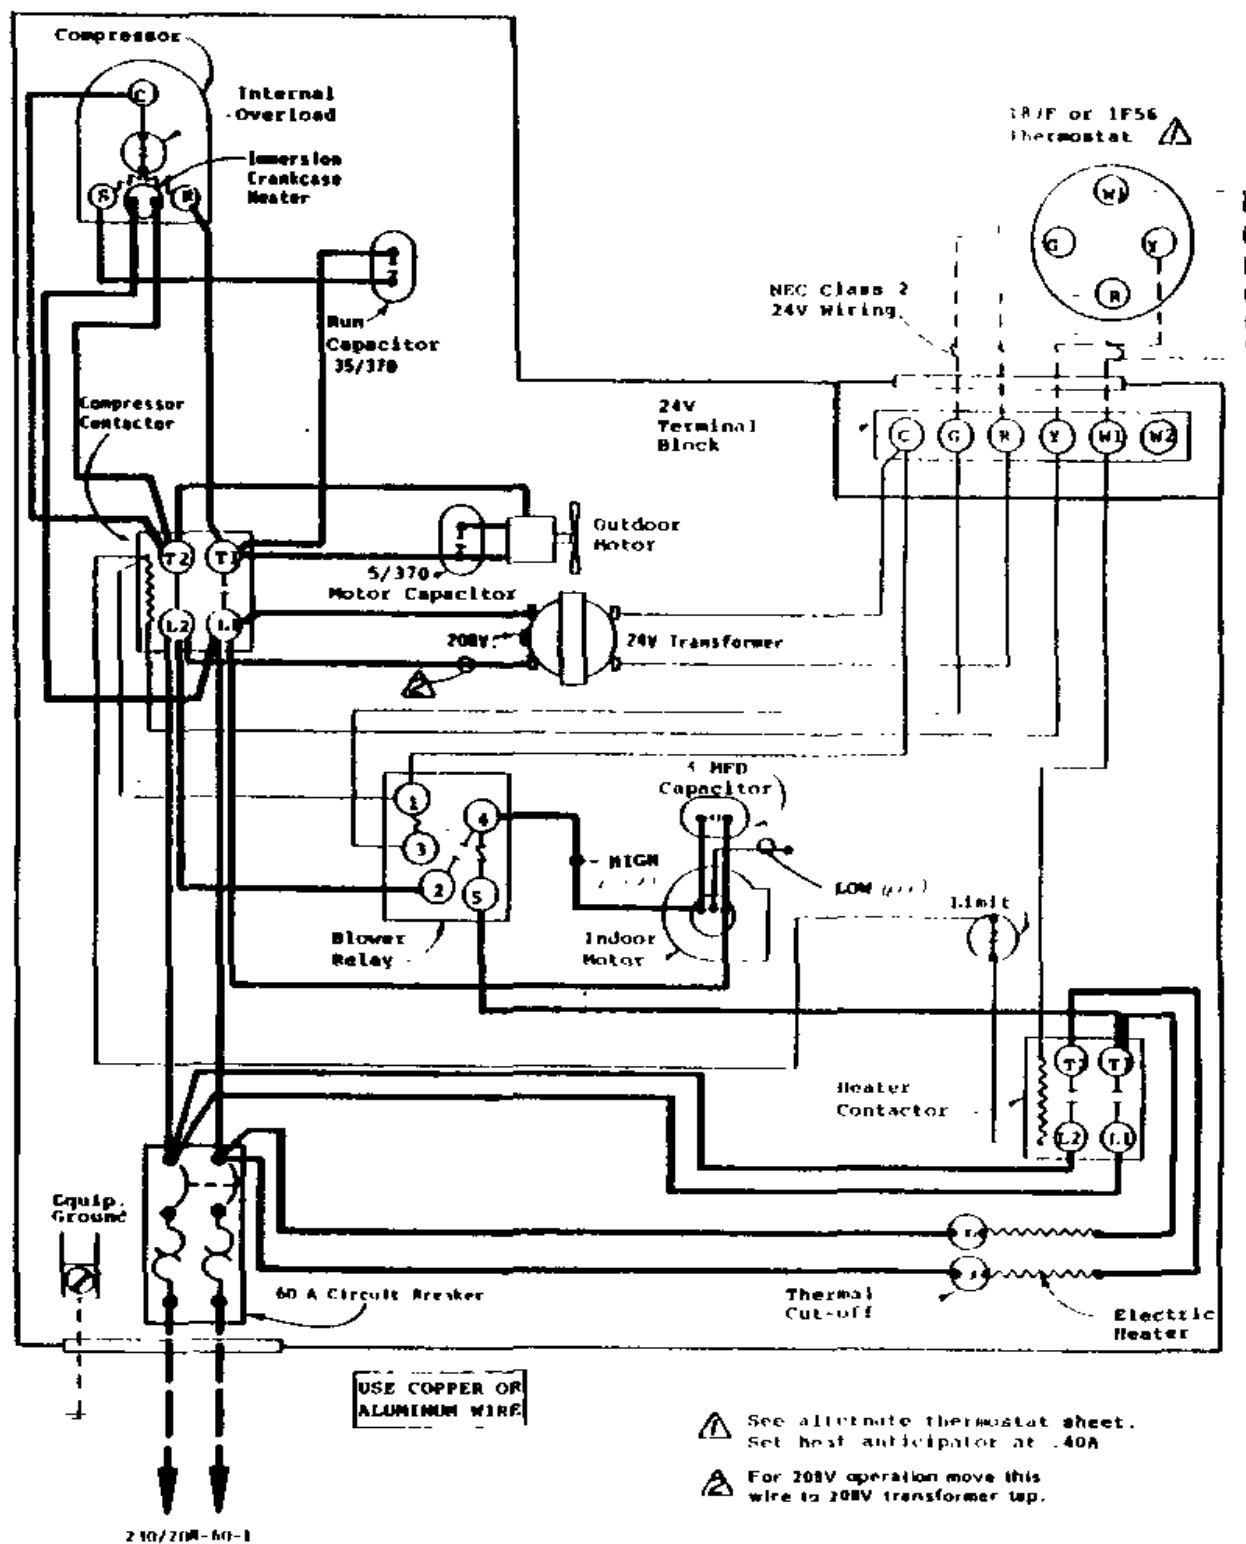

FACTORY WIRING	FIELD WIRING
Low Voltage	-----
High Voltage	-----

4008-132 E

502015

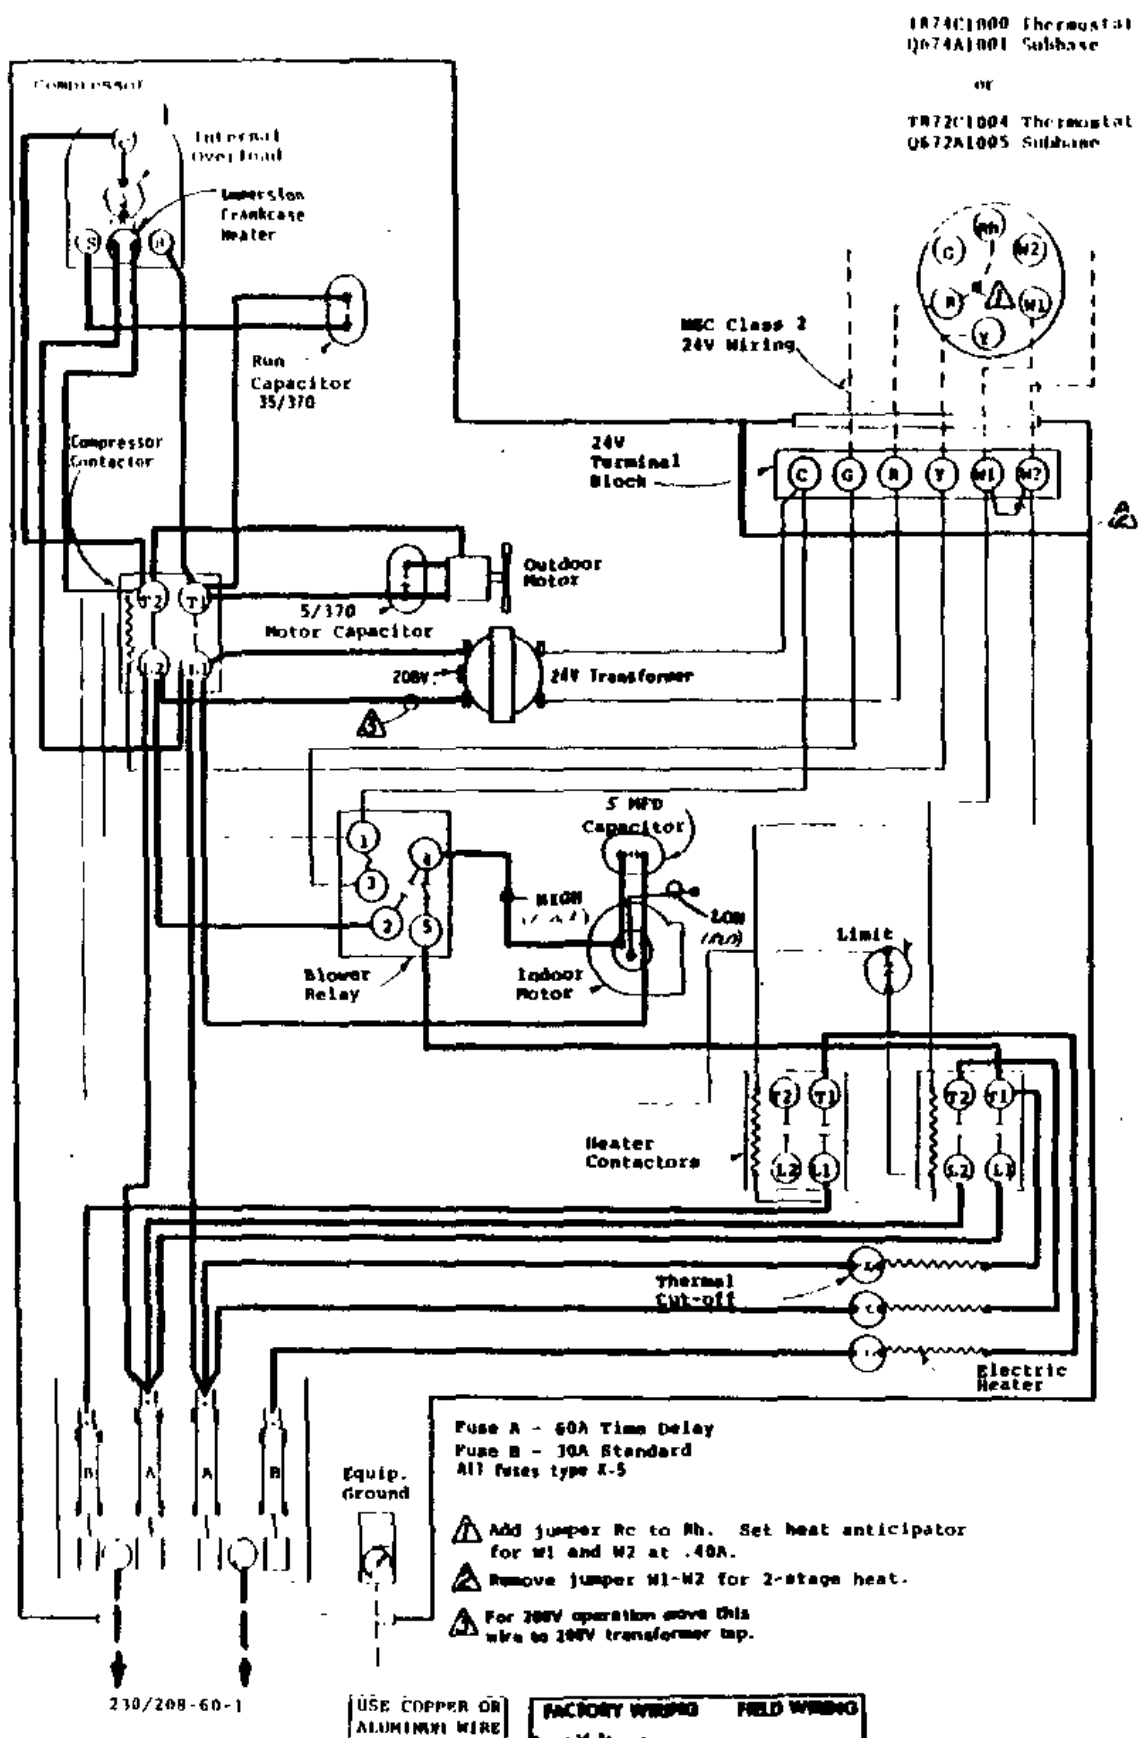


4008-140K

T874C1000 Thermostat
Q674A1001 Subbase

OR

T872C1004 Thermostat
Q672A1005 Subbase

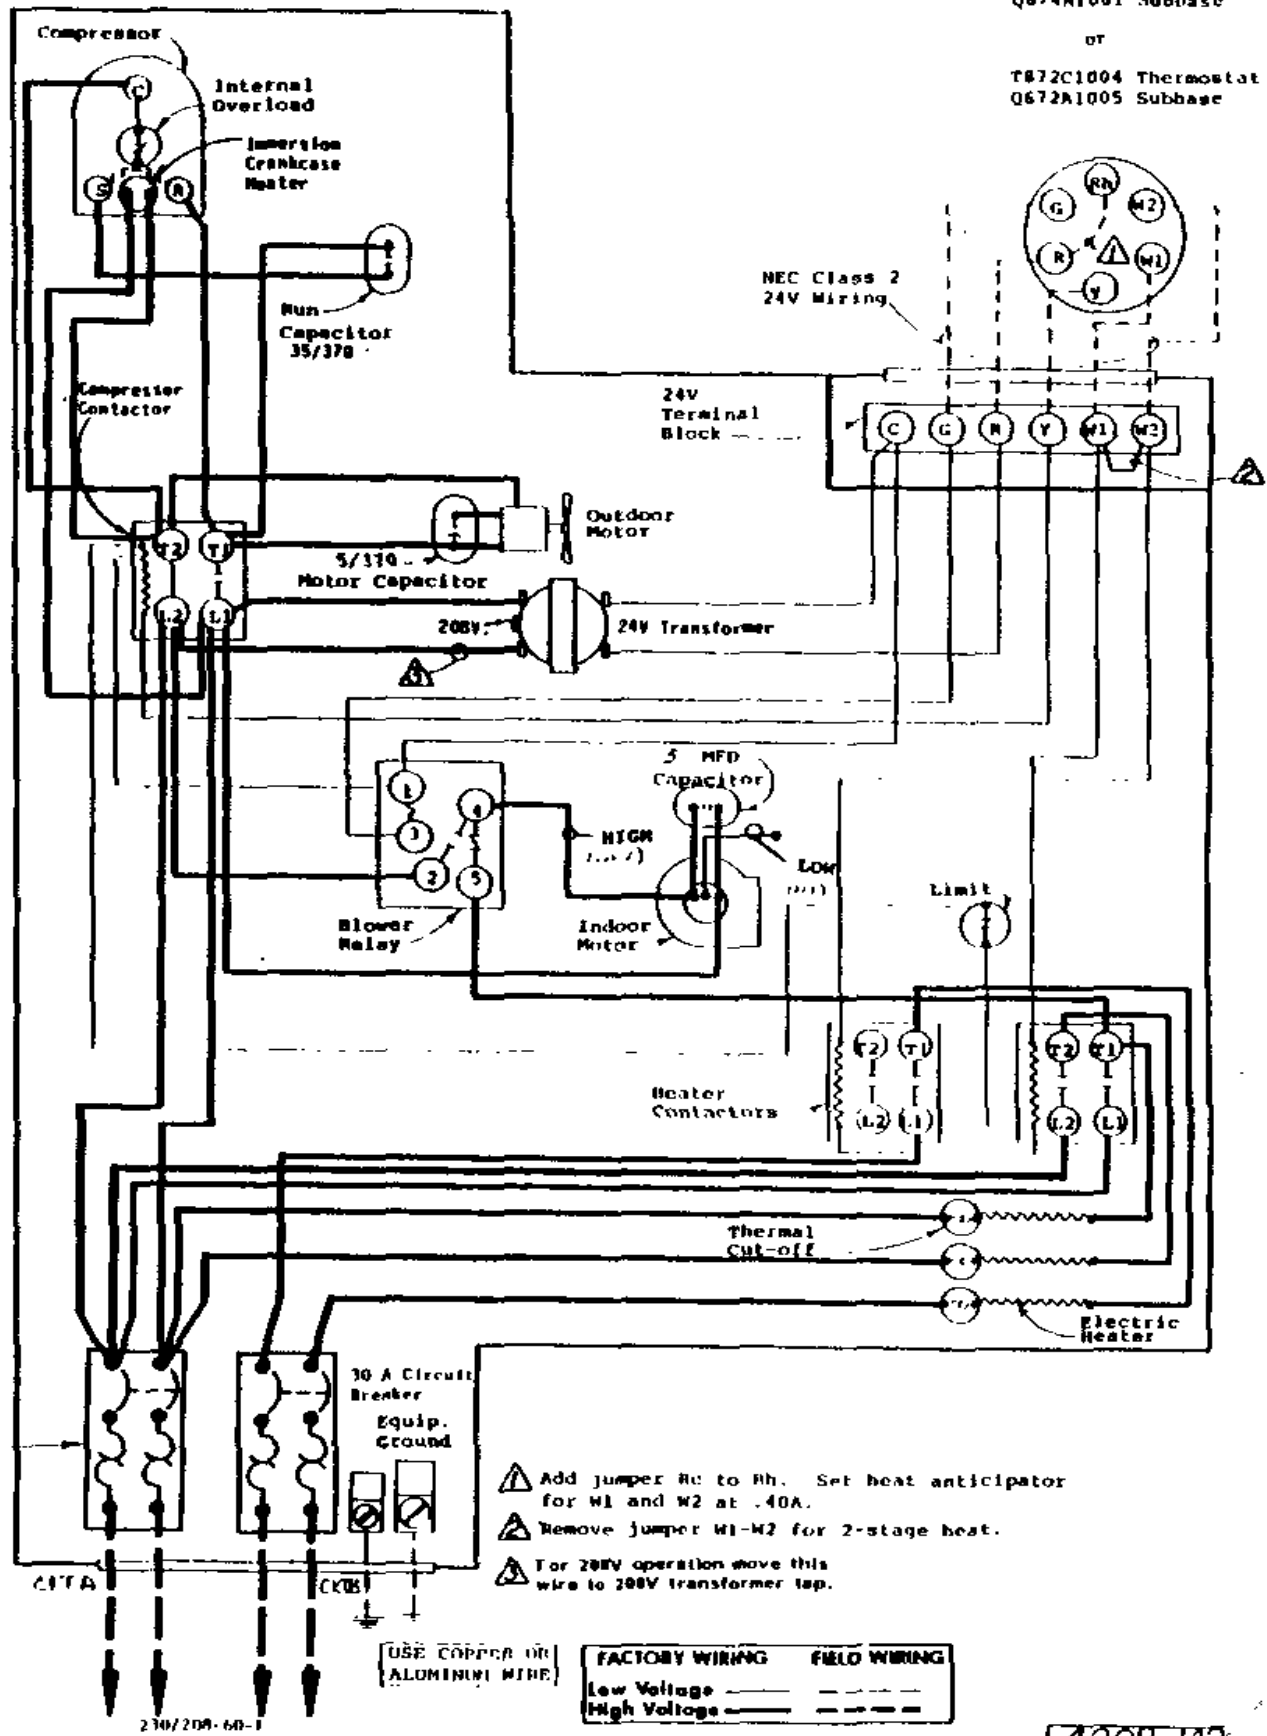

- ⚠ Add jumper R_h to R_h. Set heat anticipator for W1 and W2 at .40A.
- ⚠ Remove jumper W1-W2 for 2-stage heat.
- ⚠ For 208V operation move this wire to 208V transformer tap.

	FACTORY WIRING	FIELD WIRING
Low Voltage	—	—
High Voltage	—	—

14008-K2