



▲ For 208V operation move this wire to 208V transformer tap.

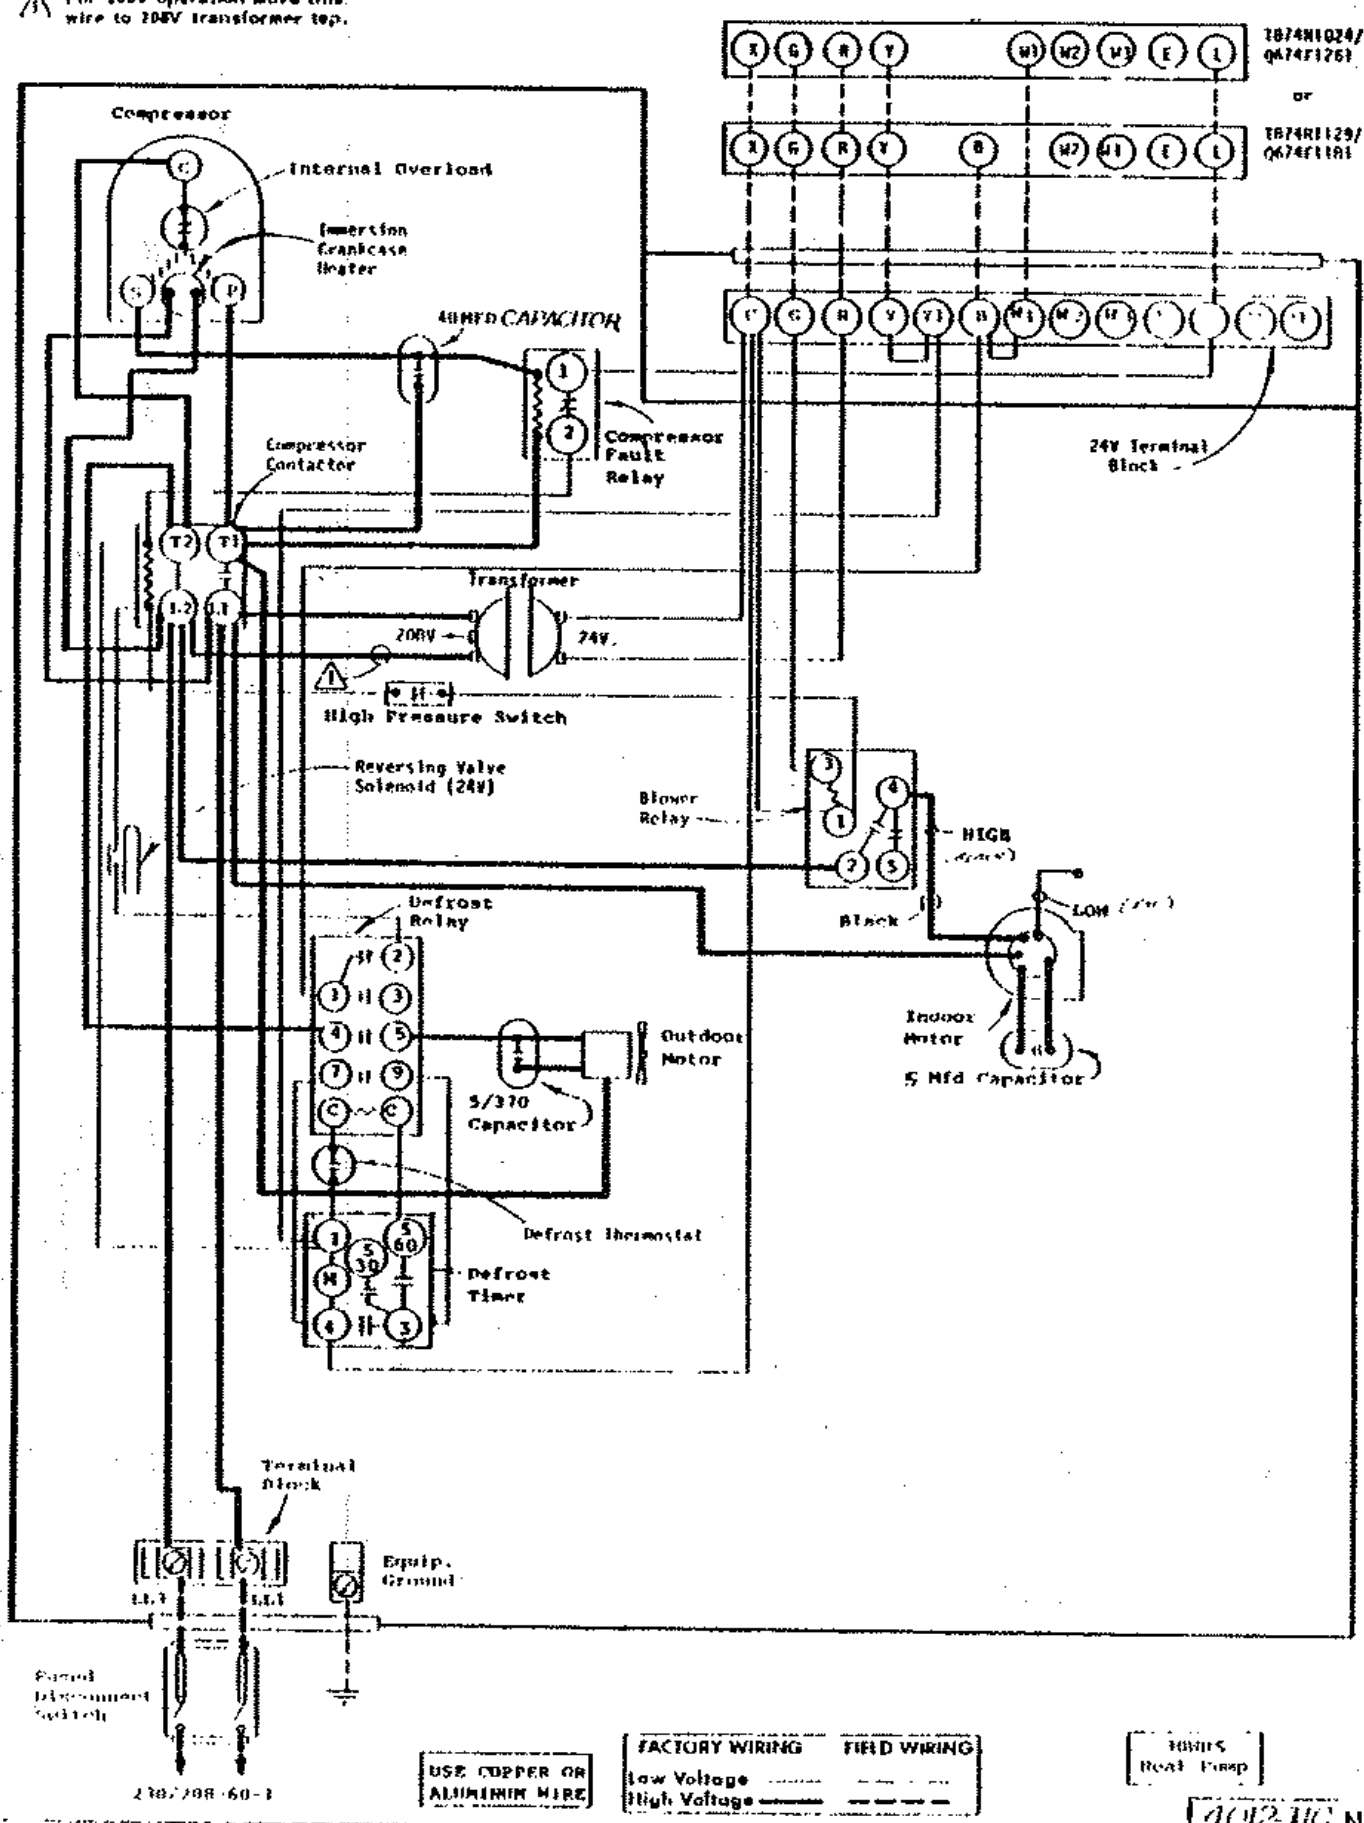

⚠ For 208V operation move this wire to 208V transformer tap.

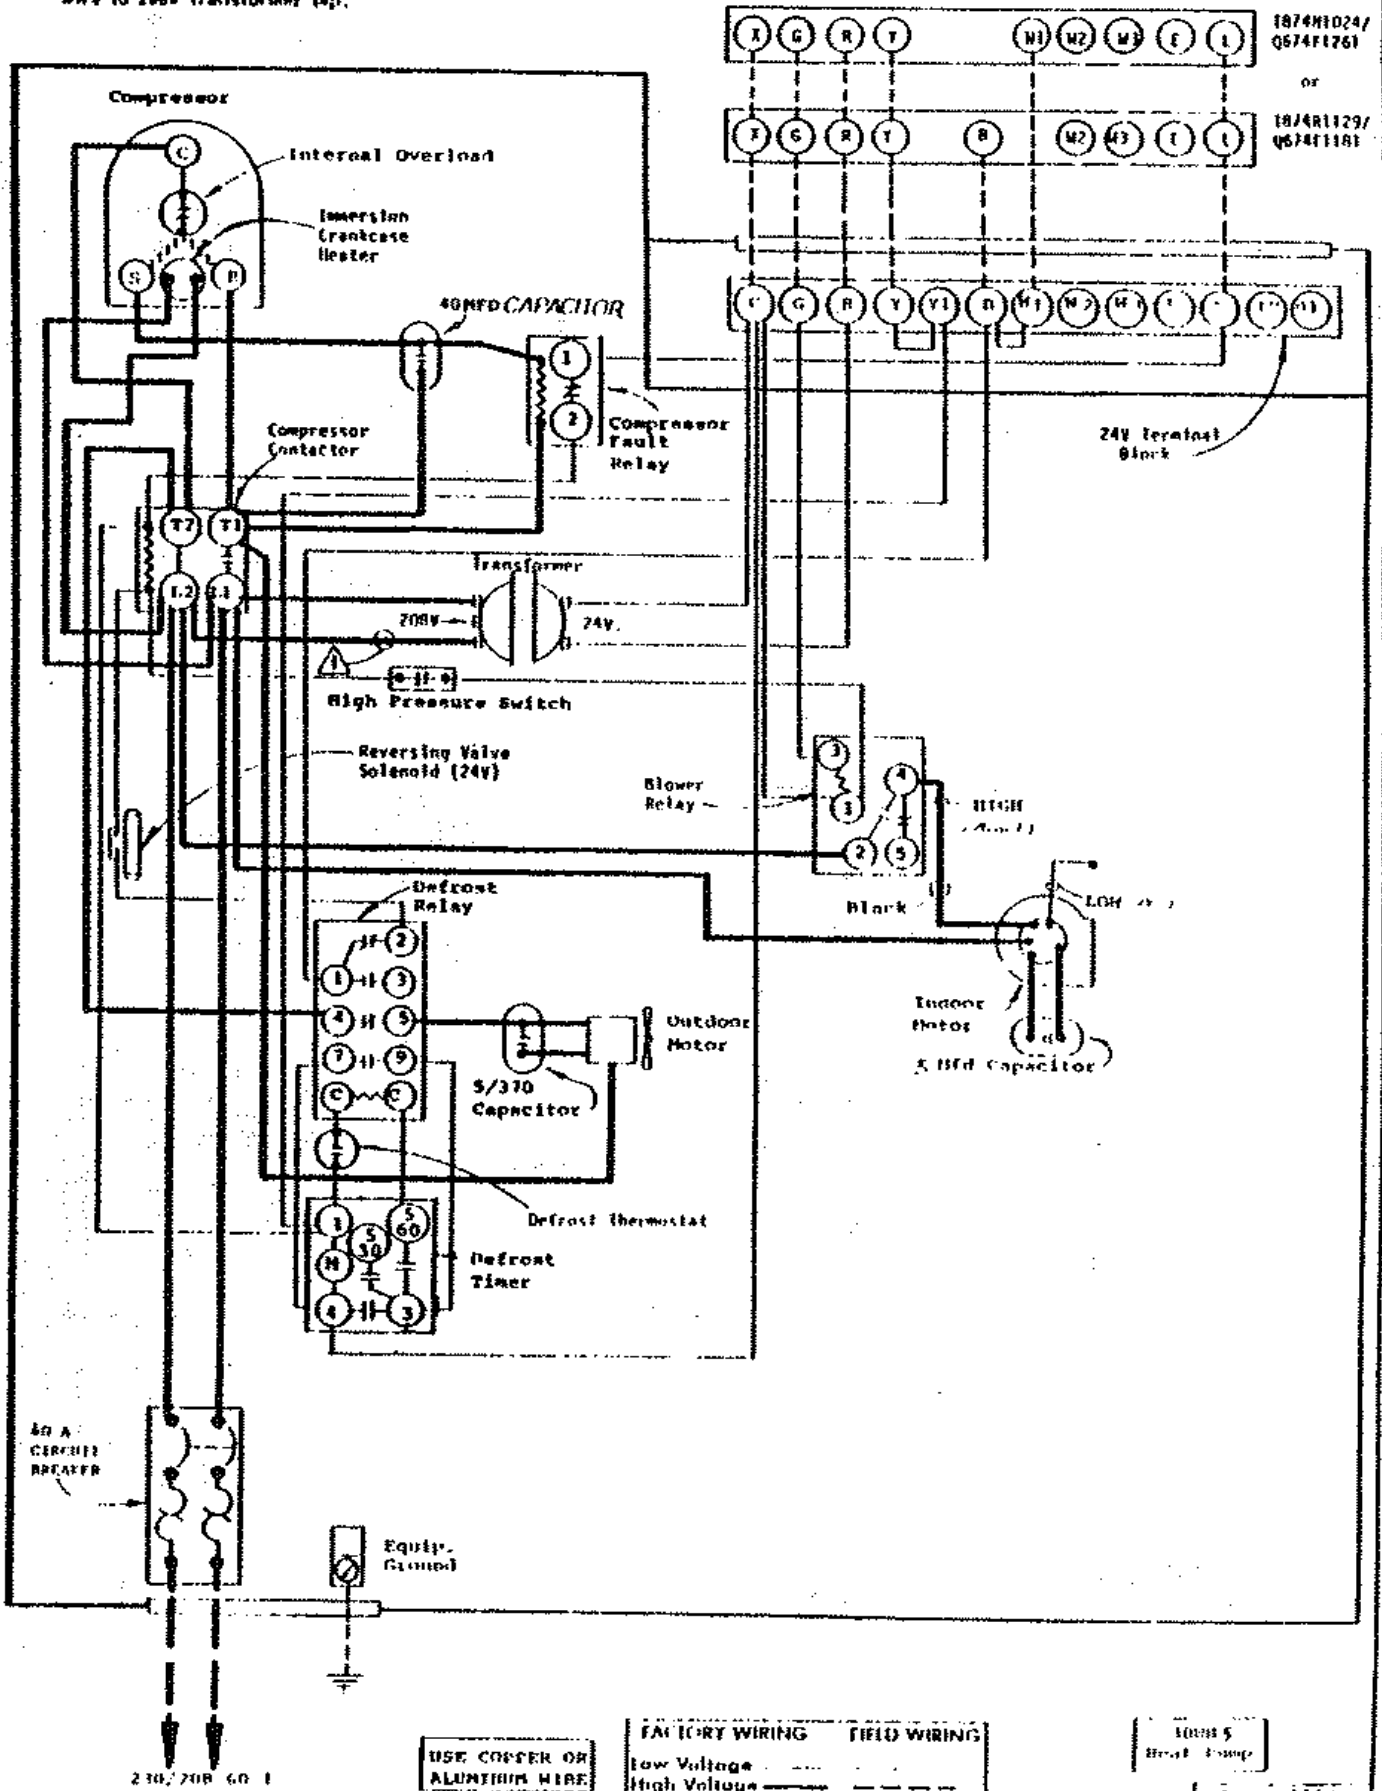


USE COPPER OR ALUMINUM WIRE

FACTORY WIRING FIELD WIRING
Low Voltage High Voltage


1000 S Heat Pump

4012 HFC


⚠ For 208V operation move this wire to 208V transformer tap.

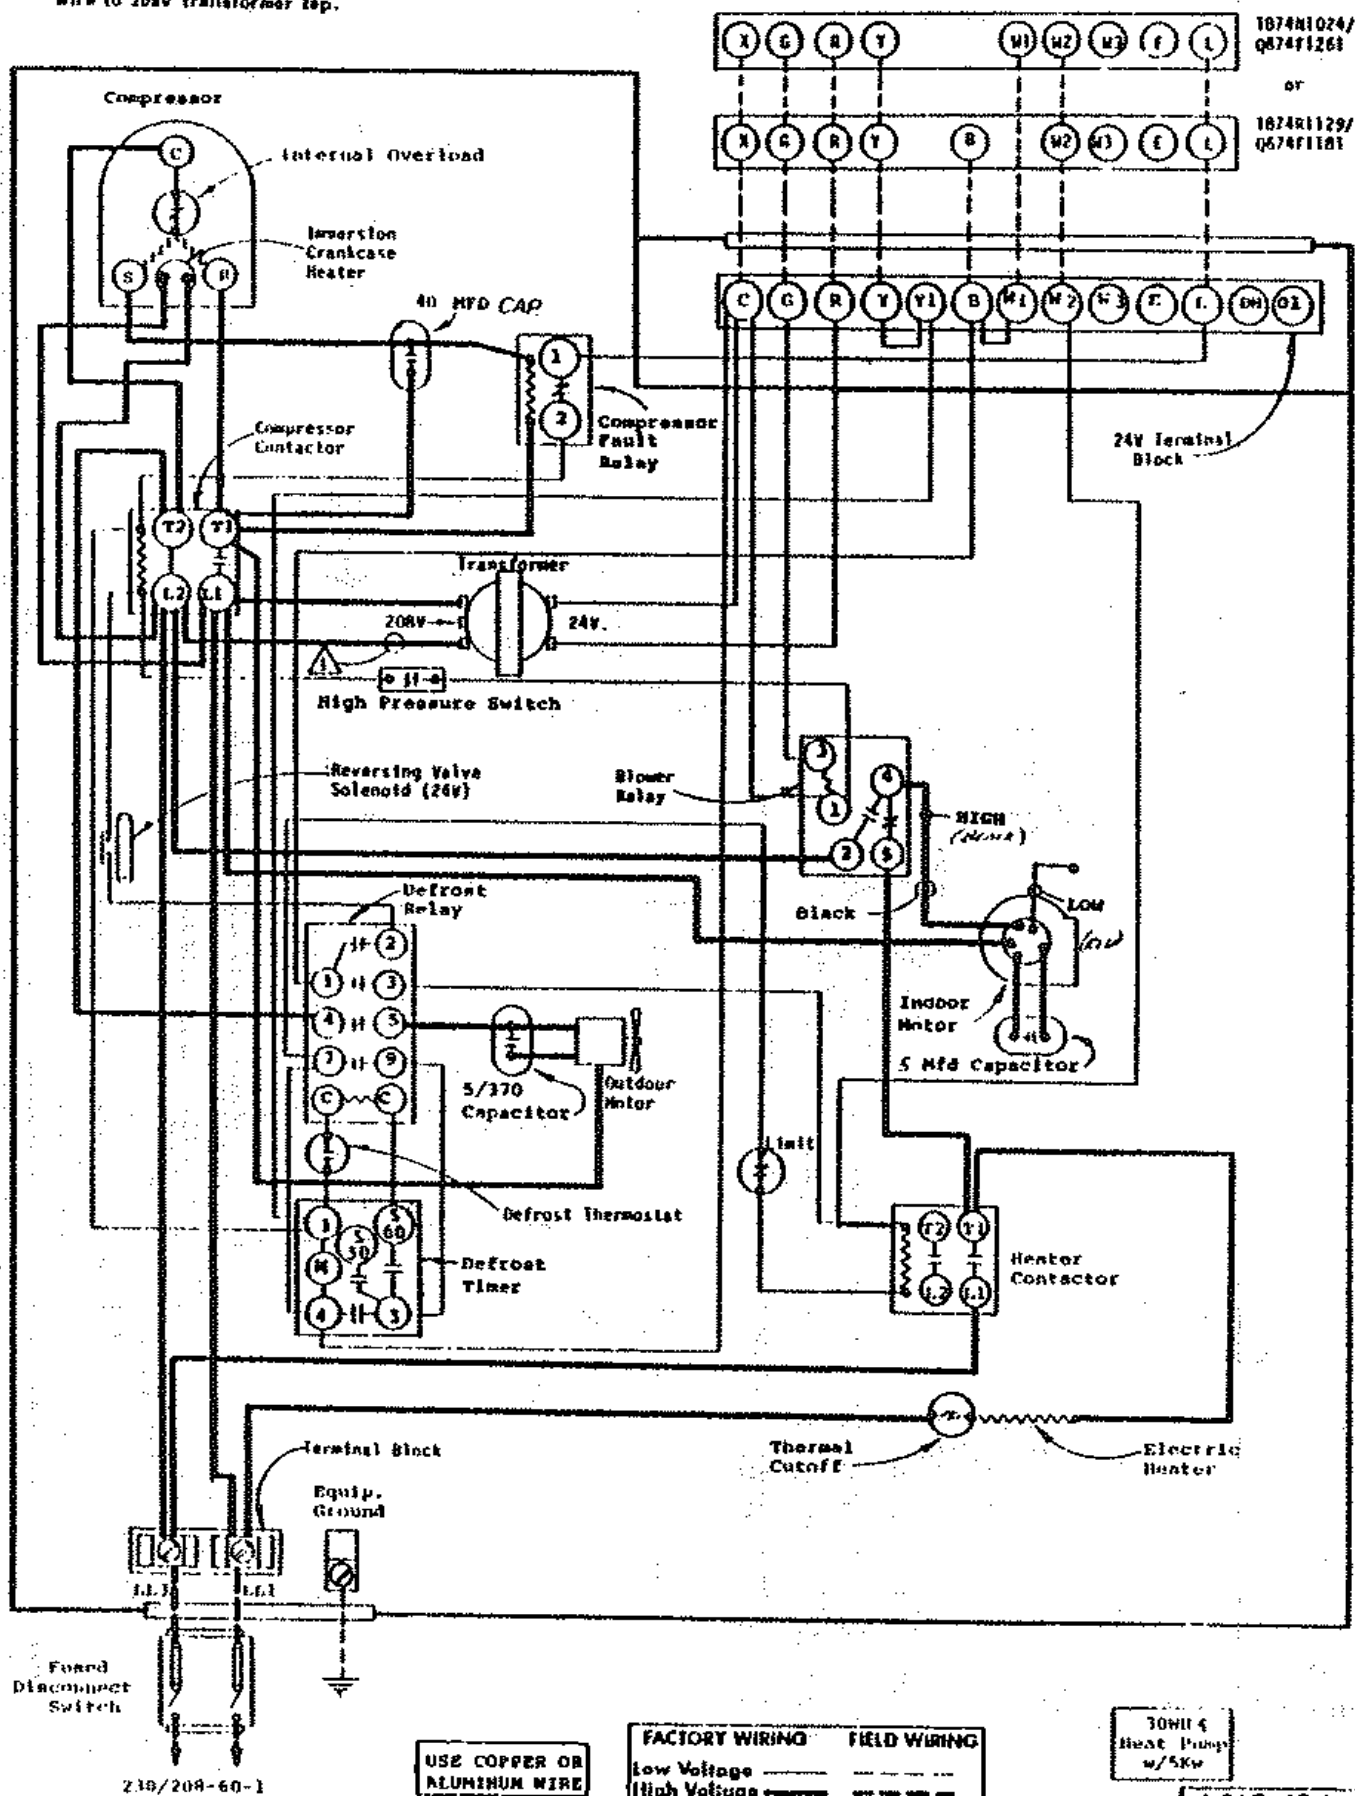


⚠ For 208V operation move this wire to 208V transformer tap.

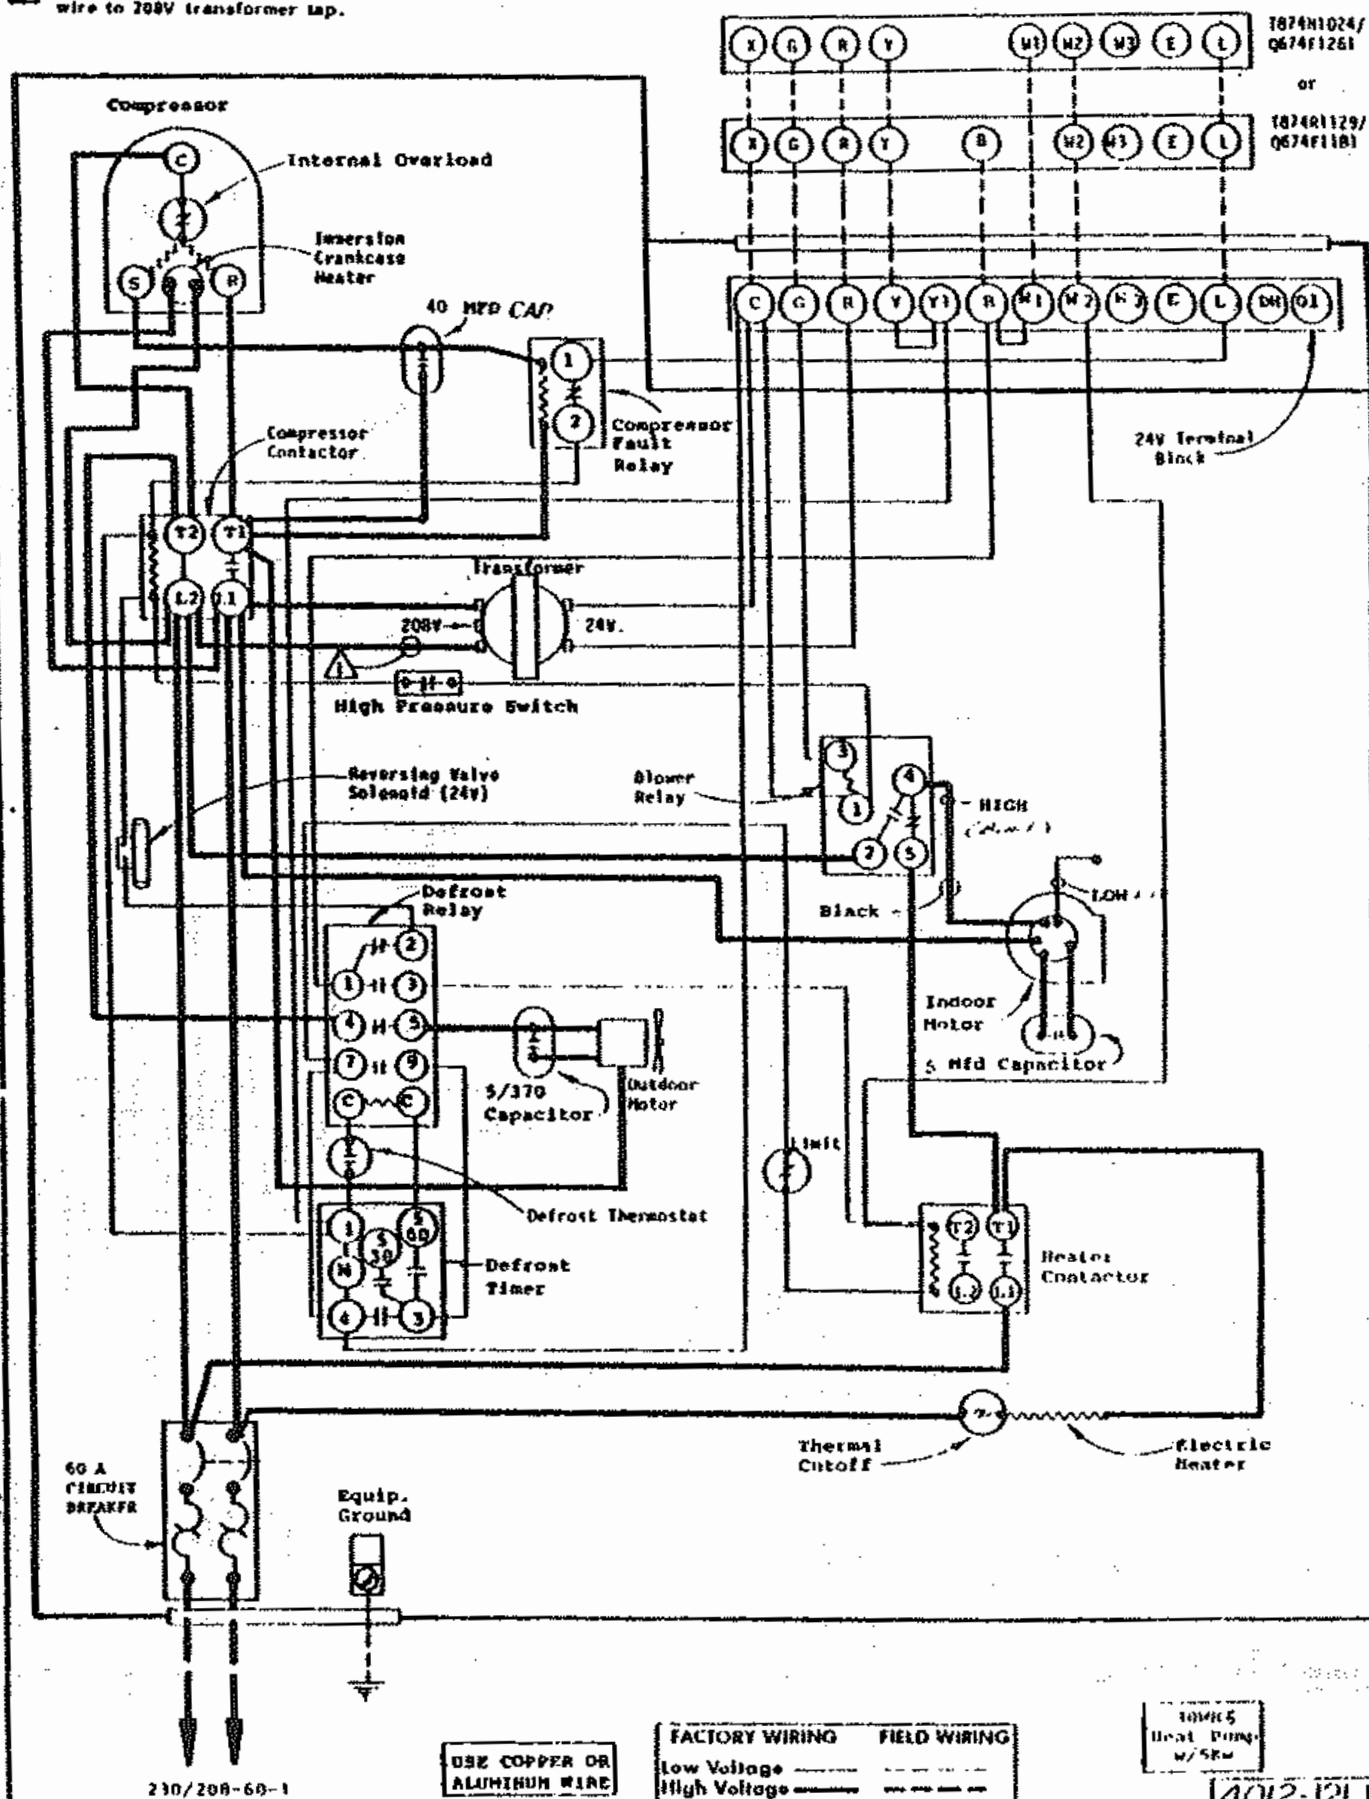

⚠ For 208V operation move this wire to 208V transformer tap.

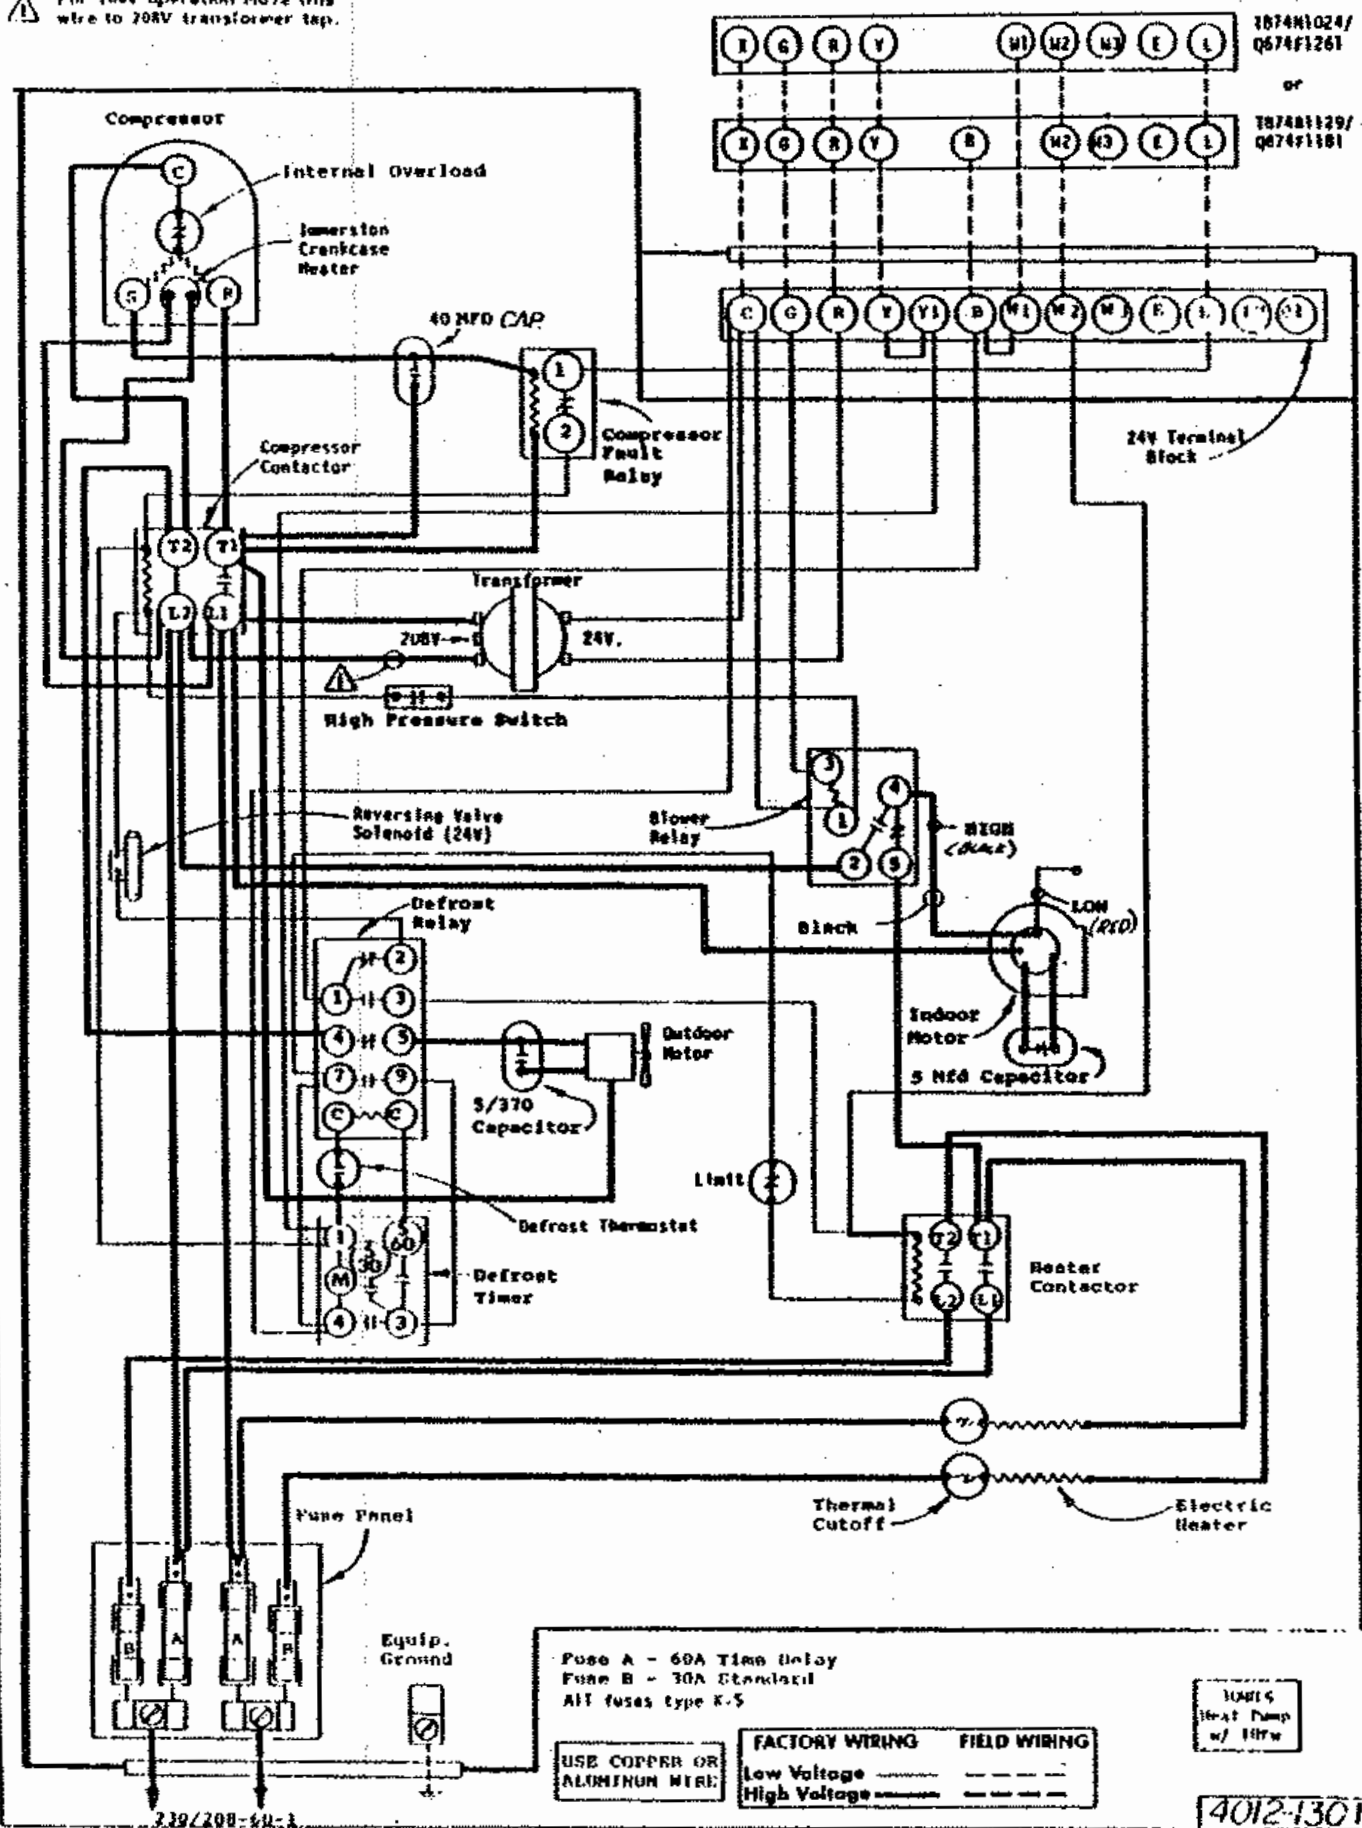


⚠ For 208V operation move this wire to 208V transformer tap.

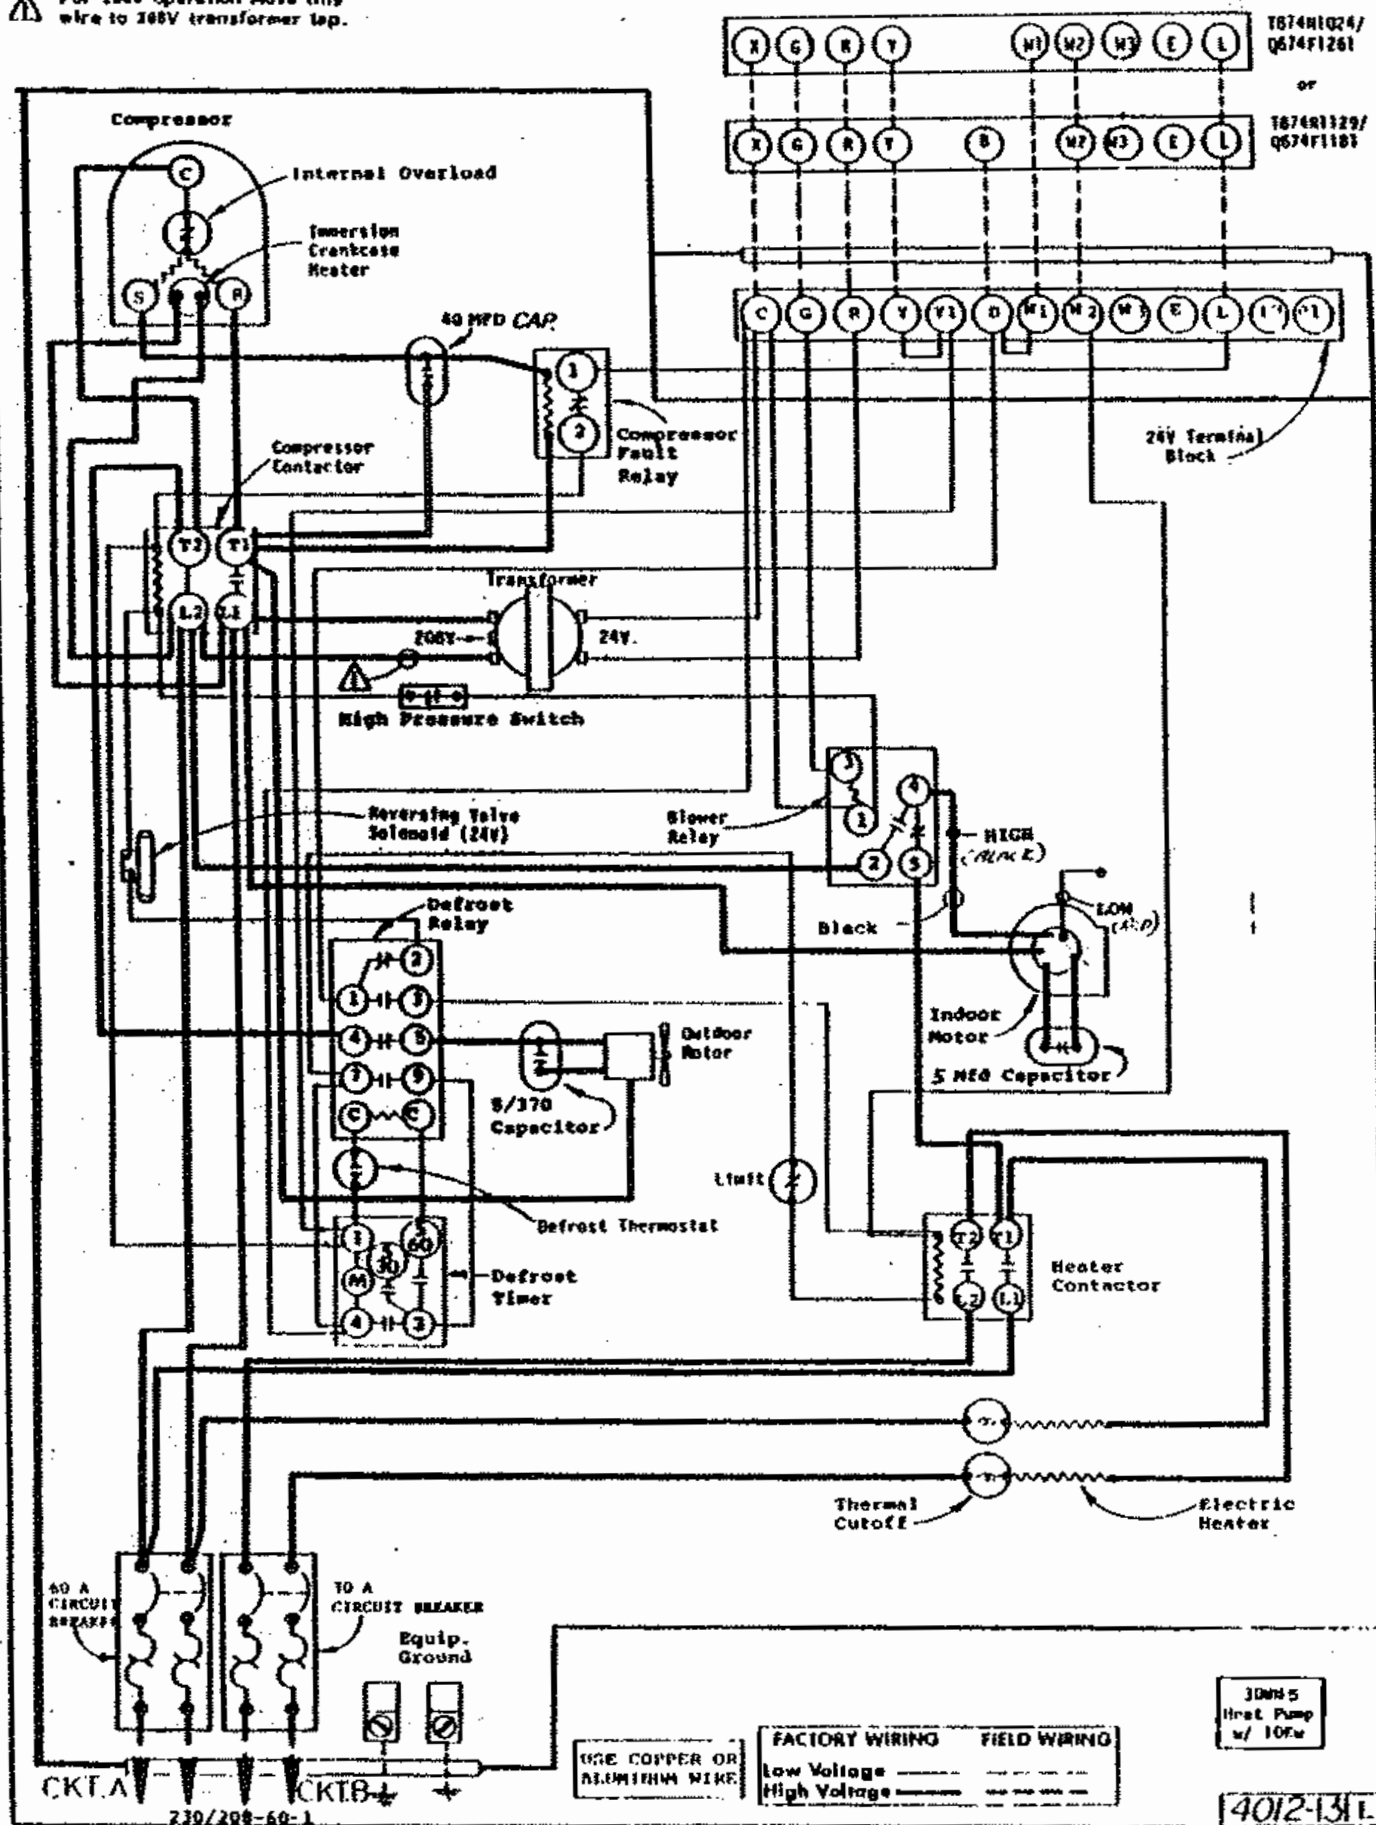

⚠ 2nd heat contactor operates only during emergency heat or compressor cutoff.

⚠ For 208V operation move this wire to 208V transformer tap.

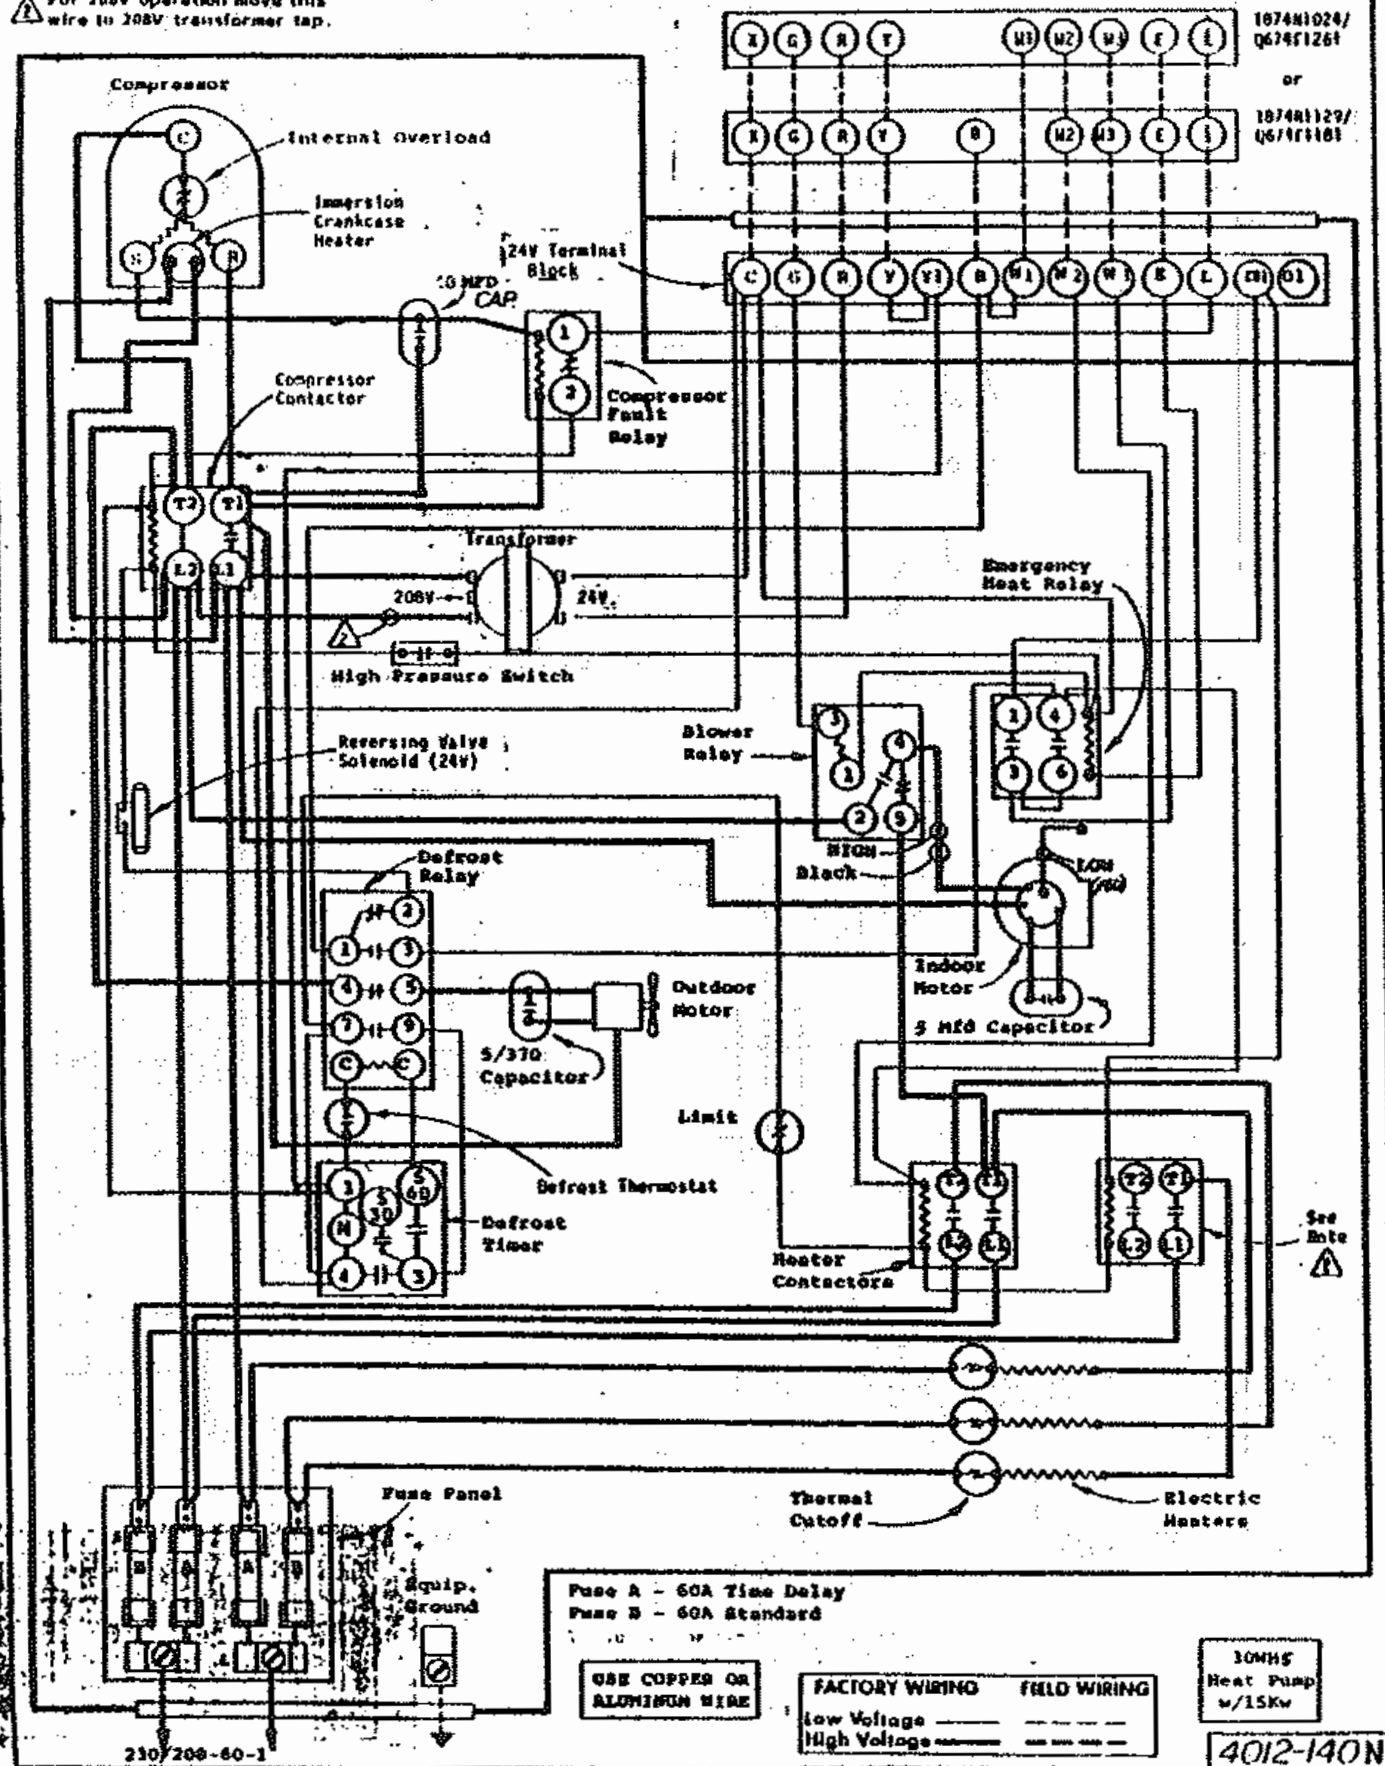

⚠ 2nd Heat Contactor operated only during emergency heat or compressor cutoff.

⚠ For 208V operation move this wire to 208V transformer tap.

