


- ⚠ See alternate thermostat shank.
- ⚠ Not all outdoor motors employ capacitor. Motors without capacitor are two-wire and hook directly to T2 and T1.

Model 1877

Power Wiring ———
Field Wiring - - - - -

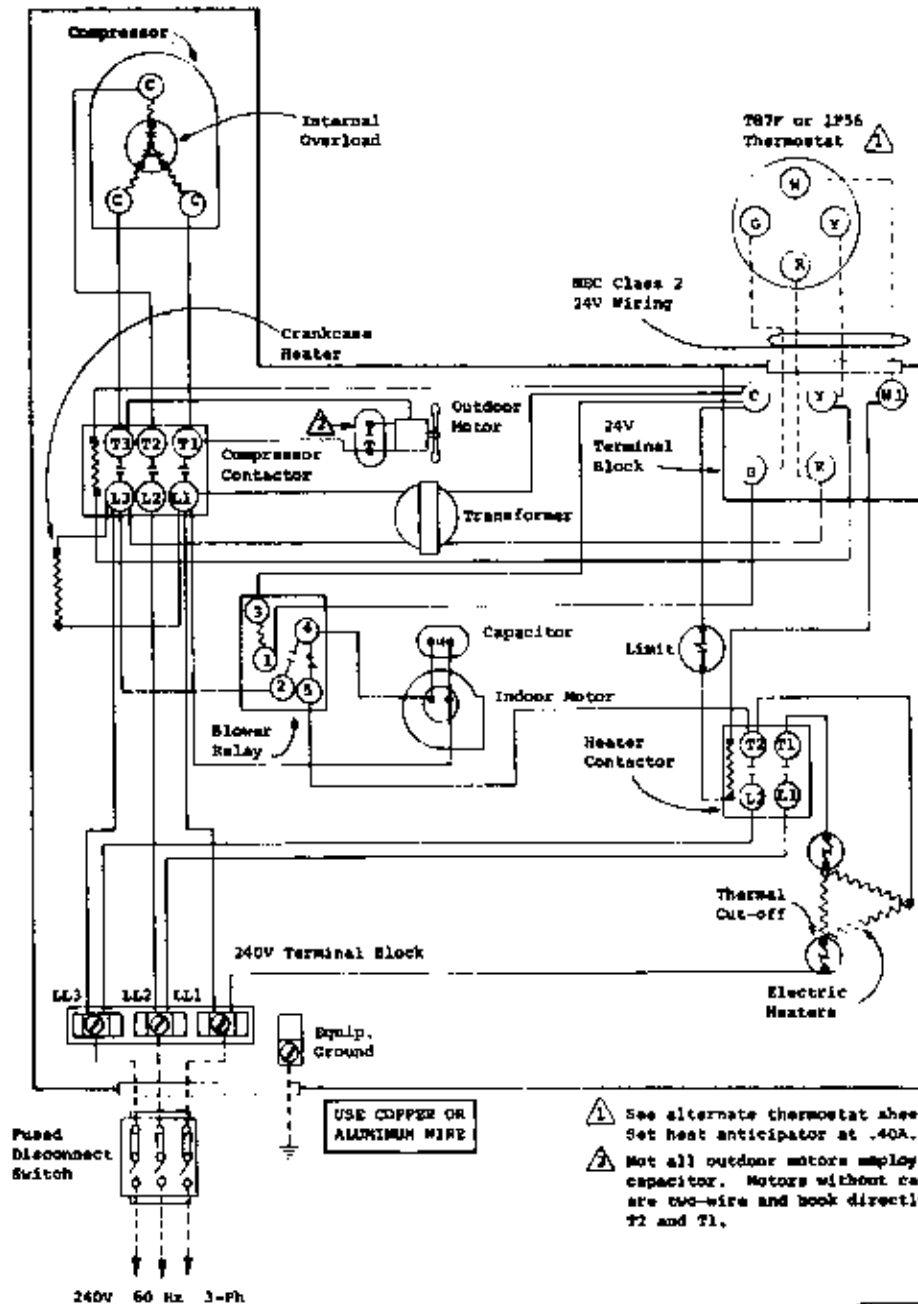


USE COPPER OR ALUMINUM WIRE

- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A.
- ⚠ Not all outdoor motors employ capacitor. Motors without capacitor are two-wire and hook directly to T2 and T1.

Models
24WA, 30WA, 36WA
w/9KW

Factory Wiring ———
Field Wiring - - - - -

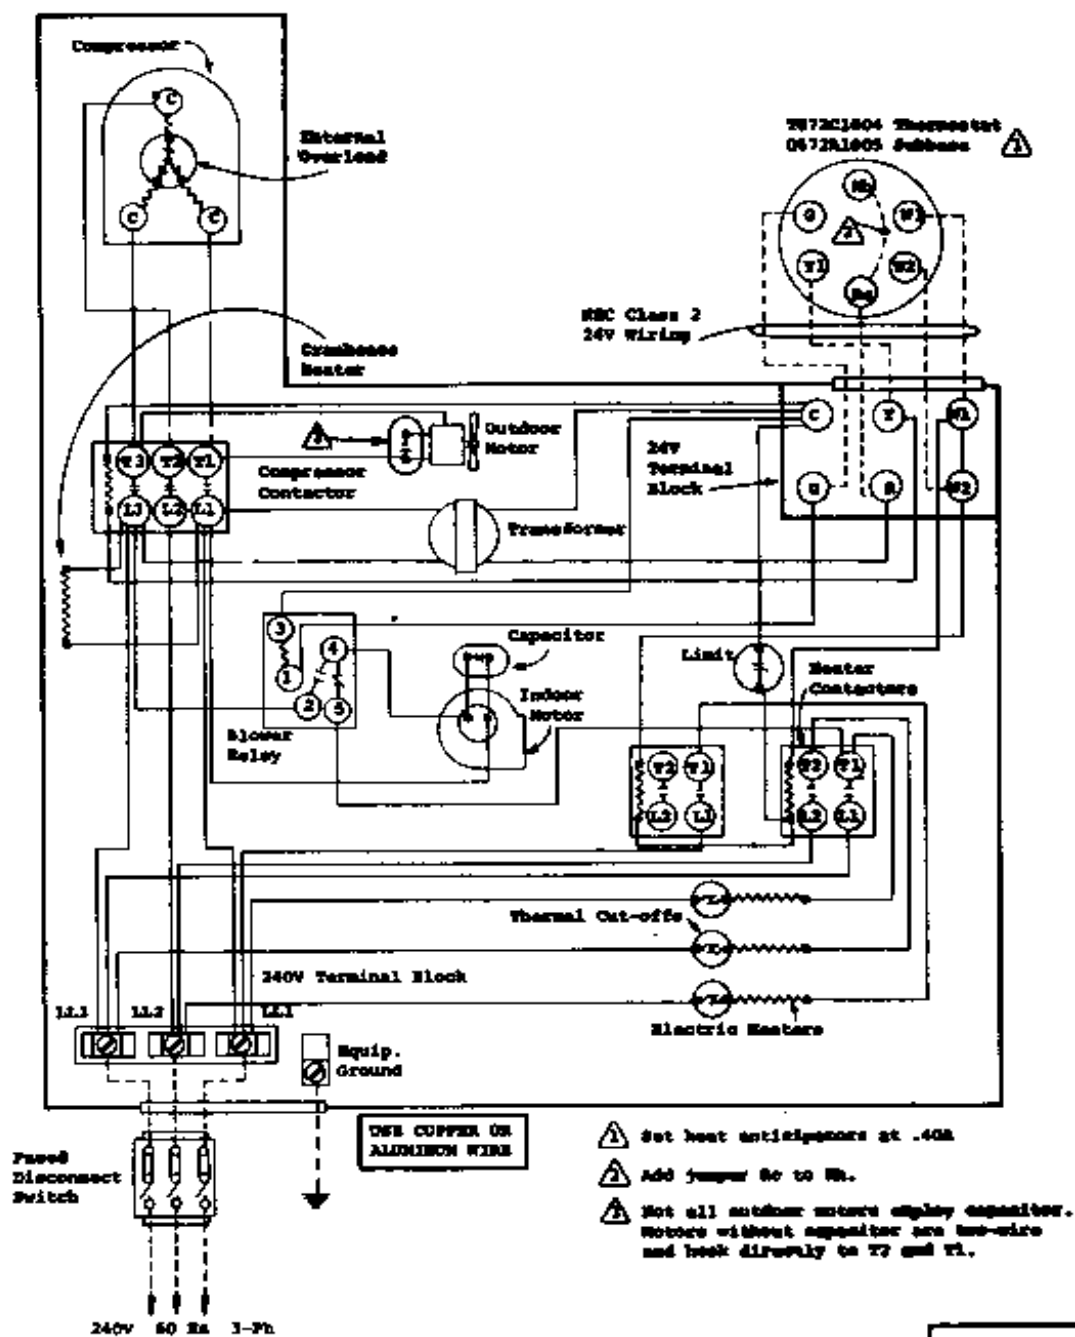

Factory Wiring ———
Field Wiring - - - - -