

230/208-66-3


USE COPPER CONDUCTORS ONLY

See alternate thermostat sheet.

MODEL 36WA4

Factory Wiring _____
Field Wiring - - - - -

4809-210C

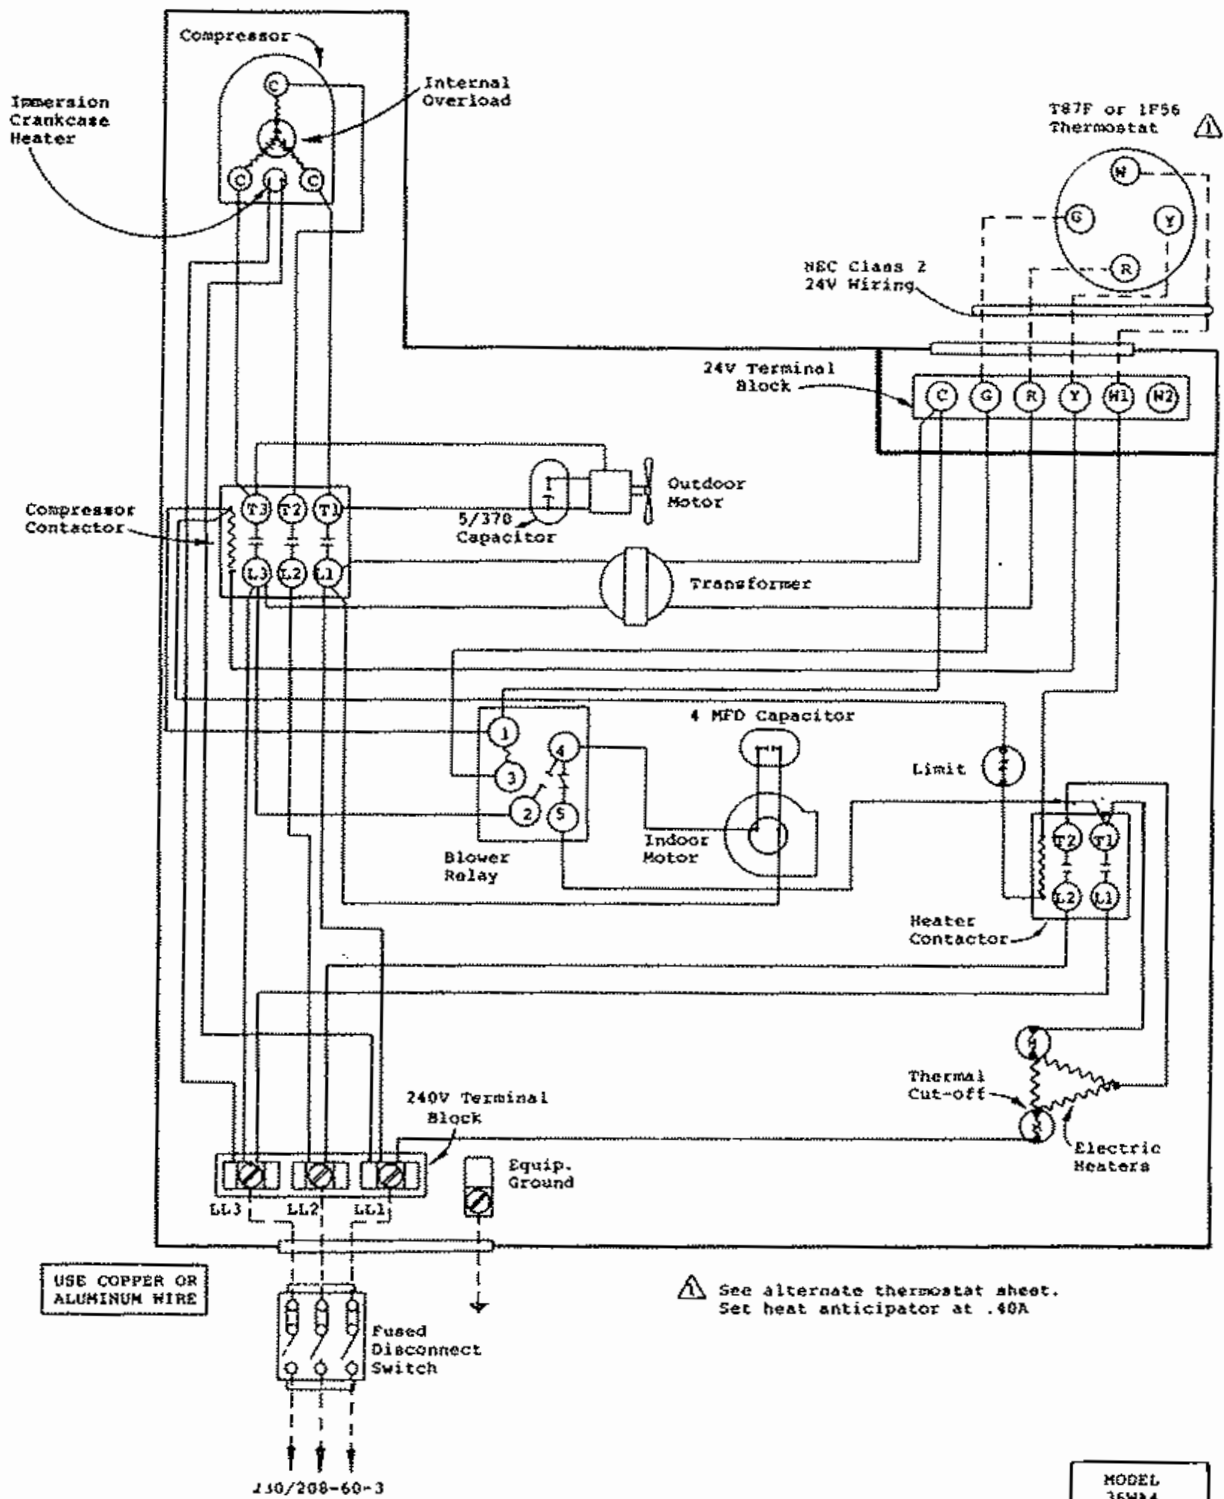


USE COPPER OR ALUMINUM WIRE

⚠ See alternate thermostat sheet. Set heat anticipator at .40A

MODEL 36WA4 w/6 or 98W

Factory Wiring _____
Field Wiring _____

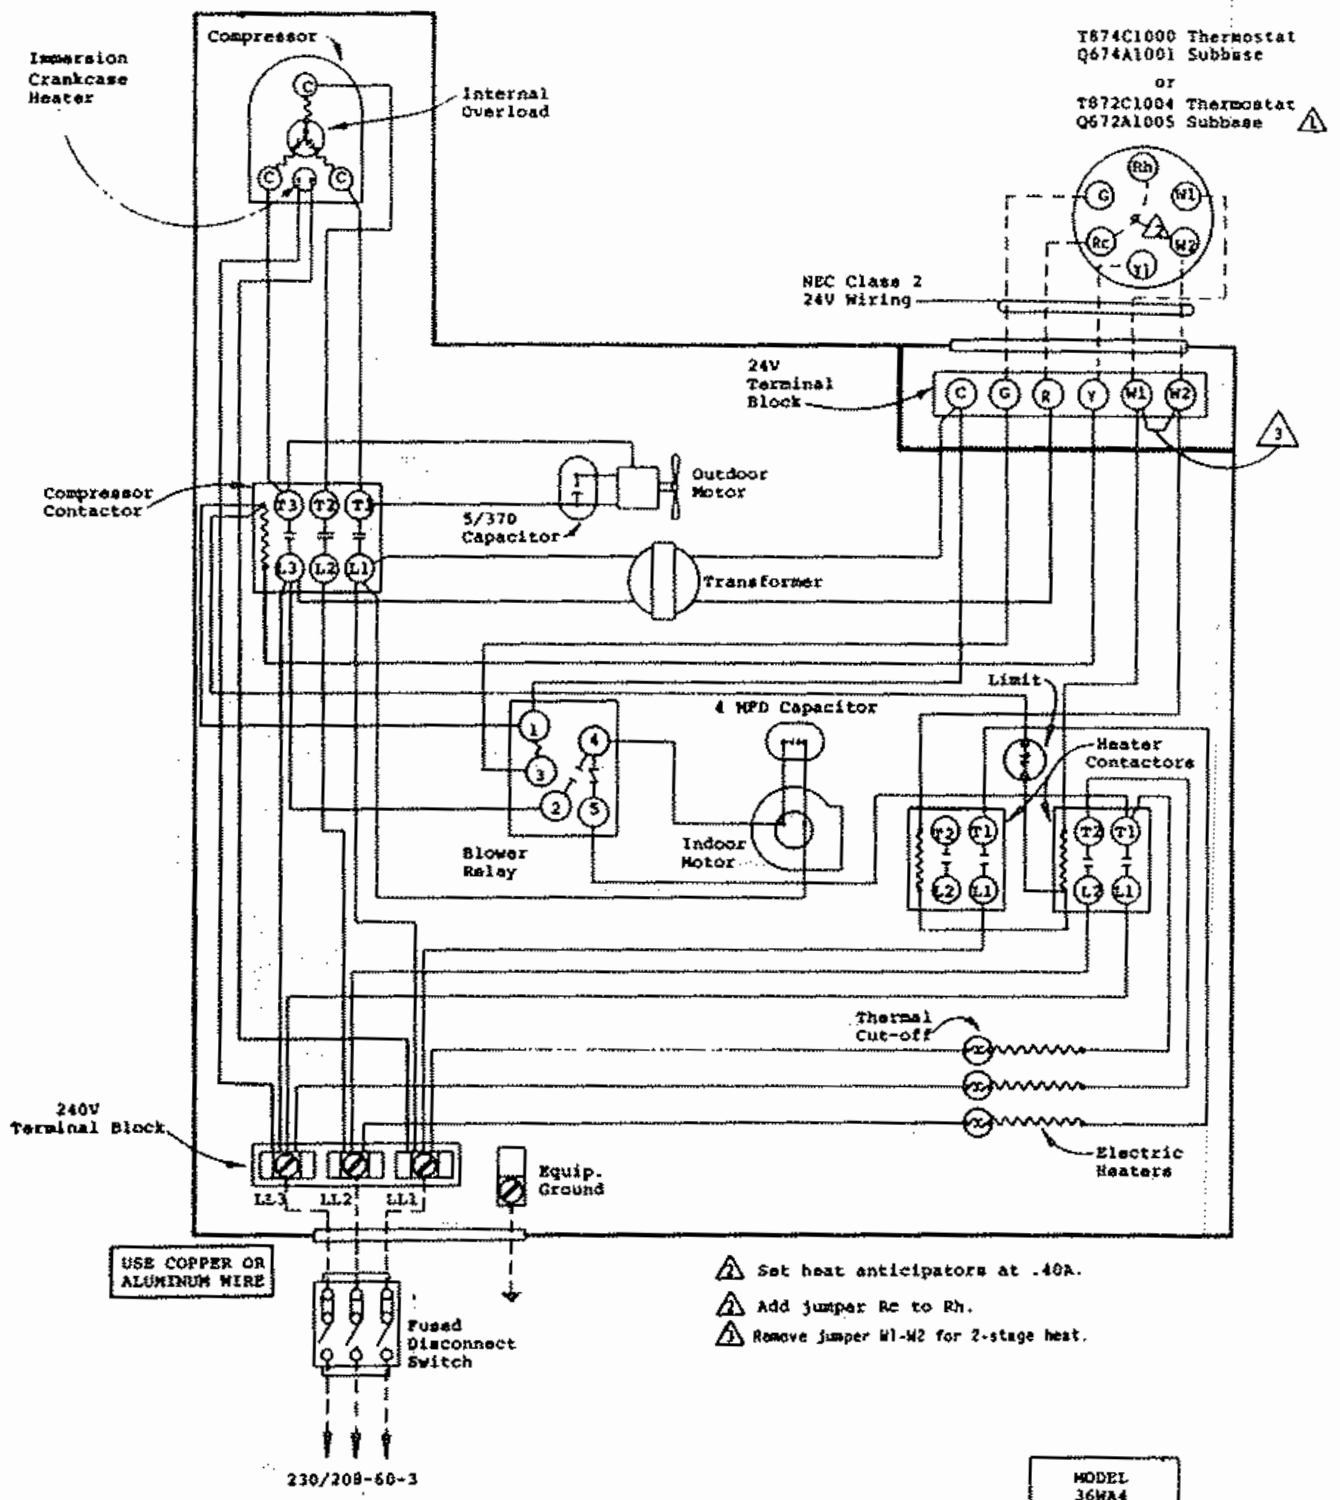

USE COPPER OR ALUMINUM WIRE

- ⚠ Set heat anticipators at .40A.
- ⚠ Add jumper Rc to Rh.
- ⚠ Remove jumper W1-W2 for 2-stage heat.

MODEL
36MA4
w/12 or 15Kw

Factory Wiring ———
Field Wiring - - - - -