


USE COPPER CONDUCTORS ONLY

⚠ See alternate thermostat sheet.

MODEL 36WA4

Factory Wiring \_\_\_\_\_  
Field Wiring - - - - -

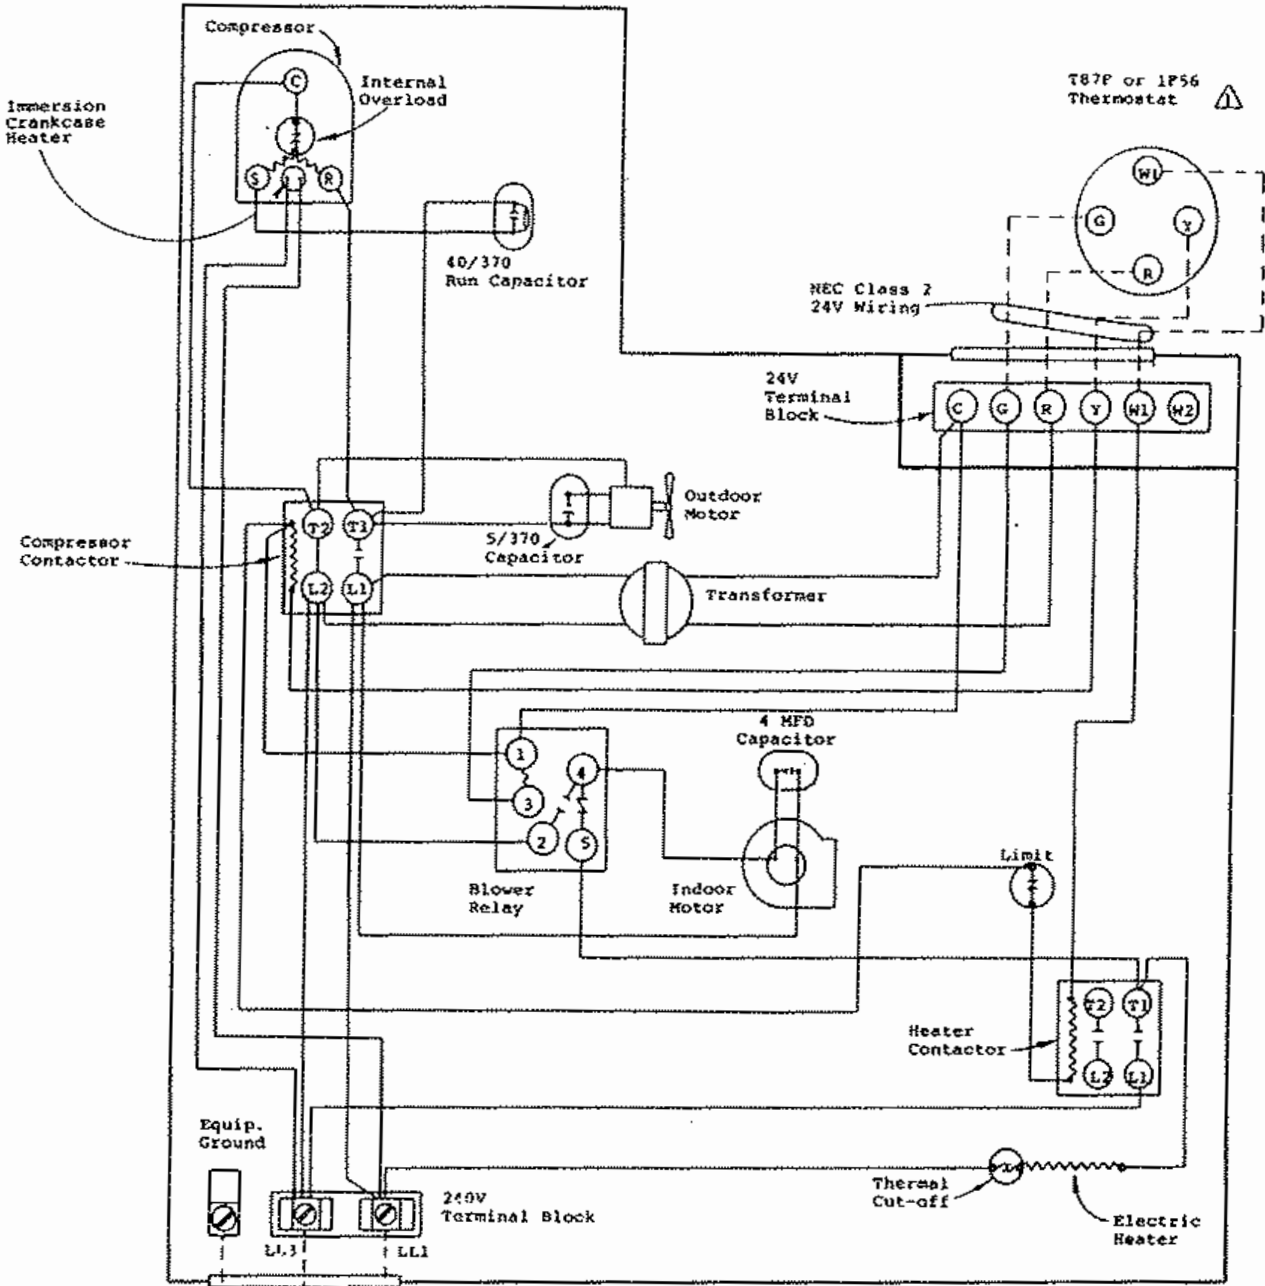


⚠ See alternate thermostat sheet.  
Set heat anticipator at .40A.

MODEL  
36WA4  
w/5Kw

Factory Wiring ——— 230/208-60-1  
Field Wiring - - - -

4809-126F

USE COPPER OR  
ALUMINUM WIRE

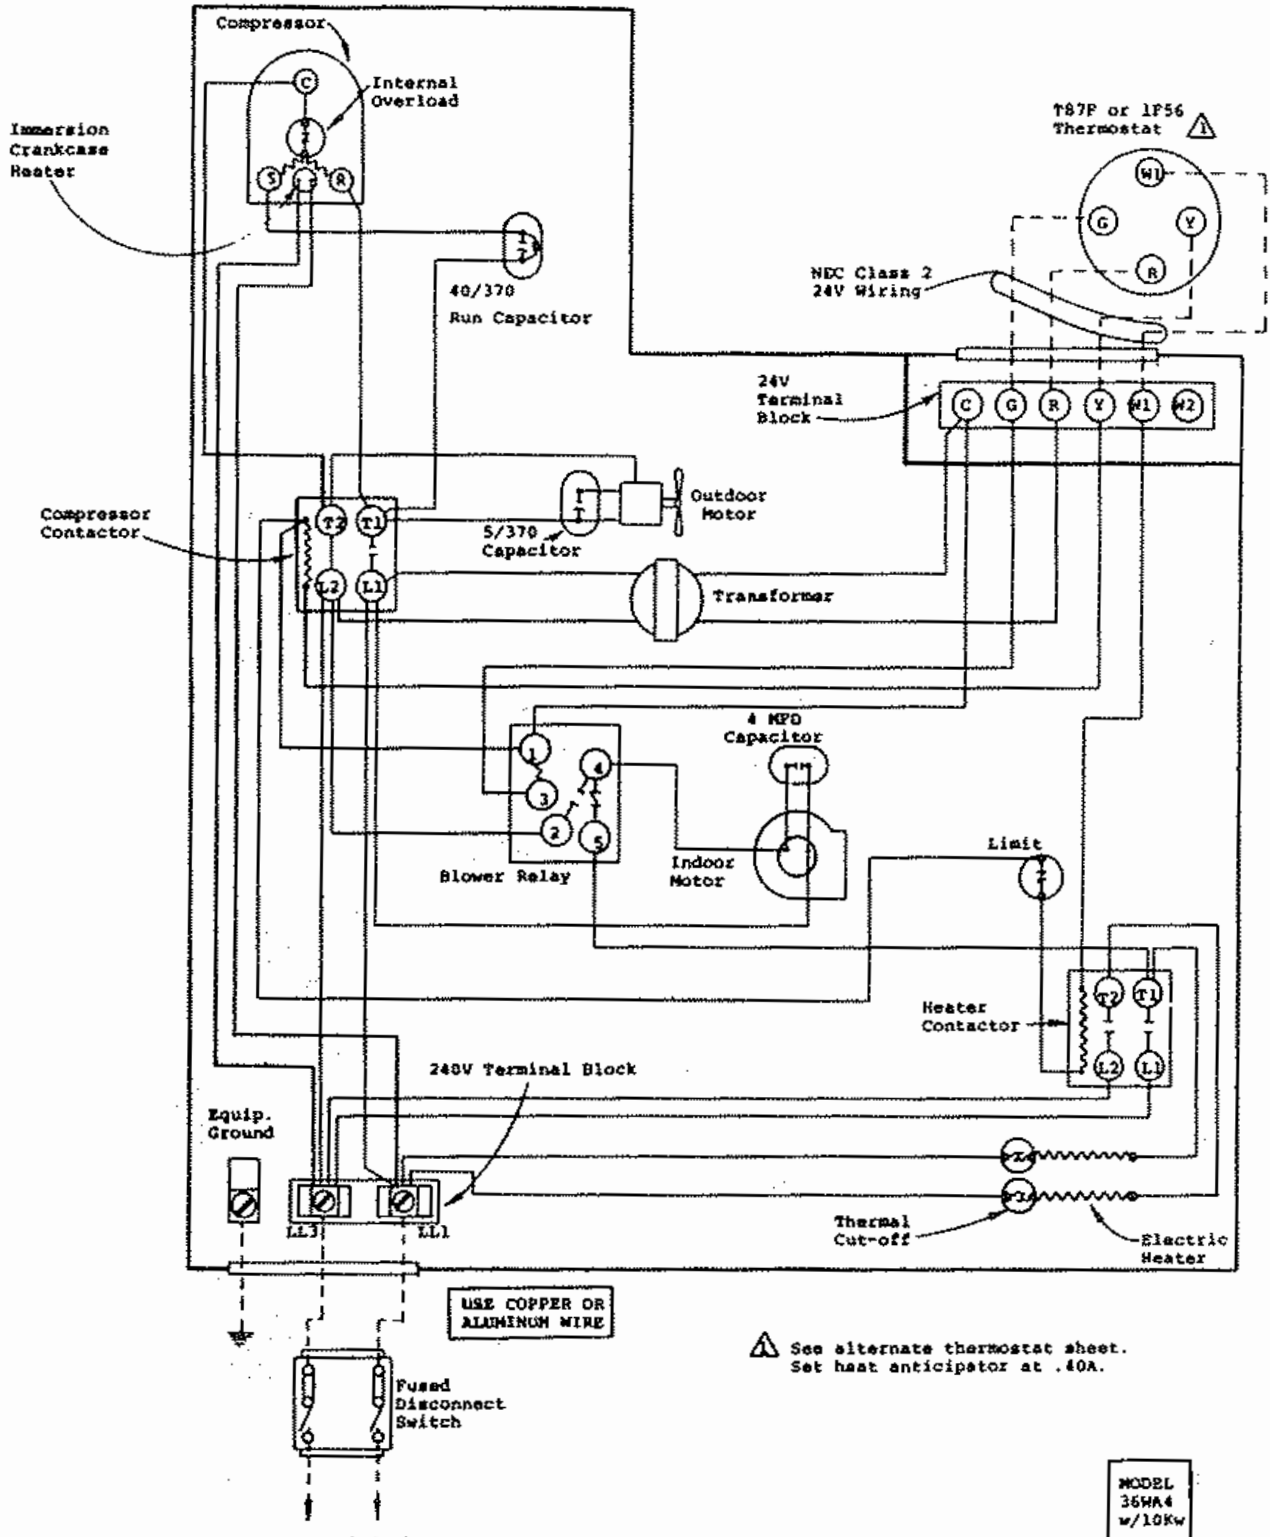

⚠ See alternate thermostat sheet.  
Set heat anticipator at .40A.

Factory Wiring ———  
Field Wiring - - - -

4909-130G

