
REPLACEMENT PARTS MANUAL

CH Wall-Mounted Packaged 2-Stage Heat Pump

Models:

C24HF-A C30HF-A C24HFDA C30HFDA
C24HF-B C30HF-B C24HFDB C30HFDB
C24HF-C C30HF-C C24HFDC C30HFDC

Contents

Description	Page	Description	Page
Cabinet Components		Blower Assembly	
♦ Exploded View	2	♦ Exploded View	16
♦ Usage List	3	♦ Usage List	16
♦ Usage List	4	EEV Controller Assembly	
Functional Components – Standard Units		♦ Exploded View	17
♦ Exploded View	6	♦ Usage List	17
♦ Usage List	7		
Functional Components – Dehumidification Units			
♦ Exploded View	8		
♦ Usage List	9		
Control Panel – 230 Volt 1 Phase Units			
♦ Layout View	10		
♦ Usage List	11		
Control Panel – 230 Volt 3 Phase Units			
♦ Layout View	12		
♦ Usage List	13		
Control Panel – 460 Volt 3 Phase Units			
♦ Layout View	14		
♦ Usage List	15		

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the contents section.

Important


- Contact the installing and/or local Bard distributor for all parts requirements. Make sure to have the complete model and serial number available from the unit rating plates.



Bard Manufacturing Company, Inc.
Bryan, Ohio 43506
www.bardhvac.com

Manual: 2110-2500
Supersedes: **NEW**
Date: 2-12-25

CABINET COMPONENTS

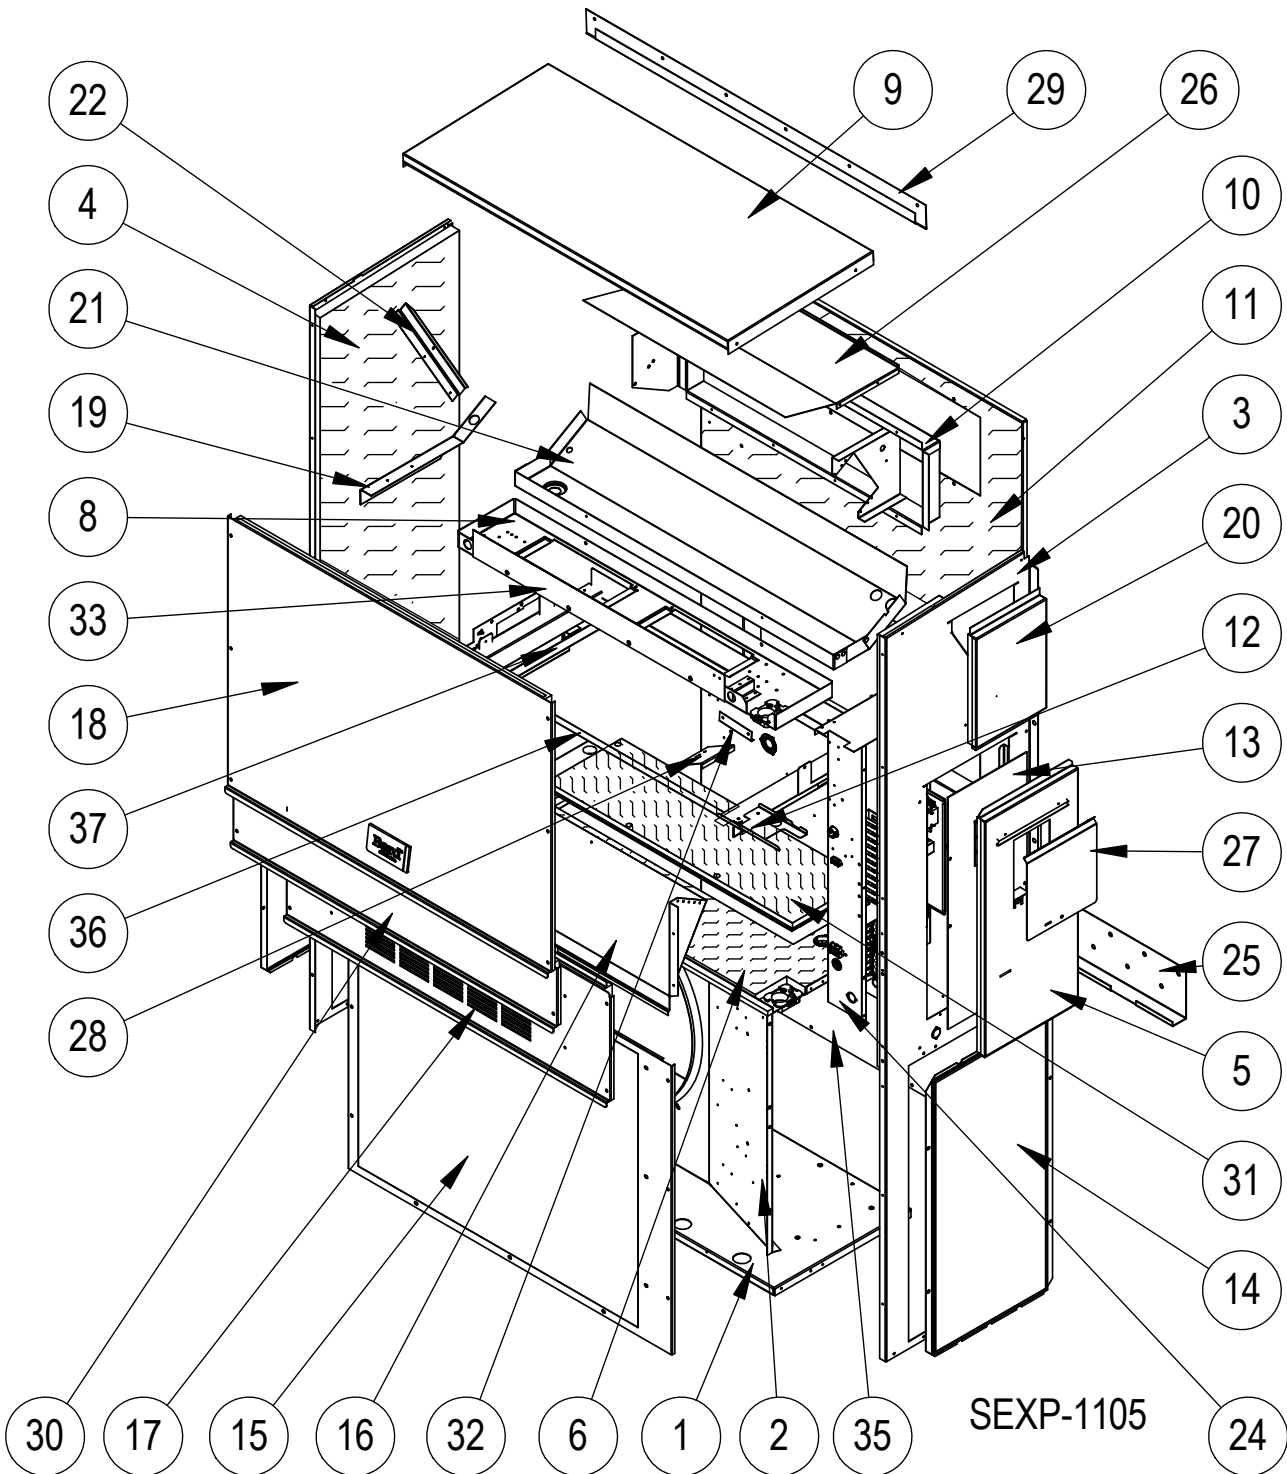

This drawing to be used for reference for pages 3 and 4

CABINET COMPONENTS

Dwg No.	Part Number	Description	C24HF-A, B	C24HF-C	C24HFDA, B	C24HFDC	C30HF-A, B	C30HF-C	C30HFDA, B	C30HFDC
1	127-638BX	Base (Only)	X	X	X	X	X	X	X	X
1	527-638BX	Base Assembly w/Compressor Plate	X	X	X	X	X	X	X	X
1	127-639BX ②	Base (Only)	O	O	O	O	O	O	O	O
1	527-639BX ②	Base Assembly w/Compressor Plate	O	O	O	O	O	O	O	O
2	125-081BX	Fan Shroud	X	X	X	X	X	X	X	X
2	125-083BX ②	Fan Shroud	X	X	X	X	X	X	X	X
3	501-933-*BX ①	Right Side	X	X	X	X	X	X	X	X
3	501-994BX ②	Right Side	X	X	X	X	X	X	X	X
3	501-937BX ③	Right Side	X	X	X	X	X	X	X	X
4	501-934-*BX ①	Left Side	X	X	X	X	X	X	X	X
4	501-995BX ②	Left Side	X	X	X	X	X	X	X	X
4	501-940BX ③	Left Side	X	X	X	X	X	X	X	X
5	533-228-*BX ①	Control Panel Cover (Outer)	X	X	X	X	X	X	X	X
5	533-235BX ②	Control Panel Cover (Outer)	X	X	X	X	X	X	X	X
5	533-236BX ③	Control Panel Cover (Outer)	X	X	X	X	X	X	X	X
6	521X527BX	Condenser Partition	X	X	X	X	X	X	X	X
6	521-552BX ②	Condenser Partition	X	X	X	X	X	X	X	X
8	121X467BX	Blower Partition	X	X	X	X	X	X	X	X
9	507-308-*BX ①	Top	X	X	X	X	X	X	X	X
9	507-319BX ②	Top	X	X	X	X	X	X	X	X
9	507-320BX ③	Top	X	X	X	X	X	X	X	X
10	111X030BX	Outlet Air Frame Assembly	X	X	X	X	X	X	X	X
11	509-451BX	Upper Back	X	X	X	X	X	X	X	X
11	509-455BX ②	Upper Back	X	X	X	X	X	X	X	X
11	509-453BX ③	Upper Back	X	X	X	X	X	X	X	X
12	137X1011BX	Filter Fill Plate	X	X	X	X	X	X	X	X
13	132-104BX	Control Panel Cover (Inner)	X		X		X		X	
13	132-172BX	Control Panel Cover (Inner)		X		X		X		X
14	118-124-*BX ①	Side Grille	2	2	2	2	2	2	2	2
14	118-140BX ②	Side Grille	2	2	2	2	2	2	2	2
14	118-141BX ③	Side Grille	2	2	2	2	2	2	2	2
15	118-103-*BX ①	Condenser Grille	X	X	X	X	X	X	X	X
15	118-108BX ②	Condenser Grille	X	X	X	X	X	X	X	X
15	118-145BX ③	Condenser Grille	X	X	X	X	X	X	X	X
16	BFAD-3	Fresh Air Damper Assembly	X	X	X	X	X	X	X	X
17	553-523-*BX ①	Vent Option Door	X	X	X	X	X	X	X	X
17	553-540-*BX ①	Vent Option Door with ERV	X	X	X	X	X	X	X	X
17	553-665-*BX ①	Vent Option Door with CRV or ECON-S	X	X	X	X	X	X	X	X
17	553-549BX ②	Vent Option Door	X	X	X	X	X	X	X	X
17	553-557BX ②	Vent Option Door with ERV	X	X	X	X	X	X	X	X
17	553-694BX ②	Vent Option Door with CRV or ECON-S	X	X	X	X	X	X	X	X
17	553-550BX ③	Vent Option Door	X	X	X	X	X	X	X	X
17	553-558BX ③	Vent Option Door with ERV	X	X	X	X	X	X	X	X
17	553-695BX ③	Vent Option Door with CRV or ECON-S	X	X	X	X	X	X	X	X
18	514-241-*BX ①	Upper Front	X	X	X	X	X	X	X	X
18	514-238BX ②	Upper Front	X	X	X	X	X	X	X	X
18	514-239BX ③	Upper Front	X	X	X	X	X	X	X	X
19	105X850BX	Side Support	X	X	X	X	X	X	X	X
Continued on page 4										

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, include the complete model and serial number of the unit for which cabinet parts are being ordered.

② Exterior cabinet parts are manufactured from stainless steel Code "S"

③ Exterior cabinet parts are manufactured from aluminum Code "A"

CABINET COMPONENTS

Dwg. No.	Part Number	Description	C24HF-A, B	C24HF-C	C24HFDA, B	C24HFDC	C30HF-A, B	C30HF-C	C30HFDA, B	C30HFDC
Continued from page 3										
20	543-175-*BX ①	Heater Access Cover Assembly	X	X	X	X	X	X	X	X
20	543-185BX ②	Heater Access Cover Assembly	X	X	X	X	X	X	X	X
20	543-184BX ③	Heater Access Cover Assembly	X	X	X	X	X	X	X	X
21	123-127BX	Drain Pan	X	X	X	X	X	X	X	X
21	123-141BX ②③	Drain Pan	X	X	X	X	X	X	X	X
22	147-044BX	Evaporator Support	X	X	X	X	X	X	X	X
24	Control Panel Assembly	See Control Panel on pages 10 – 15	X	X	X	X	X	X	X	X
25	113-140BX	Bottom Mounting Bracket	X	X	X	X	X	X	X	X
26	135X123BX	Heat Shield	X	X	X	X	X	X	X	X
27	153-218-*BX ①	Disconnect Access Door	X	X	X	X	X	X	X	X
27	153-405BX ②	Disconnect Access Door	X	X	X	X	X	X	X	X
27	153-387BX ③	Disconnect Access Door	X	X	X	X	X	X	X	X
28	131-194BX	Fill Partition Bracket	X	X	X	X	X	X	X	X
29	113-149-*BX ①	Top Rain Flashing	X	X	X	X	X	X	X	X
29	113-360BX ②	Top Rain Flashing	X	X	X	X	X	X	X	X
29	113-149-4BX ③	Top Rain Flashing	X	X	X	X	X	X	X	X
30	553-524-*BX ①	Filter Door	X	X	X	X	X	X	X	X
30	553-553BX ②	Filter Door	X	X	X	X	X	X	X	X
30	553-554BX ③	Filter Door	X	X	X	X	X	X	X	X
31	536-498BX	Cond. Partition Block Off Plate	X	X	X	X	X	X	X	X
31	536-877BX ②	Cond. Partition Block Off Plate	X	X	X	X	X	X	X	X
32	105-1302BX	Grommet Retainer	X	X	X	X	X	X	X	X
33	135-329BX	Air Baffle	X	X	X	X	X	X	X	X
35	109-450BX	Lower Back	X	X	X	X	X	X	X	X
35	109-454BX ②	Lower Back	X	X	X	X	X	X	X	X
35	109-452BX ③	Lower Back	X	X	X	X	X	X	X	X
36	131-190BX	Filter Tray Angle	X	X	X	X	X	X	X	X
37	131X189BX	Filter Partition	X	X	X	X	X	X	X	X
NS	5252-033BX	Bard Nameplate	X	X	X	X	X	X	X	X

① Exterior cabinet parts are manufactured with various paint color options. To ensure the proper paint color is received, include the complete model and serial number of the unit for which cabinet parts are being ordered.


② Exterior cabinet parts are manufactured from stainless steel Code "S"

③ Exterior cabinet parts are manufactured from aluminum Code "A"

Refer to drawing on page 2

This page intentionally left blank

FUNCTIONAL COMPONENTS – STANDARD UNITS

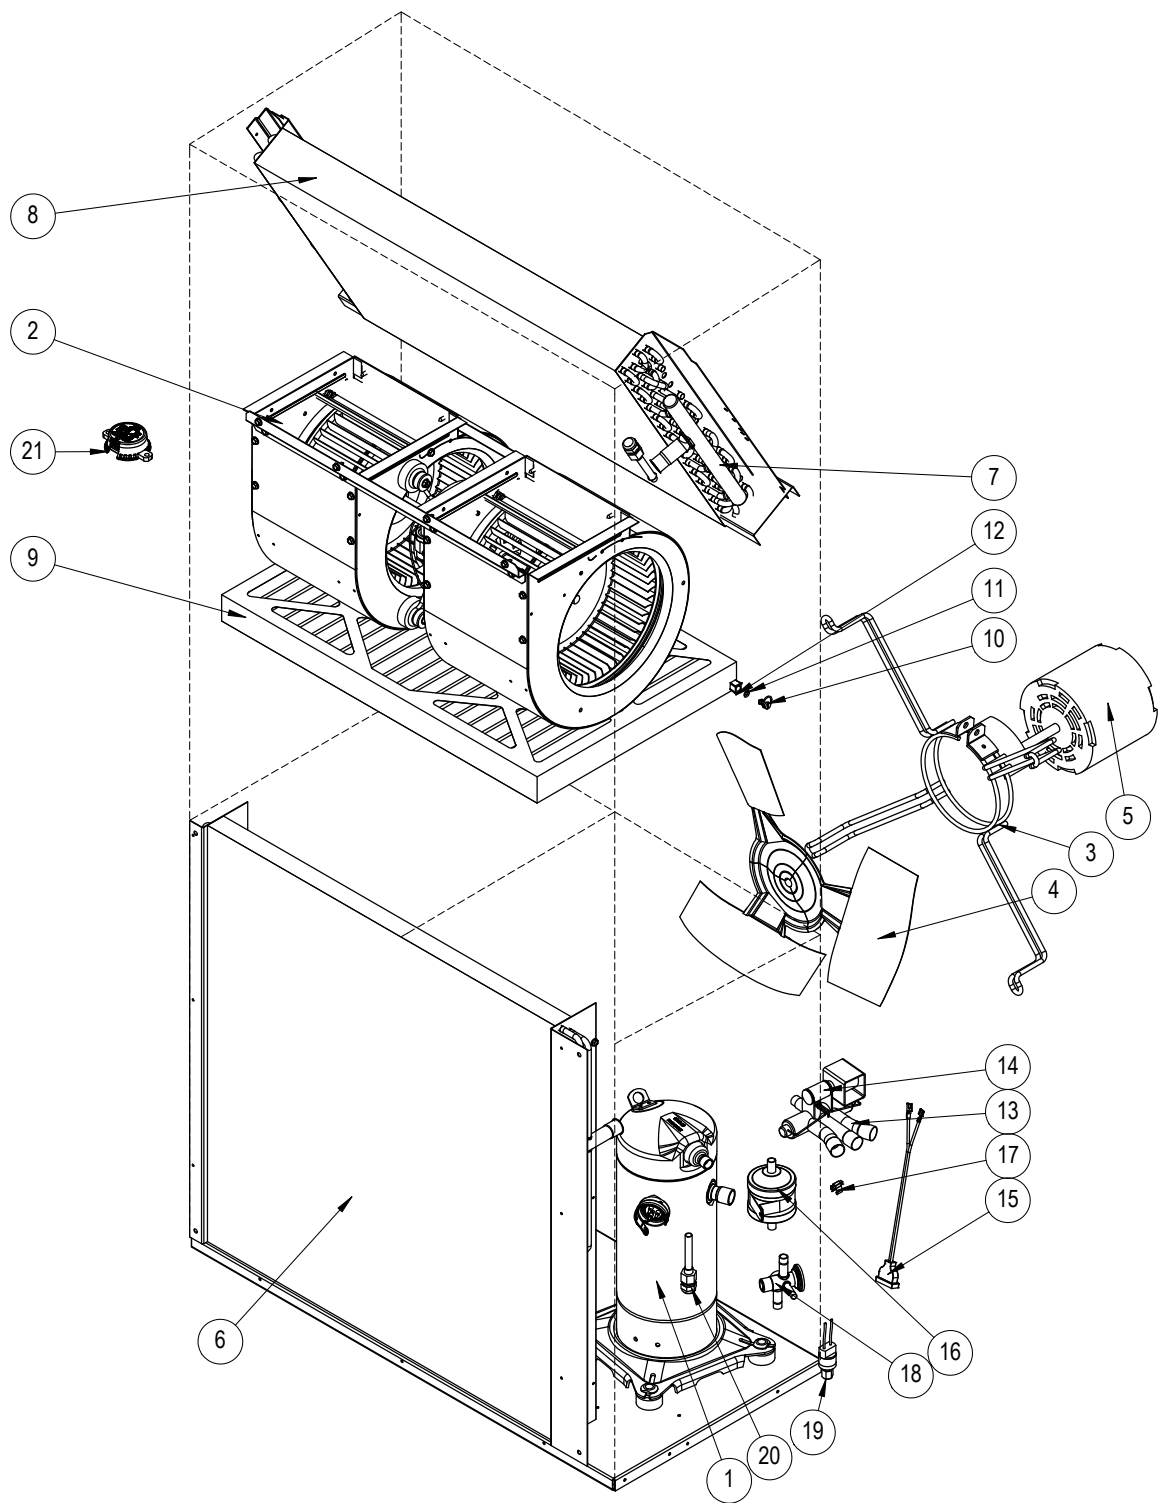

SEXP-985 A

FUNCTIONAL COMPONENTS – STANDARD UNITS

Dwg No.	Part Number	Description	C24HF-A	C24HF-B	C24HF-C	C30HF-A	C30HF-B	C30HF-C
1	8000-530BX	Compressor	X					
1	8000-531BX	Compressor		X				
1	8000-532BX	Compressor			X			
1	8000-533BX	Compressor				X		
1	8000-534BX	Compressor					X	
1	8000-535BX	Compressor						X
NS	3000-1224BX	Molded Compressor Wire Harness (1-PH)	X			X		
NS	3000-1231BX	Molded Compressor Wire Harness (3-PH)		X	X		X	X
NS	3000-1223BX	Second Stage Compressor Wire Harness	X	X	X	X	X	X
2	900-334-0260BX	Blower Assembly	X	X	X			
2	900-334-0261BX	Blower Assembly				X	X	X
3	8200-001BX	Fan Motor Mount	X	X	X	X	X	X
3	8200-050BX ①	Stainless Steel Fan Motor Mount	X	X	X	X	X	X
4	5151-045BX	Fan Blade	X	X	X	X	X	X
4	5151C045BX ①	Coated Fan Blade	X	X	X	X	X	X
5	8103-029BX	Outdoor Fan Motor	X	X		X	X	
5	8103-030BX	Outdoor Fan Motor			X			X
6	917-0320BX	Outdoor Coil (Includes Distributor)	X	X	X	X	X	X
6	917-0321BX ②	Outdoor Coil – Coated (Includes Distributor)	O	O	O	O	O	O
7	800-0460BX	Cooling Distributor Assembly	X	X	X	X	X	X
NS	5651-253BX	Cooling Expansion Valve	X	X	X	X	X	X
8	917-0398BX	Indoor Coil (Includes Cooling Distributor)	X	X	X	X	X	X
8	917-0579BX ②	Indoor Coil – Coated (Includes Cooling Distributor)	O	O	O	O	O	O
9	7004-019	Air Filter 1" Disposable	X	X	X	X	X	X
9	7003-031 ②	Air Filter 1" Washable	O	O	O	O	O	O
9	7004-026 ②	Air Filter 2" Pleated Disposable	O	O	O	O	O	O
10	1171-022	1/4 Turn Fastener	X	X	X	X	X	X
11	1171-024	1/4 Turn Retainer	X	X	X	X	X	X
12	1171-023	1/4 Turn Receptacle	X	X	X	X	X	X
13	5650-039BX	Reversing Valve w/24V Solenoid Coil	X	X	X	X	X	X
14	5650-046BX	Reversing Valve 24V Solenoid	X	X	X	X	X	X
15	5650-044BX	Molded Plug 53" Lead	X	X	X	X	X	X
16	5201-019BX	Filter Drier, Bi-Directional, 3/8" Connections	X	X	X	X	X	X
17	8620-224	Defrost Sensor Kit	X	X	X	X	X	X
18	5651-255BX	Heating Expansion Valve	X	X	X	X	X	X
19	8406-167BX	High Pressure Switch (615#) Screw On	X	X	X	X	X	X
20	800-0474BX	Heating Distributor Assembly	X	X	X	X	X	X
21	8301-110BX	RDS Sensor	X	X	X	X	X	X
NS	8401-036BX	RDS Relay	X	X	X	X	X	X
NS	8406-168BX	Low Pressure Switch (20#) Screw On	X	X	X	X	X	X
NS	6031-009	Coremax Valve Core (Service Port)	2	2	2	2	2	2
NS	8406-105BX ②	Low Ambient Fan Cycling Control (350#/225#)	O	O	O	O	O	O
NS	8408-028BX ②	Outdoor Thermostat	O	O	O	O	O	O
NS	1171-028	Filter Door Clip	X	X	X	X	X	X
NS	1171-057	Filter Door Screw	X	X	X	X	X	X
NS	1171-027	Filter Door Screw Retainer	X	X	X	X	X	X

NS – Not Shown


① – Used with stainless steel cabinet option

② – Optional on these models

X – Standard

O – Add-On Option

FUNCTIONAL COMPONENTS – DEHUMIDIFICATION UNITS

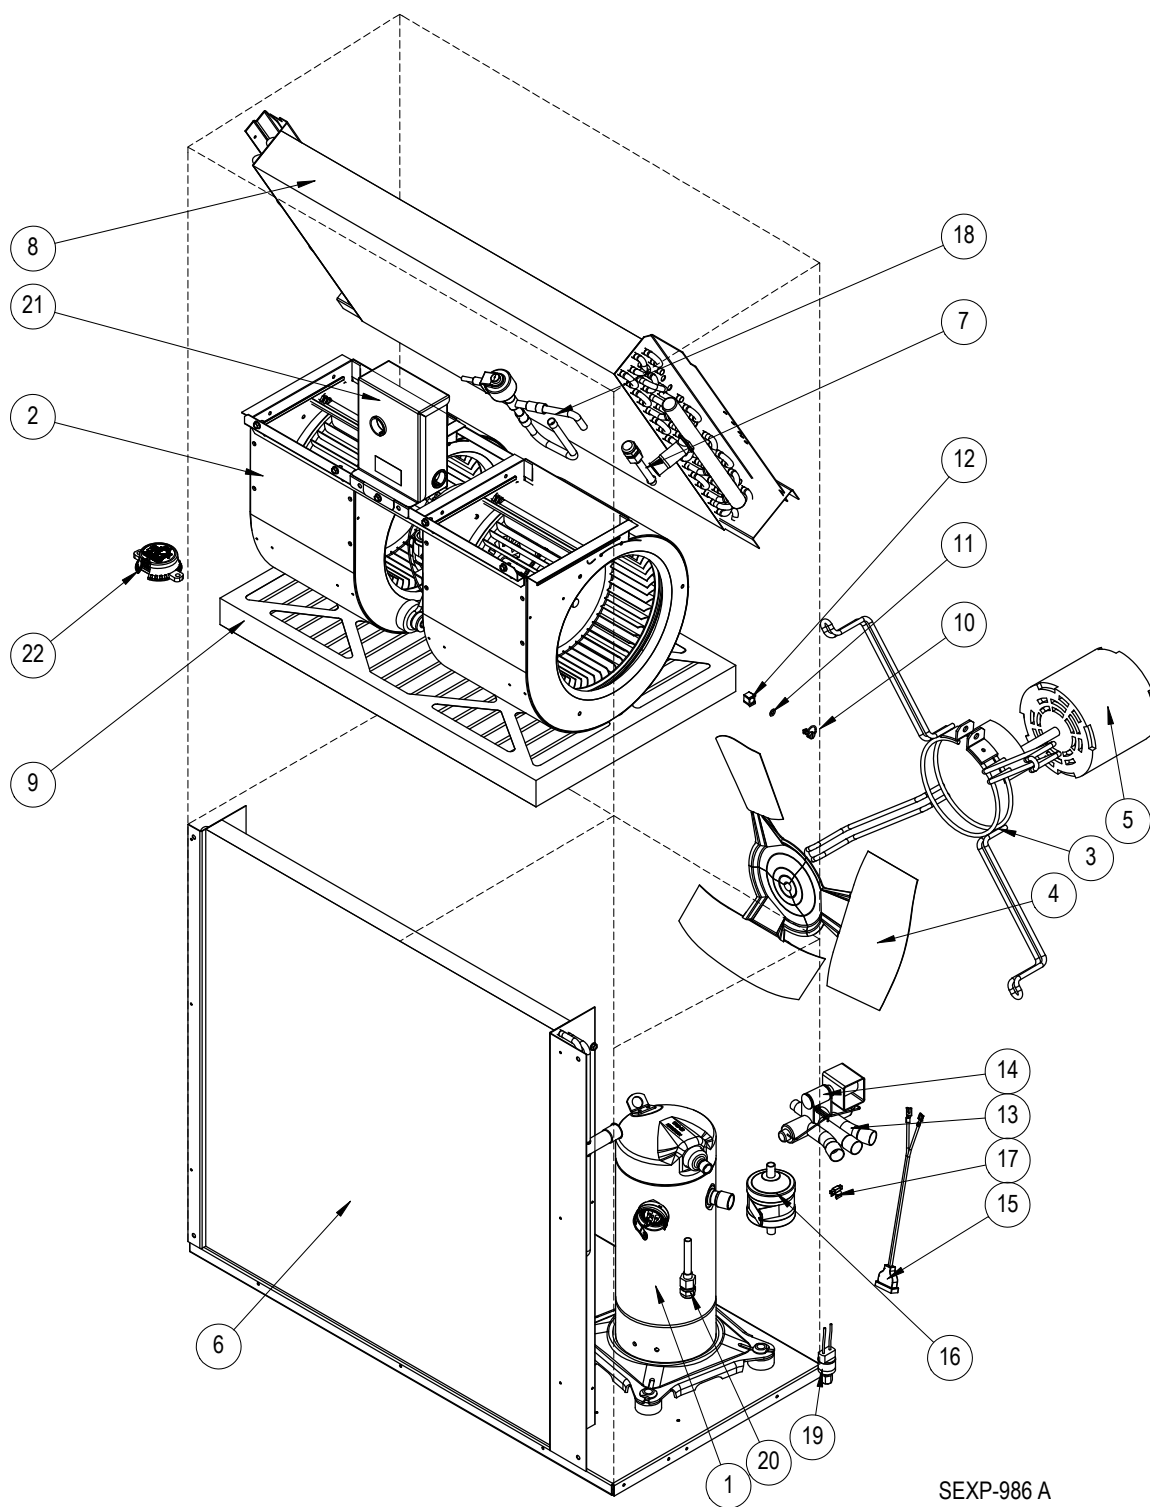

FUNCTIONAL COMPONENTS – DEHUMIDIFICATION UNITS

Dwg No.	Part Number	Description	C24HFDA	C24HFDB	C24HFDC	C30HFDA	C30HFDB	C30HFDC
1	8000-530BX	Compressor	X					
1	8000-531BX	Compressor		X				
1	8000-532BX	Compressor			X			
1	8000-533BX	Compressor				X		
1	8000-534BX	Compressor					X	
1	8000-535BX	Compressor						X
NS	3000-1224BX	Molded Compressor Wire Harness (1-PH)	X			X		
NS	3000-1231BX	Molded Compressor Wire Harness (3-PH)		X	X		X	X
NS	3000-1223BX	Second Stage Compressor Wire Harness	X	X	X	X	X	X
2	900-334-0260BX	Blower Assembly	X	X	X			
2	900-334-0261BX	Blower Assembly				X	X	X
3	8200-001BX	Fan Motor Mount	X	X	X	X	X	X
3	8200-050BX ①	Stainless Steel Fan Motor Mount	X	X	X	X	X	X
4	5151-045BX	Fan Blade	X	X	X	X	X	X
4	5151C045BX ①	Coated Fan Blade	X	X	X	X	X	X
5	8103-029BX	Outdoor Fan Motor	X	X		X	X	
5	8103-030BX	Outdoor Fan Motor			X			X
6	917-0320BX	Outdoor Coil (Includes Distributor)	X	X	X	X	X	X
6	917-0321BX ②	Outdoor Coil – Coated (Includes Distributor)	O	O	O	O	O	O
7	800-0460BX	Cooling Distributor Assembly	X	X	X	X	X	X
8	917-0384BX	Indoor Coil (Includes Cooling Distributor)	X	X	X	X	X	X
8	917-0396BX ②	Indoor Coil – Coated (Includes Cooling Distributor)	O	O	O	O	O	O
9	7004-019	Air Filter 1" Disposable	X	X	X	X	X	X
9	7003-031 ②	Air Filter 1" Washable	O	O	O	O	O	O
9	7004-026 ②	Air Filter 2" Pleated Disposable	O	O	O	O	O	O
10	1171-022	1/4 Turn Fastener	X	X	X	X	X	X
11	1171-024	1/4 Turn Retainer	X	X	X	X	X	X
12	1171-023	1/4 Turn Receptacle	X	X	X	X	X	X
13	5650-039BX	Reversing Valve w/24V Solenoid Coil	X	X	X	X	X	X
14	5650-046BX	Reversing Valve 24V Solenoid	X	X	X	X	X	X
15	5650-044BX	Molded Plug 53" Lead	X	X	X	X	X	X
16	5201-019BX	Filter Drier, Bi-Directional, 3/8" Connections	X	X	X	X	X	X
17	8620-224	Defrost Sensor Kit	X	X	X	X	X	X
18	5651-245BX	Electronic Expansion Valve	X	X	X	X	X	X
18	905-0732BX	Electronic Expansion Valve Assembly	X	X	X	X	X	X
19	8406-167BX	High Pressure Switch (615#) Screw On	X	X	X	X	X	X
20	800-0474BX	Heating Distributor Assembly	X	X	X	X	X	X
21	EEV Controller Assy.	See EEV CONTROLLER ASSEMBLY on page 17	X	X	X	X	X	X
22	8301-110BX	RDS Sensor	X	X	X	X	X	X
NS	8401-036BX	RDS Relay	X	X	X	X	X	X
NS	8406-168BX	Low Pressure Switch (20#) Screw On	X	X	X	X	X	X
NS	8406-158BX	Low Pressure Transducer	X	X	X	X	X	X
NS	3000-1603BX	Transducer Wire Assembly – Connects to Transducer	X	X	X	X	X	X
NS	6031-009	Coremax Valve Core (Service Port)	2	2	2	2	2	2
NS	5650-051BX	Dehumidification Mode Valve	X	X	X	X	X	X
NS	5651-219BX	Dehumidification Check Valves	2	2	2	2	2	2
NS	8406-105BX ②	Low Ambient Fan Cycling Control (350#/225#)	O	O	O	O	O	O
NS	8408-028BX ②	Outdoor Thermostat	O	O	O	O	O	O
NS	1171-028	Filter Door Clip	X	X	X	X	X	X
NS	1171-057	Filter Door Screw	X	X	X	X	X	X
NS	1171-027	Filter Door Screw Retainer	X	X	X	X	X	X

NS – Not Shown


① – Used with stainless steel cabinet option

② – Optional on these models

X – Standard

O – Add-On Option

CONTROL PANEL - 230 VOLT 1 PHASE UNITS

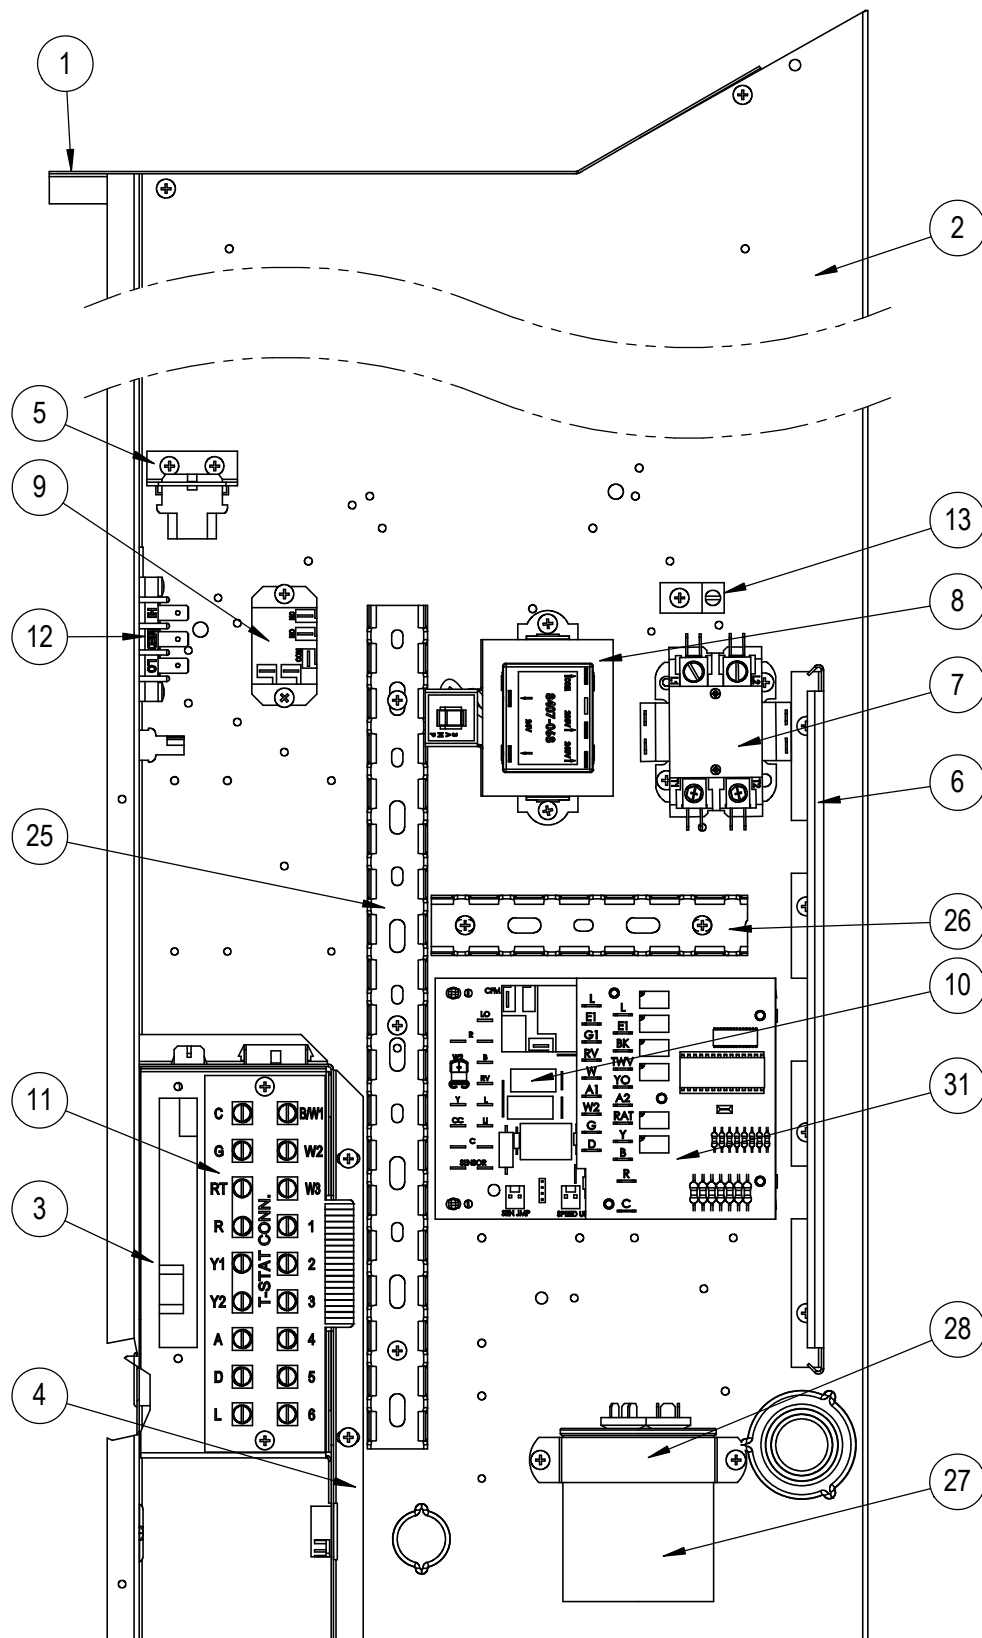

SEXP-987

CONTROL PANEL – 230 VOLT 1 PHASE UNITS

Dwg No.	Part Number	Description	C24HF-A	C24HFDA	C30HF-A	C30HFDA
1	117X137BX	Control Panel Top - RH (Sheet Metal Only)	X	X	X	X
2	117X458BX	Control Panel - RH (Sheet Metal Only)	X	X	X	X
3	117X405BX	Low Voltage Box - RH (Sheet Metal Only)	X	X	X	X
4	117X406BX	Low Voltage Partition - RH (Sheet Metal Only)	X	X	X	X
NS	3000-1693BX	Low Voltage Wire Harness (behind LVTS)	X	X	X	X
NS	910-2047BX ①	Complete Low Voltage Box Assembly (Sheet Metal, LVTS & Wire Harness)	X	X	X	X
5	141-596BX	Plug Support Bracket (Sheet Metal)	X	X	X	X
6	135-122BX	Wire Shield (Sheet Metal)	X	X	X	X
7	8401-033BX	Contactor 2-Pole	X	X	X	X
8	8407-068BX	Transformer 208/240-24, 50VA	X	X	X	X
9	8201-130BX	Dehum Relay, SPDT		X		X
10	8620-223	Defrost Board Replacement Kit w/Sensor	X	X	X	X
11	8607-063BX ①	Terminal Strip	X	X	X	X
13	8611-281	Ground Lug	X	X	X	X
25	8611-140-1400	14" Cable Duct	X	X	X	X
26	8611-140-0500	5" Cable Duct	X	X	X	X
27	8552-047BX	Capacitor 30+5/370 V, 2" Round	X	X		
27	8552-048BX	Capacitor 35+5/370 V, 2" Round			X	X
28	8550-007BX	Capacitor Strap, 2-1/2" Round	X	X	X	X
31	8201-113BX	Dehumidification Logic Control Board		X		X
NS	3003-200BX	Main Control Panel Wire Harness	X		X	
NS	3003-203BX	Main Control Panel Wire Harness		X		X
NS	8201-086BX	LAC and/or ODT Relay (Opt.)	O	O	O	O
NS	8408-028BX	Outdoor Thermostat (Opt.)	O	O	O	O
NS	8201-130BX	Alarm Relay (Opt.)	O	O	O	O
NS	3000-1356BX	Blower Power Plug	X	X	X	X
NS	3000-1842BX	Blower Speed Plug	X	X	X	X
NS	4217-101	Wiring Diagram	X		X	
NS	4217-103	Wiring Diagram		X		X
NS	8615-036BX ②	Circuit Breaker 25A 2 Pole (Opt.)	X	X		
NS	8615-037BX ②	Circuit Breaker 30A 2 Pole (Opt.)			X	X

NS – Not Shown

① Remove the jumper bar between terminals Y1 and Y2.

② Circuit breakers listed are for units without electric heat, "OZ" models. See heater replacement parts manual for units with electric heat.

X – Standard

O – Add-On Option



CONTROL PANEL – 230 VOLT 3 PHASE UNITS

Dwg No.	Part Number	Description	C24HF-B	C24HFDB	C30HF-B	C30HFDB
1	117X137BX	Control Panel Top - RH (Sheet Metal Only)	X	X	X	X
2	117X458BX	Control Panel - RH (Sheet Metal Only)	X	X	X	X
3	117X405BX	Low Voltage Box - RH (Sheet Metal Only)	X	X	X	X
4	117X406BX	Low Voltage Partition - RH (Sheet Metal Only)	X	X	X	X
NS	3000-1693BX ①	Low Voltage Wire Harness (behind LVTS)	X	X	X	X
NS	910-2047BX	Complete Low Voltage Box Assembly (Sheet Metal, LVTS & Wire Harness)	X	X	X	X
5	141-596BX	Plug Support Bracket (Sheet Metal)	X	X	X	X
6	135-122BX	Wire Shield (Sheet Metal)	X	X	X	X
7	8401-035BX	Contactor 3-Pole	X	X	X	X
8	8407-068BX	Transformer 208/240-24, 50VA	X	X	X	X
9	8201-130BX	Dehum Relay, SPDT		X		X
10	8620-223	Defrost Board Replacement Kit w/Sensor	X	X	X	X
11	8607-063BX ①	Terminal Strip	X	X	X	X
13	8611-281	Ground Lug	X	X	X	X
25	8611-140-1400	14" Cable Duct	X	X	X	X
26	8611-140-0500	5" Cable Duct	X	X	X	X
27	8552-002BX	Capacitor 5/370 V, 1-1/4" Oval	X	X	X	X
28	8550-003BX	Capacitor Strap, 1-1/4" Oval	X	X	X	X
29	8201-174BX	3 Phase Line Monitor	X	X	X	X
31	8201-113BX	Dehumidification Logic Control Board		X		X
NS	3003-201BX	Main Control Panel Wire Harness	X		X	
NS	3003-204BX	Main Control Panel Wire Harness		X		X
NS	8201-086BX	LAC and/or ODT Accessory Relay (Opt.)	O	O	O	O
NS	8408-028BX	Outdoor Thermostat (Opt.)	O	O	O	O
NS	8201-130BX	Alarm Relay (Opt.)	O	O	O	O
NS	3000-1356BX	Blower Power Plug	X	X	X	X
NS	3000-1842BX	Blower Speed Plug	X	X	X	X
NS	4217-201	Wiring Diagram	X		X	
NS	4217-203	Wiring Diagram		X		X
NS	8615-056BX ②	Circuit Breaker 15A 3 Pole (Opt.)	X	X		
NS	8615-054BX ②	Circuit Breaker 20A 3 Pole (Opt.)			X	X


NS – Not Shown

① Remove the jumper bar between terminals Y1 and Y2.

② Circuit breakers listed are for units without electric heat, "OZ" models. See heater replacement parts manual for units with electric heat.

X – Standard

O – Add-On Option



CONTROL PANEL – 460 VOLT 3 PHASE UNITS

Dwg No.	Part Number	Description	C24HF-C	C24HFD	C30HF-C	C30HFD
1	117X137BX	Control Panel Top - RH (Sheet Metal Only)	X	X	X	X
2	117X458BX	Control Panel - RH (Sheet Metal Only)	X	X	X	X
3	117X405BX	Low Voltage Box - RH (Sheet Metal Only)	X	X	X	X
4	117X406BX	Low Voltage Partition - RH (Sheet Metal Only)	X	X	X	X
NS	3000-1693BX	Low Voltage Wire Harness (behind LVTS)	X	X	X	X
NS	910-2047BX ①	Complete Low Voltage Box Assembly (Sheet Metal, LVTS & Wire Harness)	X	X	X	X
5	141-596BX	Plug Support Bracket (Sheet Metal)	X	X	X	X
6	135-122BX	Wire Shield (Sheet Metal)	X	X	X	X
7	8401-035BX	Contactor 3-Pole	X	X	X	X
8	8407-069BX	Transformer 460-24, 50VA	X	X	X	X
9	8201-130BX	Dehum Relay, SPDT		X		X
10	8620-223	Defrost Board Replacement Kit w/Sensor	X	X	X	X
11	8607-063BX ①	Terminal Strip	X	X	X	X
13	8611-281	Ground Lug	X	X	X	X
14	8201-032BX	Fan Relay, SPDT, 3 FLA@480V	X	X	X	X
15	8607-017BX	Terminal Block 240V 2 Term.	X	X	X	X
16	8614-058BX	2-Pole Fuse Holder	X	X	X	X
17	8611-210BX	DIN Rail 2-1/2"	X	X	X	X
18	8611-144	DIN Rail Clamp	X	X	X	X
19	113-1016BX	Capacitor Mounting Bracket	X	X	X	X
25	8611-140-1400	14" Cable Duct	X	X	X	X
26	8611-140-0500	5" Cable Duct	X	X	X	X
27	8552-002BX	Capacitor 5/370 V, 1-1/4" Oval	X	X	X	X
28	8550-003BX	Capacitor Strap, 1-1/4" Oval	X	X	X	X
29	8201-174BX	3 Phase Line Monitor	X	X	X	X
31	8201-113BX	Dehumidification Logic Control Board		X		X
NS	3003-202BX	Main Control Panel Wire Harness	X		X	
NS	3003-205BX	Main Control Panel Wire Harness		X		X
NS	8201-086BX	LAC and/or ODT Accessory Relay (Opt.)	0	0	0	0
NS	8408-028BX	Outdoor Thermostat (Opt.)	0	0	0	0
NS	8201-130BX	Alarm Relay (Opt.)	0	0	0	0
NS	3000-1356BX	Blower Power Plug	X	X	X	X
NS	3000-1842BX	Blower Speed Plug	X	X	X	X
NS	4217-301	Wiring Diagram	X		X	
NS	4217-303	Wiring Diagram		X		X
NS	8614-053BX	1.5A Class CC Fuse	2	2	2	
NS	8614-047BX	3.2A Class CC Fuse				2
NS	8615-095BX ②	Toggle Disconnect (Opt.)	X	X	X	X


NS – Not Shown

- ① Remove the jumper bar between terminals Y1 and Y2.
 ② Circuit breakers listed are for units without electric heat, "OZ" models. See heater replacement parts manual for units with electric heat.

X – Standard

0 – Add-On Option

BLOWER ASSEMBLY

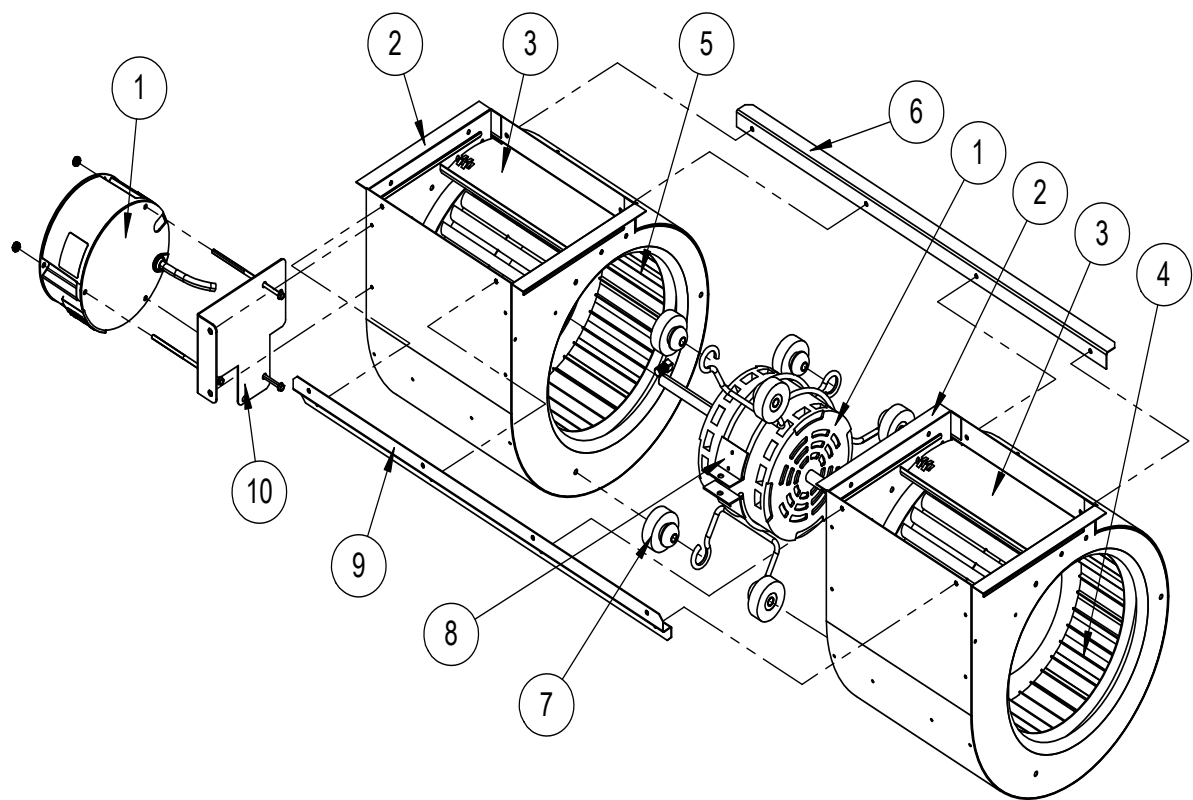


SEXP-909

Dwg No.	Part Number	Description	900-334-0260BX	900-334-0261BX
1	8105-075-0260BX	Blower Motor & Control (230/208V)	X	
1	8105-075-0261BX	Blower Motor & Control (230/208V)		X
1	C8105-075-0260	Programmed Control Only (230/208V)	O	
1	C8105-075-0261	Programmed Control Only (230/208V)		O
2	151-111BX	Housing	2	2
3	144-174BX	Diffuser	X	X
4	5152-090BX	Wheel CW	X	X
5	5152-091BX	Wheel CCW	X	X
6	105-870BX	Back Brace	X	X
7	5451-011	Grommets	6	6
8	8200-031BX	Motor Mount	X	X
9	103-401BX	Front Brace	X	X
10	113-637BX	Motor Control Bracket	X	X

X – Standard Component
O – Optional Component

EEV CONTROLLER ASSEMBLY

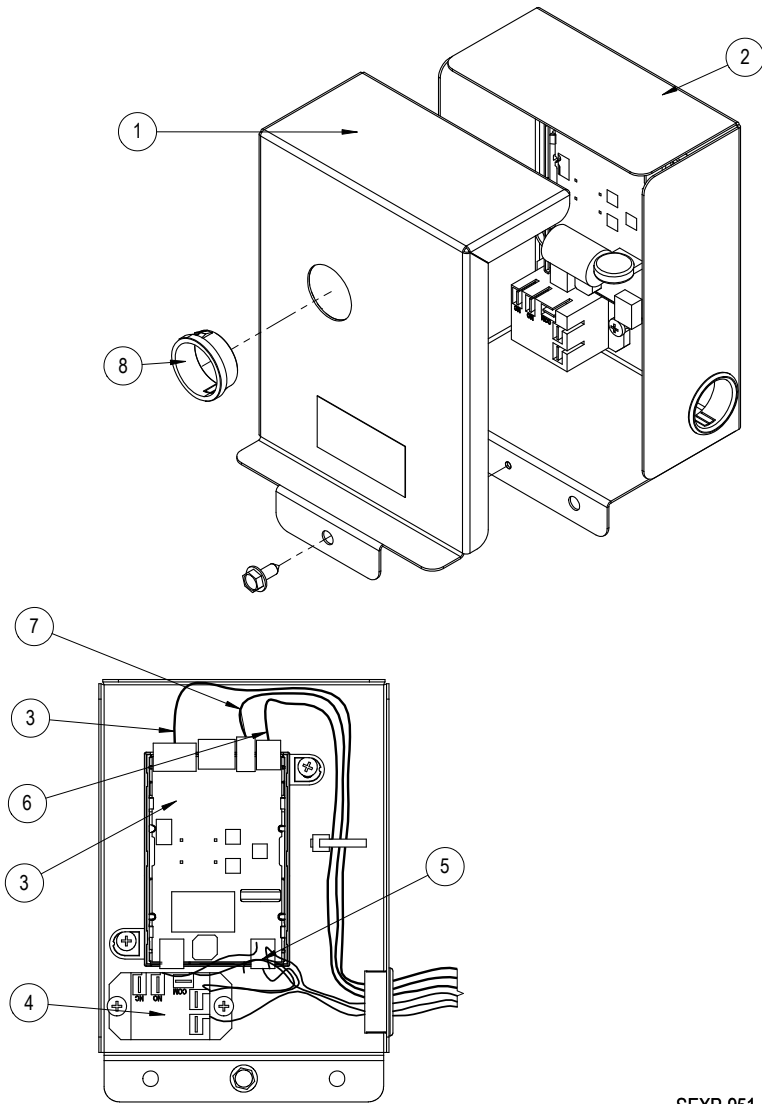

SEXP-951

910-2050-005BX

Dwg No.	Part Number	Description	
1	143-219BX	EEV Control Box Cover	X
2	127-572BX	EEV Control Box	X
3	8301-079-0005BX	EEV Control Module & Stator Cable	X
3	5651-246BX	EEV Stator Cable Only	X
4	8201-130BX	Control Relay	X
5	3000-1602BX	Main Wire Assembly	X
6	3000-1611BX	Transducer Wire Assembly – Connects to EEV Board	X
NS	3000-1603BX	Transducer Wire Assembly – Connects to Transducer	
7	8408-056BX	EEV Thermistor	X
8	8611-075	Clear Snap Plug	X