




502025

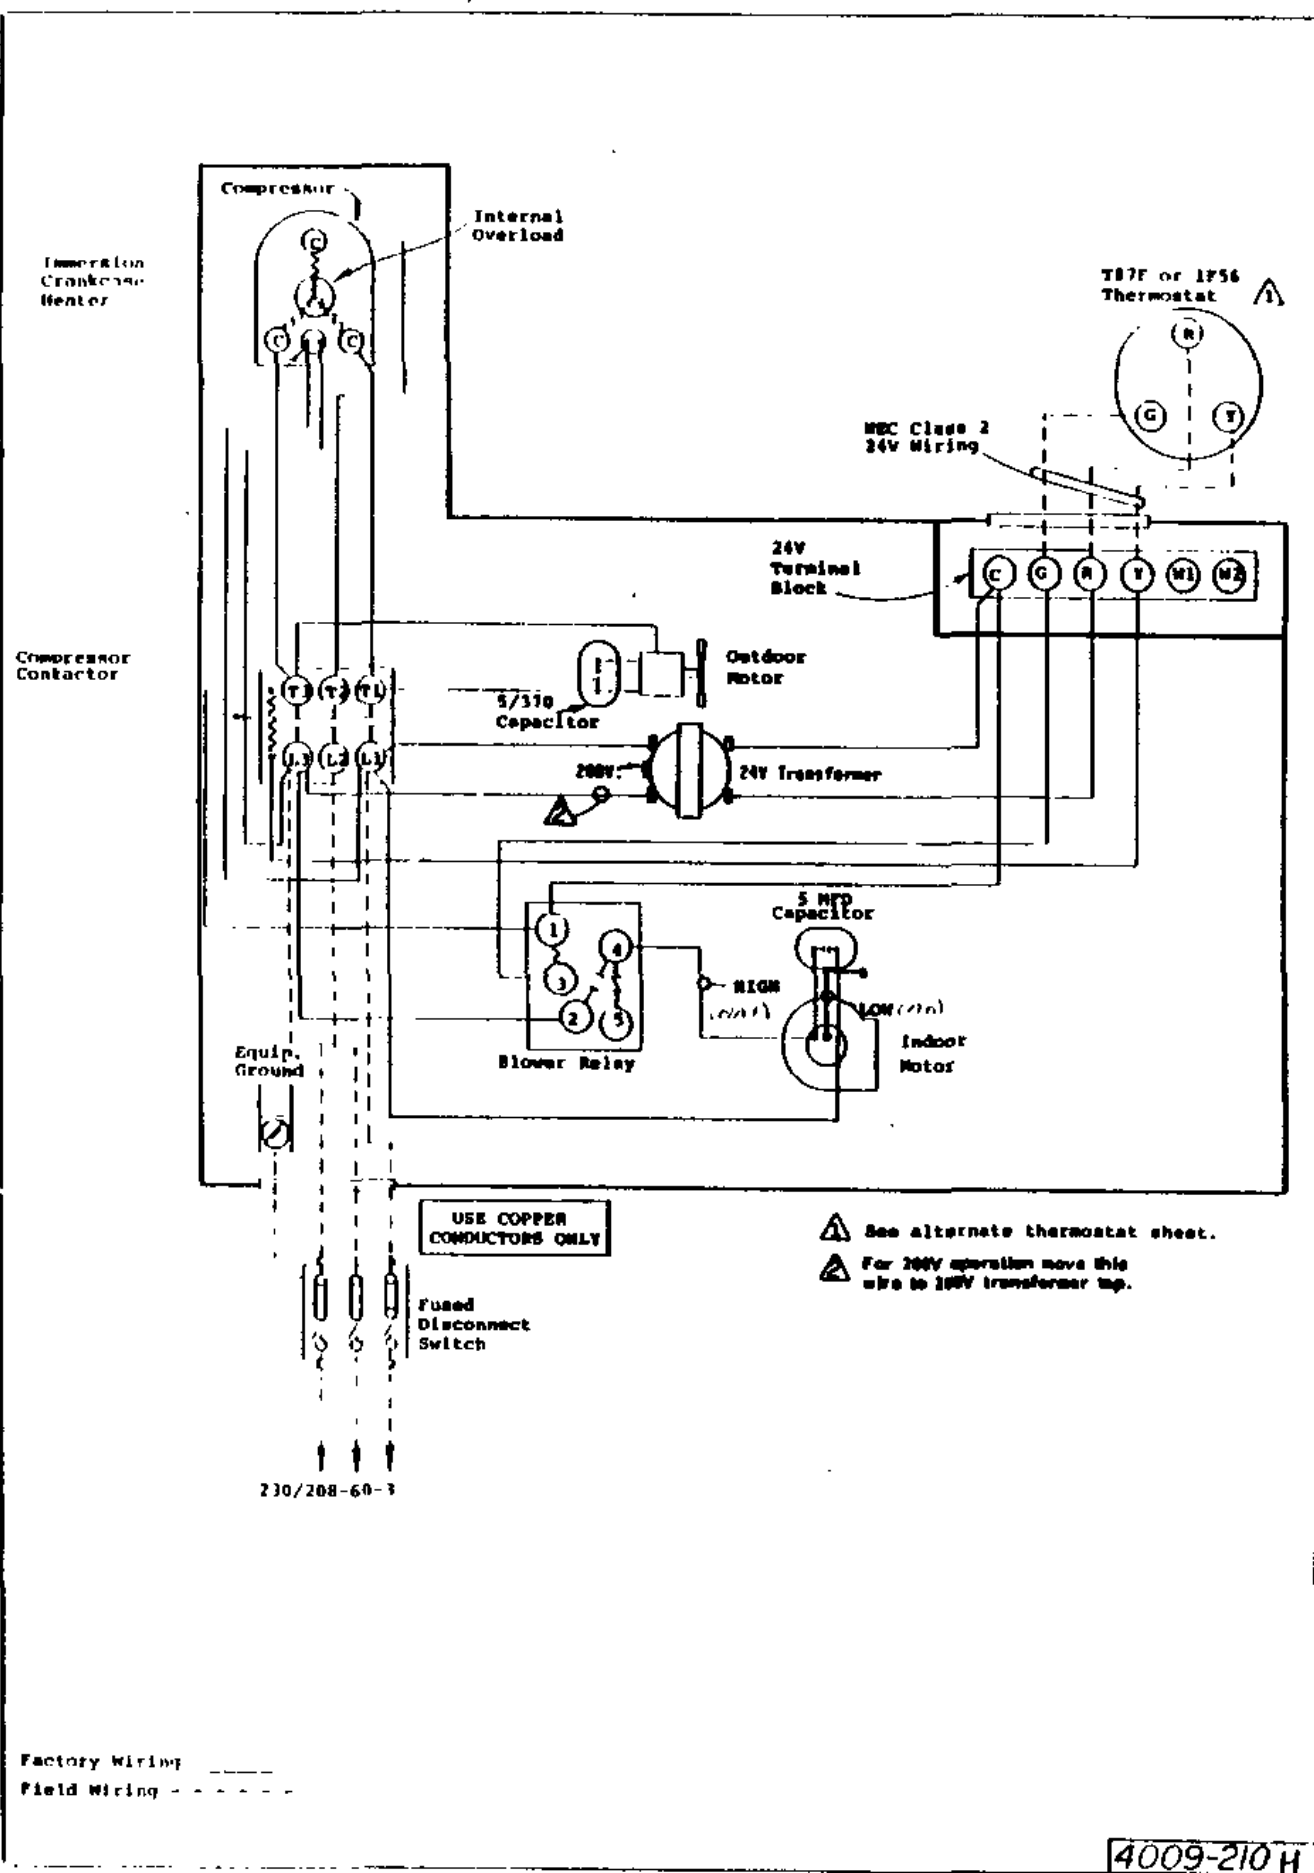


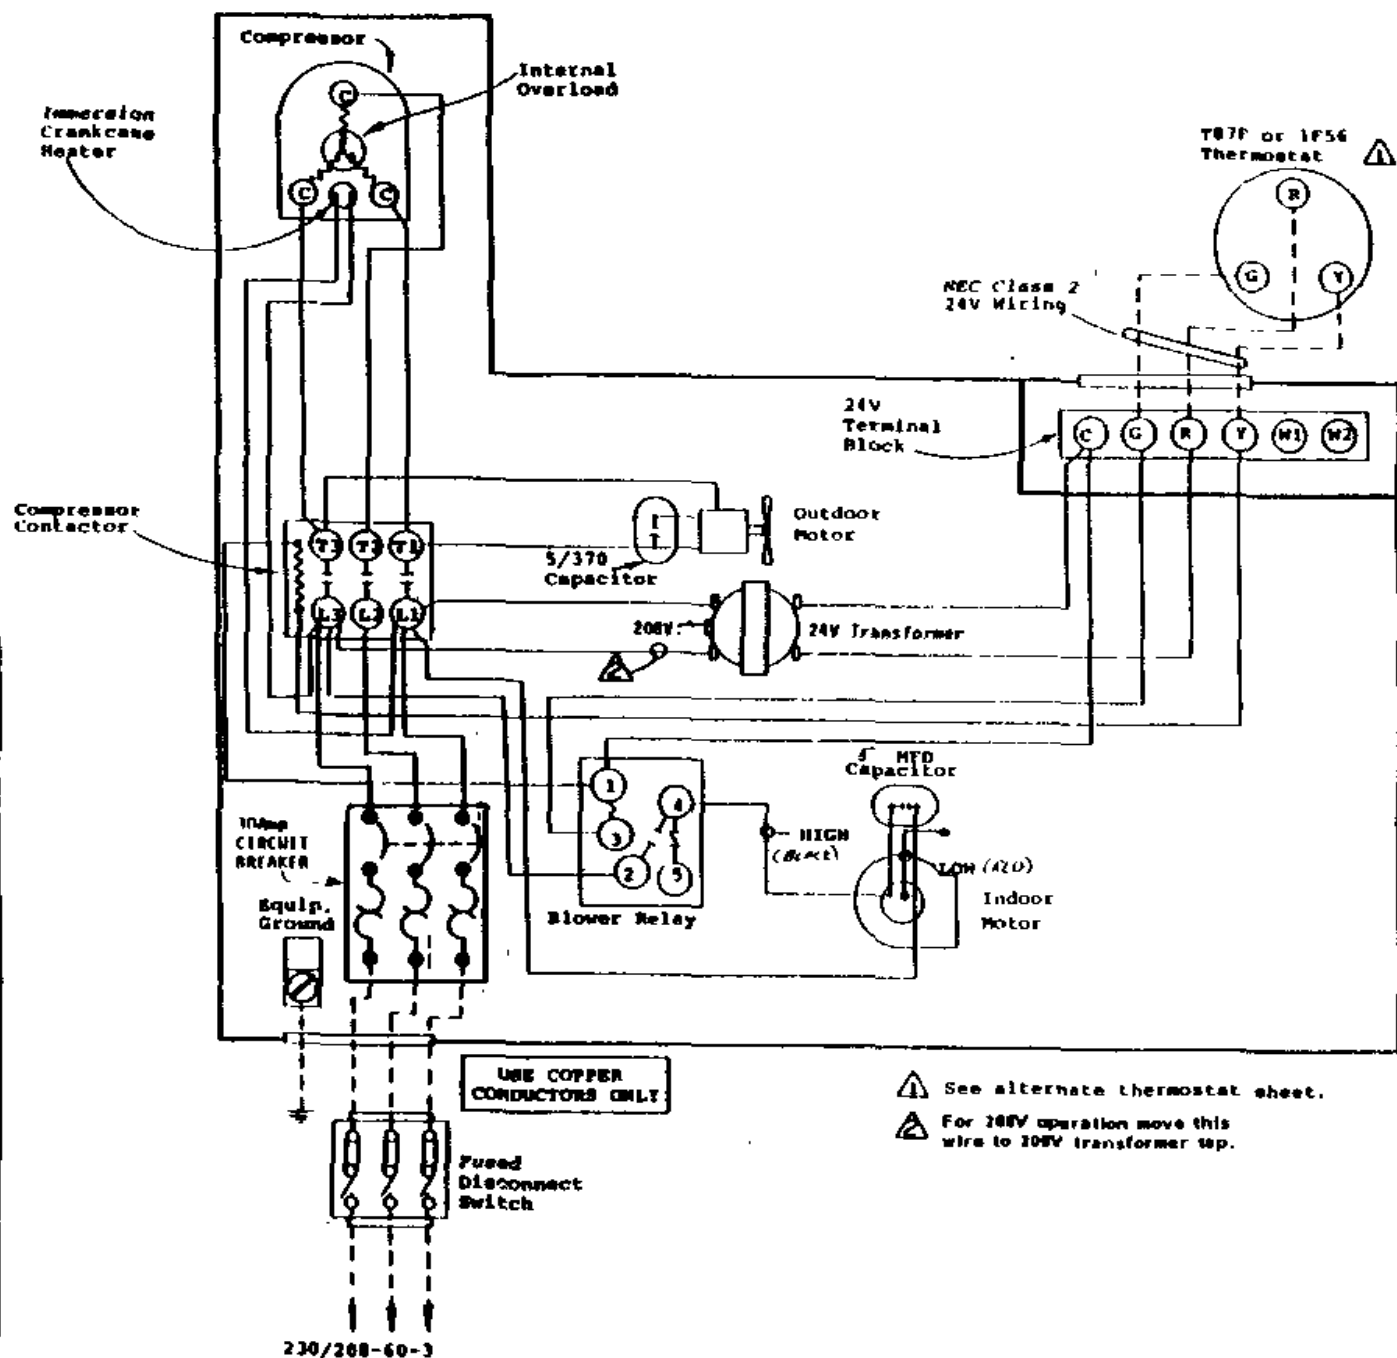


502024

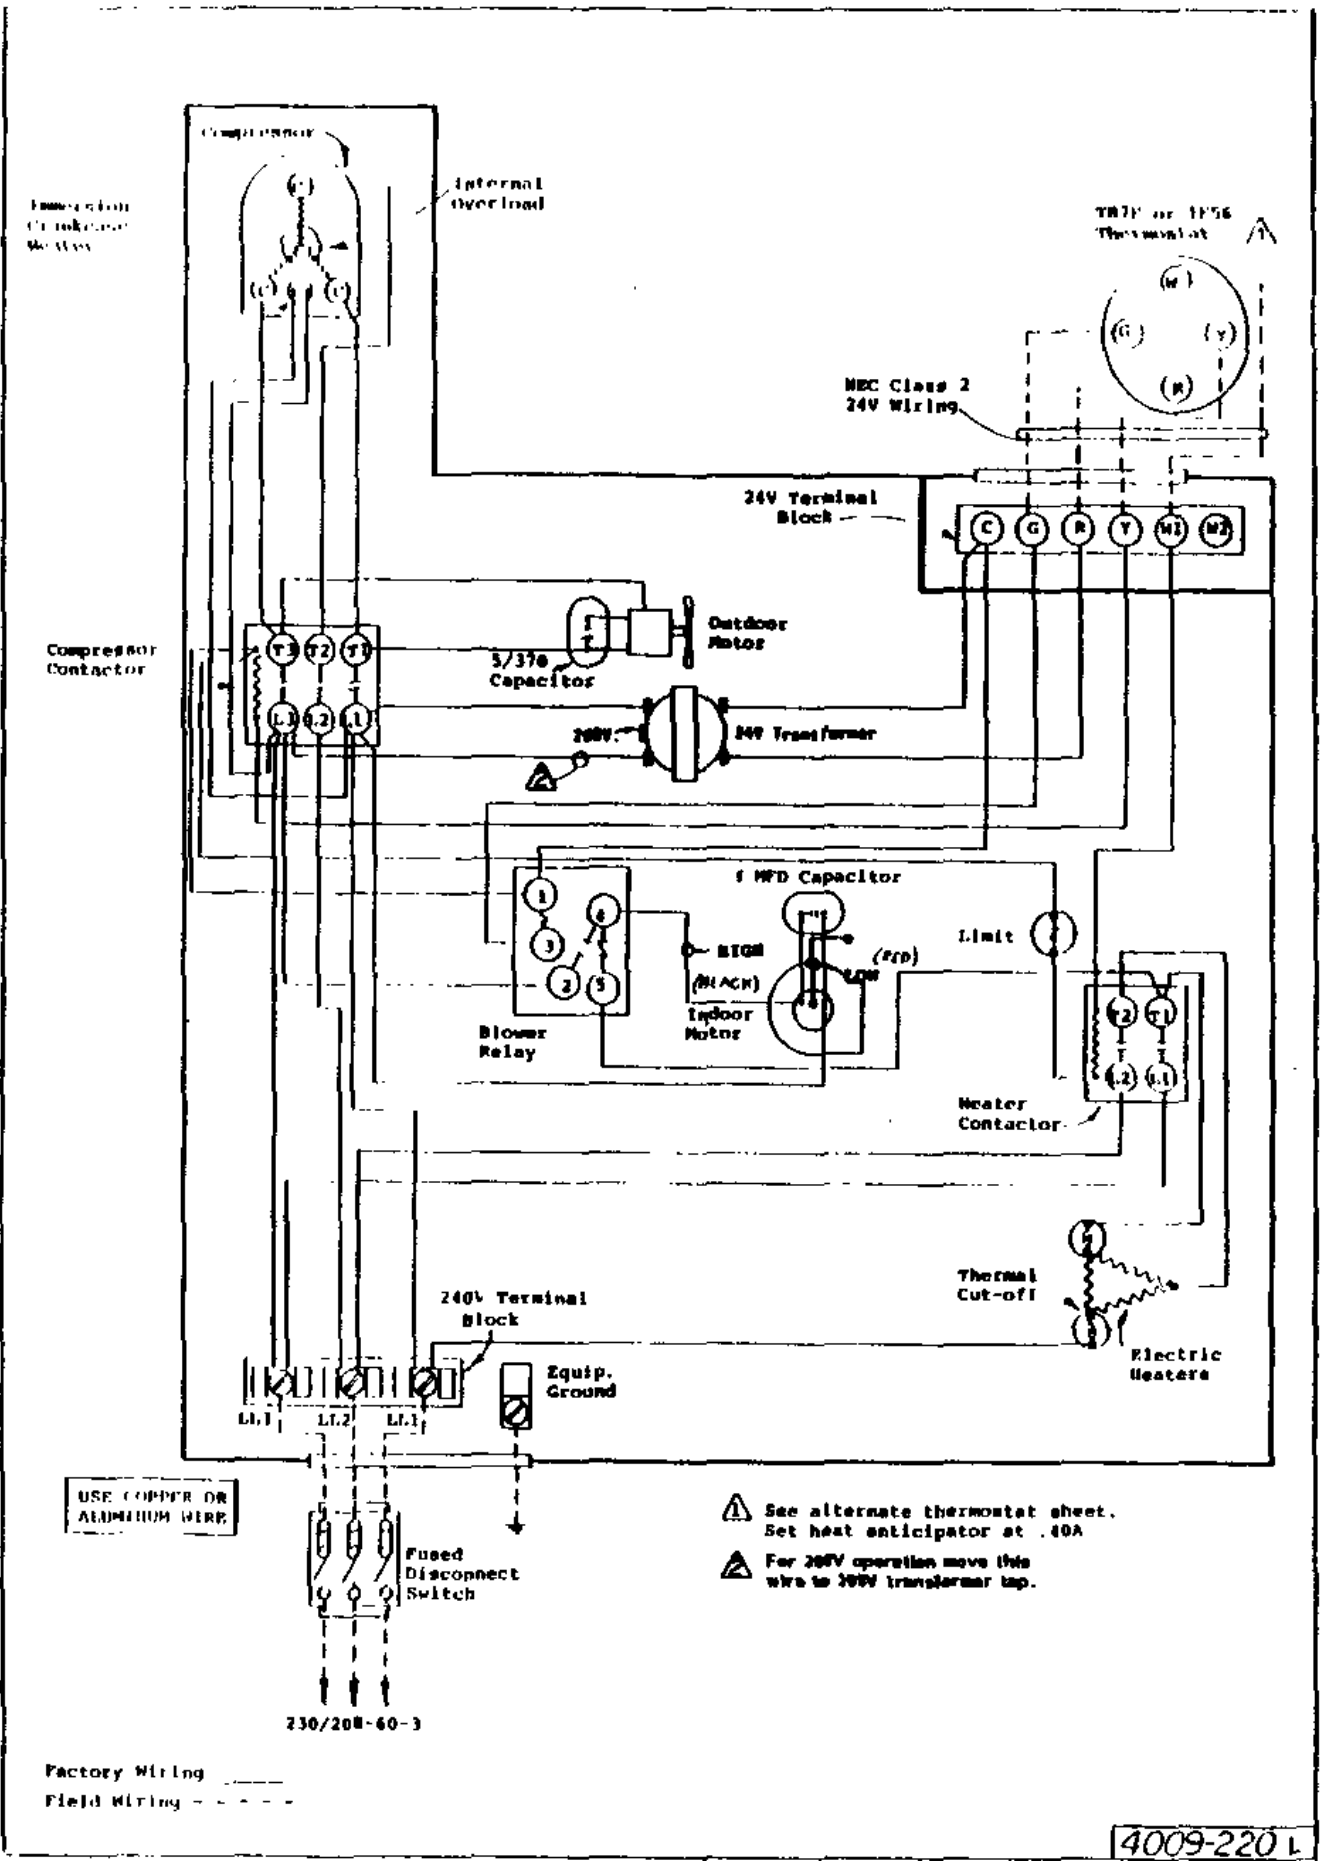

- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A
- ⚠ For 208V operation move this wire to 208V transformer tap.

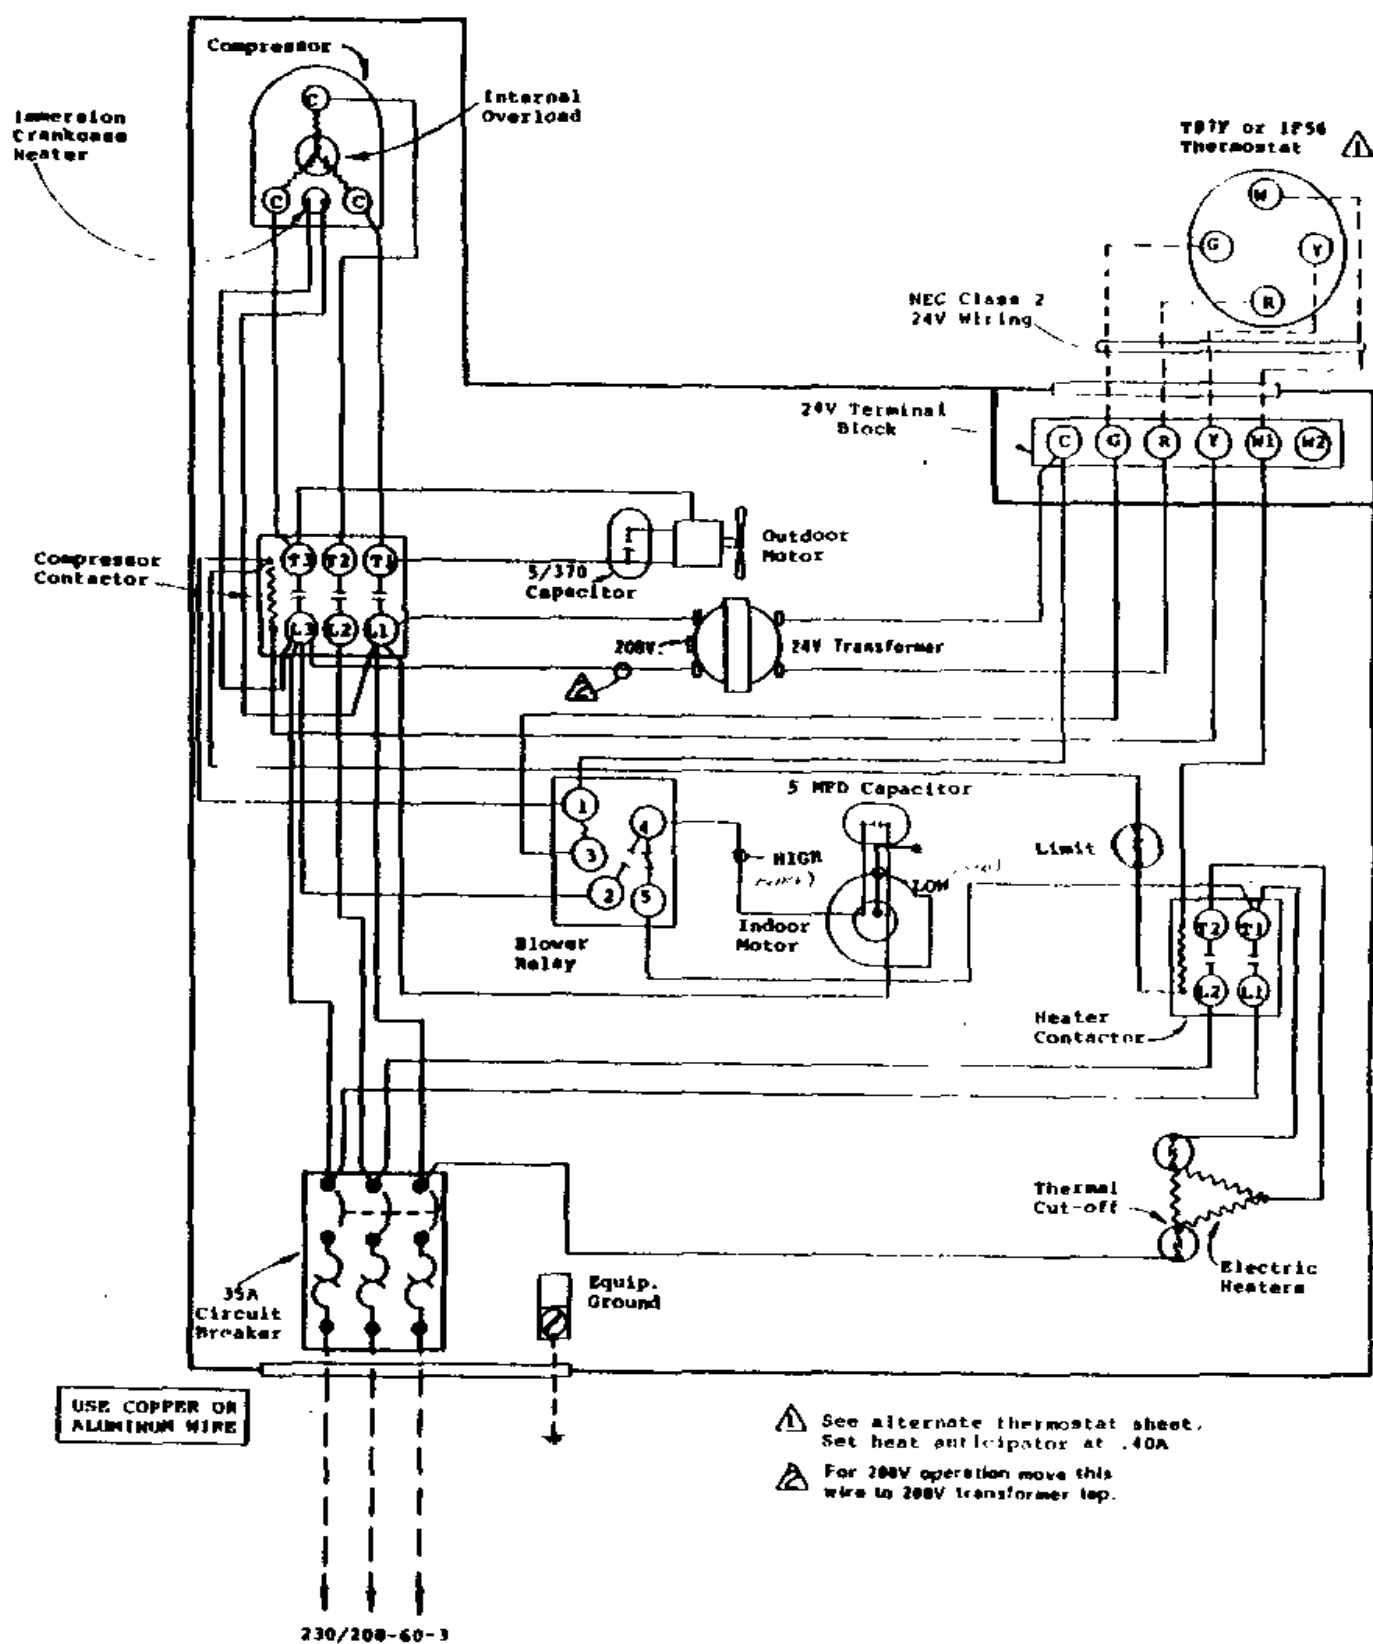


- ⚠ See alternate thermostat sheet. Set heat anticipator at .40A.
- ⚠ For 200V operation move this wire to 200V transformer tap.

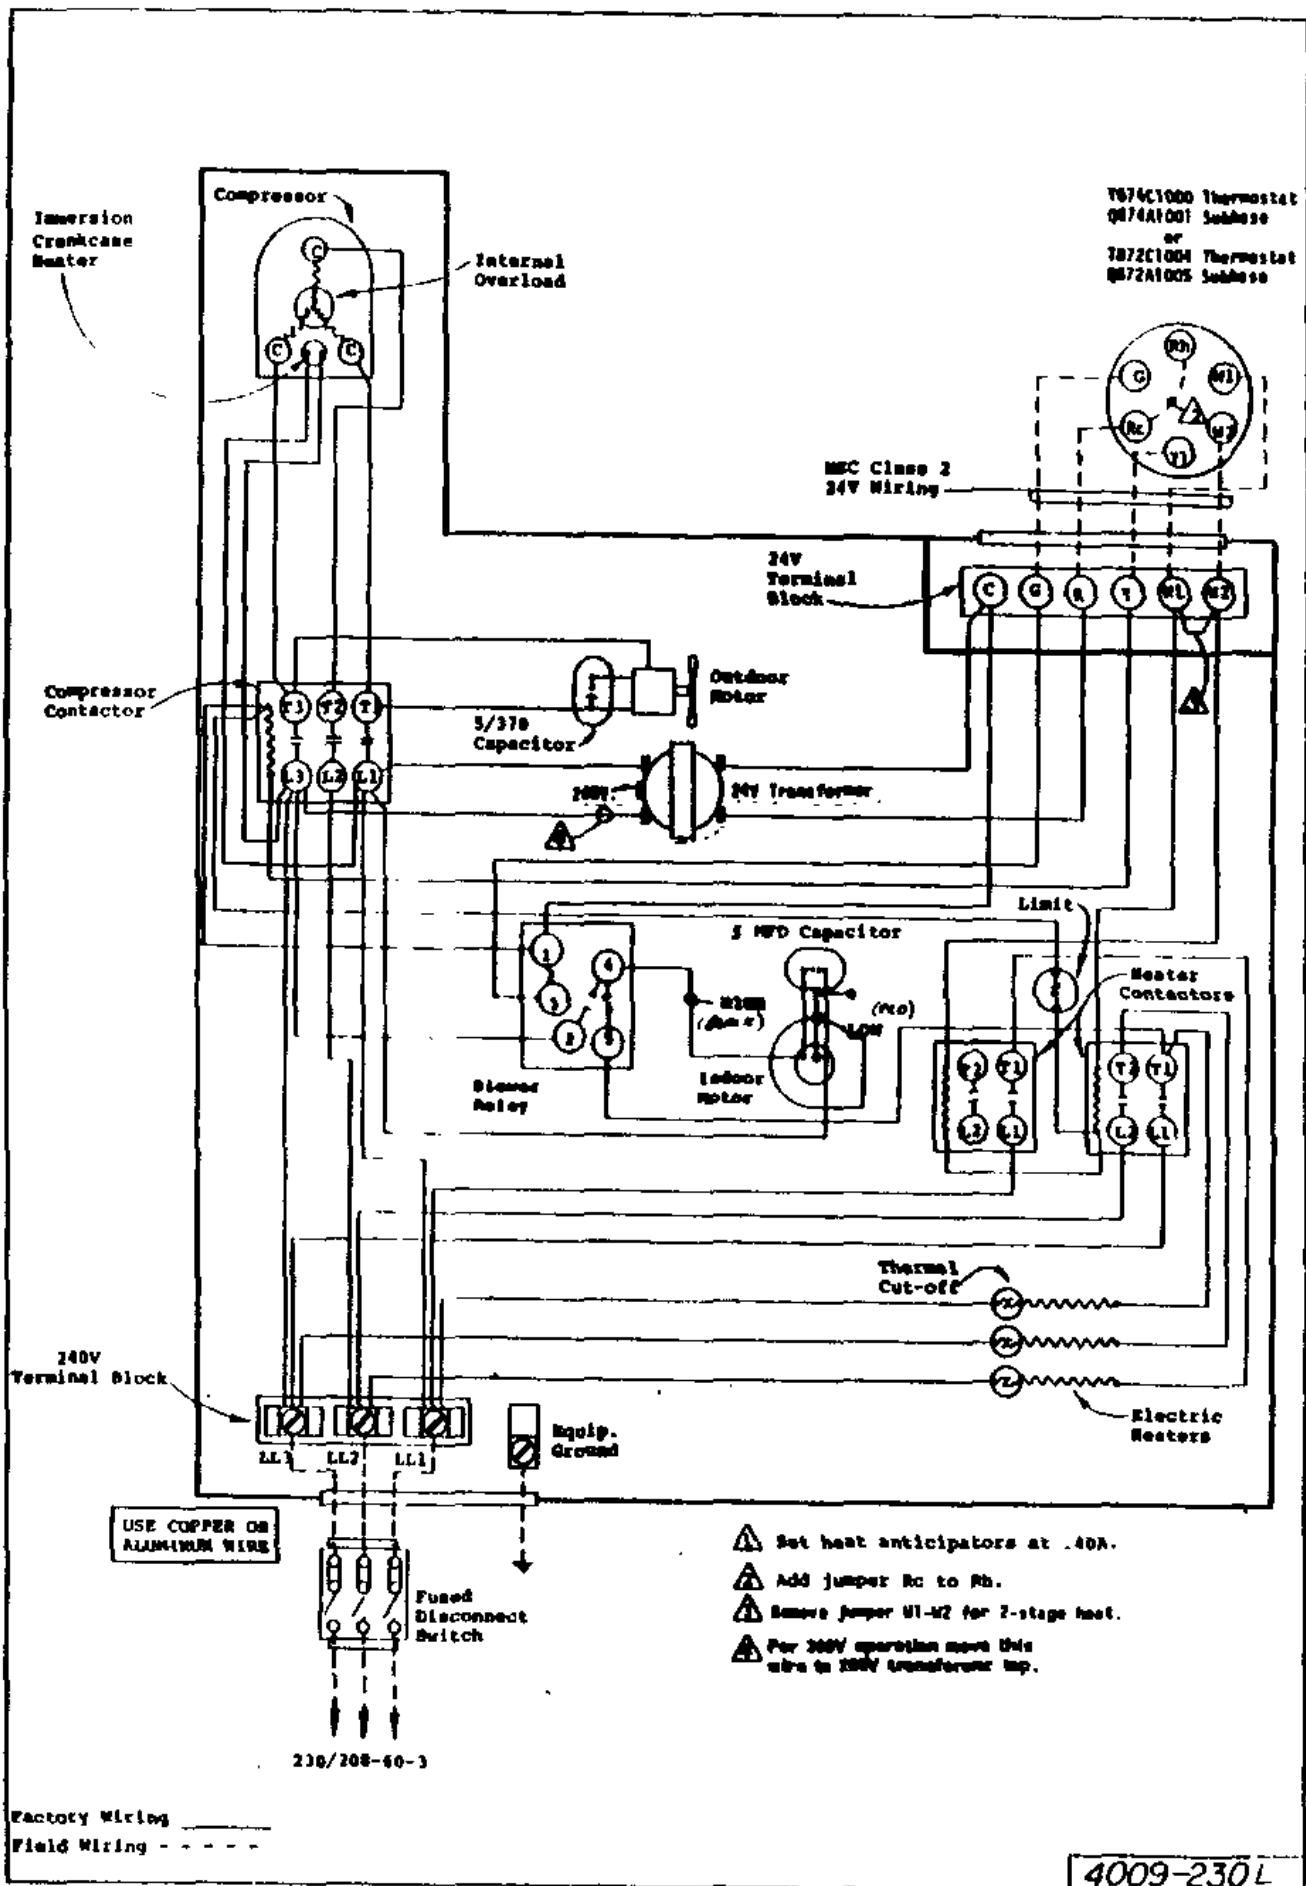

502027


4009-230L

Immersion
Crankcase
Heater

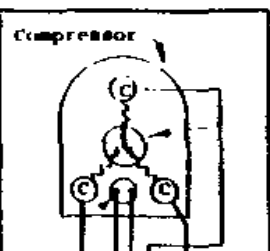

Internal
Overload


T874C1000 Thermostat
Q674A1001 Subbase
or
T872C1004 Thermostat
Q672A1005 Subbase

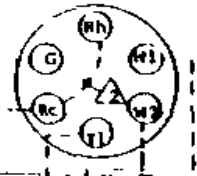

NEC Class 2
24V Wiring

24V
Terminal
Block

Compressor
Contactor

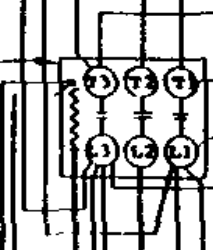


5/370
Capacitor




Outdoor
Motor

208V

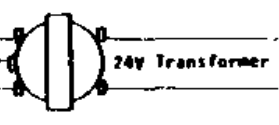


24V Transformer

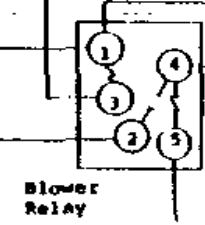

Blower
Relay


5 MFD Capacitor

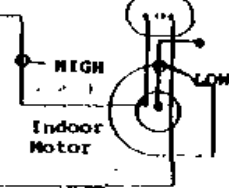


Indoor
Motor

Limit

Heater
Contactors

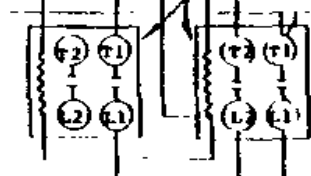

Thermal
Cut-off

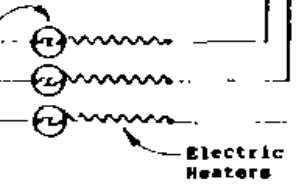

Electric
Heaters

40A
Circuit
Breaker
for
12KW

50A
Circuit
Breaker
for
15KW

USE COPPER OR
ALUMINUM WIRE

Equip.
Ground

- ⚠ Set heat anticipators at .40A.
- ⚠ Add jumper Rc to Rh
- ⚠ Remove jumper W1-W2 for 2-stage heat.
- ⚠ For 208V operation move this wire to 208V transformer tap.

230/208-60-3

Factory Wiring _____
Field Wiring - - - - -

40092311